

# anko

## Beard and Body Trimmer AD-2201A Instruction Manual



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFETYGUARDS

### PLEASE READ CAREFULLY BEFORE USING THIS APPLIANCE

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



#### **WARNING: READ ALL INSTRUCTIONS, FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.**

1. For hygienic reasons, do not share this appliance with other people.
2. Only use the appliance as described in this manual.
3. Do not immerse the appliance in water or any other liquid, product is splash-proof only.
4. Do not allow the appliance to be exposed to rain or moisture during use or storage.
5. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
6. The appliance is intended for indoor use only.
7. Always switch the appliance off after use.
8. This appliance has no user serviceable parts. Do not attempt to access the appliance covers.
9. This appliance is for personal use only, not designed for commercial use.
10. Do not use it outdoors.
11. **Do not use** the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
12. Before using the appliance, ensure that the rotary head is securely fitted.
13. Do not use it on children or allow children to play with the appliance.
14. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children being supervised to ensure that they do not play with the appliance.
16. Only charge the appliance with the USB cable that was supplied with the appliance.
17. Only Charge the appliance with Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
18. When charging the appliance, make sure it is switched OFF.
19. Check that your supply voltage is the same as that stated on the charger.
20. When charging the appliance, the power switch must be OFF.
21. Use only attachments provided.
22. This product contains sharp blades, please take the utmost care in handling and use.

**CAUTION: To avoid personal injury, do not use the trimmer if it has a damaged blade.**

23. Do not use salt water or boiling water when cleaning. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.



**WARNING: Do not recharge non-rechargeable batteries.**



**WARNING: Before charging the product, please make sure your hands are dry.**



**WARNING: Only use the USB cable supplied with the appliance. Use of other cable may cause electrical failure and/or fire.**



## **WARNING**

Only use the USB cable that was supplied with this Appliance.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

## **Read and Save These Instructions**

## PARTS



1. Comb attachment for beard trimming: 0.5-10mm	5. On/off switch
2. Comb attachment for Hair trimming: 3-12.5mm	6. Battery level indicator
3. Cut length indicator	7. Cleaning brush
4. Cut length selector	8. USB cable

## CHARGING

**IMPORTANT:** This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable.

**DO NOT allow to charge for more than 2 hours.**

**Normal charge takes approximately 1.5 hours.**

If any abnormality occurs during charging, (such as burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

**IMPORTANT: The Appliance must be fully charged before first use.**

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.
- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied) and switch on.
- Whilst charging, the display will illuminate with percentage of charging level: 30%, 65%, 100%.
- When fully charged, unplug the USB charging cable from the appliance.

# OPERATING INSTRUCTIONS



## WARNING:

Switch OFF the device before replacing or changing the attachments

### Installing the comb attachment

1. Make sure the trimmer is **switched off** before attaching the comb.
2. Set the **cut length** to the highest level.
3. Align the **comb rails** with the **slots** on the sides of the trimmer.
4. Gently **slide or clip** the comb attachment onto the main body as shown below.
5. Once fitted, you can **adjust the cut length** by turning the adjustment dial.



**NOTE: Do not turn dial when the trimmer is switched ON.**

### To remove the comb attachment

1. Make sure the trimmer is **switched off** before removing the comb.
2. Set the **cut length** to the **highest level**.
3. Gently **lift the back of the comb attachment upwards** to remove it from the trimmer.



## Installing the blade


### CAUTION!

**Risk of injury!** Handle the trimmer improperly may result in injury.

The Blade assembly can be removed for deep cleaning.

### To remove the blade assembly

1. Hold the trimmer firmly.
2. Gently **press the blade assembly away** from the main unit — the blade assembly will **pop out**.

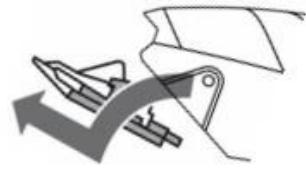

### To install the blade assembly

1. Align the **bottom of the blade** with the main unit.
2. Swing the blade into place and **press firmly** until it **clicks and locks** into position.



## Using the trimmer

1. Before trimming, **comb the hair** to remove any tangles and ensure it is **clean and dry**.
2. Attach the **comb attachment** and **adjust the length setting** to your desired trimming length.
3. Press the **power switch** to turn the trimmer **on**.
4. **Trim against the direction of hair growth**, keeping the flat part of the comb gently against the skin.
5. To avoid clogging, **remove and clean** the comb attachment regularly during use.
6. Press the **power switch** again to turn the trimmer **off**.

### Travel lock:

1. **To lock:** Press and hold the **power button** for **3 seconds**. The battery indicators will **flash three times** to confirm the trimmer is locked.
2. **To unlock:** Press and hold the **power button** again for **3 seconds**. The battery indicators will **flash three times**, unlocking the trimmer and turning it on.

## CLEANING AND MAINTENANCE

**Caution! Blades are sharp. Please be careful when handling and cleaning!**

1. Make sure the appliance is disconnected from the USB cord and switched off.
2. Remove the comb attachment and blade.
3. Brush off any hair trimmings around the blade and main body.
4. Rinse off any hair trimmings that are sticking to the blades with running water.
5. Gently shake the cutting blade then wipe off the water.



## TECHNICAL INFORMATION

Working time	Approx. 60 minutes
Charging time	Approx. 90 minutes
Input	5V = 1.0A
Battery type	Li-ion, 600mAh, 3.7V x1 cell
Water resistance	IPX5

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>