

# anko

## Rechargeable Digital Haircut Kit AD-5001

### Instruction Manual



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFETY GUARDS

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



**WARNING: READ ALL INSTRUCTIONS; FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.**

1. Only use the appliance as described in this manual.
2. Do not immerse the appliance in water or any other liquid.  
**Warning: For electrical safety, keep the appliance dry.**
3. Do not allow the appliance to be exposed to rain or moisture during use or storage.
4. Unplug this appliance before cleaning it.
5. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
6. The appliance is intended for indoor use only.
7. Always switch the appliance OFF after use.
8. This appliance has no user serviceable parts.
9. This appliance is for household use only, not designed for commercial use.
10. **Do not** use it outdoors.
11. **Do not** use the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
12. Do not leave the appliance unattended when it is plugged in.
13. Before using the appliance, ensure that the clipper blade is securely fitted.
14. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
15. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
16. Only charge the appliance with the USB cable that was supplied with the appliance.
17. Only Charge the appliance with Extra Low Voltage Battery Charger (not supplied) with an output rating 5Vd.c. 1A, same as indicated on the appliance's rating label.
18. When charging the appliance, make sure it is switched OFF.
19. Check that your supply voltage is the same as that stated on the clipper.
20. Use this appliance only for its intended use as described in this manual.
21. Use only attachments provided.
22. This product contains sharp blades, please take the utmost care in handling and use.
23. **To avoid personal injury, do not use the hair clipper if it has a damaged blade.**
24. **Always make sure blades are aligned properly.**
25. Do not submerge the appliance, nor make it flow under water-tap.
26. Do not use salt water or boiling water when cleaning. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.
27. Do not use it outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
28. For cleaning, see section "CLEANING AND MAINTENANCE".

**CAUTION: Electric Shock Hazard. Never operate this appliance if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.**



**WARNING: Do not recharge non-rechargeable batteries.**



**WARNING: Before charging the product, please make sure your hands are dry.**



**WARNING: Only use the USB charging cable supplied with the appliance. Use of other cables may cause electrical failure and/or fire.**



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**



**WARNING! Only use the USB cable that was supplied with this Appliance.**

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

Never try to charge non-rechargeable batteries as they may explode or catch on fire or cause personal injury and/or damage to property.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the appliance.
- Do not use or store in temperatures above 40°C.



At the end of the appliance's life, it must be disposed of correctly.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

**Read and Save These Instructions**

## PARTS



- |                                     |                               |
|-------------------------------------|-------------------------------|
| 1. Blade Set                        | 5. Speed adjust button        |
| 2. Precision trim adjustment button | 6. 3/6/9/12mm Comb attachment |
| 3. On/Off Switch                    | 7. USB Charging cable         |
| 4. LED display                      | 8. Cleaning brush             |

## CHARGING

**IMPORTANT:** This Appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable.

Always switch off and unplug the USB cable when charging is completed or when not in use.

**DO NOT allow to charge for more than 3 hours.**

**Normal charge takes approximately 2.5 hours.**

If any abnormality occurs during charging, (such as burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable.

**IMPORTANT: The Appliance must be fully charged before first use.**

- Take the USB Cable and fully unravel it before using it to charge the Appliance.
- Plug the small end of the USB cable directly into the bottom of the appliance.
- Plug the large end of the USB cable into your 5Vd.c. 1A USB charger (not supplied) and switch on.
- Whilst charging, the display will illuminate with scrolling numbers where the numbers increase as the battery charges, indicating the percentage of charge.
- When display reaches “9%” and below, the charging indicator will flash, indicating low battery and reminding user to charge the clipper.
- When fully charged, the display will show “100%”.
- Unplug the USB charging cable from the appliance.

## OPERATING INSTRUCTIONS



### WARNING:

Switch off the clipper before replacing or changing the attachments.



### NOTES:

The hair to be dressed must be dry.



### NOTES:

The cutting length may deviate depending on the cutting angle. Please start with a comb attachment with a longer cutting length and then, while cutting process, use shorter cutting lengths step by step.

## BEFORE CUTTING HAIR

- Inspect the clipper and make sure there is no excessive oil on the cutting blades prior to use. Any excessive oil should be wiped off to prevent it from getting on your skin.
- Place the cape around the neck of the person whose hair is trimmed or cut.
- This person should be seated so that the top of their head is at your eye level.
- Comb the hair as it is normally styled.
- Comb out all knots and tangles.
- Hold the hair clipper in the palm of one hand and with your thumb resting firmly on the top of the hair clipper to give better control.
- Ensure the hair is dry. Hair clippers perform best with dry hair, making it easier to see how much hair is being cut.

## KNOW YOUR HAIR CLIPPER

This clipper has a fine adjustable blade.


To adjust: Push the Precision Rim Adjustment button upwards for the shortest cutting length 0.8mm.

Press the Safety Lock button in the centre (refer to arrow in the image) to move the adjustment button downwards for longer lengths (1.2 / 1.6 / 2.0mm).



## OPERATING THE CLIPPER

1. Select the comb attachment with the desired comb length.
2. Attach the attachment to the main unit. Hold the comb with teeth facing upwards and slide it firmly onto the bottom blade until it clicks securely into place (see illustration below).

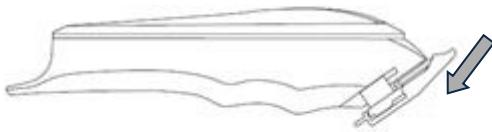

3. Press the On/Off switch to turn on the clipper.
4. Use the Speed Adjust button to select the desired cutting speed. There are five speed settings available: 5000 / 5500 / 6000 / 6500 / 7000rpm. The selected speed will appear on display.
5. Always hold the clipper with the blade running parallel to the skin. Never cut into loose skin.
6. To switch off, press the On/Off switch again.
7. Before storing, apply one or two drops of lubricating oil to the blades to prevent rust.

#### **Travel lock**


1. To lock: Press and hold the On/Off switch for 3 seconds, then release. The Travel Lock indicator will flash four times to confirm it's activated.
2. To unlock: Press and hold the On/Off switch for 3 seconds. The display will count down from 3-2-1, then unlock and turn the clipper on. Release the On/Off button at this point.

Note: The travel lock automatically unlocks when the clipper is connected to the power supply for charging.

## **CLEANING AND MAINTENANCE**

To maintain optimal performance, clean the blades and unit regularly.

- Ensure the clipper is switched off and completely cool before cleaning.
- Remove the accessory.
- Use the supplied cleaning brush to remove hair from the blades.
- Do **not** submerge the clipper in water.
- Wipe the unit with a damp cloth, then dry thoroughly.

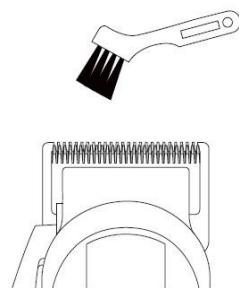

## TECHNICAL SPECIFICATIONS

Working time	Approximately 3hr
Charging time	Approximately 2.5hr
Input voltage	5V == 1.0A
Battery type	Li-ion, 2000mAh, 3.7V x1 cell

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>