

anko

Heated Lumbar Cushion KAHC00245 User Manual



**PLEASE READ AND SAVE THESE INSTRUCTIONS FOR
FUTURE REFERENCE**



SAFETY PRECAUTIONS

When using electrical appliances, to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

- Carefully read this manual in full before using this appliance. Keep this manual with the product. If it is to be used by a third party, this instruction manual must be supplied with it.
- The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
- To protect against fire, electrical shock and injury to persons, do not immerse the plug, cord or controller in water or spray with liquids. Do not expose this appliance to rain or moisture.
- Never place the appliance where it may fall into a bathtub or other water container. Use the unit only in dry rooms and with a dry body. Never position or use the unit in the immediate vicinity of water, such as a bathtub, shower, washbowl, swimming pool, etc.
- This appliance is for domestic use only. It is not intended for commercial use in hospitals, medical offices or the like.
- Do not use the appliance for anything other than its intended use.
- Do not misuse the power cord. Never carry the appliance with the power cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull it to disconnect.
- Never wrap the power cord around the product. Arrange the power cord away from traffic areas where it will not be tripped over. Never route the power cord over hot surfaces and/or sharp edges. Arrange the power cord in a safety way to reduce the risk of entanglement, strangulation, tripping or treading. Ensure that the power cord is not bent, twisted or wedged.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts. Repairs should only be performed by qualified personnel.
- **The appliance is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, and unless the child has been adequately instructed on how to operate the controls safely.**



SAFETY PRECAUTIONS

Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use this appliance if it has been damaged in any way, if it is wet or moist or if the supply cord or controller is damaged. Appliances that are obviously damaged must not be operated. The product should be checked regularly for electrical safety to limit the risk of electric shock or fire.

Warning! The product is intended for human use only. Not for animals and pets.

Warning! The product should not be used on an adjustable bed.

Warning! The cord and controller must be kept away from other heat sources such as heating and lamps.

Warning! Do not switch on if the electric pad is folded, rucked, creased or wet.

Warning! If the pad is used for an extended period, control should be adjusted to setting recommended for continuous use. Avoid prolonged use of this product at the highest heat setting. This may result in skin burns.

Warning! Remember to switch off the unit and disconnect it from mains outlet at the end of use. Never leave the product unattended when plugged in or switched on. There may be a risk of fire.

Warning! For additional protection, it is strongly recommended that the use of a residual current device (RCD) with a tripping current not exceeding 30mA be used on the circuit supplying this product. If you are unsure if your home has this device, please contact your nearest Electrical Contractor.

Warning! Do Not use in conjunction with other electric blankets or throw rug.

Warning! No liability can be accepted for consequential damage! In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability is accepted!



SAFETY PRECAUTIONS

When using electric appliances, always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Warning! Do not use the unit folded or rucked. Do not insert any needles or pointy objects into the electric pad. Do not use this unit if it is wet or has suffered water splashes.



Warning! Do not use this unit with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use it with a helpless or incapacitated person or any person suffering from medical illness such as varicose veins, thrombosis, high blood circulation, diabetes or high skin sensitivity. Never use the appliance with open wounds, burns, hematoma, swellings, or similar conditions. Stop treating you if it feels uncomfortable. Heat-sensitive persons in particular should use the appliance with care and stop the treatment in a timely manner.

Warning! Do not crease the appliance by placing items on top of it during storage. Examine the product frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! The unit is not intended for medical use in hospitals.

Warning! Use this product as an under pad only. Not recommended for futons or similar folding bedding systems.

Warning! For electrical safety, the unit must only be used with the detachable controller (Part No.: GL-20) supplied with the item. Do not use other attachments not supplied with the product.

When not in use, store as instructed in STORAGE section. When string the appliance, allow it to cool down before storing.



Warning: Do not wash.



Warning: Do not dry clean.



SAFETY PRECAUTIONS



Warning: Do not iron this pad.



Warning: Do not tumble dry.



Warning: Do not bleach.



Warning: Dry flat in shade only.

Power Supply

This appliance is intended to be connected to a suitable AC 220-240V~50Hz power outlet. If using an extension cord or power board, ensure that the extension cord or power board is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug it from the mains outlet when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the appliance is used near children or invalids and whenever it is left operating and unattended.

Warning! Not to be used by children under the age of three.




SAVE THESE INSTRUCTIONS

OVERVIEW OF THE HEATED LUMBAR CUSHION

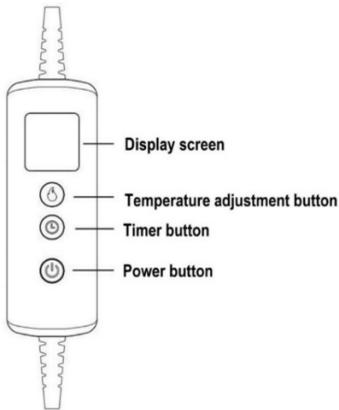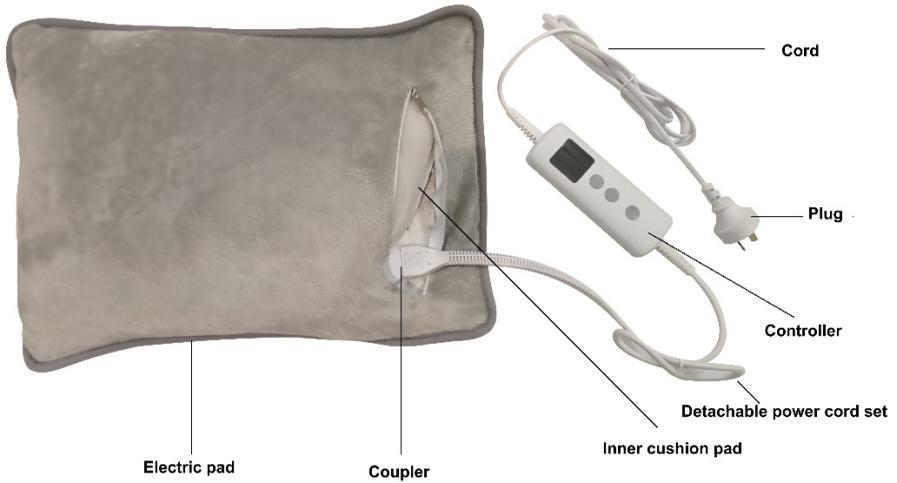

Controller

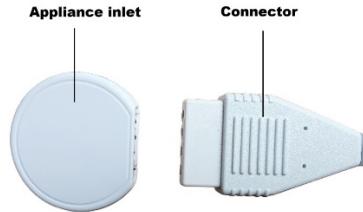

Coupler

OPERATION OF THE HEATED LUMBAR CUSHION

WARNING! For electrical safety, check before use to ensure that the product is not pinched and not damaged before using. Do not use this appliance if it has been damaged in any way, if wet or moist or if the supply cord or controller is damaged, or shows any signs of wear and tear. Appliances that are obviously damaged must not be operated.

Warning! Use the heated lumbar cushion with detachable controller (Part No.: GL-20) only. Do not use other controllers for this product.

Ensure that you know the heated lumbar cushion functions and how to operate it. With this product, you will be able to pleasantly warm your lumbar area and enjoy relaxing moments.

1. Unzip the electric pad and take out the power cord and controller. Check the coupler and ensure that the electric pad has been properly and securely connected to the controller. Re-zip the electric pad.
2. Remove the cable tie and unravel the power cord before operation. Connect the power plug to a suitable 220-240V~ 50Hz power outlet. “8” will appear on the display screen and disappear after 1-2 seconds. And then “●”(Orange dot) will show on display screen to indicate the product is powered on and ready to use.
3. Press the Power button, “0” will appear on display screen and flash for 10 seconds. Within this period, you can press the Timer or Temperature adjustment button to turn ON the unit. Default setting is Temperature level 2 and timing 3 (30 minutes), digit “2” shows on display screen.
4. Press the Temperature adjustment button repeatedly to set the desired temperature. There are six levels 1,2,3,4,5,6 for selection. The corresponding digit for temperature level will show on display window. Temperature level 1 is suitable for continuous use.
5. Press Timer button repeatedly to set the desired timer duration. There are 30, 60, 90 and 120 minutes for selection. “3” (30 minutes), “6” (60 minutes), “9” (90 minutes) or “H” (120 minutes) will appear on display screen. It will flash 5 times and display the current Temperature setting afterwards. When the set time has elapsed, the unit will turn OFF automatically.
6. Press the Power button to turn OFF the appliance and unplug it from the mains outlet after each use.

Note:

- **The heated lumbar cushion shuts off automatically after the selected time setting (120 minutes Max.). This saves energy and provides additional safety.**
- **Do not leave the appliance unattended when plugged in or switched on.**

OVERHEAT/HEATING ELEMENT PROTECTION

The controller is fitted with overheat safeguard system. This offers protection against overheating or damage to the electric pad by disengaging the power to the heating elements before overheating hazards occur.

Should there ever be a problem with the heating elements in the electric pad, it will automatically shut down the operation and is not repairable.

The controller must not be covered as this may cause overheat or damage

If the controller overheats, "H" will flash on display screen which indicates it is malfunctioned. Allow the unit to cool down before operating it again once this occurs.

If "E" and "1" flash alternatively on display screen, the connection of coupler (appliance inlet and connector) may be loosened or disconnected. Unplug the unit and try to re-connect the coupler once this occurs. If the display problem still exists, which means the controller may be damaged by overheating, please stop using the appliance. If the product is still under warranty return the product back to place of purchase for replacement or we recommend to have it checked by a qualified electrical person.

CARE AND CLEANING

Warning: NEVER immerse the controller, power cord and plug in water or any liquid while cleaning. Ensure that the plug, cord and controller do not come into contact with any liquids. Never allow water to drip into the controller.

1. Always turn off the appliance and unplug it from the power outlet before cleaning.
2. Always ensure the product has cooled completely before cleaning.
3. Clean the exterior surfaces of the plug, cord and controller with dry

soft cloth only.

WARNING: Spot Clean - Only the electric pad can be spot cleaned by hand with mild water temperature at 40°C (Max.). The inner cushion pad and controller cannot be washed or spot cleaned.

1. Unzip the electric pad and take out the inner cushion pad.
2. Disconnect the coupler and remove the detachable power cord set with controller from the electric pad before spot cleaning.
3. Sponge the dirty area of electric pad with a neutral wool detergent or mild soap solution in lukewarm water (40°C Max). Sponge with clean water. **Never Use Hot Water. Never allow water to enter the coupler on the surface of cushion/electric pad.**
4. Spread the electric pad out on a clean surface to dry in a shady area. Only place it in a ventilated and dry place to prevent direct sunlight. Allow the electric pad to dry completely.
5. Reconnect the coupler between the power cord set and electric pad. Check and ensure the coupler is properly and securely connected. Replace the inner cushion pad and zip the electric pad. Check carefully before using it again.

CAUTION! Electric Shock Hazard. Ensure the electric pad (including coupler) is completely dry, free of any water or moisture, before re-fitting for use.

Warning! During spot cleaning and drying, the detachable power cord set must be disconnected and positioned in a way to ensure that the water does not flow into the coupler or controller unit.

Warning! Do Not Wring. Do Not Spin Dry



Warning: Do not wash.



Warning: Do not dry clean.



Warning: Do not iron this pad.



Warning: Do not tumble dry.



Warning: Do not bleach.



Warning: Dry flat in shade only.

DO Secure coupler properly before use.

DO only spot clean the electric pad as specified in the manual.

DO have this product repaired and/or tested by an authorized Electrical Technician.

DO Turn OFF and unplug the product before cleaning.

DO remove the power cord set before spot cleaning the electric pad.

DO NOT machine wash or machine dry.

DO NOT use pressure cleaners.

DO NOT use a hand steamer to clean the cushion.

DO NOT use laundry pins to hang it. This could damage the heating elements.

DO NOT dry with a hair dryer or heater. Let the electric pad air-dry.

DO NOT use the electric pad while it is wet or damp.

DO NOT replace the electric pad until it is dried completely.

DO NOT insert needles or pins into the electric pad.

DO NOT wash controller and/or power cord.

STORAGE

IMPORTANT! Safety Check

This appliance should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Regularly inspect the electric pad and power cord frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, it must be checked by a qualified electrical person for electrical safety.

Store in a safe place

When not in use, pack the product and instruction manual in its original packaging and store it in a cool, clean and dry location. Avoid pressing sharp creases into the electric pad. Store the product only after it has fully cooled down.

Do not wrinkle the appliance. Do not fold the product for storage.

Do not use chemical moth protection.

Do not place any heavy objects on top of the appliance while storing it, these could damage heating elements.

Before using it again after storage, it is recommended that the product is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged electric pad.

If the product is no longer suitable for use, dispose of it in an environmentally friendly manner in accordance with your local council waste management requirements.

TECHNICAL SPECIFICATION

Voltage : 220-240V~ 50Hz

Power : 100W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us