

210 mm

Assembly Instructions

43627875 CAMPING TABLE

CARE INSTRUCTIONS:

WIPE CLEAN WITH A DAMP CLOTH. DO NOT USE ABRASIVE MATERIALS OR SOLVENTS. ENSURE TABLE IS CLEAN AND 100% DRY BEFORE STORING. STORE IN A DRY PLACE.

WARNING:


DO NOT SIT OR STAND ON THE ITEM. DO NOT USE THE ITEM AS A STEP LADDER. TAKE CARE NOT TO GET FINGERS CAUGHT WHEN FOLDING AND UNFOLDING THE ITEM. ENSURE LEGS AND FRAME ARE FULLY EXTENDED BEFORE USE. ONLY USE ON AN EVEN SURFACE. NEVER PLACE ANY DIRECT HEAT SOURCE ON THE TOP. FIX TUBE LEGS IN THE MIDDLE OF THE ITEM TOP, NOT INCLINED TO ONE SIDE. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM TABLE TOP LOADING: 10KG


MAXIMUM STORAGE LOADING: 5KG



1. Before starting, lay out all components and ensure every part is included. This includes poles, frame, tabletop, and netting.

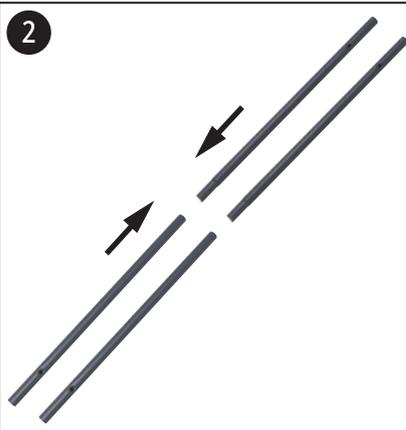

2. Take the two connecting poles and slide them together until securely locked.

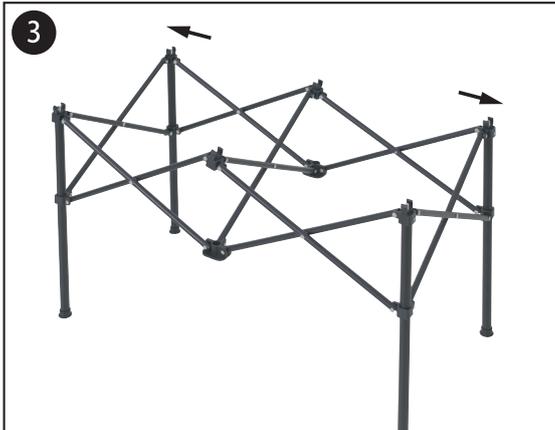

3. Open the frame fully until it locks into position and forms a stable base.



4. Insert each joined pole into its corresponding slot on the frame. Ensure each pole clicks or fits snugly into place.



5. Position the netting over the frame. Make sure the intermediate netting hangs outside the poles as shown in the diagram. Check that it is evenly stretched and not twisted.



WARNING: ENSURE THE FRAME IS SECURELY AFFIXED TO THE TABLETOP AS SHOWN.

6. Carefully place the tabletop onto the frame. Move the latch until it aligns with the positioning line, then press down to ensure it is fully secured.



7. Gently shake the table to ensure it is stable. Make sure all poles are correctly inserted and the tabletop is firmly attached before use.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

00/00

297 mm