


# anko

## DUMPLING MAKER

### Instruction Manual

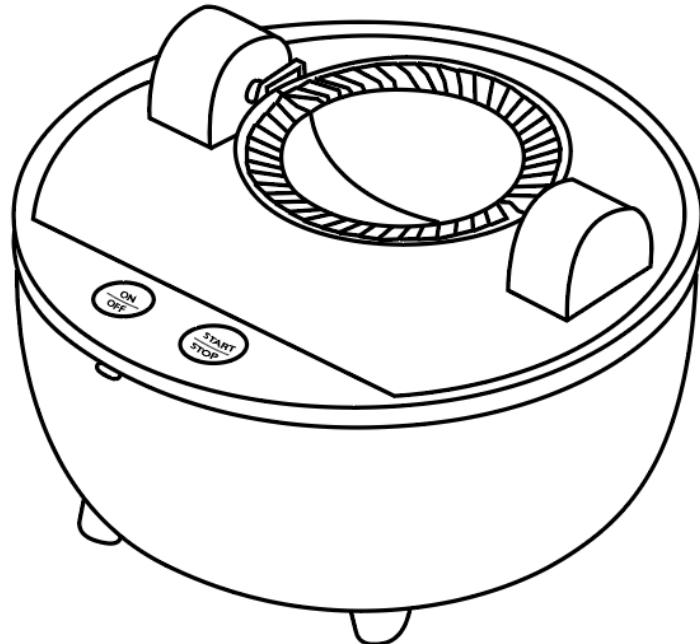

Model No.: ADM01

Rev 01

To ensure the proper operation of this device, please read this instruction manual carefully before using the device and keep them for further reference.

# IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for future reference, along with the purchase receipt and packaging. If applicable, pass these instructions onto the next owner of this appliance.

## Explanation of Symbols



This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This signal symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



This symbol provides you with useful additional information about assembly or operation.



## WARNING!

### Risk of Injury!

If you do not use the product properly, there is an increased risk of injury.

- The product cannot be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- The product shall not be used by children. Keep the product out of reach of children.
- Avoid contact with the moving parts of the product.
- Always switch off the product if it is left unattended and before assembling, disassembling or cleaning.
- **WARNING! DO NOT pour any hot liquid into the product. If hot liquid is poured in it can be ejected from the product due to sudden steaming.**
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- The product has the potential to cause injury from misuse. Improper installation and the use of accessories not recommended by the manufacturer may result in personal injury.
- Be careful when handling the plastic moulding when filling and during cleaning.
- Regarding operating time and rest time, refer to "Operating Instructions".
- Regarding the instructions for cleaning surfaces in contact with food, refer to "Cleaning and Maintenance".
- Suffocation hazard. Make sure that children do not play with the plastic wrapping.
- This product is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments.
  - Farmhouses.
  - by clients in hotels, motels and other residential type environments.
  - bed and breakfast type environments.



## WARNING!

### Risk of electric shock!

A faulty electrical installation, excessive line voltage, or incorrect operation may result in an electric shock.

- The product is designed for domestic use only and should not be used for commercial or industrial purposes.
- Only connect the USB charging cable if the line voltage of the socket corresponds to the data on the rating plate.
- **WARNING: For purpose of recharging the battery, only use the USB charger with DC 5V output to charge this item. Disconnect the USB cable after charging is complete.**
- Only connect the USB charging cable to an easily accessible socket so that you can quickly disconnect it from the power supply in the event of a problem.

- The product must only be used with a certified SELV power supply with output DC 5V  2A.
- For the information regarding charging, please refer to section "Charging the product".
- Do not use the product if it is damaged.
- Do not open the housing; instead, consult a qualified professional perform any repairs to the product. Liability and warranty claims are waived in the event of repairs are performed by the user, improper connection or incorrect operation.
- Only parts that comply with the original device data may be used for repairs. This product contains electrical and mechanical parts which are essential for providing protection against sources of danger.
- Do not immerse the motor base in water or other liquids.
- Never touch the USB charging cable with wet or damp hands.
- Keep the product and the USB charging cable away from open flames and hot surfaces.
- Lay the USB charging cable so that it does not pose a tripping hazard.
- Do not kink the USB charging cable and do not lay it over sharp edges.
- Only use the product indoors. Do not use the product in damp rooms or in the rain.
- Do not place the product such that there is a risk of it falling into a tub or sink.
- Never insert any objects into the housing.
- Always switch the product off and unplug it when you are not using it, when you intend to clean it, or in the event of a malfunction.



### Risk of injury!

If you do not use the product properly, there is an increased risk of injury.

- If you notice any smoke, unusual noises or strange smells, switch off the product immediately. If this occurs, do not continue to use the product and have it checked by an expert.
- Use only the original and provided accessories of the product. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Keep hands and utensils away from the moving mould when processing food to reduce the risk of severe injury to persons or damage to the product.
- The mould must be handled carefully.
- Ensure all parts are installed correctly and locked into place before operation.



### Risk of damage!



Improper handling of the product may result in damage to the product.

- Do not use this product in continuous operation. The maximum recommended operating time is 30 seconds. Allow the product to cool down for at least 1 minute to an ambient temperature before using it again. There is a risk of overheating if the product is operated for longer periods.
- Never use the product near curtains, walls, under cupboards or near other flammable materials.
- Do not place the product at the edge of the working surface.
- Never place the product on or close to sources of heat. Keep the product away from open flames, direct sunlight, hot surfaces, or extreme temperatures.
- Do not use the product and its accessories when deformities, cracks or damages are found.

- Do not make any modifications to the product. Any changes to the product that have not been expressly authorised by the manufacturer may lead to the user's warranty being rendered null and void.
- **WARNING!** The batteries in the product shall not be exposed to excessive heat such as sunshine, fire or the like.
- The batteries in the product are non-replaceable.

## SAVE THESE INSTRUCTIONS

## PRODUCT OVERVIEW

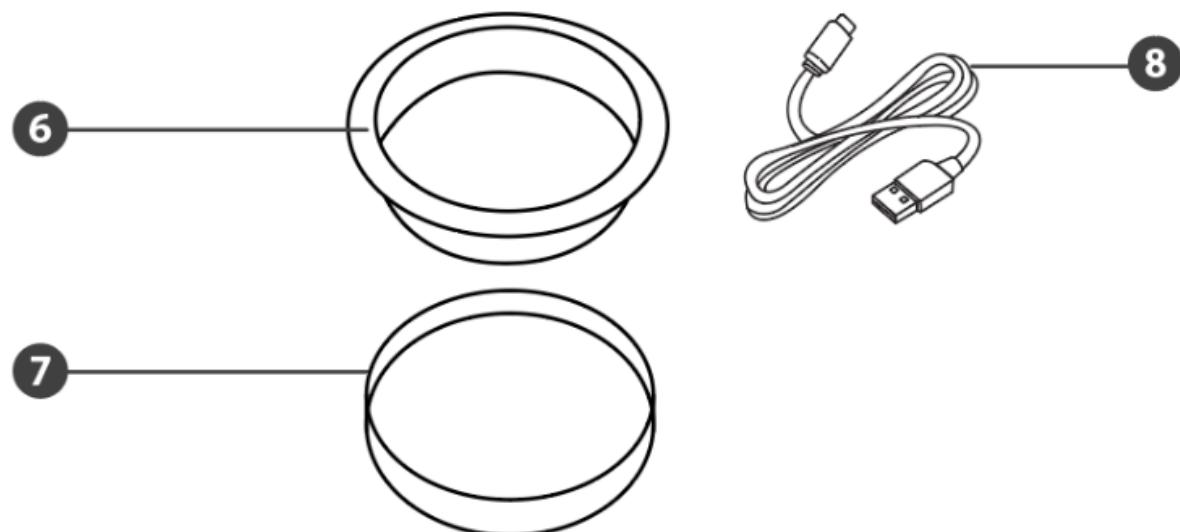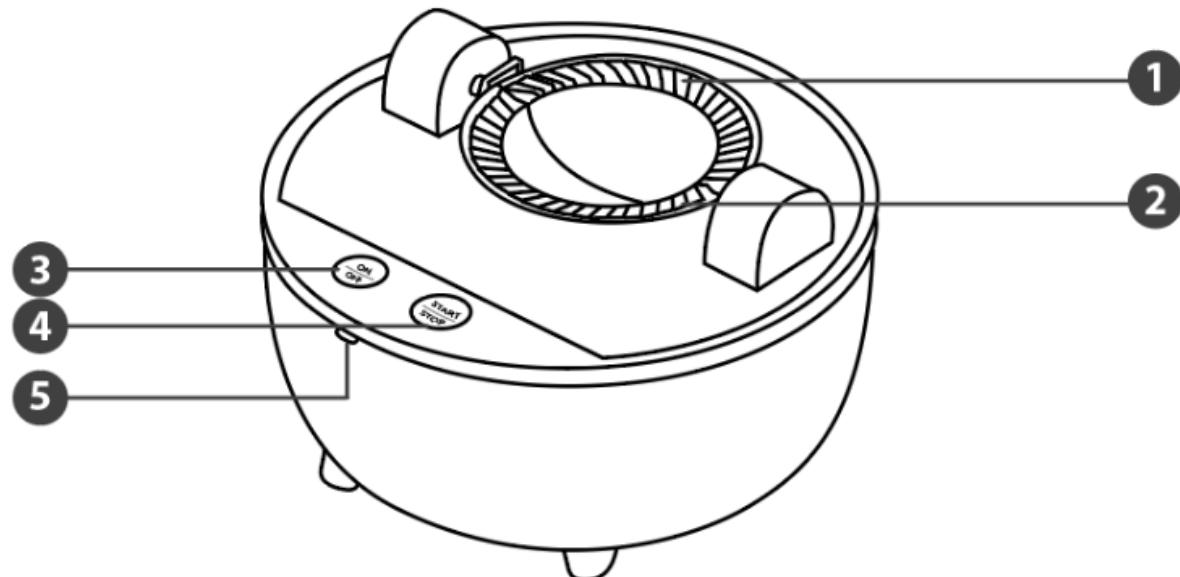

1. Upper mould	5. USB port
2. Lower mould	6. Dumpling cutter
3. ON/OFF button	7. Protective cover
4. START/STOP button	8. USB Cord

# INSTRUCTIONS

## FIRST USE

### Checking the product and the package contents

#### NOTICE!

##### Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may quickly damage the product.

- For this reason, be very careful when opening it.
  
- 1. Take the product out of the packaging.
- 2. Check to make sure that all parts are included (check Product Overview).
- 3. Check whether the product or individual parts are damaged. If this is the case, do not use the product. Contact Customer Service.

## BASIC CLEANING

1. Remove the packaging material and any plastic wrappings.
2. Clean all parts of the product before first use as described in the chapter "CLEANING AND MAINTENANCE".

## CHARGING THE PRODUCT




- Fully charge the product before first use
- The indicator light flashes red during charging.
- It is not recommended to use the product while charging.

1. Fully unwind and extend the USB charging cable.
2. Insert the smaller end of the USB charging cable into the charging port of the product.
3. Insert the larger end of the USB charging cable into a compatible power source (e.g. USB port of a computer, USB power adaptor (NOT INCLUDED)).
4. The indicator light of the ON/OFF button flashes when the product is charging.
5. The indicator light of the ON/OFF button illuminates when charging is complete. Remove the USB charging cable from the charging port and the power source.

## OPERATION INSTRUCTIONS

### Preparation

- Prepare your dumpling skins and filling.
- If you are making your own skins, use the cutter to obtain the correct shape

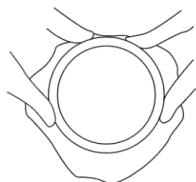

**NOTE:** If you are using frozen dumpling skins, ensure that they are defrosted and soft before using them.

### Usage

- Press and hold the ON/OFF button. The appliance will beep, and the light will illuminate indicating that the appliance is ON.



- Place the dumpling skin flat on the perforated surfaces of the upper and lower moulds, ensuring that the skin is correctly in place covering both moulds.



**NOTE:** If the skin is not in place correctly, when folded, the skins will not seal correctly.

- Place the desired filling in the middle of the dumpling skin, in an oval shape. The recommended amount is approximately 7 grams of filling.




**NOTE:** It is important to not overfill the dumpling as this will cause the skin to split or not seal correctly.

- Once the dumpling is in position and the filling has been placed in the centre of the skin, brush the edge of the skin with a mixture of corn starch and water.



- Press the START/STOP button. This will start the appliance, and the upper mould will close onto the lower mould and seal the dumpling sides together.

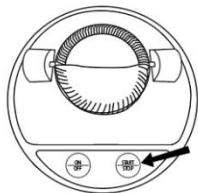

- Remove the sealed dumpling and repeat the process as required.
- When you have finished using the appliance, ensure to turn it OFF by pressing and holding the ON/OFF button until the light turns off.

## CLEANING AND MAINTENANCE

### **CAUTION! Risk of short circuit!**

Water or other liquids that have penetrated the housing may cause a short circuit.

- Make sure that no water or other liquids penetrate the housing.
- Never immerse the product in water or other liquids.

### **CAUTION! Risk of damage!**

Improper handling of the product may result in damage.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles or sharp metallic cleaning utensils such as knives, hard scrapers, and the like. They could damage the surfaces.

#### **General cleaning**

**Clean the appliance after every use and before storing.**

**Do not use metal utensils or abrasive cleaning materials as this may cause damage.**

1. Wipe the outside of the appliance housing with a damp cloth. Do not immerse the appliance housing in water or any other liquid and do not rinse under running water.
2. Clean the dumpling cutter and the protective cover in warm soapy water and dry thoroughly.
3. Make sure all parts are clean and thoroughly dry before storage.
4. Store the appliance in its box or in a clean and dry place.

**NOTE: DO NOT place this appliance or accessories in the dishwasher.**

## STORAGE

All parts must be completely clean and dry before being stored

- Always store the product in a dry area.
- Place the cutter on the mould and the protective cover over the product during storage.
- Protect the product from direct sunlight.
- Store the product so that it is not accessible to children.

## TECHNICAL DATA

MODEL: ADM01

SUPPLY VOLTAGE: DC 5V,  2 A

BATTERY CAPACITY: DC 3.7V,  1,500 mAh

Rated Power: 2W

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, VIC, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>