

anko

**Shirt Dryer
CS-108
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- **WARNING!** Failure to follow these safety instructions could damage the appliance or your shirt.
- Only plug this appliance directly into an AC power supply with correct voltage. Refer to the appliance rating plate for the voltage information.
- Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket and adaptor or similar.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Keep surrounding area clean.
- **DO NOT** operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Do not use the product in wardrobe or in an environment with a high density of clothing.
- **DO NOT** expose the product to rain or snow.
- The working environment of this product must be far away from water sources and hung on hanging facilities that are solid and reliable.
- To reduce risk of damage to electric plug and cord, pull only by the plug rather than cord when disconnecting unit.
- Make sure cord is positioned so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- If supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified person to avoid a hazard.
- This appliance is for drying shirts at home. It is not designed or intended for use in Commercial environments. Do not use it for any other purpose.
- The appliance is not to be used with any shirt that have had industrial chemicals used for cleaning.
- **WARNING!** This appliance is intended only for drying a shirt that has been washed in water.
- This appliance is only intended for use indoors only within a domestic environment.
- To protect against electric shock do not immerse the appliance, power cord, plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the unit when not in use. Allow it to cool down before handling or cleaning.
- **IMPORTANT! Make sure that there is enough ventilation, so that hot steam can be released safely during use.**

- **CAUTION! For electrical safety DO NOT use on extremely wet or a shirt dripping with water.**
- Ensure the shirt has been spin-dried before using the dryer.
- Unplug the unit after use and before cleaning.
-  **CAUTION! Hot surface. The appliance may become hot during use. NEVER touch the appliance during use as they may cause skin burns.**
- **WARNING! The appliance must not be supplied through an external switch device, such as a timer, or connected to a circuit that is regularly switched ON and OFF by a utility.**
- For cleaning, please refer to section “Cleaning and Storage”.


Fire Hazards


Some fabrics are not suitable for use with the shirt dryer. The following MUST NOT be dried on the shirt dryer due to the risk of fire or an explosion:

- Shirts that have been spotted or soaked with vegetable oil, cooking oil, suntan oil, linseed oil, salad oil, lubrication oil or grease. Oil affected items can ignite spontaneously, especially when exposed to heat sources such as the shirt dryer. The items will become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If heat cannot escape, the items can become hot enough to ignite. Pilling, stacking or storing oil-affected items can prevent heat from escaping and cause a fire hazard. If it is unavoidable that shirts that contain vegetable or cooking oil or have been contaminated by hair care products to be dried on the shirt dryer, they should first be washed in hot water with extra detergent - this will reduce but may not eliminate a fire hazard.
- Shirts that have previously been cleaned in, washed in, or spotted with petrol/gasoline, industrial chemicals used only for cleaning, dry-cleaning solvents or other flammable or explosive substances are highly flammable. Highly flammable or explosive commonly found around the house include acetone, (nail polish remover) denatured alcohol, petrol/gasoline, kerosene, some spot removers, turpentine, waxes and wax removers should not be dried with shirt dryer. Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials. Foam rubber materials can produce fire by spontaneous combustion when heated.
- For your safety, and to reduce the risk of fire or an explosion, DO NOT store or use petrol or other inflammable vapours and liquids near the shirt dryer.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOWING YOUR SHIRT DRYER

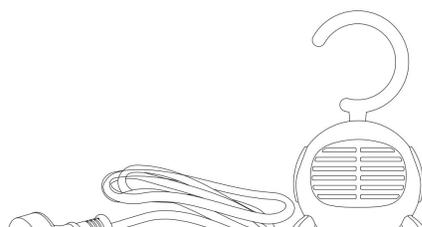

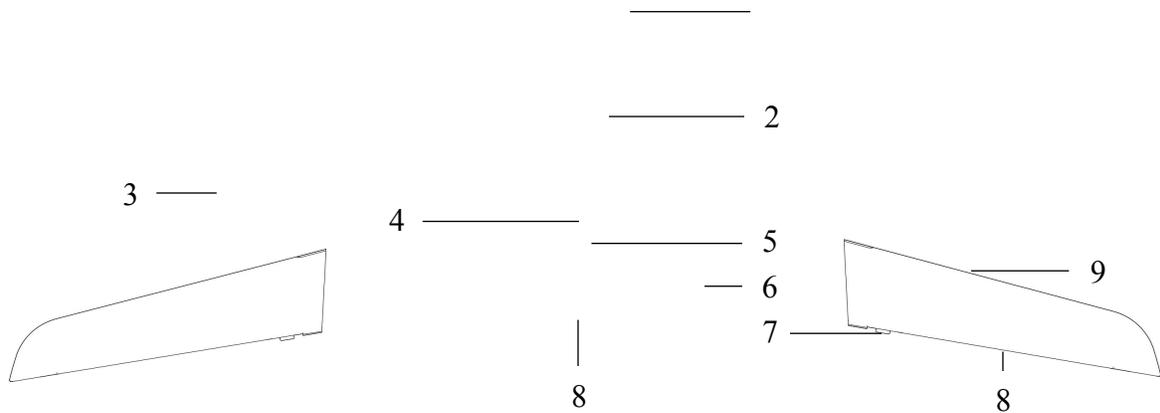

- | | | |
|------------------------|-----------------------|---------------------------------|
| 1. Foldable hook | 4. Indicator light | 7. Shirt rack release button |
| 2. Air inlet | 5. On/Off button | 8. Hot air outlet |
| 3. Power plug and cord | 6. Rack mounting pole | 9. Detachable shirt rack (2pcs) |

BEFORE FIRST USE

- After unpacking the appliance, check for transport damage and that all the parts mentioned in this manual are present. In the event of damaged or missing parts, return the product to the place of purchase for replacement.
- Do not discard the original box. It can be used for storage and dispatch to avoid transport damage.
- Clean the appliance as described in Cleaning and Storage. For your safety, make particular attention to the safety instructions in the manual.
- To assemble the shirt rack, just align slot with the mounting pole and push in until you hear a “click”.
- To detach the shirt rack, push and hold the shirt rack release button and pull the rack out.

HOW TO USE YOUR SHIRT DRYER

This product is suitable for shirts that are damp or slightly wet but not dripping with water, or spin dried in the washing machine. It can also be used to warming shirts.

WARNING! Before using the appliance, please follow shirt manufacturer’s instructions to ensure the shirt dryer can be safely used without damaging the shirts. If unsure, do not use.

1. Hang the shirt on the shirt dryer and get it buttoned or zipped in the usual way.

Applicable clothing: Shirts, T-shirts, shorts, vests, light outerwear, baby and children's singlets, women's underclothes, and other light or small items of clothing. This appliance is not suitable for overcoats, large clothing or large home textile products such as heavy jackets or coats.

WARNING! DO NOT cover the air inlet.

2. Connect the appliance to the mains power, and red indicator flashes. The appliance is now in stand by mode.
3. Press the On/Off button, the blue indicator light up and the appliance starts to work.
4. Press the On/Off button to turn off the appliance after drying. The blue indicator goes off and the red indicator flashed.

Notes: the product will automatically stop after 12 hours of use.

5. Unplug the appliance after finish drying.
6. Remove the shirt from the dryer.

Tips:

- Shirts must be thoroughly spun before drying, they should not be dripping with water when using the shirt dryer.
- The air outlet should be checked for any sign of dust/fluff, and this should be removed immediately where possible.
- Drying time varies depending upon extent of moisture present in the shirt, the size of the shirt and the surrounding or ambient temperature and humidity. Shirts will dry more slowly and take longer to dry on a cool or humid day.
- If the shirt is still damp after drying, you may need to run extra time or allow the shirt to finish drying naturally.

WARNING! To prevent heat damage, DO NOT put the shirt dryer directly on carpet, wooden floor, on top of a cabinet, bench top or any fabric after it is turned ON or immediately after use. Always place it on a heat resistive surface.

CLEANING AND STORAGE

CAUTION: Make sure the appliance is unplugged from mains power and allow the appliance to cool down completely before cleaning.

- Rinse the detachable shirt racks with water, and dry thoroughly.
- Wipe the main unit with a soft damp cloth.
- Allow the appliance to get completely dry before next use or storage.
- Do not wrap the power cord around the appliance.
- Store the appliance in a cool, dry location and out of the reach of children.

TECHNICAL DATA

Voltage: 220-240V~ 50-60Hz

Power: 125W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us