

# Disney FROZEN


## KITCHEN PLAYSET

3+  
years



### INSTALLING BATTERIES:


- 1 - Unscrew the screw to open the battery cover.
- 2 - Insert 3 x 1.5V AAA batteries.
- 3 - Close the cover, ensuring screw is wound back on tightly.

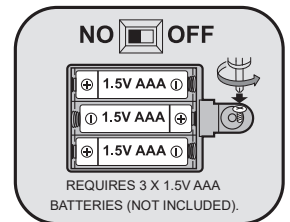

### PARTS:



**PRODUCT ASSEMBLY:**

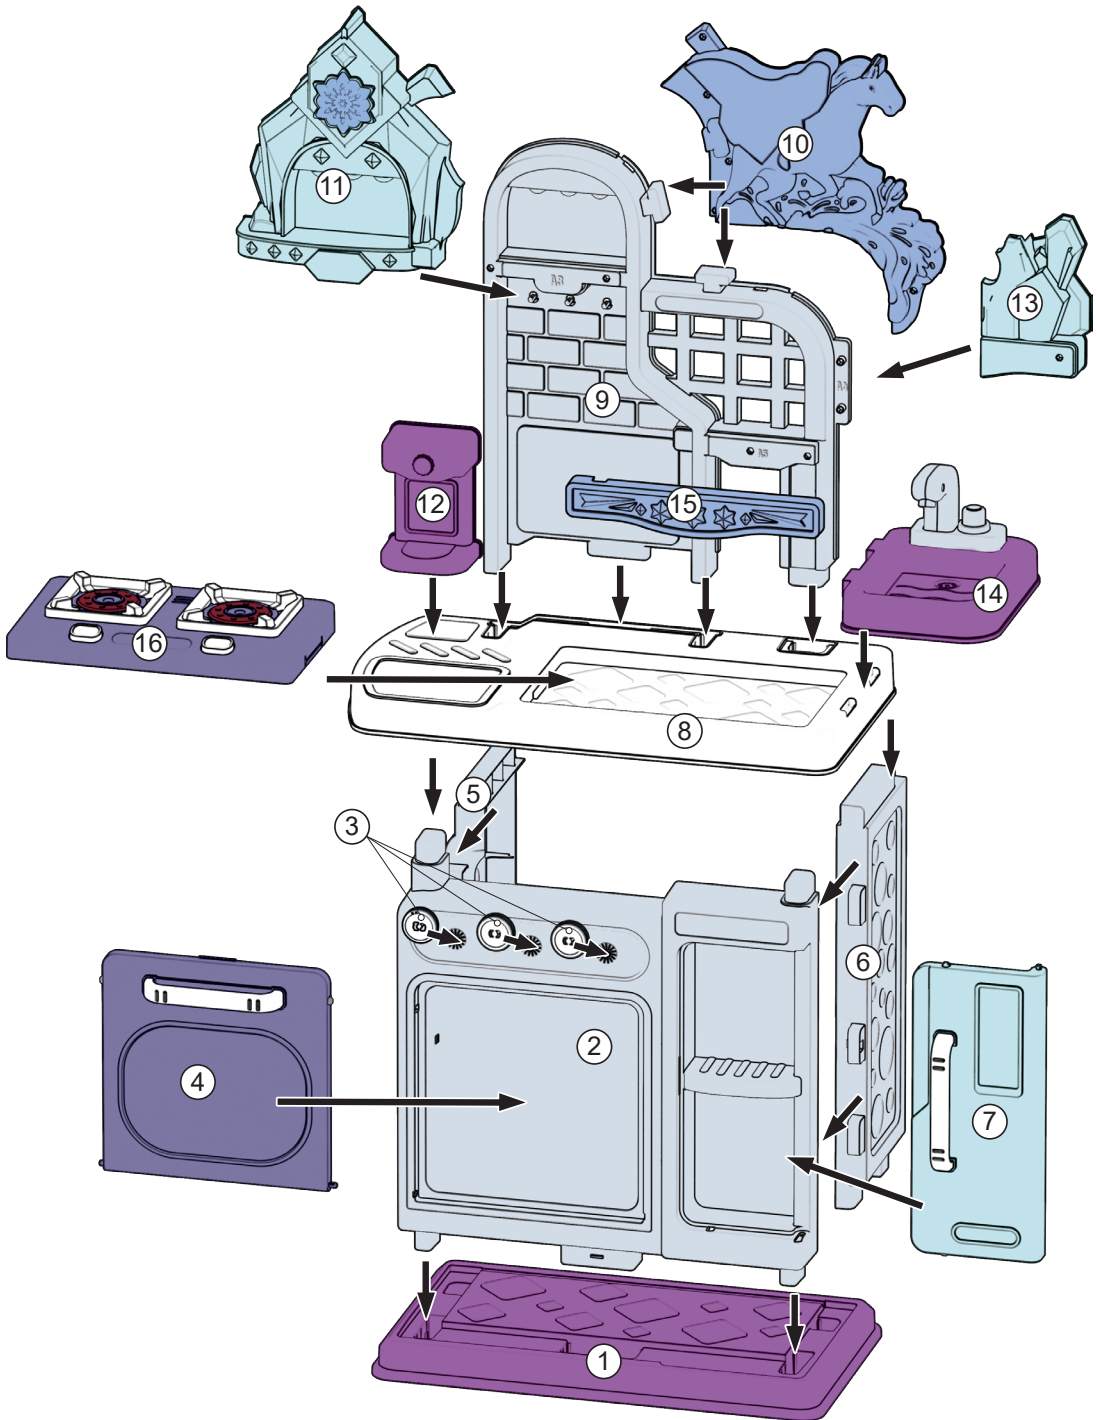

# STICKER PLACEMENT:



**WARNING:**  
CHOKING HAZARD - SMALL PARTS.  
NOT FOR CHILDREN UNDER 3 YEARS.

**WARNING:** ASSEMBLY AND DISASSEMBLY MUST BE CARRIED OUT BY ADULTS ONLY.

**CAUTION:** CLEAN ALL PLAY PIECES THOROUGHLY BEFORE AND AFTER USE. THIS IS A TOY, INTENDED FOR ROLE PLAY ONLY. NOT SUITABLE FOR USE WITH REAL FOOD OR BEVERAGES.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

**CAUTION:** NEVER GET STOVE WET.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

