

Customer Name: Kmart Australia	Box Size: W14.8 x H21cm
Brand Name: ANKO	Box Type: IM
Country: Version: 2025	Color: K
Item No: 6350	Pantone:
Date: 23Sep25 (new label)	Designer: Jackson



Pasta Maker

6+ years



Serving Suggestion



Pasta Maker



Tray

Rolling pin



Cutting attachment Egg & flour (Food ingredients not included)

Prepare Your Machine For Use



Clean the suction cups at the bottom of the maker and make sure it's free of any debris. Press the suction cups down all the way onto a smooth surface you want to work on to. Put the feeder tray on the top of the maker.



Put on the handle.

You can adjust the pasta thickness by pulling the machine regulator. Clean all the pieces and let them dry before use outwards.

Fresh Egg Pasta

1 ADULT ASSISTANCE IS REQUIRED.

Ingredients
2 cups of flour,
3 large eggs



Pour the flour into a mixing bowl and create a well in the middle. Crack the eggs in the well of the flour. Whisk the mixture with a fork until they are fully incorporated and then knead the mixture with your hands.



Keep kneading until it forms into a smooth ball. The dough should not stick to your hands. Incorporate more flour as needed to prevent sticking. Once you have finished kneading the dough, place a sheet of plastic wrap on top of the bowl and let the dough rest for at least 30 minutes.



3 Roll the ball out and divide the dough into 4 equal portions.



4 Flatten one piece of dough (around 1 cm thick). Fold it into thirds with your hand or with a rolling pin. Repeat 2 to 3 times. Sprinkle flour on top if it sticks.



5 Set up the Home Pasta Maker as the 'Prepare your machine for use'. Set the machine regulator to position '3' by pulling outwards. The rollers should be completely open.



WARNING: DO NOT PUT FINGERS NEAR THE ROLLERS. ADULT SUPERVISION IS REQUIRED FOR THE ROLLING PROCESS.

6 Feed the pasta into the machine while turning the handle clockwise.



7 Change the setting to position '2' to roll the pasta thinner. Repeat 5 to 6 times. Fold the dough over and add some flour to the middle as needed. The sheet of pasta should be around 1 mm thick.



8 Put on the cutting attachment. Run the sheet of pasta through it while turning the handle. Cut the pasta and gather them into the tray.

Cleaning Tips



Uninstall the cutting attachment as shown in the pictures for easy cleaning.



After use, wash the machine and other accessories with water. Use a brush if necessary. Make sure product is fully dry before packing away.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: CONTAINS FUNCTIONAL SHARP POINTS OR FUNCTIONAL SHARP EDGES.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE. ADULT ASSEMBLY REQUIRED. ADULT SUPERVISION AND ASSISTANCE REQUIRED. CAUTION: CLEAN ALL PIECES THOROUGHLY BEFORE AND AFTER USE. HAND WASH ONLY, NOT SUITABLE FOR DISHWASHER. PRODUCT MAY VARY FROM IMAGE SHOWN.

K: 43-628-360 | T: 71-885-254

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

Front

Back