


anko

**Warming Tray
23007C2
User Manual**

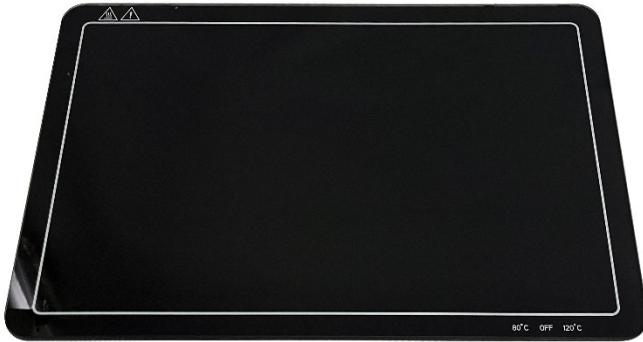

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE
REFERENCE**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
4. To protect against risk of electrical hazards, do not immerse the warming tray in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
5. Do not touch the surface of the appliance when in use as it is hot.
6. If the supply cord is damaged, it must be replaced by qualified electrical persons in order to avoid a hazard or the product must be disposed of.
7. The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
8. Do not use outdoors as it is not designed for such use and can cause electric shock.
9. Ensure to switch the power off and unplug the cord while the appliance is NOT in use.
10. Do not place on or near a hot gas, electrical burner or in a heat oven as these could cause the appliance to melt.
11. Do not allow children access to the plastic packaging bags and other components of the packing. They may be potentially dangerous to children.
12. Do not operate your appliance inside the appliance cabinet or under a wall cabinet. When storing it in an appliance cabinet, always unplug the unit from the electrical power outlet.
13. Do not use the appliance for other than intended use.

14. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses.
 - by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments.
15. **WARNING: Do not use the appliance if the surface is cracked.**
16. **WARNING: The heating element surface is subject to residual heat after use.**
17.  **Caution: Hot surface!**
18. For cleaning surfaces, please refer to section “Cleaning and Maintenance”.
19. Potential injury from misuse.
20. Intended for countertop use only.
21. Do not carry the unit while the warming trays are on the unit filled with food.

**SAVE THESE
INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR PRODUCT

1. Power cord
2. Warming surface
3. Feet
4. Control switch
5. Indicator light

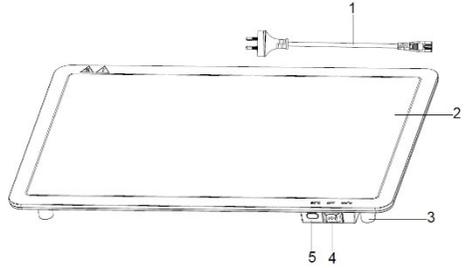

BEFORE FIRST USE

1. Clean the appliance according to the instructions in the “Cleaning and Maintenance” section of this manual.
2. Always place the appliance on a flat, clean, and non- slippery surface before operating it.
3. When using your appliance for the first time there may be a slight odor. This is normal and is no cause for concern.

OPERATION INSTRUCTIONS

1. Place the product on a horizontal desktop.
2. Plug the unit, the power cord is removable, first plug the power cord into the item and then plug the unit in an electrical power outlet.

WARNING: Ensure the control switch is in “O” position before plugging in which means the Warming Tray is turned off.

3. Press the control switch to the position “I” or “II”, the indicator light will be ON and the Warming Tray will begin to heat up.

NOTE: “I” level means the appliance will heat up to approximately 80 °C and “II” level means the appliance will heat up to approximately 120 °C.

4. Pour the desired food into a plate or dish and place it on the warming tray surface.
5. If you want to stop heating, press the control switch to “O” to turn off the machine and indicator light will be off.
6. If food is kept on the Warming Tray for an extended period, it may dry out and/or change flavor.
7. Unplug the unit from the power source when not in use.
8. Do not leave food on the Warming Tray when it is not in use.
9. When you have finished using the unit, remove all food and liquids

for subsequent use.

10. Allow the unit to cool down before removing parts for cleaning.

CLEANING AND MAINTENANCE

Before performing any cleaning and maintenance operations, please ensure that the control switch is in “O” position and the unit is disconnected from mains power.

IMPORTANT! Do not allow any food residue to dry on warming tray surface for too long after use. Remove it immediately when the surface has cooled down sufficiently.

1. Allow sufficient time for the Warming Tray to cool.

2. Wipe the warming tray base with a damp and/or soapy cloth.

3. The warming tray is not dishwasher safe.

Do not immerse the warming tray or plug in water, in a sink full of water or a dishwasher as it will damage the unit.

4. Do not use the unit if it appears damaged in any way. Do not attempt to repair the unit by yourself.

NOTE: If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid hazard.

NOTE: This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Any other service should be performed by an authorized service representative.

5. Be sure all parts are clean and dry before storing.

6. Store appliances in its box or in a clean, dry place.

7. Never store the warming tray while it is hot or wet.

TECHNICAL DATA

Voltage : 220-240V~ 50-60Hz

Power : 200W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us