

Sticker Placement



Sticker list



Parts lists



Accessories remove from the frame by consumers

Assembly steps for front side

- 1 Install the accessories on the corresponding card slot



Assembly part I

- 2 Assembly completed



Assembly steps for back side


- 1 Put the cardboard on the back and bottom




- 3 Install window sills, stairs, indoor furniture, garden floor and other accessories



- 2 Install stairs, right door and other accessories

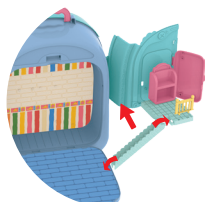



- 4 Install the bottom support clip and fence

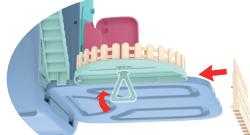

- 5 Assembly completed



Assembly part II

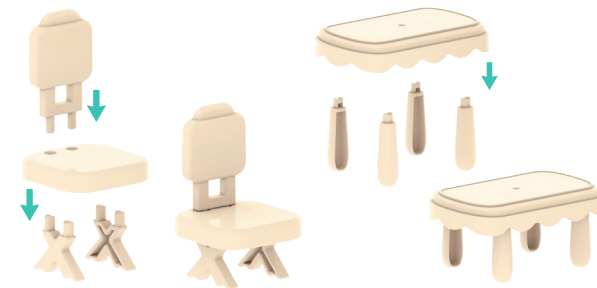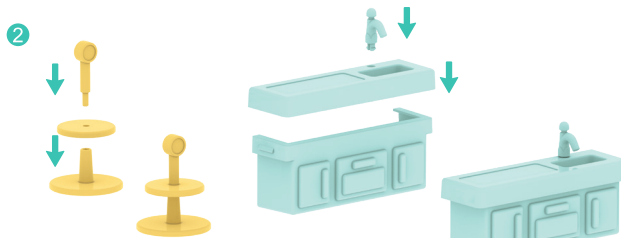

3 IN 1 CARRY CASE

3+
Years



WARNING: CHOKING HAZARD AND STRANGULATION HAZARD.
SMALL PARTS AND LONG CORD. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

43-628-971

CAUTION: ASSEMBLY AND DISASSEMBLY MUST BE CARRIED OUT BY ADULTS ONLY.

THIS IS A TOY, INTENDED FOR ROLE PLAY ONLY. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.



Disney
Stitch