

# IM

148 mm


210 mm

anko

## Electronic Money Safe


The "MONEY SAFE" guards your personal stuff. Use the safe to store all your exciting valuables. The coin slot at the top lets you use the safe as a piggy bank.

### BATTERY INSTALLATION

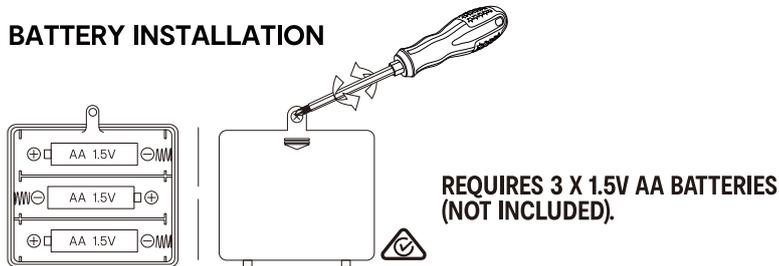

### OPEN THE SAFE


1. Use default code "0000" and open the door clockwise.

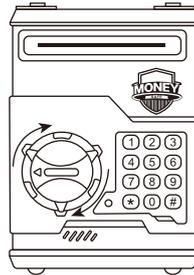

### CHANGING THE CODE

1. Press the default code "0000", and turn the dial to open the door
2. When the door is open, press and hold the "\*" button. When the green light flickers, input a new 4 digit code and press the "#" button. When the green light is extinguished, the code is saved. Then close the door. You need to use the new code to open the door.

Note: If you forget the password, it can be reset to the default one by removing and reinstalling the batteries.

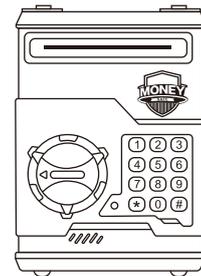

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

**INSTRUCTION SHEET MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION.**

K: 43-629-060 | T: 71-885-117

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567