

anko

Burr Coffee Grinder YD-3369 User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARD

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE

1. To protect against electrical shock, do not submerge the appliance or allow the power cord to come in contact with water or any other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
5. Never let the appliance operate unattended.
6. Always switch off the appliance and unplug the appliance if it is not in use, before cleaning, before attempting to move, disassembling, assembling and when storing.
7. To unplug the appliance, grasp the plug and pull from the mains power outlet socket. Never pull from the power cord.
8. DO NOT abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp on the plug and pull to disconnect.
9. DO NOT operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner.
10. If the power cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard or the appliance must be disposed of.
11. DO NOT let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
12. Always use the appliance on a dry, level surface. Sink, drain boards or uneven surfaces must be avoided.
13. The coffee grinder should not be turned ON until the bean hopper and lid are properly assembled.
14. Avoid contact with moving parts. Keep hands, hair, clothing, as well as utensils out of bean hopper while processing to reduce the risk of severe injury to persons or damage to the appliance.
15. DO NOT operate this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).
16. The use of attachments or accessories not supplied with the product may cause fire, electric shock or personal injury.
17. DO NOT remove the bean hopper from the main unit while the appliance is running.
18. DO NOT overfill. DO NOT operate the appliance empty.
19. DO NOT use pre ground coffee in the bean hopper, the appliance will not grind food that is sticky or extremely hard, or make pastes of any fruits, seeds or nut butters.
20. This appliance is for household use only. Do not use this appliance for anything other purpose than its intended use. Do not use outdoors. Do not use in moving vehicles or boats. Misuse may cause injury.

21. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, office and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
22. Check the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
23. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated current not exceeding 30mA be installed in the electrical circuit supplying the appliance.
24. Do not attempt to repair or disassemble the main unit. There are no user-serviceable parts inside the appliance.

WARNING! To avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched ON and OFF by the utility.


25. For cleaning, please refer to CLEANING AND STORAGE section.

IMPORTANT!

26. **To prevent damage to the electric motor from overheating, the maximum operating time is 90 seconds. Allow it to rest for at least 1 minute before using it again. After 5 cycles of operation, allow the grinder (electric motor) to cool down for approx. 30 minutes to room temperature before using it again.**
27. **The appliance is incorporated with a non-self-resetting thermal motor protection circuit to protect the motor from overheating. If the motor shuts OFF while in use, unplug the unit from main power outlet. Gently tap the main unit to let down the coffee powder left in the chamber and loosen the coffee beans. Then plug the unit back into mains power for normal operation.**

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR BURR COFFEE GRINDER

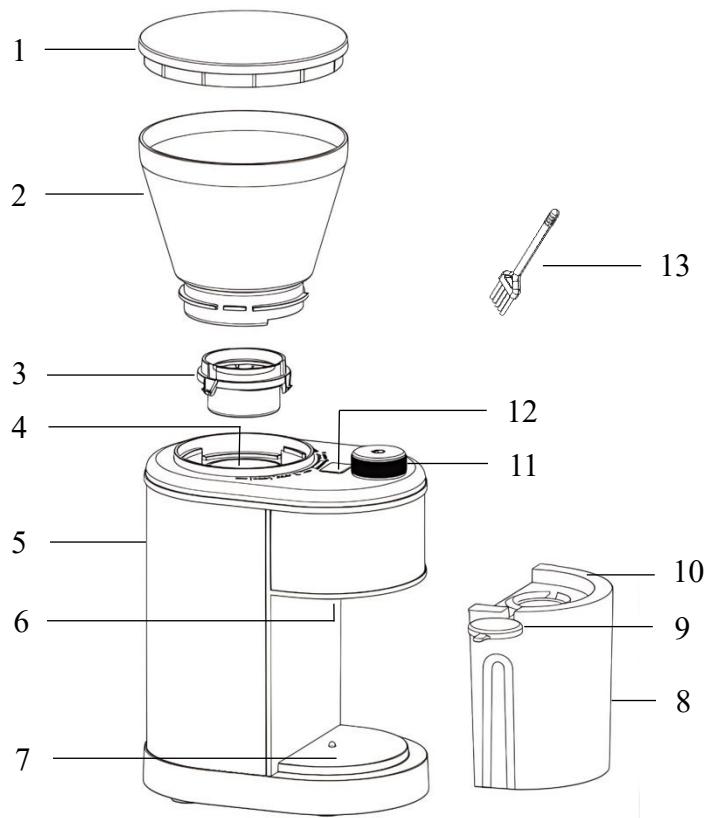

1. Bean hopper lid
2. Bean hopper
3. Conical burr
4. Grinding chamber
5. Main unit
6. Coffee powder outlet
7. Container holder
8. Coffee powder container
9. Rubber cap
10. Container lid
11. ON/OFF button
12. Digital display
13. Brush

IMPORTANT!

Please make sure that your appliance is received with all the components shown above. Check everything carefully before use. If any parts are missing or damaged, do not use. Return the product to the place of purchase for replacement.

INTRODUCTION

The appliance uses stainless steel conical burrs and can grind whole bean coffee suitable for a range of brewing methods, from the finest setting for espresso to the coarsest setting for plunger. You can select the number of cups.

BEFORE FIRST USE

Note: When using the appliance for the first time, carefully remove all packaging.

1. Before using the product for the first time, wash the bean hopper lid, bean hopper, coffee powder container, container lid with cap, and cleaning brush in warm, soapy water. Rinse and dry all parts thoroughly.
2. Use the brush to clean the conical burr and grinding chamber, then wipe with a soft, dry cloth. Wipe the main unit with a damp cloth and dry thoroughly.

WARNING! Never immerse the main unit in water or any other liquid. Do not use abrasive cleaners on any part of the appliance. Do not place any parts in a dishwasher or in extremely hot water.

USE YOUR BURR COFFEE GRINDER

To assemble the appliance

1. Place the main unit on a flat, level, and dry surface. Ensure the appliance is unplugged from the power outlet.
2. Insert the conical burr into the grinding chamber.
3. Align the triangle on the bean hopper with the unlock icon on the main unit. Rotate the bean hopper clockwise until you hear a “click” to lock it securely in place.


Open the rubber cap on the container lid, then slide the container onto the container holder.

To use the appliance

Fill the bean hopper with coffee beans and place the hopper lid securely on top.

WARNING!

- DO NOT fill above the MAX mark.
- 1. DO NOT use pre ground coffee. The appliance is not designed to grind sticky or extremely hard foods, or to make pastes from fruits, seeds, or nuts.
- 2. Plug the appliance into a standard **220–240V~** power outlet. The display will light up, indicating the appliance is in standby mode.
- 3. Rotate the bean hopper to select your desired grind size.

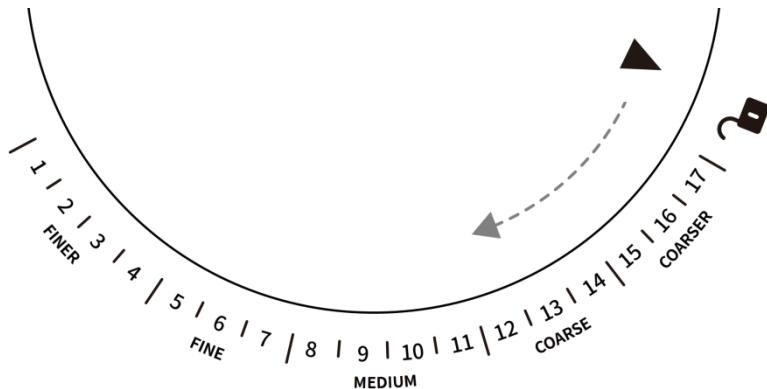

Grind setting	1-4	5-7	8-11	12-14	15-17
Grind size	FINER 200-400µm	FINE 500-700µm	MEDIUM 800-1000µm	COARSE 1100-1300µm	COARSER 1400-1700µm

4. Rotate the **ON/OFF** dial to select the desired number of cups. The cup quantity will be shown on the display.

Each cup uses approximately **8g of ground coffee**.

The amount of coffee produced may vary depending on the type and size of the beans.

Note: The first grind may produce slightly less coffee than subsequent grinds.

5. Press the **ON/OFF** button to begin grinding. The total grind time (in seconds) will appear on the display and begin counting down.
6. To **pause** grinding at any time, press the **ON/OFF** button once. “PA” will appear on the display. Press the **ON/OFF** button again to resume.
7. Press and hold the **ON/OFF** button to stop grinding completely.
7. The appliance will automatically stop and return to standby mode when the set time has finished.

8. After use, unplug the appliance from the power outlet.
9. Gently tap both sides of the main unit to release any remaining coffee grounds in the chamber.
10. Slide out the coffee powder container and secure the rubber cap.

TIPS:

- Freshly ground coffee is key to achieving richer flavour and aroma.
- Coffee flavour and strength vary by personal preference. Adjust the type of beans, grind size, and amount of coffee to suit your taste.
- For optimal freshness, use beans **5–20 days** after roasting.
- Use coffee beans between 5 and 20 days after the ‘roasted on’ date for optimal freshness.
- Store coffee beans in a **cool, dark, and dry** place. Vacuum seal if possible.
- Buy beans in **small batches** and store only about a week’s supply at a time.
- Once ground, coffee quickly loses its flavour and aroma—grind beans **just before brewing**.
- Do not store beans in the hopper. Transfer them back to an **airtight container** after use.
- Run the grinder for **2 seconds** before each use to purge any residual coffee and maintain freshness.
- Adjust the grind amount and size over several uses to find your preferred coffee strength.

CLEANING AND STORAGE

Regular cleaning helps the burr achieve consistent grinding results which is especially important when grinding for espresso coffee.

WARNING! Never immerse the main unit in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.

1. Get the remaining beans out of the bean hopper. Run grinder empty to clear beans and powder left in chamber.
2. Remove the power cord from the power outlet socket and ensure the appliance is thoroughly cooled before cleaning.
3. Gently tap both sides of the main unit to let down the left powder from the grinding chamber.
4. Brush the conical burr, grinding chamber and the powder outlet, wipe with a soft cloth.
5. Clean the outside of the main unit with a damp cloth, dry thoroughly.
6. Wash the bean hopper lid, bean hopper, coffee powder container, container lid with cap, brush in warm soapy water, then rinse and dry thoroughly.
7. Store the appliance in a clean, dry, ventilated location and out of the reach of children.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 150W

Max fill: 80g

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us