


# anko

## WARMING LUNCHBOX

### Instruction Manual

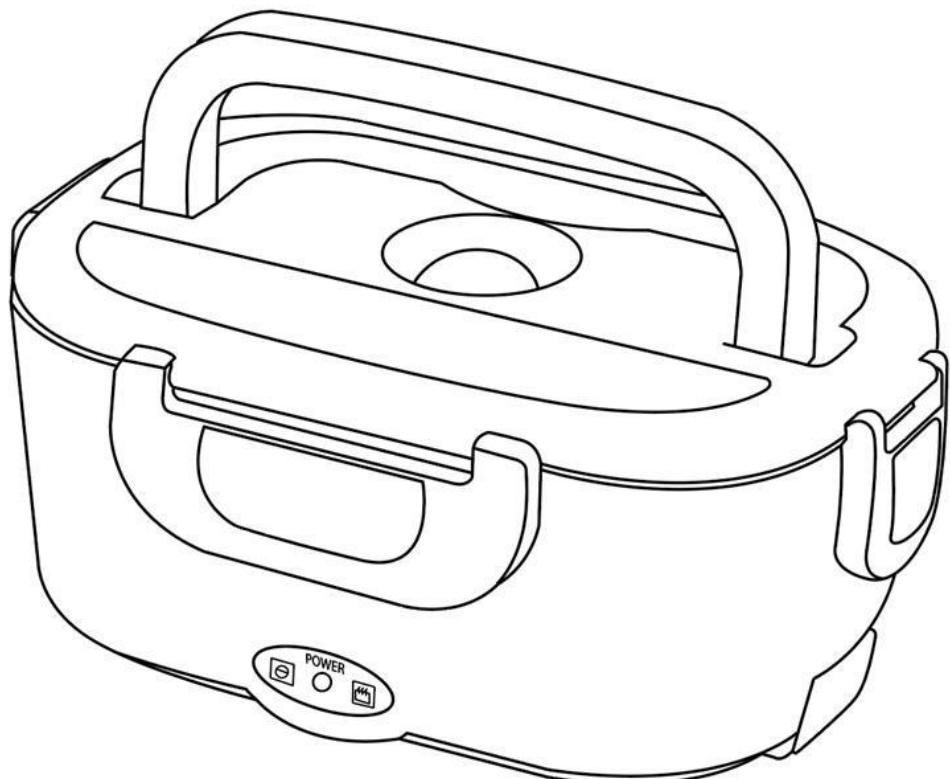

Model No.: ALB001

Please read this instruction manual carefully before use and keep it for future reference.

## IMPORTANT SAFEGUARDS



Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock, and injury when correctly followed. Keep this manual in a safe place for further reference, along with the purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this product.

### Explanation of Symbols



This symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.



This symbol/word designates a hazard with low risk, which may result in minor or moderate injury if not avoided.



This signal word warns of possible damage to property.



This symbol provides you with useful additional information about assembly or operation.



This symbol identifies that the material used in the product is safe for food contact.

When using electrical products, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed including the following:

- **Proper use:** This product is designed exclusively for reheating cooked food. This product is intended for private use only and is not suitable for commercial use. Use the product only as described in this manual. Any other use is improper and may lead to product damage or even personal injury. This product is not a toy. The manufacturer or retailer assume no liability for damage caused by improper or incorrect use.



### **Risk of electric shock!**

Faulty electric installation or excess mains voltage can cause an electric shock.

- Only connect the power cable if the mains voltage of the socket matches the information shown on the rating plate.
- Only connect the power cable to an easily accessible socket so that you can quickly disconnect it from the mains power in the event of a malfunction.
- For electrical safety, if the power cable of the product is damaged, it must be replaced by a qualified electrical person.
- Do not immerse the product or the power cable in water or other liquids.
- Do not bend the power cable and do not lay it over sharp edges.
- Keep the product and the power cable away from open flames and hot surfaces.
- Never pull the power cable out of the socket by the cord; always grip the plug instead.
- Never use the power cable as a carry handle.
- Do not attempt to disassemble the product. Any repairs to the product should be carried out by a qualified electrical person only.
- Do not operate the product with an external timer or a separate remote-control system.
- Only use the product in indoor rooms.
- Never operate the product in damp rooms or at a relative humidity of over 75%.
- Never store or use the product where it can fall into a tub or sink. Do not use the product if it has fallen into water.
- Never reach for the product if it has fallen into water. Immediately disconnect the product from the power supply.
- Disconnect the product from mains power outlet socket in the case of a fault (such as unusual noises or smoke).
- Never insert any objects into the housing.
- Do not use the product if there is visible damage or if the power cable is defective.
- Never touch the power cable with wet/damp hands.
- Do not place any objects on the power cable.
- Install the power cable so that no one can trip over it.

- Always unplug the product when not in use.
- Never leave the product unattended when connected to a mains power outlet socket.
- Immediately unplug the product if fire or smoke is emitted.



- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance. This appliance is intended to be used in household and similar applications such as:**
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- **The appliance is not intended to be immersed in water or washed in dishwasher.**
- Children must not play with the product or with the power cable.
- Do not let children carry out cleaning or user maintenance.
- Do not leave children near the product unattended whilst the product is in use.



#### **Burn and fire hazard!**

Improper handling of the product can cause fire or injury.

- Do not touch any surfaces while the product is in operation. Only touch the handle.
- Do not start the cooking when the product is empty
- Do not touch the hot parts of the product with bare fingers during operation. Always use heat-insulated cooking gloves or oven mitts. Also point out the dangers to others!
- The product remains hot after use. Let it cool down completely. Always use heat-insulated cooking gloves or oven mitts to touch the product.
- Do not place any plastic crockery or plastic containers on the product.
- Do not cover the product when in use.
- Handle the product with care if it contains hot liquid.
- Always leave approximately 20cm around the outside of the product during use.
- Do not operate the product near or underneath flammable materials such as curtains.

- **CAUTION!** Please note that parts of the product will still be hot for some time after operation. Do not touch the warming plate and other parts that have been heated during operation until they have cooled down.



### **Risk of injury!**

Improper use of the product can lead to injuries.

- Improper installation and the use of accessories not included or recommended by the manufacturer can lead to injuries.

### **Risk of damage!**

Improper handling can damage the product.


- Operate the product on an easily accessible, level, dry, stable and heat-resistant work surface. Never place the product on the edge of the work surface.
- Never place the product on or near hot surfaces and never expose the product to high temperatures (stove tops etc.) or to bad weather (rain etc.).
- Dismantling the product beyond the degree outlined in the manual can lead to irreparable damages and void any warranty claims.
- Never place the product in the refrigerator or freezer.
- Never connect the power cable and the car connection cable at the same time.
- **Only use the containers supplied to heat the food. Do not place food directly on the hotplate.**



- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture or any other liquid.
- Do not use the product near bathtubs, showers, basins, or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.
- If the product is dropped into water, turn off the power at the power outlet and remove the plug immediately.  
**DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE MAINS POWER OUTLET.**
- It is important to note that the product will have to be inspected by a qualified technician before using it again.

**SAVE THESE INSTRUCTIONS**

## PARTS GUIDE

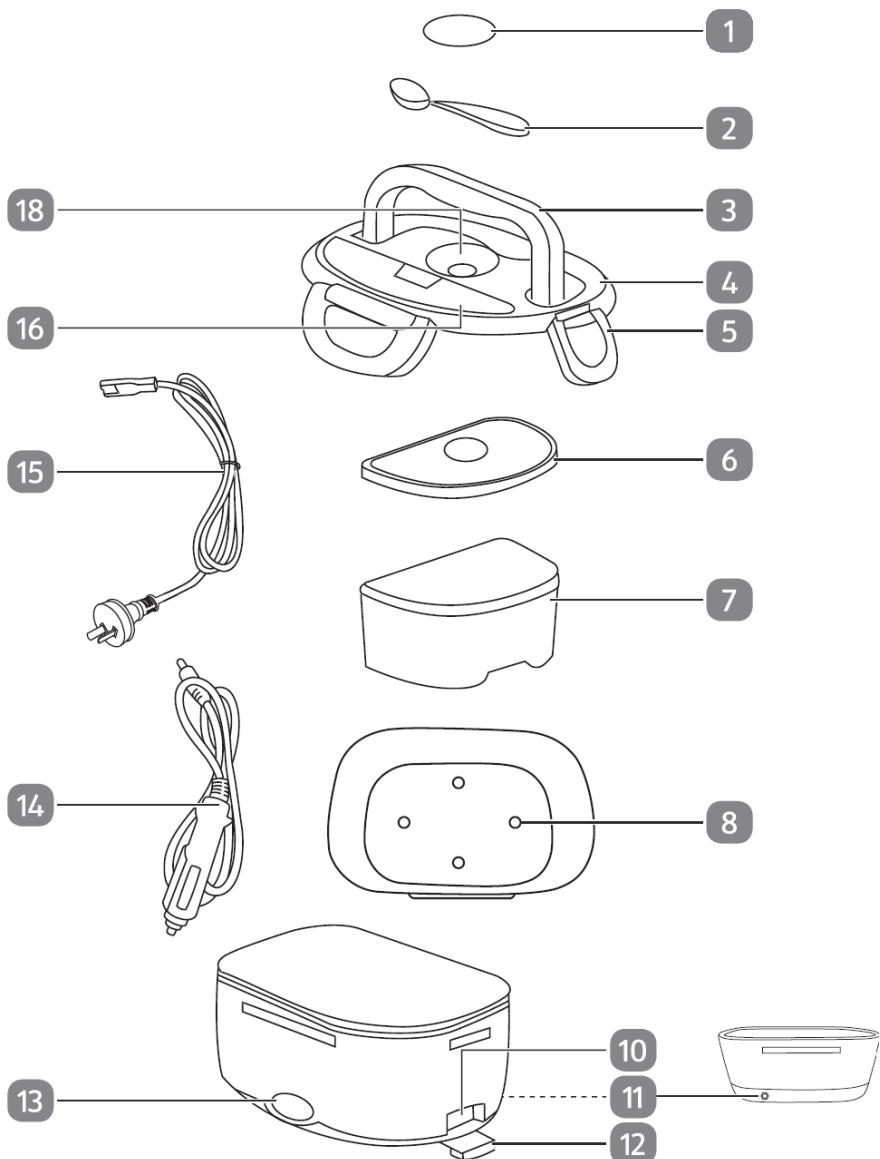

1. Steam outlet cap	10. Electric warming box
2. Spoon	11. Car Connection socket
3. Carrying handle	12. Mains Connector
4. Warming Box Lid	13. Power indicator
5. Locking tab	14. Car connection cable
6. Lid of small food container	15. Mains connection cable
7. Small food container	16. Cutlery flap
8. Large food container	18. Steam outlet

## INSTRUCTIONS

### BEFORE FIRST USE

Check the product and the Parts guide.



#### Danger of suffocation!

Children may become tangled up in the packaging film when playing with it and suffocate.

- Do not let children play with the packaging film.

#### Risk of damage!

If opening the packaging with a sharp knife or other pointed object, careless handling can damage the product.

- Therefore, be very careful when opening.

1. Take the product out of the packaging.
2. Check that the delivery is complete (see Parts Guide).
3. Inspect the product and individual parts for damage. Do not operate a damaged product. If damage has occurred or parts are missing, contact Kmart/Target Customer Service.

### CLEANING THE PRODUCT AND ACCESSORIES

1. Remove the packaging and all protective film.
2. Clean the product and accessories before using them for the first time (see Cleaning and Maintenance).

**NOTE:** When the product is used for the first time, there may be a slight odour emitting from the product. This is not a fault on the product. After a few uses, the odour should disappear without requiring further action. Ensure there is adequate ventilation.

## OPERATION



### WARNING!

#### Risk of burns! Danger of scalding!

- Parts of the product heat up when in use and may cause burns.

**CAUTION!** Parts of the product will still be hot for some time after operation. Do not touch the warming plate and the other parts that have heated during operation until they have cooled down.

- Handle the product with care if it contains hot liquid.

#### Risk of damage!

Improper handling can damage the product.

- Never operate the product with the steam outlet cap closed.
- Never operate the product when it is empty.

**NOTE:** The warming time depends on the ambient temperature and the quantity and the temperature of the food to be heated.

The warming time at 25°C ambient temperature is approximately 25 minutes (approximately 30 minutes when using the car connection cable (14)). For food from the refrigerator, extend the warming time accordingly.

After 25 to 30 minutes of operation, the appliance reaches an approximate maximum temperature of 70°C, which is suitable for keeping food warm.

1. Insert the large food container (8) into the warming box (10).
2. Insert the small food container (7) into the large container (8).
3. Place cooked food in the small (7) and large container (8).
4. Place the small lid (6) on the small food container (7).
5. Make sure that the seal (9) is inserted in the lid (4).
6. Place the Warming Box Lid (4) on the warming box (10).

**Note:** When attaching the lid (4), ensure that the indentations in the lid (4) and the small lid (6) are aligned.

7. Close the locking tabs (5) until you hear them click into place.
8. Press the centre of the steam outlet cap (1) until the edges fold up and the steam outlet (18) is open.
9. Open the Mains connection cover (12) and connect the mains cable (15), or the car connection cable (14) to the respective power source.
10. Connect the mains cable (15) to the power outlet or the car connection cable (14) to the vehicle socket.

**NOTE:** The heating process begins, and the power indicator (13) lights up during the heating process.

11. To turn off the lunchbox, unplug the mains cable (15) from the power outlet or the vehicle connection cable (14) from the vehicle socket.

**NOTE:** To save energy, disconnect the product from the power supply when you have finished warming your food or when the product is not in use.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The power indicator does not light up.	The product is not properly connected to a power supply.	Check that the cord and plugs are correctly connected.
	The cable is damaged.	Check the power cable for damages.
	The heating element is defective.	Contact Customer Service.
The temperature of the food is too low after heating.	The heating time is too short.	Extend the heating time.
	The ambient and/or food temperature is too low.	

## CLEANING AND MAINTENANCE



### Risk of injury!

- Always disconnect the mains plug and allow the product and all individual parts to cool down completely before cleaning!
- After cleaning, carefully dry the product before operating again.

### Risk of damage!

Improper cleaning of the product may result in damage.

- **Never immerse the product in water or other liquids.**
- **Never wash the product in the dishwasher.** This would destroy it.
- Do not use any aggressive cleaners, sharp or metal cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.

### Cleaning accessories.

1. Remove the seal from the lid.
2. Clean the small and large container, the small lid, the lid and the spoon in warm soapy water.
3. Then wipe all parts completely dry.
4. Return the seal to the lid.

### Cleaning the lunchbox

1. Wipe the Electric warming box with a clean slightly damp cloth.

2. Allow the lunchbox to dry completely before reinserting and using the accessories.

## STORAGE

### **Risk of damage!**

Improper storage of the product can result in damage.

- Allow the product to completely cool down.
- Place the product so that it can't fall into water.
- Store the product in a clean, dry, frost-protected place out of the reach of children.

1. Thoroughly clean the product (see "Cleaning and Maintenance").
2. Roll up the power cable without knots or bends.
3. Roll up the vehicle connection cable without knotting or kinking.
4. If possible, pack the product in the original packaging.

## TECHNICAL DATA

**MODEL:** ALB001

**Vehicle connection:** DC input 12V  45W

**Mains socket connection:** AC input 220-240~, 50Hz, 45W

# 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

The warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed with the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C-/Customer Service Centre 690 Springvale Road, Mulgrave VIC 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C-/ Customer Service Centre 2 Kendall Street, Williams Landing, VIC, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>