

210.00 mm

148.50 mm

anko

INSTRUCTION

DRUM GRATER



PRODUCT DETAILS



3 Stainless Steel Drum Blades


Fine Grater


Coarse Grater


Thin Slicer

Precautions:

- The blades are extremely sharp. Handle with care during use, assembly, and cleaning.
- Keep the rotary grater out of reach of children.
- Always use the hand guard when grating and slicing.
- The suction cup adheres best to smooth, clean surfaces such as marble countertop.
- For cleaning, fully disassemble the product:
 1. Press the grey button on the handle to detach it.
 2. Remove the drum blade.
 3. Slide the transparent barrel forward to remove the hopper.
 4. Finally, turn the knob counterclockwise.We recommend washing all parts by hand in water no hotter than 60°C.

HOW TO USE THE DRUM GRATER



1. Secure the Grater: Place the drum grater's base on a clean, smooth, flat surface. Lock the suction base into place by turning the knob clockwise.



2. Assemble the Drum: Slot the hopper onto the base and insert the desired drum blade into it.



3. Assemble the Handle: Attach the handle by aligning it with the end of the drum blade and push until you hear a "click," indicating it is locked in place.



4. Prepare the Food & Start Grating: Place a plate or bowl in front of the grater to catch the grated food. Trim any large pieces of food to fit into the hopper. Load the food into the hopper. Gently push down with the hand guard while turning the handle clockwise.



5. Change Drums: To change the drum, press the button on the handle to release it, remove the existing drum blade, insert the desired one, and then reattach the handle.