

# anko

## Desktop Mug Warmer

**KAHC0857**  
**Instruction Manual**



To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

## GENERAL CARE AND SAFETY GUIDE

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

**CAUTION: this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



**CAUTION: HOT SURFACES.**

**WARNING: DO NOT touch hot surfaces. Always use caution when near or working with a hot surface.**

**WARNING: Do not use mugs or containers that are not heat-safe with the appliance.**

**CAUTION: The base of the appliance will get hot during use, it is advised to position appliance on heat resistant mat to avoid damage/dicolouration to benchtop surfaces.**



- Use only the voltage specified on the rating label of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Do not use the appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.
- The appliance must not be immersed in any liquids.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer may cause fire, electric shock or injury.

- Do not cook foods on this appliance, as it does not reach safe temperatures for proper food preparation.
- Always use extreme caution when moving mugs containing hot liquids.
- Always unplug the appliance when it is not being used.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact Kmart/Target the Customer Services Team.
- Ensure hands are dry before handling the USB cable or main unit.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Carry out regular checks of the USB cable to ensure no damage is evident.
- Do not operate this appliance with a damaged cable, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cable around the appliance, as this may cause the insulation to weaken and split.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling the cable; always grip the plug.
- Do not attempt to repair or take apart the appliance for any reason. There are no user serviceable parts installed in the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet). Always remove plug from the power supply before cleaning.
- If your appliance does not work or is not working properly, contact the place of purchase or the Customer Services Team.

## **SAVE THESE INSTRUCTIONS**

**THIS APPLIANCE IS DESIGNED FOR HOUSEHOLD USE ONLY**

## FEATURES OF YOUR DESKTOP MUG WARMER

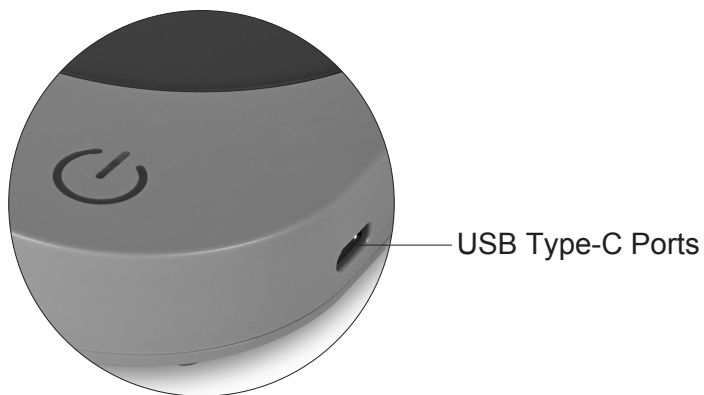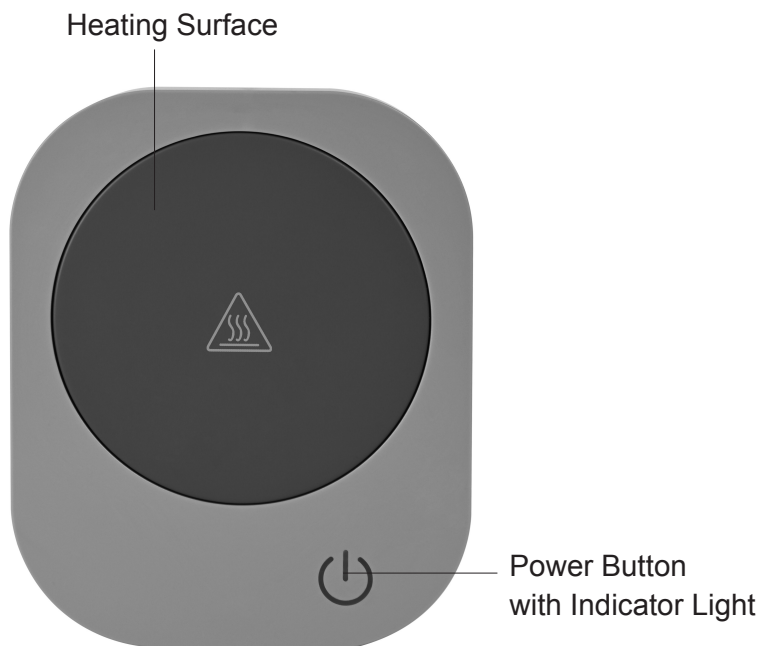

## YOUR DESKTOP MUG WARMER

Congratulations on the purchase of your new Mug Warmer. Before using your new heater, it is important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are quite familiar with this appliance. Find a place to keep this booklet handy for future reference. Attention is drawn to section dealing with 'IMPORTANT SAFEGUARDS'.

This appliance has been designed to operate from a 12Vd.c. USB power outlet. It is not intended for industrial or commercial use.

## OPERATION

Always choose a safe location for the coffee mug warmer, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the appliance before use. Please follow the below instructions.

**IMPORTANT NOTE:** The appliance operates with a 12Vd.c. power source at 1.5A, 18W. If connected to a 5Vd.c. or 9Vd.c. power source, It cannot reach the required temperature. Ensure that a 12V d.c. power source is used for proper operation.

We recommend using a power adapter capable of delivering a 12Vd.c. 1.5A (18W) output for optimal performance. If the device is connected to a laptop via a USB cable, ensure that the laptop's USB port can support 12Vd.c. 1.5A (18W) output to meet the power requirements.

**WARNING:** Do not use mugs or containers that are not heat-safe.

**NOTE: SUITABLE FOR STAINLESS STEEL CUP, GLASS CUP, CERAMIC/PORCELAIN MUG**

1. Place the appliance on a flat, stable, and heat-resistant surface. Connect the USB cable to the Type-C socket on the appliance, and then plug it into a 12Vd.c. USB-C power source.
2. Press the power button to turn on the appliance. The indicator light will cycle through blue, purple, and red for 1 second each, followed by flashing blue with two beeps, indicating standby mode. If no activity occurs within 3 minutes, the appliance will automatically turn off.

3. In standby mode, press the power button once to enter heating mode. Press the button repeatedly to cycle through the three heating modes, indicated by the following colors: blue → purple → red → blue.
  - **Blue Light:** Heats to approx. 40°C and maintains for 8 hours, then automatically shuts off.
  - **Purple Light:** Heats to approx. 50°C and maintains for 8 hours, then automatically shuts off.
  - **Red Light:** Heats to approx. 60°C and maintains for 8 hours, then automatically shuts off.
4. Place a heat-safe mug or container of your choice directly onto the heating surface.

**Note: For best heating results, use mugs or containers with flat bottoms.**
5. During operation, press the power button once to switch between the different heating modes.
6. To turn off the appliance after use, press and hold the power button for 2 seconds until the indicator light goes off.

## TECHNICAL SPECIFICATIONS

Power Supply: 12Vd.c. 1.5A

Power Consumption: 18W

**NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.**

## **CARE AND CLEANING**

- Before cleaning, ensure the appliance is unplugged and has cooled down completely.
- Clean the exterior surfaces of the appliance with a damp, soft cloth. Dry immediately with a clean dry cloth.
- Never use any form of detergents or solvents to clean the appliance.
- Never spray the appliance with liquids or submerge in liquids or water.
- Store the appliance in its original box to protect it from dust in a dry place if it will not be used for a long period of time.

## **DISPOSAL**

Do not dispose of packaging or the product through your household waste!

The product and packaging are made from recyclable materials (plastics, metals, paper).

If the product is no longer suitable for use, dispose of it in an environmentally friendly manner in accordance with your local council.

# NOTES



## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases                                                                                                                                                                                                                                  | Contact for Target purchases                                                                                                                                                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Kmart Australia Ltd.<br>C/- Customer Service Centre<br>690 Springvale Road,<br>Mulgrave Vic 3170<br>Customer Service: 1800 124 125<br>(Australia) or 0800 945 995<br>(New Zealand) or via<br>Customer Help at <a href="http://kmart.com.au">kmart.com.au</a> | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>2 Kendall Street, Williams Landing,<br>Vic, 3027<br>Customer Service: 1300 753 567<br>or via Customer Help at<br><a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a> |



Cat. No. KAHC0857  
December 2024