

The regulator has gear adjustment. It shows the digital of 1,2.



Setup

1. Place the machine on a table and secure it with the clamp (1).
2. Insert the handle (4) into the roller hole (2).
3. Set the regulator (3) to position 1 (rollers fully open, ~3 mm).

Rolling the Dough

4. Pass the dough through the rollers while turning the handle.
5. Repeat 5–6 times, folding the dough and dusting with flour if needed.
6. Once smooth, adjust the regulator to position 2 (~0.2 mm) and roll once more.
7. Cut dough into strips about 25 cm long.

Notes:

If rollers don't cut, the dough is too soft, add some flour to the dough.
If the dough is too dry and won't feed, add a little water to the dough.

Changing to Cutting Attachment


8. Align the slot to the cutting attachment (5) with the slot on the main unit and insert it.

Cutting the Pasta

9. Insert the handle into the cutting attachment (5).
10. Feed dough through slowly to cut desired pasta shape.
11. Spread pasta on a cloth and let dry for 1–2 hours.

Removing Attachments

12. To remove the cutting attachment, lift and slide it out manually.
13. To reinstall, reverse the steps.

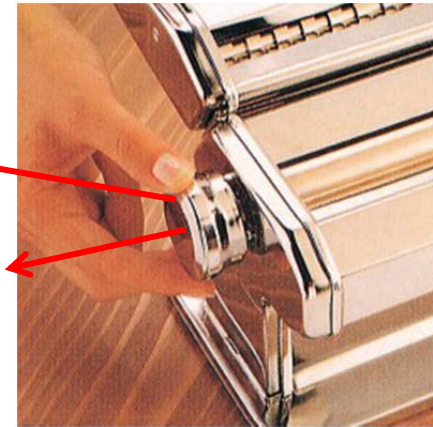

PASTA MAKER USER MANUAL

Pasta & Ravioli maker User manual

BEFORE USE

1. Ensure the packaging of this appliance is disposed of properly. Keep plastic bags away from babies and children.
2. Before the first use of this machine, clean it with a dry cloth to remove any excess oil.
3. To clean the rollers, pass a small quantity of dough through them and then throw the dough away.

PARTS

1. Clamp
2. Roller hole
3. Regulator
4. Handle
5. Cutting attachment



CLEANING

Clean the scrapers underneath the smooth rollers every so often with a piece of dry cloth or kitchen paper.
Do not wash the machine with water or in the dishwasher.
To clean the machine after use, use a brush or a wooden rod.
If necessary, put several drops of oil on the ends of the cutting rollers.
Do not use sharp objects, hard brushes or oven cleaners to clean the device.

IMPORTANT SAFEGUARDS

1. This appliance is intended for domestic use only.
- The manufacturer accepts no responsibility for damage caused by improper use or failure to follow the instructions.
2. Only use accessories recommended by the manufacturer.
- Using unapproved accessories may result in injury or damage to the appliance.
3. Keep fingers and objects away from the rollers. Never insert fingers, hair, clothing, cooking utensils, knives, screwdrivers, or any other objects between the rollers.
4. Do not drop or insert objects into any openings.
5. Supervise children around the appliance. Ensure that children do not play with or operate the appliance.
6. Read all instructions carefully before use and retain them for future reference.

