

70 mm

100 mm

anko Thermal Print Camera Instruction Manual

K: 43-635-078 | T: 71-802-497
Model No. ZB2025041102


Accessories:

- > 1 x Camera
- > 1 x Charge & data cable
- > 1 x Lanyard
- > 2 x Thermal paper
- > 1 x Memory card (32GB included)
- > 1 x Instruction manual



Camera Interface


1. Selfie Lens
2. Screen
3. Working Indicator
4. Mic
5. Up Button
6. Left/Zoom in Button
7. Down Button
8. Right/Zoom out Button
9. Lens Switching Button
10. Replay Button
11. Power/Return Button
12. Print Button
13. Capture/OK Button
14. Memory Card Slot
15. Reset Slot
16. Charging Indicator
17. USB Port
18. Speaker
19. Flash Light
20. Rear Camera
21. Paper Slot

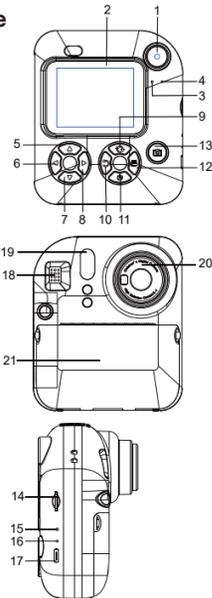

Inserting the Memory Card


Insert the Micro memory card to record and store your videos and photos. When the battery is low, media stored on the memory card will not be erased. Please insert the Micro memory card by following the steps below:

1. Insert the memory card. Ensure that the metal contacts are inserted first. Push the memory card down until you hear an audible click. **The memory card can only be inserted in one way. Do not force the card in if it will not go in smoothly.**
2. To remove the memory card, simply push in and the card will eject out.

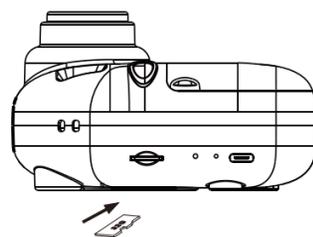

Instant Print Mode

1. Ensure that the correct installation according to the diagram, otherwise it can not print.
2. According to the direction of the arrow, a unilateral manual outward break can open the paper bin cover as shown in the figure above.
3. Remove the old paper roll, put the new paper roll into the paper bin, the paper should be placed correctly, do not put crooked. (Noted: the new thermal paper should be exposed to the paper bin 2CM length, so that the machine can automatically absorb paper when loading the paper bin box)
4. The paper compartment box will be covered, and the machine will automatically absorb the paper and then it can be used normally.
5. After the above steps, the machine can print normally and have fun.

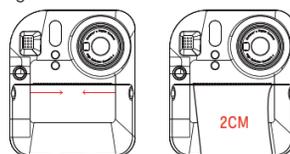

Printing while taking photo.

Method 1: Press to [Photo Mode] get into photo mode, then press to [Print] button, camera will print photo automatically.

Method 2: Press the [Replay] to get into replay mode, choose the photo and press to [Print] to print the photo.


Note:

- * Choose suitable print density and print mode (in setting menu) at different situation to improve the print image.
- * If camera doesn't print, please check whether fixed the paper in wrong way or not.


Operation Guide

Power On/Off

- Press and hold [Power] to power on and power off.
- * If the camera can not be powered on, please try to charge the camera for at least 30 minutes and then power on.
 - * If the camera is frozen (due to wrong operation), please try use a sharp pin to stick into the reset hole to power the camera off, and then restart the camera.

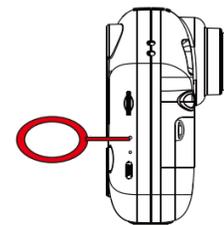

Menu

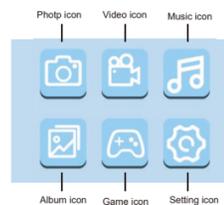

Camera will enter menu when powered on. Press [Left/Right] to select modes, press [OK] to enter the selected mode, and press [Power] to go back to menu.

Photo Mode

Long press [Left/Right] to zoom in, long press [Left/Right] to zoom out.

Long press [Flash] to turn on/off LED flash light. Press [Left/Right] to select among photo modes, photoframe, filter effect and special effect. Press [Selfie] to switch the selfie lens. Press [Power] to go back to the menu.

Video Mode

Press [Left/Right] to change different filters. Long press [Flash] to turn on/off LED flash light. Press [Selfie] to switch the selfie lens. Press [Power] to go back to the menu.

Tips for Photo Mode and Video Mode

- * The fill light can only be turned on/off in Photo and Video Mode.
- * When the camera fill light is turned on, do not aim it at the child's eyes to avoid injury.

MP3 Mode

- * Press [Music] to pop out Music List Window, then press [Left/Right] to choose songs and [OK] to play the selected songs; press [Power] to exit the Music List Window.
- * When exit the Music List Window, press [Left/Right] to switch songs directly and press [OK] to stop or continue playing music.
- * Download Music: please insert SD Card to camera to automatically build MP3 folder and download music by MP3 format to MP3 folder.

Playback Mode

- * Press [Left/Right] to view videos and photos you took.
- * Press [OK] to start or stop playing video.
- * Hold [OK] to show Delete Interface, press [Left/Right] to choose OK/cancel, then press [OK] to confirm.
- * When view photos, and press [Print] to print the photo.
- * Video format: AVI; Photo format: JPG

Game Mode

* Press [Left/Right] to select games, press [OK] to enter the selected game.

* 5 Games: Tetris/ Sokoban/

Power pinball/ Gluttonous Snake.

Maze

[Left] move leftward; [Right] move rightward;
[Up] move upward/rotate in Tetris; [Down] move downward.

* Press [Power] to exit game and go back to menu.

Settings

* Press [Left/Right] to choose settings, Press [OK] to enter the selected one and press [Power] to go back to settings menu.

- (1). Language setting: multiple languages can be changed
- (2). Printing density: After entering the setting mode, you can choose
- (3). Print Modes: Gray Print or Dot Print makes different print effect
- (4). Video resolution: set the resolution of video recording
- (5). Image quality: set the image quality and size
- (6). Cyclic recording: set of the recording time
- (7). Beep sound: the button sound can be turned on or off
- (8). Automatic shutdown: set the automatic shutdown time
- (9). LCD off: set the time of automatic off screen
- (10). Date/Time: Set the date and time of the machine
- (11). Format: clear files
- (12). Default setting: restore factory settings

Connect to Computer

* Connecting when there is a Memory card in the camera

- Please make sure the Memory Card is readable by the camera and connect camera (on status) to PC by USB cable.

- When you open the disk, you can see 3 file folders in it.

- VIDEO
- PHOTO
- MP3

VIDEO: videos you take will be stored in it.
PHOTO: photos you take will be stored in it.
MP3: copy songs (MP3 format) to this folder, and songs can be read by camera.

BATTERY WARNING!

1. REPLACEMENT OF A BATTERY WITH AN INCORRECT TYPE THAT CAN DEFEAT A SAFEGUARD.
2. DISPOSAL OF A BATTERY INTO FIRE OR A HOT OVEN, OR MECHANICALLY CRUSHING OR CUTTING OF A BATTERY, THAT CAN RESULT IN AN EXPLOSION.
3. LEAVING A BATTERY IN AN EXTREMELY HIGH TEMPERATURE SURROUNDING ENVIRONMENT THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.
4. A BATTERY SUBJECTED TO EXTREMELY LOW AIR PRESSURE THAT MAY RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.

WARNING!

IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.

1. THIS PRODUCT IS NOT A TOY.
2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V 1A).
3. THIS PRINTER CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
4. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.

5. THE PRINTER SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)
6. THIS PRINTER CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.
7. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.
8. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.

Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567