


# anko

## Instruction Manual

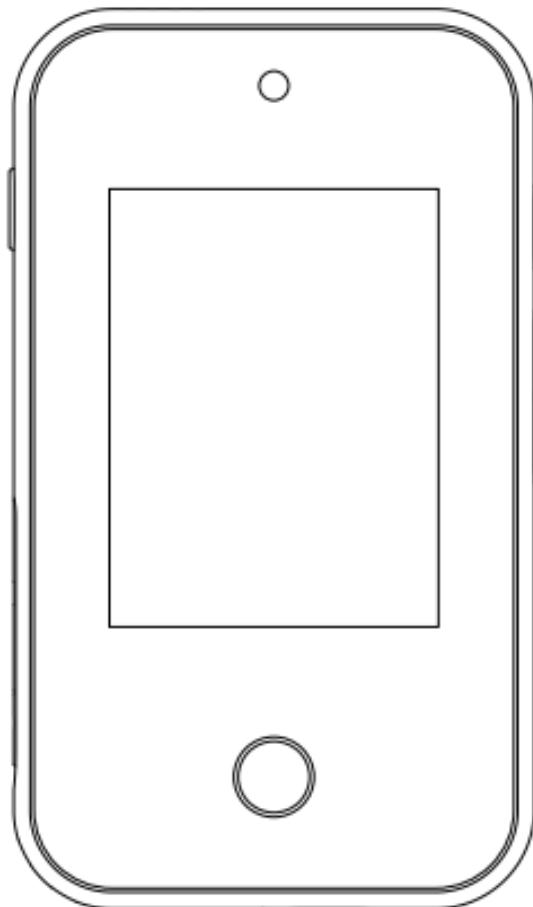

**Kids Interactive Touchscreen Camera**

**K: 43-635-085 | T: 71-802-572**

**Model No: EB500470**

**MADE IN CHINA**

Please read this user manual carefully before using the product.

## Safety and Warnings

Misuse of batteries can lead them bursting, causing a fire or chemical burns. Please read the below precautions:

1. Do not disassemble.
2. Do not crush and expose the battery to shock or force.  
Such as hammering, dropping or stepping on it.
3. Do not short circuit.
4. Do not expose to high temperatures or place near a heat source.
5. Do not dispose of in fire.
6. Do not handle damaged or leaking battery.
7. Keep the battery out of the reach of children.
8. Keep the battery dry.
9. If you notice any signs of damage, cease use, and contact support.
10. Dispose of the item at a suitable waste station, as the battery cannot be added to normal waste.
11. Keep the rubber cover of the USB-C port closed lightly while it is not in use in order to prevent dust or water from getting into the USB-C port.
12. Keep the camera clean by wiping it with a slightly damp cloth.
13. Keep the camera out of direct sunlight and away from any heat source.
14. Do not drop the camera on a hard surface. Do not expose it to moisture or immerse it in water.
15. Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by:  
Blowing on the lens.  
Gently wiping the lens with a dry cloth.
16. Charging should only be completed by an adult.


# Product Overview

This product is designed to be used by children.

In addition to displaying time, you can also take photos, take videos, record voice and play games!

Please note, it is not necessary to turn off the Master Power Switch during daily use.

This product with a small amount of charge, but we recommend fully charging before use. It takes about 1.5 hours to fully charge.

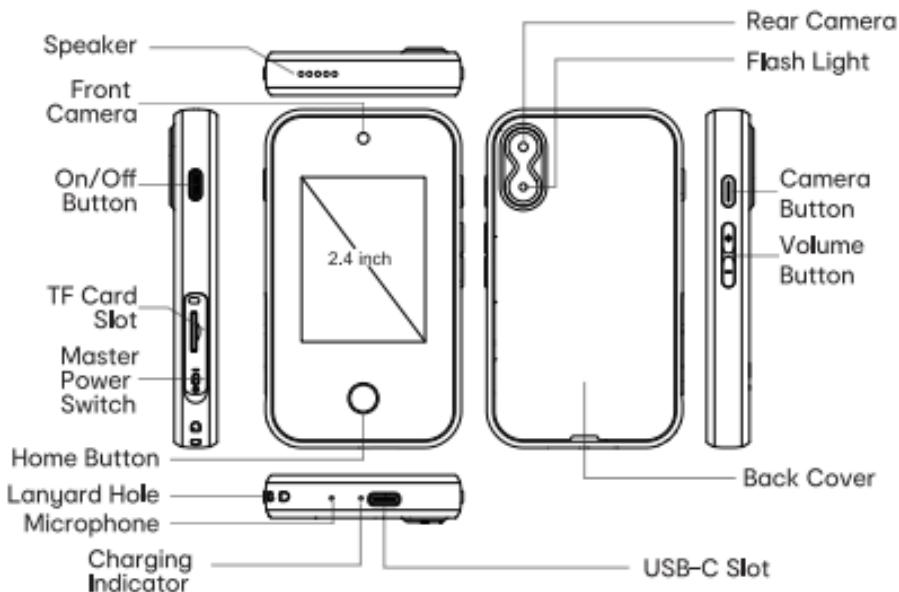

## Note:

If the product cannot be turned on, please charge it with a 5V voltage adapter(not included) for 2-5 minutes to start up the camera.

**Switch [Master power switch] to “” position to connect the power.**

## Charging the Battery

Connect the Interactive Touchscreen Camera to a computer with the included USB cable to charge the battery.

Insert the USB cable (Small end) into the USB-C port on the camera. Insert the larger end of the USB-C cable into a spare USB port on the computer. A USB port is usually marked with this symbol .

Once the connection is successful, you will see the battery charging symbol displayed on the camera screen for one second, and then the data transfer symbol. The battery will continuously charge whilst connected, you can open PC to find the camera to transfer data at the same time.

Monitor the camera regularly throughout the charging process. When the battery is fully charged, a full battery symbol displays on the screen, disconnect the camera from the computer.

**Note:**

It will take approximately 1.5 hours to fully charge the battery. The actual time depends on power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 0°C-40°C ( 32°F-104°F). If your camera needs longer than 3 hours to fully charge, try charging from a different USB power source.

## Battery Life

The time of the battery lasts between charges depends on usage. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery, such as taking photos and videos. The expected battery life is shown below. This is based on the assumption that the screen is turned off when not in use.

**Note:** Please do not use fast charge, charge at least once a week.

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2~3 days
Heavy Usage	1 day

## Low Battery Reminder

There will be a reminder when the battery is below 30%, and you will not be able to play games when the battery is below 10%.

## How to Operate Interactive Touchscreen Camera

Press the On/Off button (on the left side) for 3 seconds to wake up the camera from standby.

When the clock is displayed on screen, press the home button to go to the home menu.

If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging.

When the battery level is low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

## Screen Savers

The screen savers time can be set by 10 sec, 30 sec, 1 minute and off. After setting the screen savers time, the screen brightness will dim when the set time is reached to save battery power.

In addition to setting the screen saver, there are the following two default ways to save power: On the home menu page, if there is no operation for one minute, it will return to the clock display page; and in the camera mode, if there is no operation for 3 minutes, the screen brightness will dim.

If you have a countdown, it will return to the clock display and will not shut off auto when the countdown is running and finish.

## Clock Display Background

Press the home button to switch the home menu and clock display. When the clock is displayed, tap the left or right side of the screen to change the clock display background.



## Home Menu

Press the Home button to display the home menu, the following functions are available:

- Camera
- Video
- Photo Album
- Music
- Story
- English Letter Learning Card
- The Formation of Good Behavior Habits
- GUBI Interactive Pet
- Games
  - Bee War
  - 2048
  - Lorem ipsum game
  - Saving the Earth
  - Sudoku
  - Digital Huarong Road
  - Whack-a-mole
  - Racing Games
- Time
  - Alarm clock
  - Stop watch
  - Count down
- Tools
  - Recording
  - Calendar
  - Calculator
  - Themes
- Settings

## Turn On

1. Switch [Master power switch] to “o” position to connect the power;
2. Long press [On/Off Button] to turn on.

## Turn Off

1. Long press [On/Off Button] to turn on.
2. Switch [Master power switch] to “o” position to cut off the power;

## Home Page

1. Swipe down and the shortcut keys [Flashlight] [Volume] click to turn on/off.



2. Tap the screen to switch the lock screen background;
3. Swipe up into the home page;
  - (1) No password, go directly to the home page;
  - (2) With password: Execute face unlock, password unlock, or pattern unlock to access the home screen. And can choose the default setting to go back to with no password.

## Camera

1. Tap the  icon on the menu page or press the camera button on the right side to enter the camera mode;
2. Tap the  icon on the screen to take a photo or press the [Camera Button] to take a photo;
3. Tap the  icon to flip the lens;
4. Tap the  icon to turn on/off (Flashlight, Countdown, Grid Lines);
5. Tap  to enter the photo album, swipe left and right to check photos; press [Home] to go the camera page;
6. Swipe the left progress bar up and down to zoom in or out the focal length.

## Video

1. Tap the [  ] icon on the home page to enter the recording mode;
2. Tap the video icon [  ] to start recording;
3. Tap the [  ] icon to flip the lens;
4. Tap [  ] icon to turn on/off the flashlight;
5. Tap [  ] to enter the photo album, swipe left and right to check photos; press [Home] to go to the camera page.

## Photo Album

Tap the [  ] icon on the home page to into the album page [Photos, Videos, My photos, My videos].

## Photos/Photo Collections

1. Swipe the photo up or down and tap to enter full screen display;
2. Tap the [  ] icon to delete the photo;
3. Tap the [  ] icon to set wallpaper;
4. Tap the [  ] icon to enter the editing mode, swipe left and right to select the sticker, and press [  ] to save.
5. Tap the [  ] icon to collect photos.

## Video/Video Collection

1. Swipe the video up or down and tap to enter full-screen play;
2. Tap the screen to pause play, and tap again to start;
3. Tap the [  ] icon to delete the video;
4. Tap the [  ] icon to collect videos.

## Music

Tap the [  ] icon on the home page to enter the music player mode;

 Turn Off/On

 List

 List Loop

 Previous Song/  
Next Song

 Single Cycle

 Random Loop

## Story



Tap the [ ] icon on the home page to enter story mode and play the story directly.

Turn Off/On

List

List Loop

Previous Song/  
Next Song

Single Cycle

Random Loop

## The Letter Card



1. Tap the [ ] icon on the home page to enter the the letter card.
2. Tap the card to play the content, Slide left and right to switch cards.
3. Swipe the page and tap the [ ] icon to enter the test game, and select the corresponding answer.

## The Formation of Good Behavior Habits




Tap the [ ] icon on the home page to enter the behavior habits.

- In this interface  , tap the icon  in the upper bar, then to select different items. 
- Swipe up and down to select the item you want to set, there are total 28 items.



- Click on the up or down triangle arrow to set the reminder time.

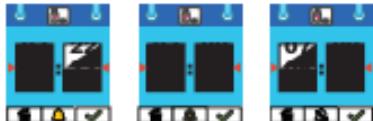


- Tap the icon in the bottom middle to set the ringtone, to ring once, every day, and not ring. After setting the ringtone, please ensure that the volume of the device is not 0.



- Tap the delete icon  in the bottom left to delete the item, and return to the previous last interface.
- Tap the icon  in the bottom right to complete the setting of item.
- The schedules will be sorted one by one by the setting time (the time can be set as the same), there will display the quantity of the items in the upper right corner, there are five color background labels for a cycle.



- You can tap the set reminder picture area to modify the time or status.

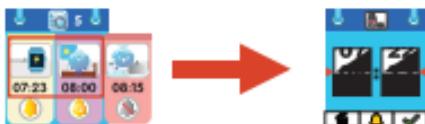

- When the time is up, a bell will be sounded, the popup will last for 30 seconds.



Tap and slide the camera screen or press the home button, will return back. If the reminders are set at the same time, the icon is switched every 1 second within 30 seconds of the reminder.

- For the photo taking item, it will enter the photo function to take a photo for setting a reminder.



- For photo gallery item, it will enter the photo gallery function to select a photo you wanted, then to set a reminder.



## GUBI Interactive Pet



There is a perfect friend named Gubi. You can interact by sliding in different directions on the screen, clicking on different positions, etc. It will display different expressions and make interesting sounds.



## Game

Tap the [ ] icon on the home page to enter the game.

## Bee War

**Game Instruction:** Tap the screen left or right to move the fighter to shoot. Purple enemies need to be hit twice. Score as many points as you can!

## 2048

**Game Instruction:** Swipe up, down, left or right to move the tiles across the board. The tiles will slide in the swipe direction, meanwhile a new tile will emerge randomly in the board. When the tiles with the same number meet, they will merge into one tile.

## Lorem Ipsum Game

**Game Instruction:** According to the appeared English word, click on the falling letters in turn to light up all the letters of the English word. The game will be completed when all the letters are lighted.

## Saving The Earth

**Game Instruction:** Move the trash can to left or right, when catch the falling rubbish accurately can score a point. The game ends when the countdown is over.

## Sudoku

**Game Instruction:** Fill in the squares with the numbers 1-4 so that each row, column, and each 4x4 grid does not have a repeated number.

## Digital Huarong Road

**Game Instruction:** Keep the steps as few as possible and use the time as short as you can, rearrange the number squares on the board in order from left to right and from top to bottom.

## Whack-a-mole

**Game Instruction:** At the beginning of the game, the gophers will appear randomly from the holes in the grass. You need to click on the appearing gophers to score points. Each time a gopher is successfully hit, the points can be got. Hit as many gophers as you can in the stipulated game time of 120 seconds.

## Racing Games

**Game Instruction:** At the beginning of the game, move the blue car left and right to avoid colliding with other cars, overtake a car to get a point, the game ends when the countdown ends or hit another car.

## Time

Tap the [  ] icon on the home page to enter the time mode;

### Alarm clock

1. Tap the screen [  ] icon to add an alarm, select 'Hour, Minute, Days' of the week and press the OK button to save;
2. Tap the [  ] icon to turn on or off the alarm clock;
3. Long press the set alarm clock to delete it.
4. Tap on the set alarm clock to ok the modification mode and modify the alarm time/week, press the enter button to save.

### Stopwatch

1. Tap the [  ] icon on the screen to start the timer, and tap again to pause;
2. Tap the [  ] icon to reset the timer to zero;

### Countdown

1. Swipe the screen to select 'Hour, Minute, Second', tap [  ] to start the countdown, and tap again to pause.
2. Tap the [  ] icon to reset the countdown to zero.

## Tools

### Recording

Tap  to start voice recording.

Tap  to play the last recording.

Tap  to pause recording playback.

Tap  delete recording.

Use the arrows to select previous or next recording.

## Calendar 22

Use the calendar to view the date. If the date shown is incorrect, please go to the Settings  menu to reset the date and time information.

## Calculator

Calculator function is for basic mathematical calculations. Do not use this to cheat on tests, or you will never learn how to work out the answers by yourself.

## Theme Style

1. Tap [  ] icon and slide left and right to switch UI theme style. press [  ] to save.
2. Tap the [  ] icon to switch the background, press [  ] to set as wallpaper/lock screen, or set at the same time.

## Setting

In settings, swipe up or down on the screen to scroll through different setting submenus. Here you can adjust the following items:

- Face And Password
- Parental Control
- Video Resolution
- Camera Resolution
- Cyclic Record
- Language (21)
- Volume
- Key tone
- Ring
- Date/Time
- 24-HourTime
- Screen Savers
- LCD Brightness
- Default Setting
- Version

## Parental Control

Set time-limits for how long games can be played per day to use, go to the Settings menu and open the Parental Control  submenu. Tap and hold on the screen for three seconds. Then, you will be asked to identify a colour on the screen and tap three times to confirm. Once this has been completed, you will gain access to the parental control.

Select between a daily limit of 15, 30, 60, 90 minutes, or no limit. You can also choose to disable the games completely. Tap the icon to confirm the selection.

## Tips

- When you touch the screen, ensure your entire finger is pressing the screen and hold for a second.
- Do not use your fingernails.
- To view photos, videos or voice audio on your laptop/computer, connect the camera by using the included USB cable. Photos, videos and voice audios can be found in the "Photos" "Videos" and "Audios" folders.

## Trouble Shooting

Please check the trouble shooting steps outlined below, and if you still have any issues, contact supplier for support.

Problem	Solution
The camera is not turning on	Hold the On/Off button for 3 seconds to turn off, then hold the On/Off button again to turn back on.
The camera is not charging	<ul style="list-style-type: none"><li>● Try to charge the camera with a different USB cable.</li><li>● Check if the computer's USB port or adapter you are using to charge the device (not supplied) is working with other electronic devices.</li><li>● If still not working, perform the hard reset method as described above.</li></ul>
Screen display is abnormal	Hold the On/Off button for 3 seconds to turn off, then wait 30 seconds. Hold the On/Off button again turn back on.
Cannot connect to computer	Check the connections on the USB cable between the camera and the computer, Ensure the cable is securely connected at both ends. Hold the On/Off button for 3 seconds to turn off. Then wait 30 seconds. Hold the On/Off button again turn back on. Unplug from the computer and reconnect.
Image taken is not clear	Make sure the lighting conditions of the shooting environment are good. Check to see if the camera lens are clean. If you find some dust or dirt on it, please try blowing on the lens, and gently wiping the lens with a dry cloth.

Not enough memory/ storage space	If you have run out of memory, you will need to delete some of your files. These may include photos, videos, voice recording, and music files. You transfer these to your computer before deleting from the camera.
-------------------------------------	---

## Specification

Dimensions	5.9(W)*1.4(D)*10.1(H)cm
Display	2.4 inch IPS touch screen
Resolution	1856*2448
Photo Resolution	Max interpolation up to 12M
Video Resolution	480*640
Memory	128MB built-in memory+ Extended TF card (Support Max 32G, not included)
File Format	Photos: Standard Baseline JPEG Video: AV ( Motion JPEG ) Audio: MP3
Battery	LI-ION 600 mAh
Input	5V - 1A
Weight	65g

## Packing List

Kids Interactive Touchscreen Camera \*1  
 User Manual \*1  
 USB-A To USB-C Charging Cable \*1  
 Lanyard \*1  
 Silicone Case \*1

## **12 Month Warranty:**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## **MADE IN CHINA**

## **CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567

