

anko

Instruction Manual



1080P SMART PROJECTOR

K: 43-635-108 | T: 71-802-534

MADE IN CHINA


Projector

Please read the entire instruction manual before using this product and retain for future use.

Safety

- The projector LES lens is RG2 grade. 
- Do not block or cover any of the air vents. Leave at least 5 cm (2 inches) of free space around the entire product.
- Do not put the product close to sources of heat such as radiators, fan heaters, cookers, candles or other objects that produce heat.
- Avoid using the product near powerful magnetic fields.
- Make sure that the power cable cannot be trodden on, crushed or damaged.
- Keep the product out of the reach of children.
- Unplug the product from the wall socket during thunderstorms or if you are not going to use it for a long period.
- Never insert foreign objects into the product's air vents. The high voltage can cause an electric shock and/or a short circuit.
- Do not use the product in a damp environment such as in a bathroom or a steam filled kitchen or near a swimming pool.
- Do not pull or carry the product by its power cable. When you are unplugging the product from the wall socket, always pull on the plug and not the cable.
- Only use accessories that are recommended by the manufacturer or retailer.

Packing List

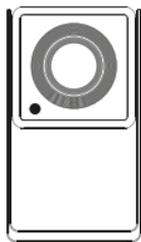

Projector



Remote Control



User Manual



Power Cable



Lens Cover




Cleaning Cloth


NOTICE




NOT Recommended

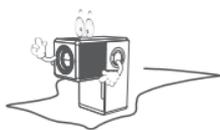

Function Overview

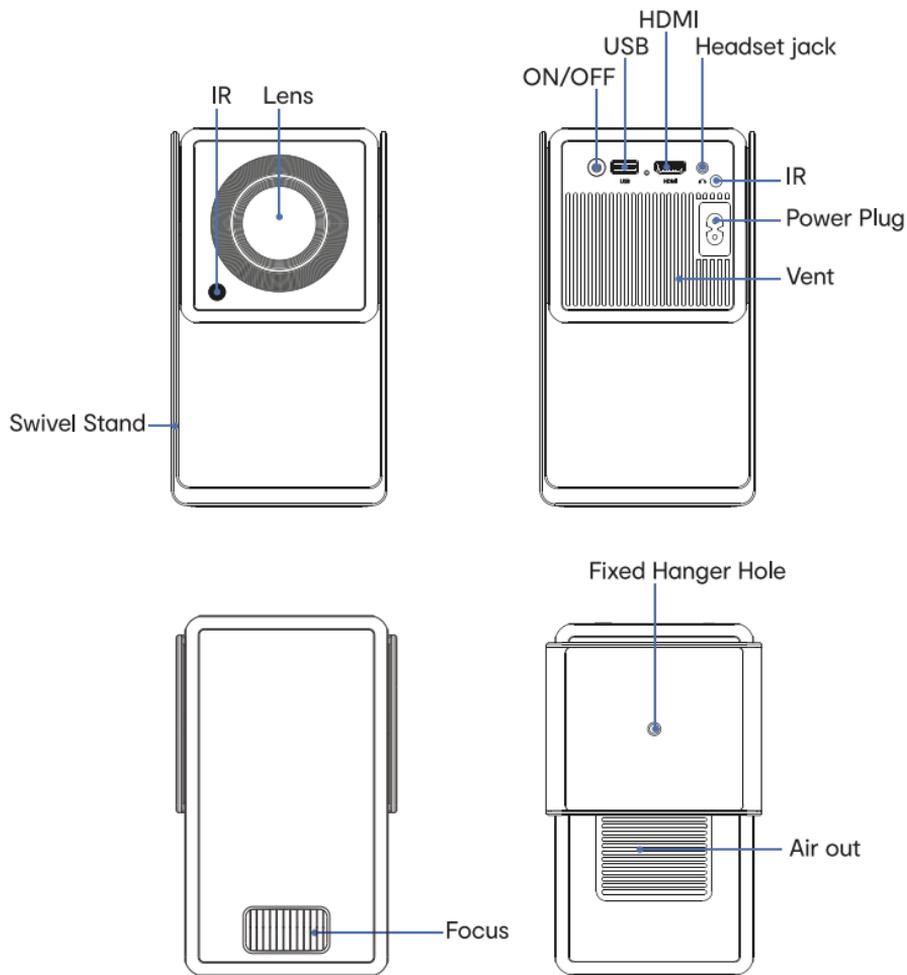

Remote Control

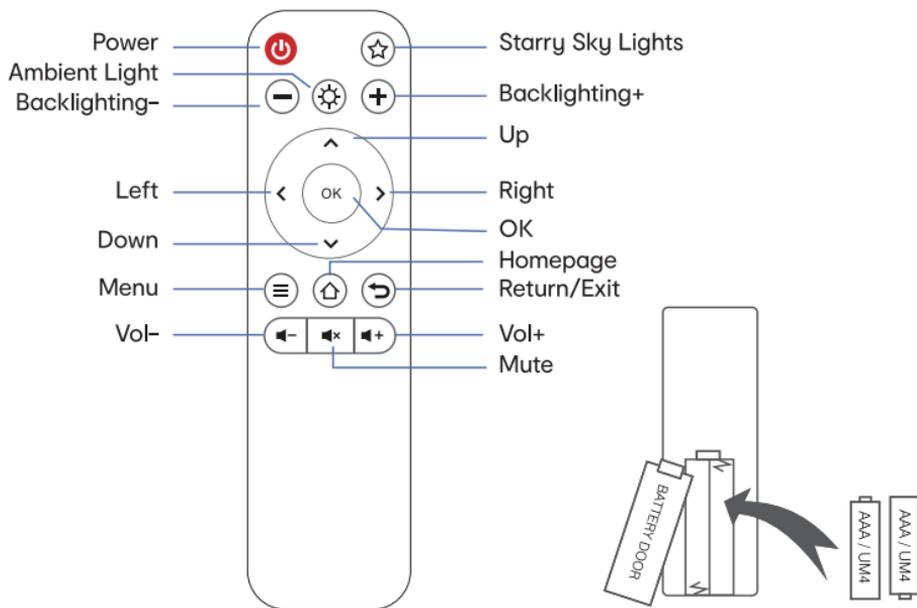


BATTERIES STATEMENT AND NOTICES

Remove the battery compartment cover on the back of your remote by carefully sliding to open the battery cover can then be lifted away. Fit the correct batteries, referring to the polarity markings. Finally, replace the cover.


NOTE:

1. When you find the batteries of the remote control is swollen or softened, please do not use it before you change it.
2. Batteries shall not be exposed to excessive heat such as sunshine, fire.
3. Make sure that the batteries are installed polarity correctly.
4. Only same or equivalent type batteries as recommend are to be used.
5. Do not dispose of batteries in fire, battery may explode or leak.
6. Do not try to recharge a battery.
7. Do not mix old and new batteries.
8. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.


Quick Start

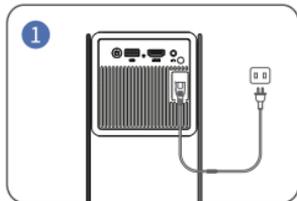


① Plug the power cord into an outlet.

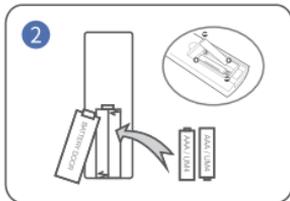

② Install batteries (not included) in the remote control

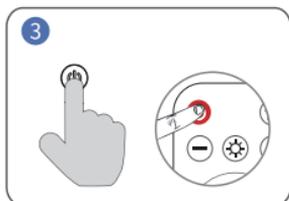


③ Turn on
Press the Power Button to turn on the projector.

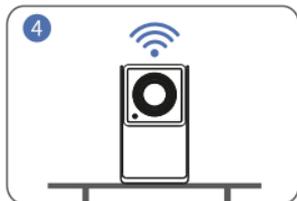

④ Follow the startup interface to connect to the network and set the initial password. Please remember your password. If you forget it, you will need to reset the projector.



⑤ Back to "home" interface, select the video platform you want to login.

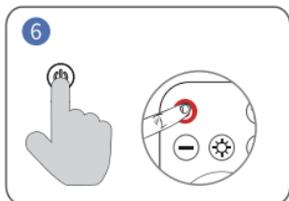

⑥ Turn off
Press the Power Button on the projector or remote control.

Tips:

1. To prolong the lifespan of the projector, we highly recommended unplug the power cable completely after each use, especially during a long time of no use.
2. After the projector is plugged into the power supply, it takes 10 seconds for the system to detect power on, so please wait for 10 seconds before pressing power to turn it on. And after pressing the power button, it will take 20 seconds to power off, or can press the power button again to turn it off.
3. The bottom of the machine is the air inlet, please do not place the machine on items such as towels.

Password Setting


When you first start up, you need to set a password. Please keep your password in mind after setting.

1. If you forget the password, you can only reset the projector by remote control (Reset method: Use the “Vol-” key and “Up” key on the remote control in combination, and press them three times). Resetting will clear all private data.
2. After setting the password during the first startup, the default setting is that you need to enter the password for verification whenever powering on. You can also turn off password verification in System Settings.
3. If you remember the initial password and want to change the password, you can click change password on System setting to set a new password.

Password setting on first start up



Use remote control to reset

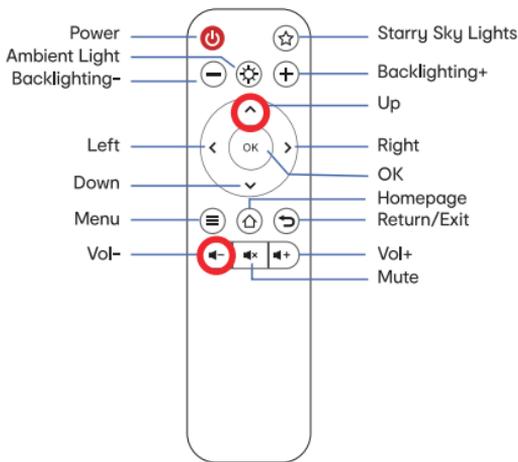

APP Download

The APP in the projector is not pre-installed. Clicking the APP icon on the home page will lead you to the download link page, or you can search for it in the APP store to download. After the download is completed, you can use it.

Lighting Effect

The aurora galaxy projector simulates a dreamy Milky Way galaxy through rotating aurora and stars. The projector has 2 light effects (starry sky light & ambient light). It also has a light cycle mode. The galaxy star projector can help us create any romantic, relaxing, or dreamy atmosphere with ease.

1. Starry Sky Lights

Press the starry sky lights button on the remote control to project the starry sky video.




A total of 7 starry sky light videos can be selected by the "Backlighting +" and "Backlighting -" buttons.

2. Ambient Light

Put on the lens cover when using the ambient light to increase the romantic atmosphere of the light.


Press the Ambient light button on the remote control, and seven colors of light can be switched.

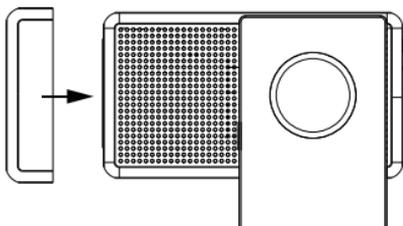

Projection Distance & Size

The recommended projection screen is around 40–150 inches with a distance of around 1.06–3.98m.

To improve the clarity of your projected images, it is recommended to create ambient darkness and use a high-quality project screen. These factors work together to provide a visually stunning and immersive viewing experience.

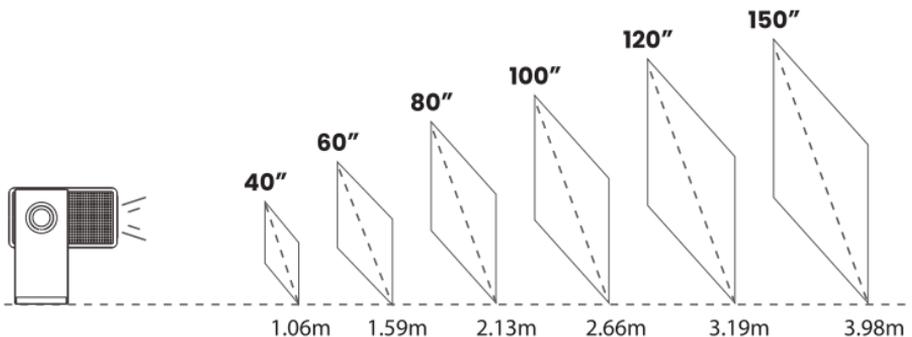


Projection Mode

If you want to hang the projector to the ceiling, a projector mount will be needed. If you want to project in different way, please select corresponding mode in the setting page.




FRONT TABLE

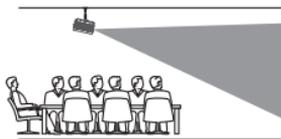

FRONT CEILING



REAR TABLE

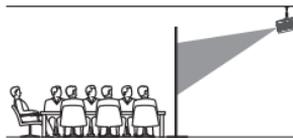


REAR CEILING


Input Source

Go to **Settings > Source > Select HDMI or USB**

A. HDMI Connection

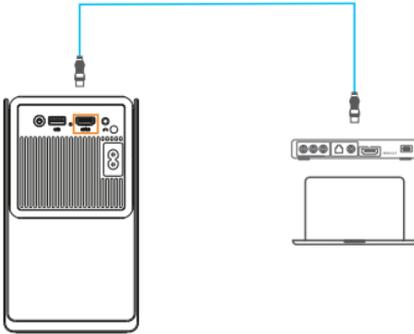


B. USB Connection

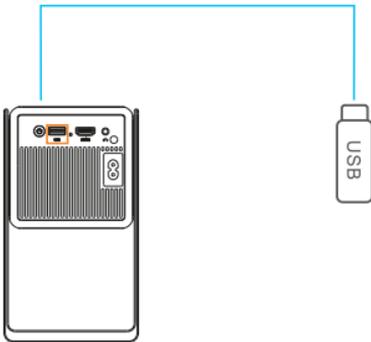

Bluetooth Setting


A. Bluetooth Setting

1. Go to **Settings > Settings > Bluetooth Setting**.
2. Turn the Bluetooth Connection on and search for nearby Bluetooth devices.
3. Choose correct Bluetooth device to connect.

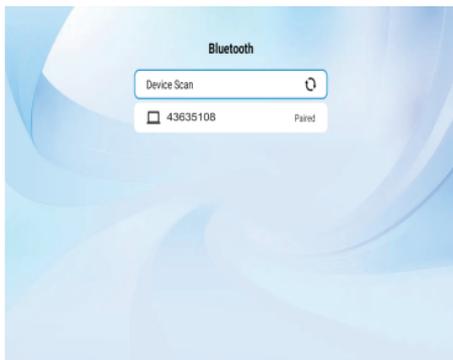

B. Bluetooth Speaker

1. Go to **APPS > Bluetooth Speaker**.
2. The projector can be used as a Bluetooth speaker.

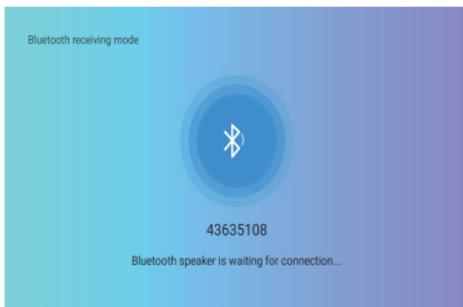

NOTE:



1. Due to compatibility issues with the Bluetooth protocol, some brands of Bluetooth speakers may not support connection to our projectors. If you have such an issue, feel free to let us know.
2. If you want to connect your headphone speaker to an audio port, please disconnect the Bluetooth audio device from the projector first.

Projectors Operations

A. General Settings



NETWORK

1. Go to **Settings > Settings > General Settings > Network.**
2. Select the network you want.

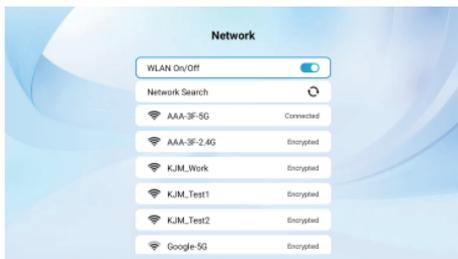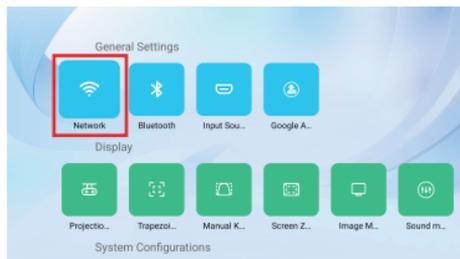

Bluetooth

1. Go to **Settings > Settings > General Settings > Bluetooth.**
2. Turn the Bluetooth Connection on and search for nearby Bluetooth devices.
3. Choose the Bluetooth device 43635108 to connect.

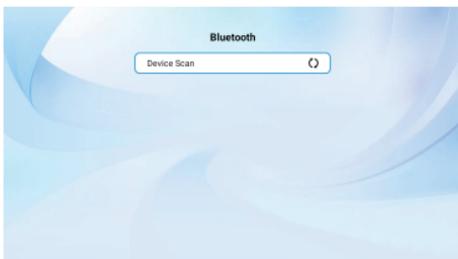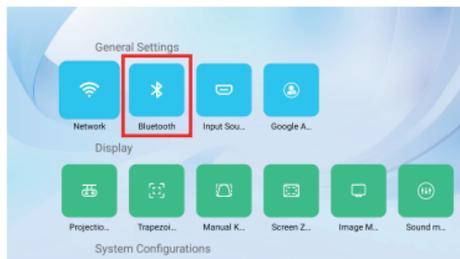


NOTE:

1. Due to compatibility issues with the Bluetooth protocol, some brands of Bluetooth speakers may not support connection to our projectors. If you have such an issue, please get in touch with our customer support team.
2. If you want to connect your headphone/speaker to an audio port, please disconnect the Bluetooth audio device from the projector first.

Google Account

1. Go to **Settings > Settings > General Settings > Google Account**.
2. Log in to your Google account.

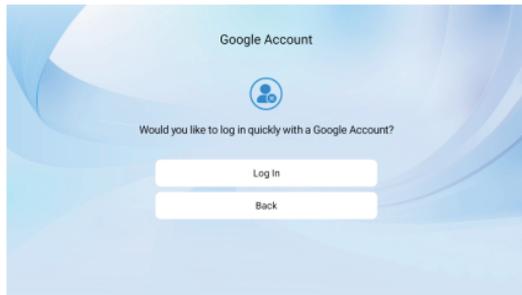

B. Display



Projection Mode

1. Go to **Settings > Settings > Display > Projection Mode**.
2. Select the projection mode you want.




Trapezoid Settings

1. Go to **Settings > Settings > Display > Trapezoid Settings**.
2. Select On or Off.

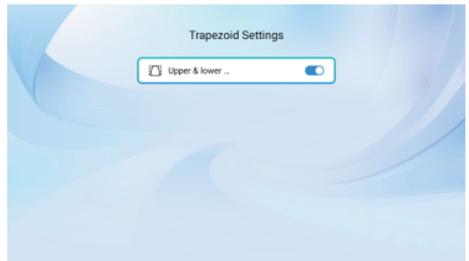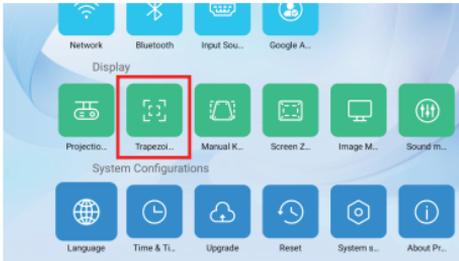

Manual Keystone Correction

1. Go to **Settings > Settings > Display > Manual Keystone Correction**.
2. Press the OK button to select the correction point.
3. Press the direction buttons to adjust the image.
4. Press the menu button to restore.

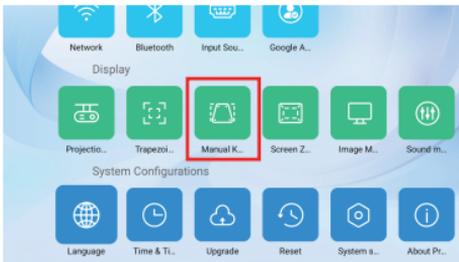

Screen Zoom

1. Go to **Settings > Settings > Display > Screen Zoom**.
2. Press the navigation buttons to adjust the image. Press the menu button to restore.



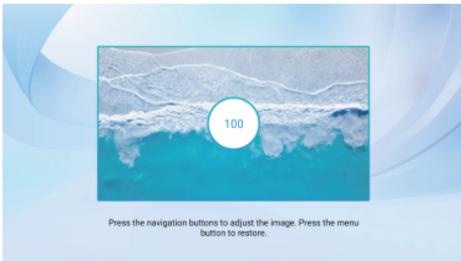



Image Mode

1. Go to **Settings > Settings > Display > Image Mode**.
2. Select the Image Mode you want.

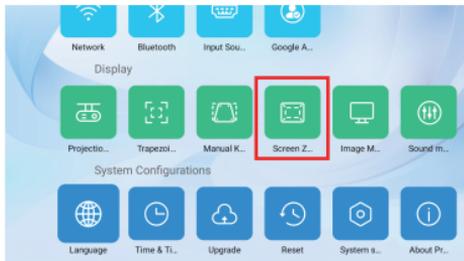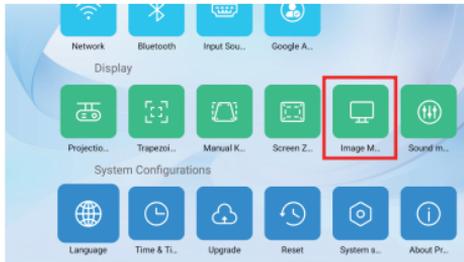



Sound Mode

1. Go to **Settings > Settings > Display > Sound Mode**.
2. Select the Sound Mode you want.

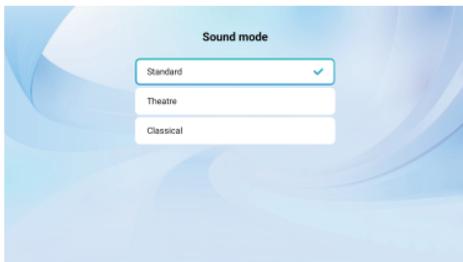

Screen Saver

1. Go to **Settings > Settings > Display > Screen Saver**.
2. Select the screen saver time you want.

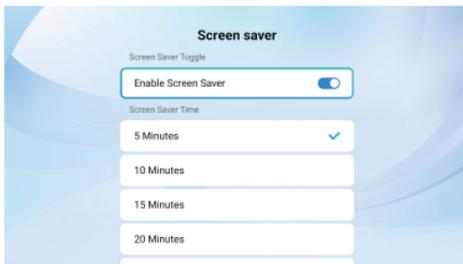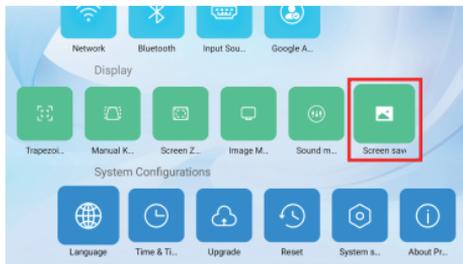

C. System Configurations

Language

1. Go to **Settings > Settings > System Configurations > Language**.
2. Select the language you want.




Time & Time zone

1. Go to **Settings > Settings > System Configurations > Time & Time Zone**.
2. Select the time you want.



Upgrade

1. Go to **Settings > Settings > System Configurations > Upgrade.**
2. Select Confirm online/local Upgrade.

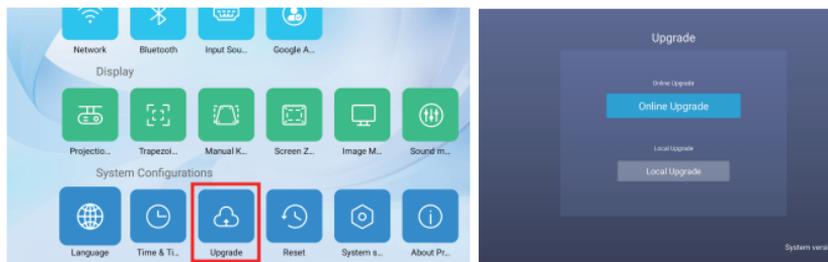

Reset


1. Go to **Settings > Settings > System Configurations > Reset.**
2. Factory reset yes or no ?



System Setting

You can turn on/off the password verification and change the password.

1. After setting the password during the first startup, the default setting is that you need to enter the password for verification whenever powering on. You can also turn off password verification in System Settings.
2. If you remember the initial password and want to change the password, you can click change password to set a new password.

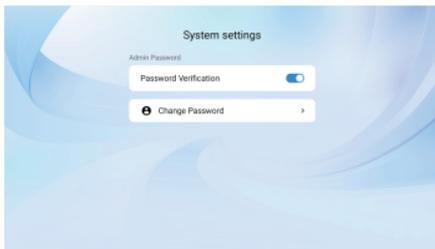

About Projector

1. Go to **Settings > Settings > System Configurations > About Projector**.
2. Check the version.





Projector Connections

Screen Mirroring



IOS CAST (For IOS System)

1. Go to **Homepage > Apps > My Apps > AirScreen**.
2. On your iOS open control center and tap Screen Mirroring.
3. Please confirm the device that you want to share content already connected to the same wireless network as this device.

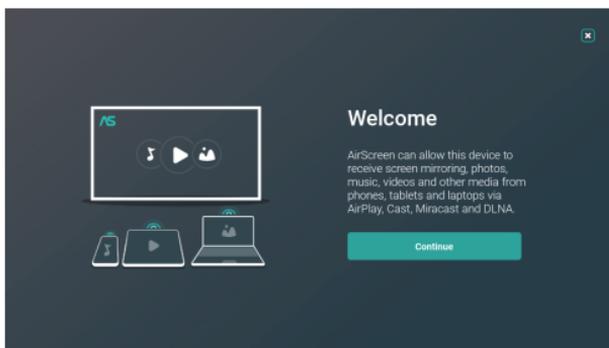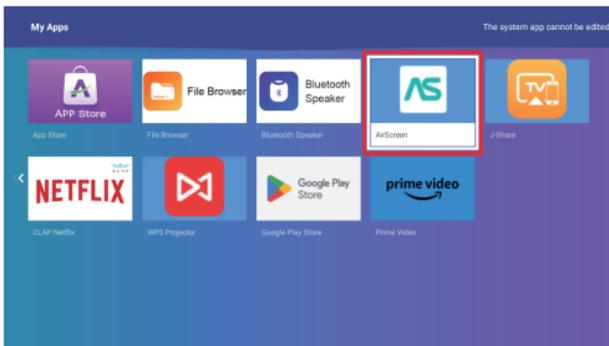

ANDROID CAST (For Android System)

1. Go to **Homepage > Apps > My Apps > J-Share**.
2. Please follow the pictures below.

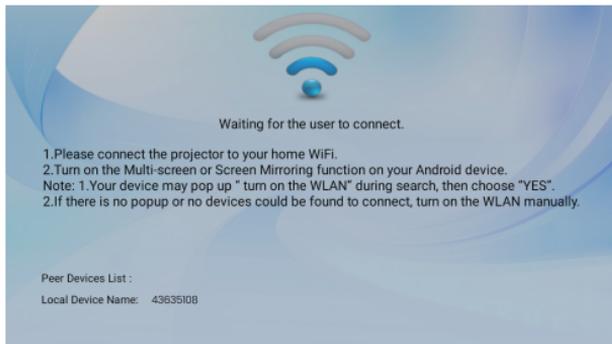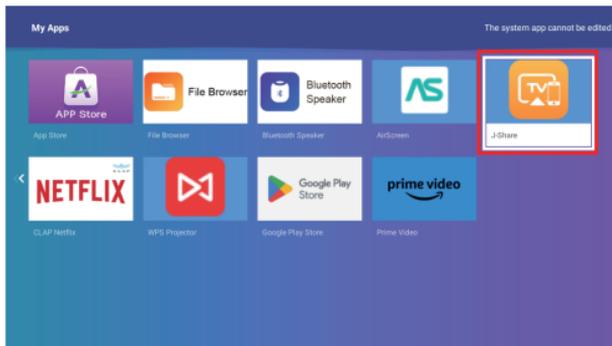

Ceiling Installation

How to Mount a Projector on the Ceiling?

Mounting a projector on the ceiling is a great way to make your home theater or presentation space look professional and save valuable floor space. Follow these steps to mount your projector securely.

Tools you'll need	1. Mount 2. kit Ladder or step ladder 3. Drill 4. Wrench or Allen wrench (depending on the mount)	5. Screwdriver 6. Tape measure 7. Pencil (for marking)
-------------------	---	--

Note: None of the above tools are included in the accessories, and you need to purchase the ceiling mounting bracket separately.

Step 1: Determine the position of your projector to the screen, position your projector and screen so that the throw distance is sufficient for your needs. The lens should be between the upper third and upper half of the screen for optimal picture clarity. Mark the position with a pencil.

Note: Ensure there are no obstructions blocking the projector's beam, and that there is an available power socket nearby.

Step 2: Attach the mount to the projector. Flip the projector upside down and attach the mounting bracket according to the instructions included with the mount.

Step 3: Attach the mount and projector to the ceiling. Ensure the mounting bracket can attach along a ceiling joist, then make marks for screw holes and drill preliminary holes. Use suitable screws to securely fasten the bracket to the ceiling. Check that it is securely fastened to the ceiling by trying to wiggle it around.

Step 4: Aligning the projector

Adjust the zoom, focus, pitch, and yaw of the projector as necessary to ensure a properly aligned image with the screen.

Step 5: Connect Power

Please plug in the power cord to both the projector and a nearby power outlet. Once the connection is confirmed, turn on the projector to test the connection.

Step 6: Final adjustments

Make any final adjustments to the image and lock down the mount to prevent movement.

By following these steps, you can create a stunning and functional projection system.

Specification

Display Technology	LCD
Light Source	LED
Resolution	1920*1080P
Input signal	HDMI/ USB
Aspect Ratio	16:9
Focus	Manual
Keystone	3D + Manual
Speaker	2*3W
Bluetooth	Version 5.4
Power input	100-240V
Power Output	72W
Photo Format supported	JPEG/PNG/BMP/GIF
Audio Format supported	MP2/MP3/WAV/AAC/AAC2/AMR/Vorbis/FLAC/ OGG/WMA/WMA2
Video Format supported	H264/MPEG2/MPEG4/VC1/V-VP8/WMVP9/ MJPEG/AVC/FLV1/M-JPEG/Xvid
Operating Temperature	0°C~38°C / 32°F~100.4°F
Storage Temperature	-20°C~45°C / -4°F~113°F
Temperature Protection	Over 80°C temp auto-shutdown
Ports	HDMI/USB/3.5mm Audio
Unit Dimension	11.5*10.35*20.07cm

Trouble Shooting

Remote control not working?

- Make sure the batteries are effective and installed in the correct way.

Blurry Image?

- Use manual focus to get the best image.
- The quality of the projection screen will also affect the image quality. Recommended to use it on a white wall or a better quality screen. Not suggest to use it on a thin white gauze screen, which will reduce the image quality.

No Sound?

- Ensure the Mute button has not been pressed.

Automatic shut-down?

- The unit will shut down if it overheats. Please ensure it is used in a ventilated environment.
- The bottom of the projector has a air inlet , please ensure it is not blocked.
- It is recommended to unplug the power supply after use to prolong the service life.

Upside down image?

- Please enter "Projection Mode" to select the corresponding mode.

Video can not be mirrored or cast?

- Due to copyright restrictions, some videos cannot be mirrored or projected.
- The cast function only supports the built-in APP application of the projector.

Black spot on the screen?

- Wipe the lens with dry and clean cloth to remove dust on the lens.

The APP cannot be used?

- It might be that the old version of the app is no longer usable after the upgrade. Please uninstall it from the App Store and then download and reinstall it.

Forgot password cannot login?

- Resetting the projector to reset the password.
Reset method: Use the “ Vol- ” key and “ Up ” key on the remote control in combination, and press them three times.

12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567



R-NZ

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license.