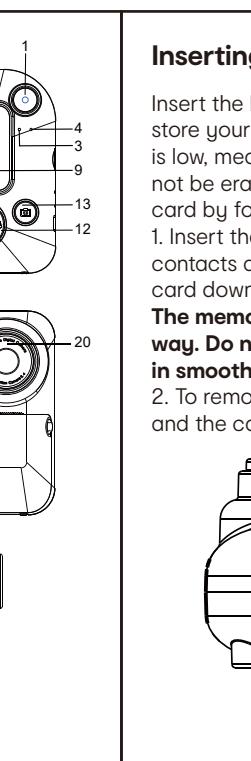
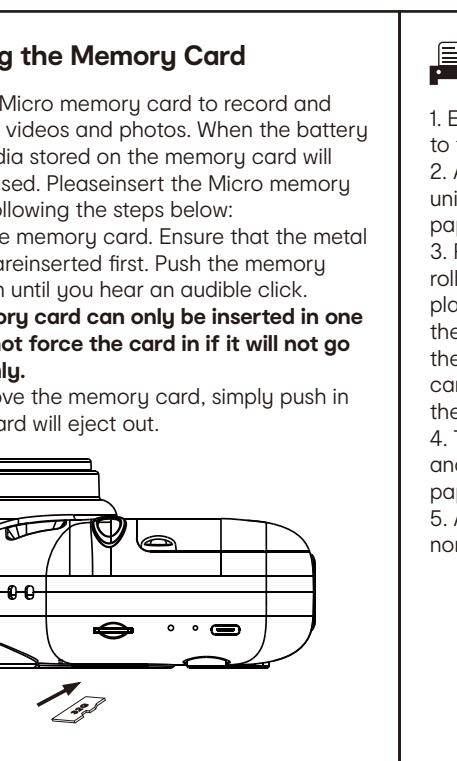
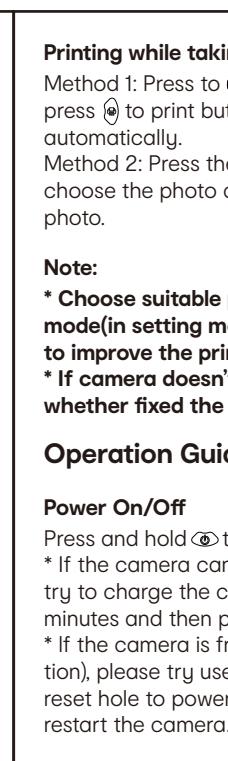


70 mm

100 mm

<p><b>anko</b> <b>Thermal Print Camera</b> <b>Instruction Manual</b> K: 43-635-139   T: 71-802-480 Model No. ZB202504102</p> <p>Accessories: 1x Camera 1x Charge &amp; data cable 1x Lanyard 2x Thermal paper 1x Memory card (32GB included) 1x Instruction manual</p> 	<p><b>Camera Interface</b></p> 	<p><b>Inserting the Memory Card</b></p> <p>Insert the Micro memory card to record and store your videos and photos. When the battery is low, media stored on the memory card will not be erased. Please insert the Micro memory card by following the steps below:</p> <ol style="list-style-type: none"> <li>1. Insert the memory card. Ensure that the metal contacts are inserted first. Push the memory card down until you hear an audible click.</li> <li><b>The memory card can only be inserted in one way. Do not force the card in if it will not go in smoothly.</b></li> <li>2. To remove the memory card, simply push in and the card will eject out.</li> </ol> 	<p><b>Instant Print Mode</b></p> <p>1. Ensure that the correct installation according to the diagram, otherwise it can not print.</p> <p>2. According to the direction of the arrow, a unilateral manual outward break can open the paper bin cover as shown in the figure above.</p> <p>3. Remove the old paper roll, put the new paper roll into the paper bin, the paper should be placed correctly, do not put crooked. (Noted: the new thermal paper should be exposed to the paper bin 2CM length, so that the machine can automatically absorb paper when loading the paper bin box)</p> <p>4. The paper compartment box will be covered, and the machine will automatically absorb the paper and then it can be used normally.</p> <p>5. After the above steps, the machine can print normally and have fun.</p> 	<p><b>Printing while taking photo.</b></p> <p>Method 1: Press to  to get into photo mode, then press  to print button, camera will print photo automatically.</p> <p>Method 2: Press the  to get into replay mode, choose the photo and press  to print the photo.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>* Choose suitable print density and print mode(in setting menu) at different situation to improve the print image.</li> <li>* If camera doesn't print, please check whether fixed the paper in wrong way or not.</li> </ul> <p><b>Operation Guide</b></p> <p><b>Power On/Off</b></p> <p>Press and hold  to power on and power off.</p> <ul style="list-style-type: none"> <li>* If the camera can not be powered on, please try to charge the camera for at least 30 minutes and then power on.</li> <li>* If the camera is frozen(due to wrong operation), please try use a sharp pin to stick into the reset hole to power the camera off, and then restart the camera.</li> </ul>	<p><b>Menu</b></p>  <p>Camera will enter menu when powered on. Press  to select modes, press  to enter the selected mode, and press  to go back to menu.</p>	<p><b>Photo Mode</b></p> <p>Long press  to zoom in, long press  to zoom out.</p> <p>Long press  to turn on/off LED flash light.</p> <p>Press  to select among photo modes, photoframe, filter effect and special effect.</p> <p>Press  to switch the selfie lens.</p> <p>Press  to go back to the menu.</p> <p><b>Video Mode</b></p> <p>Press  to change different filters.</p> <p>Long press  to turn on/off LED flash light.</p> <p>Press  to switch the selfie lens.</p> <p>Press  to go back to the menu.</p> <p><b>Tips for Photo Mode and Video Mode</b></p> <ul style="list-style-type: none"> <li>* The fill light can only be turned on/off in Photo and Video Mode.</li> <li>* When the camera fill light is turned on, do not aim it at the child's eyes to avoid injury.</li> </ul>	<p><b>MP3 Mode</b></p> <ul style="list-style-type: none"> <li>* Press  to pop out Music List Window, then press  to choose songs and  to play the selected songs; press  to exit the Music List Window.</li> <li>* When exit the Music List Window, press  to switch songs directly and press  to stop continue playing music.</li> <li>* Download Music: please insert SD Card to camera to automatically build MP3 folder and download music by MP3 format to MP3 folder.</li> </ul> <p><b>Playback Mode</b></p> <ul style="list-style-type: none"> <li>* Press  to view videos and photos you took.</li> <li>* Press  to start or stop playing video.</li> <li>* Hold  to show Delete Interface, press  to choose OK/cancel, then press  to confirm.</li> <li>* When view photos, and press  to print the photo.</li> <li>* Video format: AVI; Photo format: JPEG</li> </ul>
--	--	---	--	--	---	---	---

<p><b>Game Mode</b></p> <p>* Press  to select games, press  to enter the selected game.</p> <p><b>5 Games:</b>  Tetris/  Sokoban/  Power pinball/  Gluttonous Snake.</p> <p><b>Maze</b></p> <p> move leftward;  move rightward;  move upward/rotate in Tetris;  move downward.</p> <p>*Press  to exit game and go back to menu.</p> <p><b>Settings</b></p> <p>* Press  to choose settings, Press  to enter the selected one and press  to go back to settings menu.</p>	<p><b>Connect to Computer</b></p> <p><b>Connecting when there is a Memory card in the camera</b></p> <ul style="list-style-type: none"> <li>- Please make sure the Memory Card is readable by the camera and connect camera (on status) to PC by USB cable.</li> <li>- When you open the disk, you can see 3 file folders in it.</li> </ul> <p> </p> <p>VIDEO: videos you take will be stored in it. PHOTO: photos you take will be stored in it. MP3: copy songs (MP3 format) to this folder, and songs can be read by camera.</p>	<p><b>BATTERY WARNING!</b></p> <p>1. REPLACEMENT OF A BATTERY WITH AN INCORRECT TYPE THAT CAN DEFEAT A SAFEGUARD.</p> <p>2. DISPOSAL OF A BATTERY INTO FIRE OR A HOT OVEN, OR MECHANICALLY CRUSHING OR CUTTING OF A BATTERY, THAT CAN RESULT IN AN EXPLOSION.</p> <p>3. LEAVING A BATTERY IN AN EXTREMELY HIGH TEMPERATURE SURROUNDING ENVIRONMENT THAT CAN RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.</p> <p>4. A BATTERY SUBJECTED TO EXTREMELY LOW AIR PRESSURE THAT MAY RESULT IN AN EXPLOSION OR THE LEAKAGE OF FLAMMABLE LIQUID OR GAS.</p> <p><b>WARNING!</b></p> <p>IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.</p> <ol style="list-style-type: none"> <li>1. THIS PRODUCT IS NOT A TOY.</li> <li>2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V 1A).</li> <li>3. THIS PRINTER CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.</li> <li>4. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.</li> </ol>	<p>5. THE PRINTER SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)</p> <p>6. THIS PRINTER CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.</p> <p>7. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.</p> <p>8. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG RADIO WAVES, AS HIGH MAGNETIC FIELDS MAY CAUSE DEVICE MALFUNCTION OR DAMAGE TO IMAGES AND SOUNDS.</p>	<p><b>12 Month Warranty</b></p> <p>Thank you for your purchase.</p>	<p>Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.</p> <p>For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.</p> <p>We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.</p> <p>This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.</p> <p><b>MADE IN CHINA</b> <b>CUSTOMER SERVICE:</b> KMART AU: 1800 124 125 KMART NZ: 0800 945 995 TARGET AU: 1300 753 567</p>
---	---	---	---	---	---