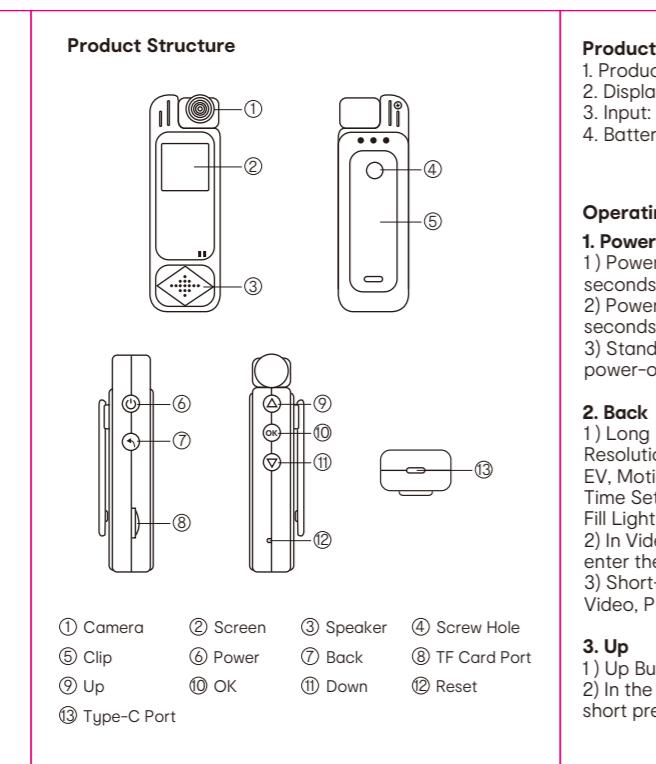


70mmx100mm

<p><b>anko</b> <b>Mini Action Camera</b> <b>Instruction Manual</b> K: 43-635-177   T: 71-802-503 Model No. ZB2025041109</p> <p>Accessories: 1 x Mini Action Camera 1 x Instruction Manual 1 x Charge &amp; data cable 1 x 32GB TF Card Included</p>    	<p><b>Product Structure</b></p> 	<p><b>Product Specifications:</b></p> <ol style="list-style-type: none"><li>1. Product dimensions: 98*32*23mm(H*L*W)</li><li>2. Display size: 1.3 inches</li><li>3. Input: DC 5V 1A(Max)</li><li>4. Battery capacity: 1000mAh</li></ol> <p><b>Operating Instructions</b></p> <p><b>1. Power On/Off</b></p> <ol style="list-style-type: none"><li>1) Power On: Press and hold the power button for 3 seconds.</li><li>2) Power Off: Press and hold the power button for 2 seconds.</li><li>3) Standby: Press briefly to turn off the screen. Enter the power-on standby state.</li></ol> <p><b>2. Back</b></p> <ol style="list-style-type: none"><li>1) Long press to switch to the menu: Resolution, Image quality, Cyclic Record, White Balance, EV, Motion Detection, Audio, Date Tag, Beep Sound, Time Setting, Auto Power-off, Language Setting, Flicker, Fill Light, Screen Savers, Format, Reset System, Version.</li><li>2) In Video/Photo mode, long-press the Back Button to enter the menu.</li><li>3) Short-press the Back Button to cycle through the Video, Photo, Voice Recording, and Playback modes.</li></ol> <p><b>3. Up</b></p> <ol style="list-style-type: none"><li>1) Up Button</li><li>2) In the video recording/photo recording interface, a short press can increase the lens focal length.</li></ol>	<p><b>4. Down</b></p> <ol style="list-style-type: none"><li>1) Down Button</li><li>2) In the video recording/photo recording mode, a short press can reduce the focal length.</li><li>3) In Video/Photo mode, long press to activate the night vision mode.</li></ol> <p><b>5. OK</b></p> <ol style="list-style-type: none"><li>1) OK Button</li><li>2) Press briefly for video recording/photo recording/audio recording.</li><li>3) When the lens is flipped 180 degrees, long press to switch to the front side.</li></ol> <p><b>6. Reset</b></p> <p>When the machine has a screen flicker, abnormal freeze, etc., use a pinhole-like object to briefly press the reset button to restart.</p> <p>Note: Do not unplug or plug in the card during the video recording/photo recording/audio recording/replay mode.</p> <p><b>7. Camera Mode</b></p> <p>Press the back button to enter camera mode. The camera icon will appear in the upper left corner of the screen. Press the OK button to take a photo. The file will be automatically saved to the memory card.</p> <p><b>8. Video Mode</b></p> <p>In video mode. The video icon will appear in the upper left corner of the screen. Press the OK button to start recording. The video time counter will appear in the</p>	<p>upper left corner of the screen. Press the OK button again to stop recording. The video file will be automatically saved to the memory card.</p> <p><b>9. Recording Mode</b></p> <p>Press the back button to enter recording mode, and short press the OK button to start/stop recording.</p> <p><b>10. Motion Detection</b></p> <ol style="list-style-type: none"><li>1) Long press the back button to enter the function interface, and find the motion detection function to enable or disable.</li><li>2) When moving or there is an object moving, it will automatically detect and start recording.</li><li>3) When moving from dynamic to static, it will automatically stop recording after a static duration of 20 seconds;</li><li>4) When in a static state, no recording will be initiated.</li></ol> <p><b>11. USB Mode</b></p> <ol style="list-style-type: none"><li>1) The device connects to the computer via USB data. After the device is automatically powered on, the screen displays four options: "Memory/PC Camera/Video Mode/Setting".</li><li>2) Memory: In this mode, video files or photo files can be accessed and viewed.</li><li>3) PC Camera: In this mode, it can be used with the computer camera.</li><li>4) Video Mode: Only for powering the device with electricity from the computer.</li></ol>	<p>5) Setting: In this mode, the menu can be accessed to modify the product configuration.</p> <p><b>12. Playback Mode</b></p> <p>Long press the "Back button" to bring up the delete menu.</p>	<p><b>WARNING!</b></p> <p>IMPORTANT INFORMATION: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE USE AS IT CONTAINS IMPORTANT INFORMATION.</p> <p><b>1. THIS PRODUCT IS NOT A TOY.</b></p> <p><b>2. DO NOT CONNECT TO POWER EXCEEDING THE RECOMMENDED VALUE (5V DC 1A).</b></p> <p><b>3. THIS CAMERA CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.</b></p> <p><b>4. MEMORY CARD IS SMALL PART WHICH MAY BE A CHOKING HAZARD DO NOT PUT INTO THE MOUTH.</b></p> <p><b>5. THIS PRODUCT IS NOT WATERPROOF. KEEP IT AWAY FROM WATER AND MOISTURE.</b></p> <p><b>6. THE CAMERA SHOULD BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, ENCLOSURE, OR OTHER PARTS. IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED. (PLEASE CONTACT THE SERVICE PROVIDER FOR REPLACEMENT; DO NOT REPLACE IT BY YOURSELF.)</b></p> <p><b>7. THIS CAMERA CANNOT BE OPERATED DURING CHARGING BATTERY. ADULT SUPERVISION REQUIRED AT ALL TIMES.</b></p> <p><b>8. DO NOT PLACE THE DEVICE NEAR STRONG MAGNETIC OBJECTS SUCH AS MAGNETS AND MOTORS.</b></p> <p><b>9. PLEASE AVOID GETTING CLOSE TO ANY OBJECT THAT EMITS STRONG.</b></p>	<p><b>12 Month Warranty</b></p> <p>Thank you for your purchase.</p> <p>Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations, instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.</p> <p>For New Zealand customers, this warranty is in addition to statutory rights provided under New Zealand legislation.</p> <p>We will provide you with your choice of refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.</p> <p>Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product.</p> <p>Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.</p>	<p>Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for other reasonably foreseeable loss or damage.</p> <p>You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.</p> <p><b>MADE IN CHINA</b> <b>CUSTOMER SERVICE:</b> KARAU: 180041125 KARINZ: 080945195 TARGET: 130075356</p>
---	---	--	---	--	---	--	---	--