


HAZEL 3 DRAWER CHEST

Instruction Manual

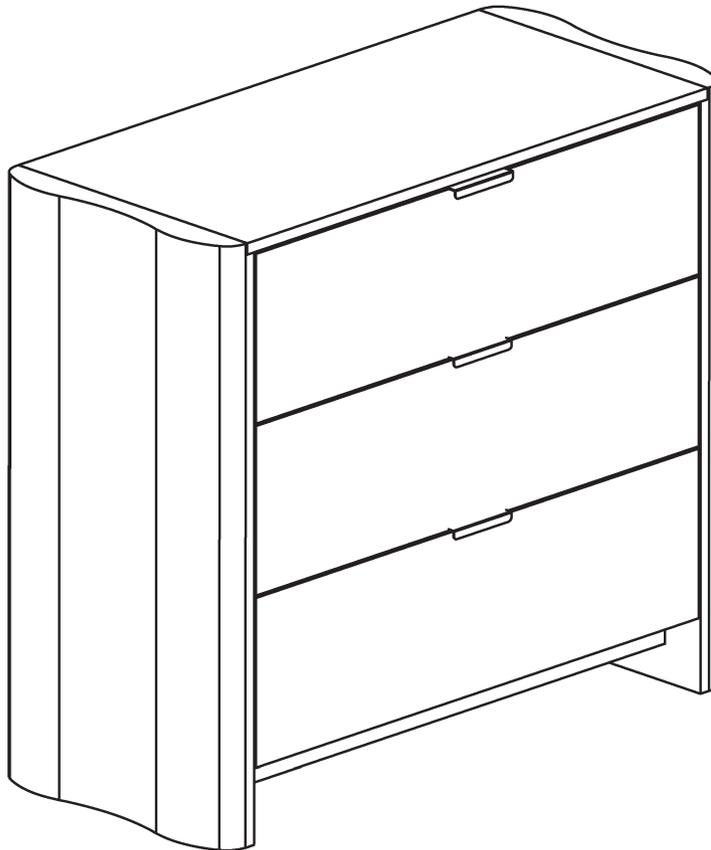

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Assembly Instructions

43635955 HAZEL3 DRAWER CHEST

CARE INSTRUCTIONS:

TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE.
WIPE CLEAN WITH A SOFT DAMP CLOTH.
NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS.
CHECK AND TIGHTEN ALL PARTS REGULARLY.
KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT.
STORE IN A DRY PLACE.
FOR INDOOR AND DOMESTIC USE ONLY.


 
WARNING:

DO NOT STAND, SIT OR LEAN ON THIS UNIT.
DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES.
ADULT ASSEMBLY REQUIRED.
USE ONLY ON A FLAT SURFACE.
DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED





MAXIMUM SAFE LOAD:

15KG FOR TOP PANEL 7KG FOR EACH DRAWER.


1 Hardware List

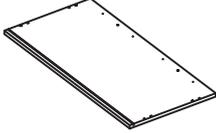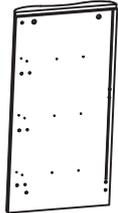A		6X30mm	17	B		6X35mm	37	C		15X10mm	37	D		4X35mm	18
E		3X12	48	G		3X15	8	H		4X35mm	8	J		L=80	3
K			8	 12" LX3 RX3				0		4X12mm	2	P			2
Q			4												

  2 Parts List

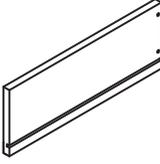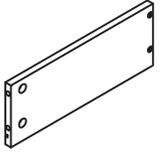
			①	1PC	②	1PC	③	1PC			
											
④	2PCS	⑤	2PCS	⑥	2PCS	⑦	1PC				
											
⑧	1PC	⑨	3PCS	⑩	3PCS	⑪	3PCS				
											
⑫	3PCS	⑬	3PCS	⑭	3PCS	⑮	1PC				

PANEL LAYOUT

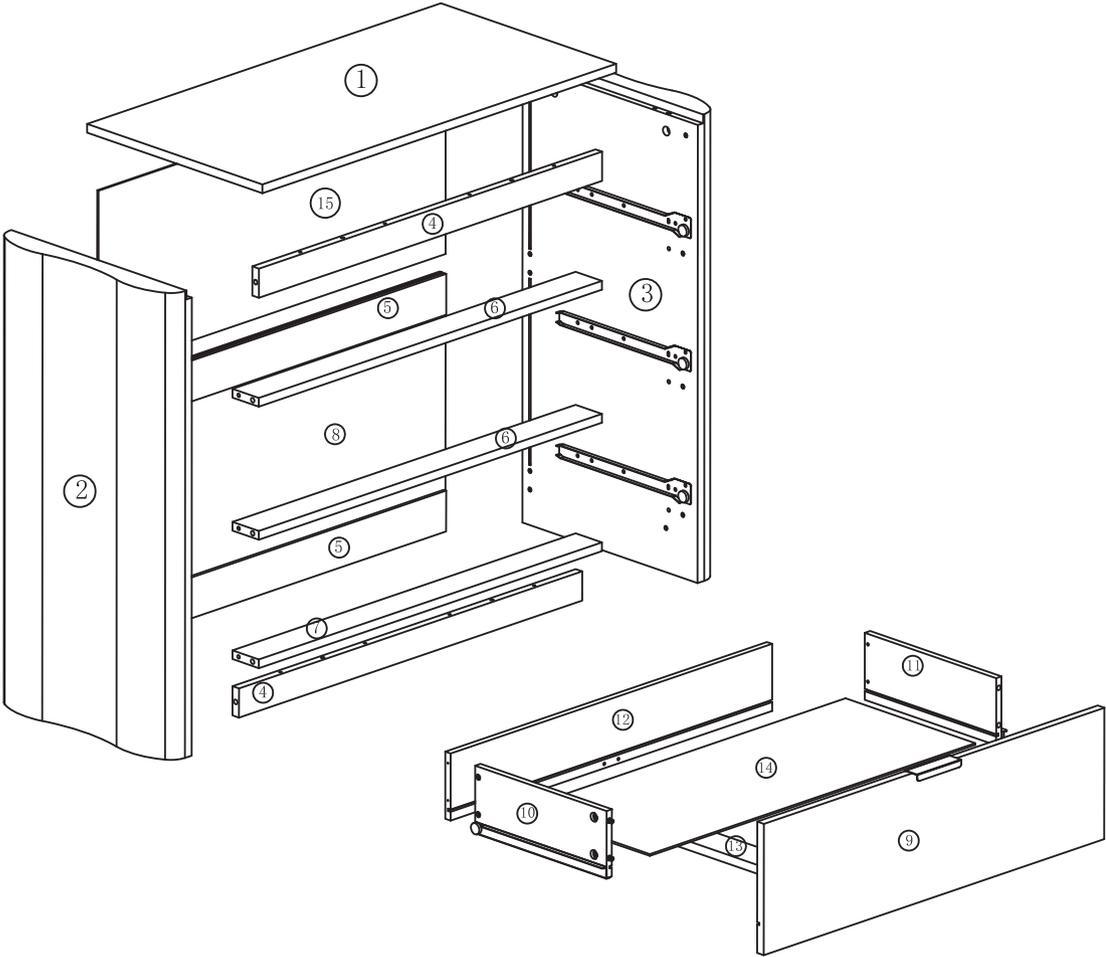


X3

step:1

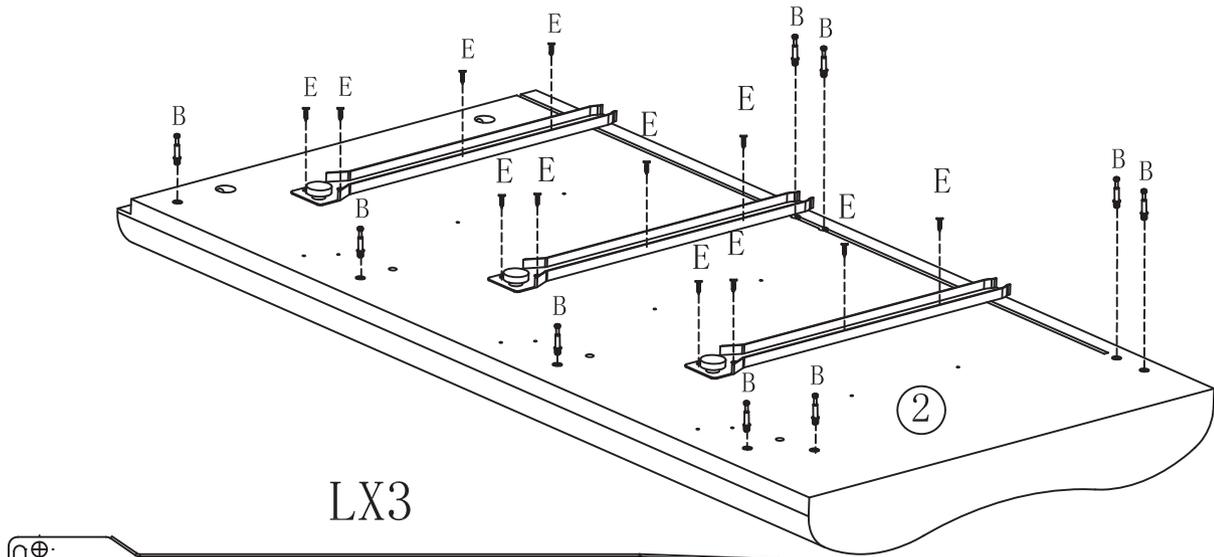


LX3

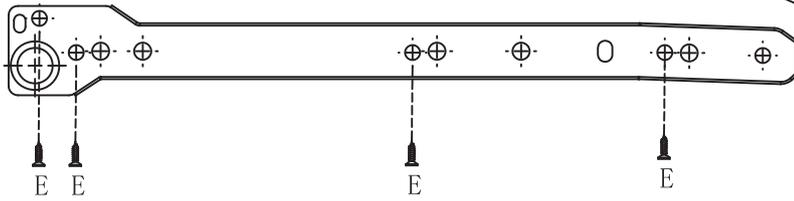


B -	X9
E -	X12

step:2

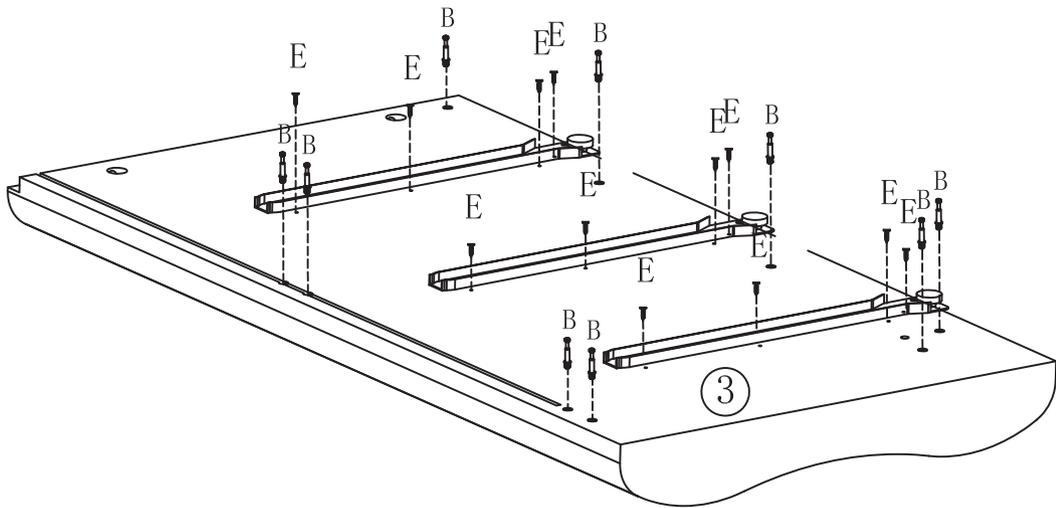


RX3

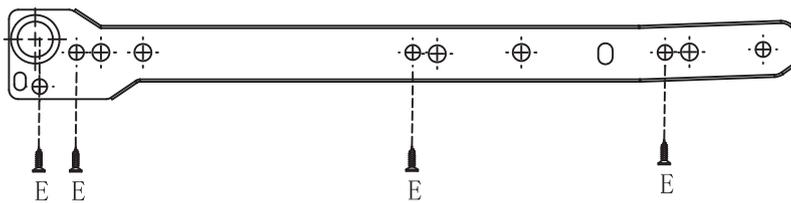


B -	X9
E -	X12

STEP 3

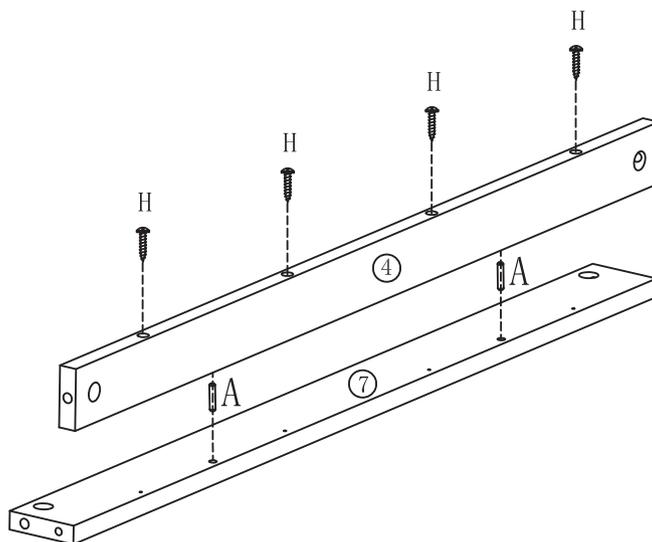


A -	 X2
H -	 X4

STEP 4

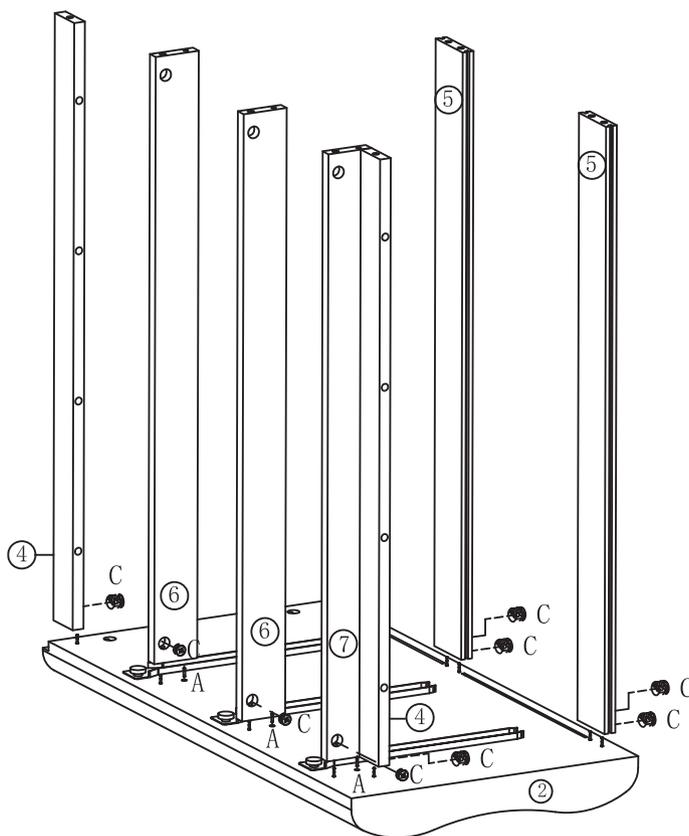


A -	 X3
C -	 X9



STEP 5

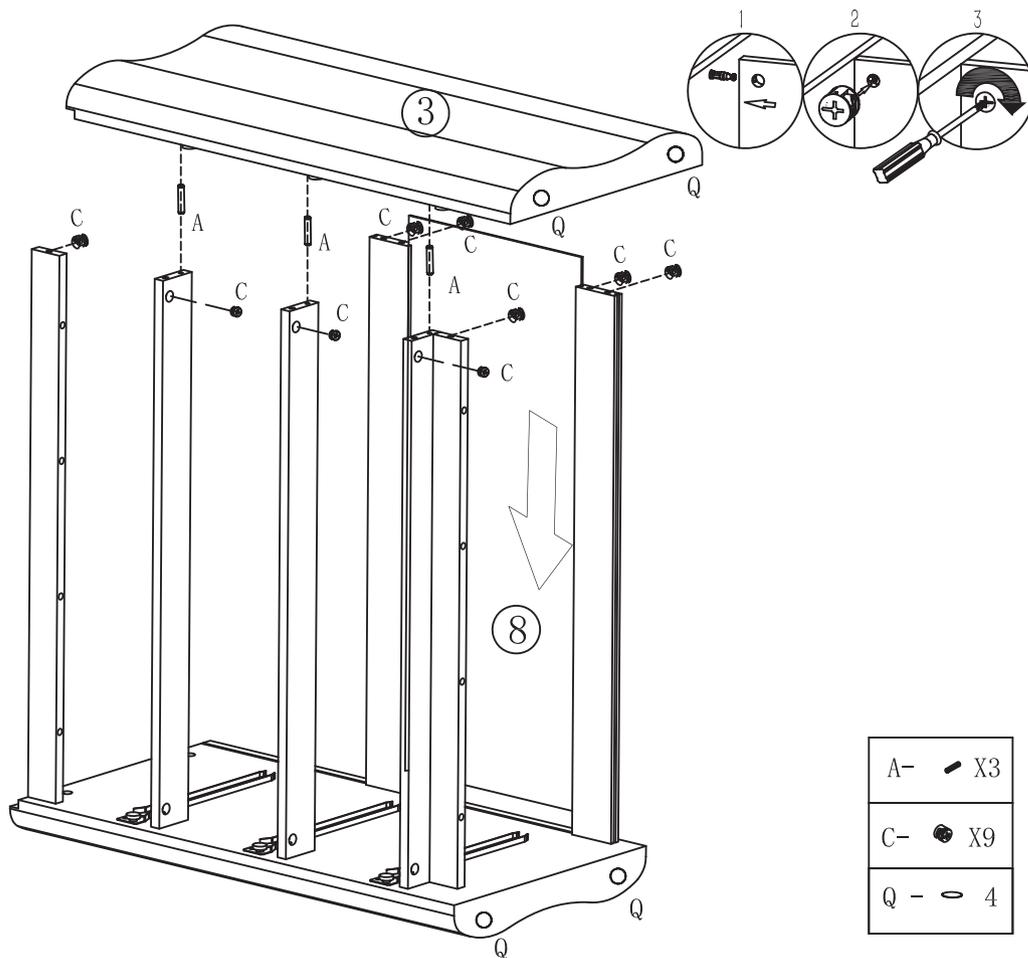

STEP 6


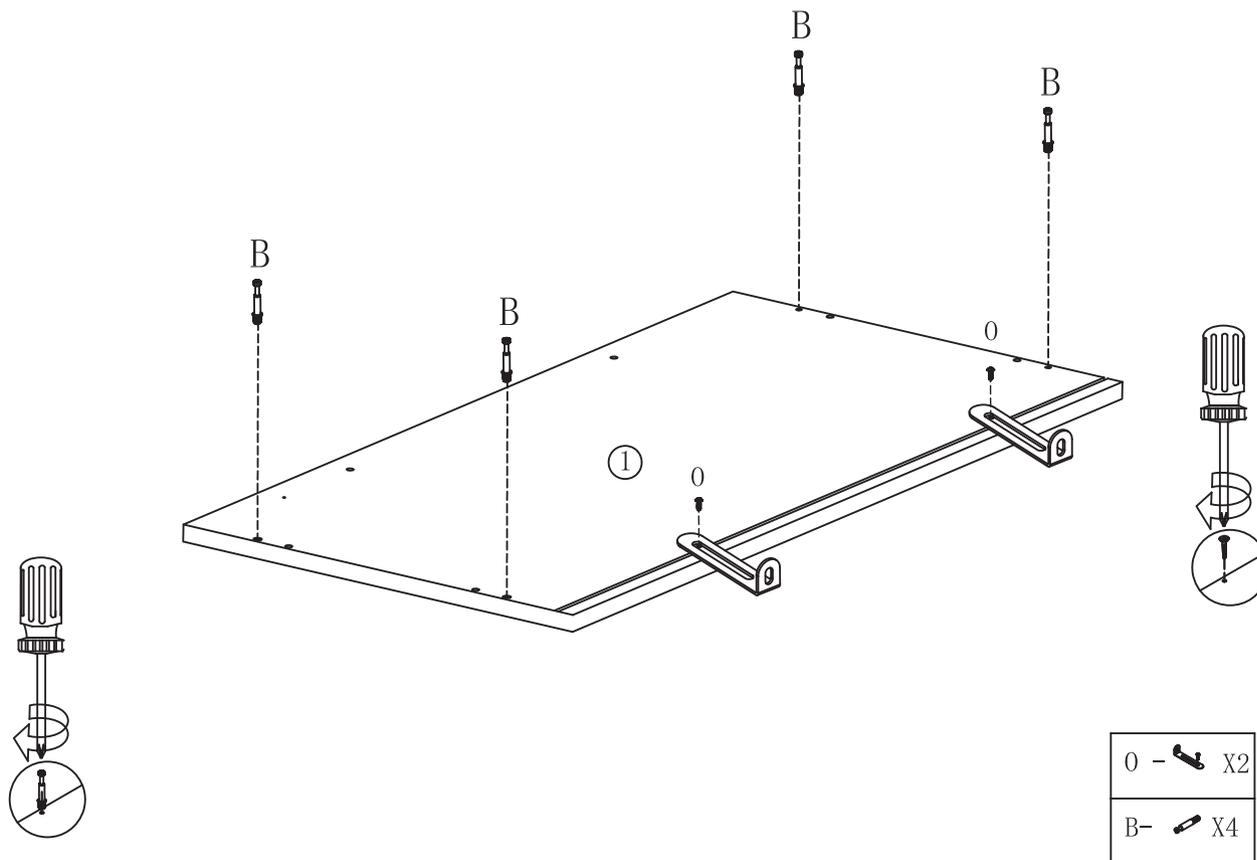


STEP 7

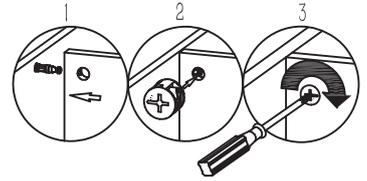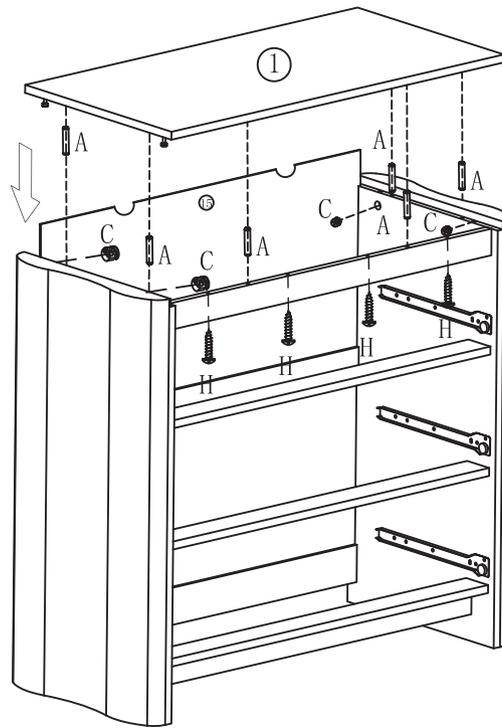


A-		X6
C-		X4
H-		X4

 STEP 8


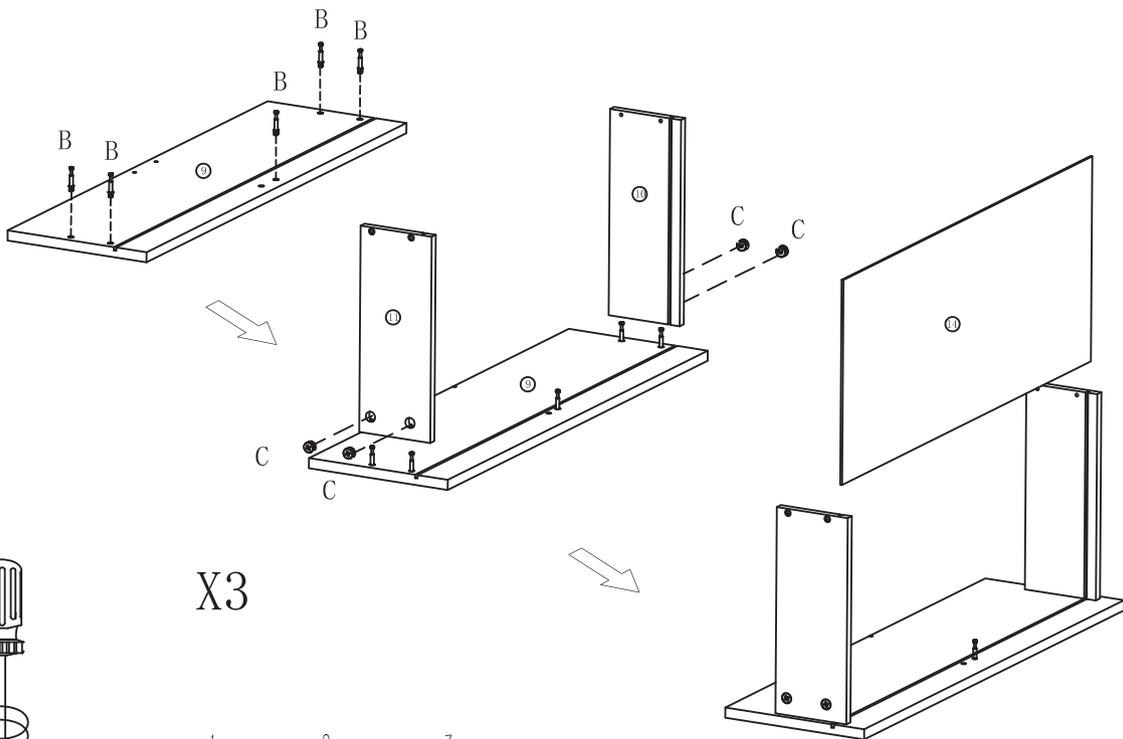


X3

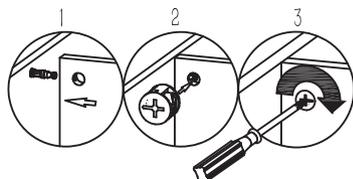


B-		X15
C-		X12

 STEP 9

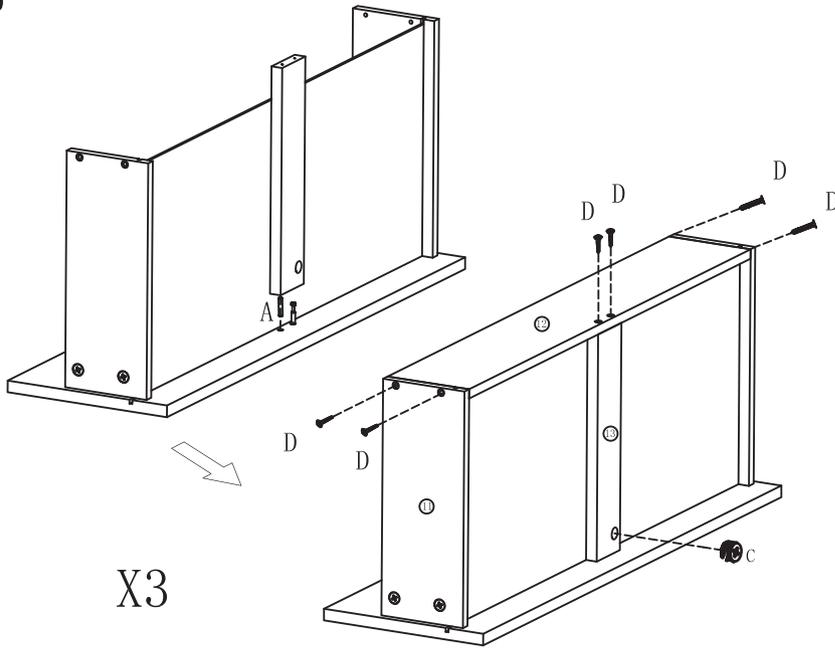


A-	 X3
C-	 X3
D -	 X18

STEP 10

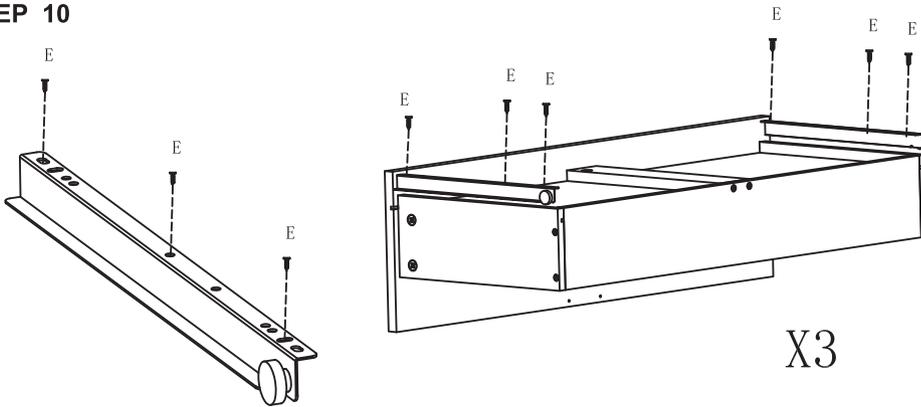


E -	 X24
J-	 X3

STEP 11

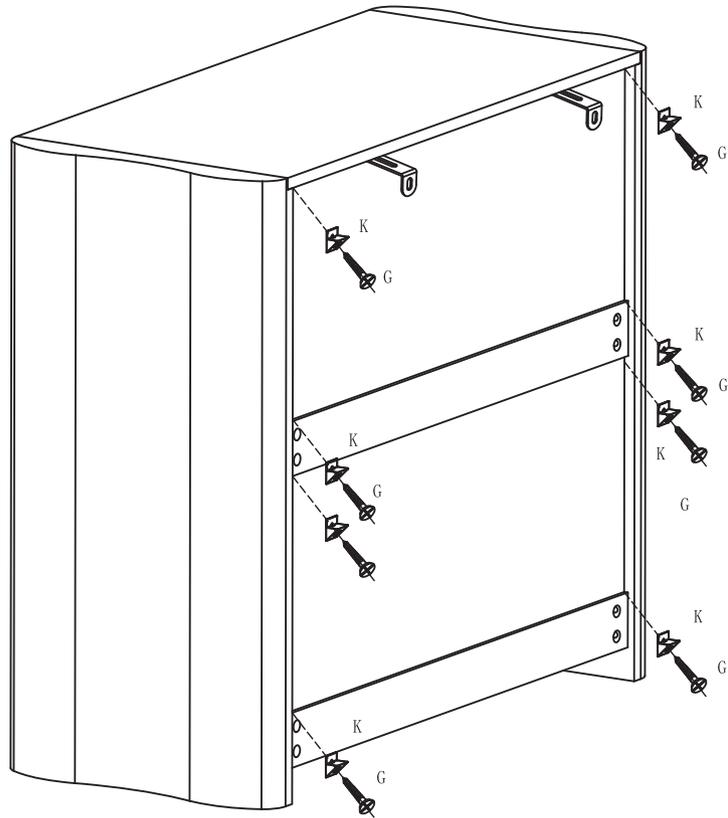


G -		X8
K -		X8

STEP 12

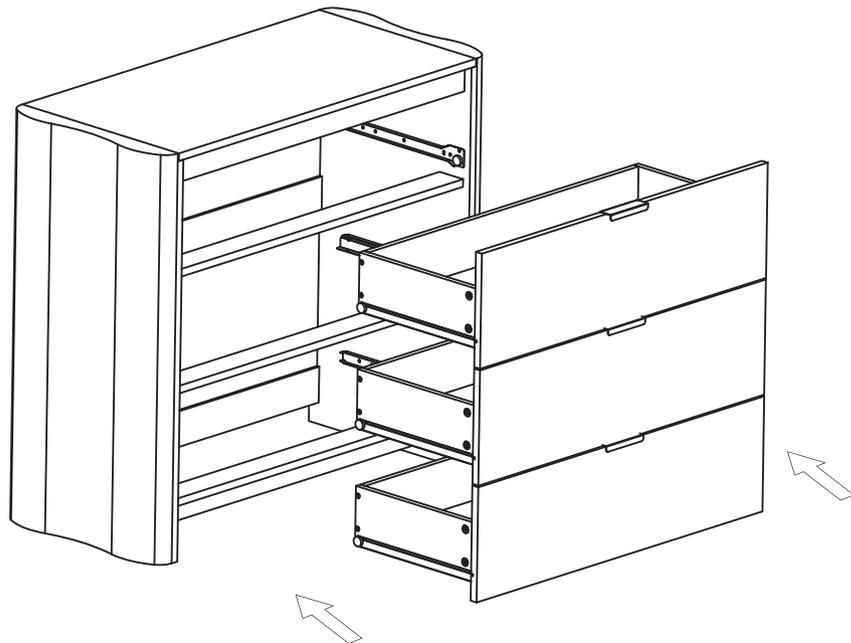

STEP 13

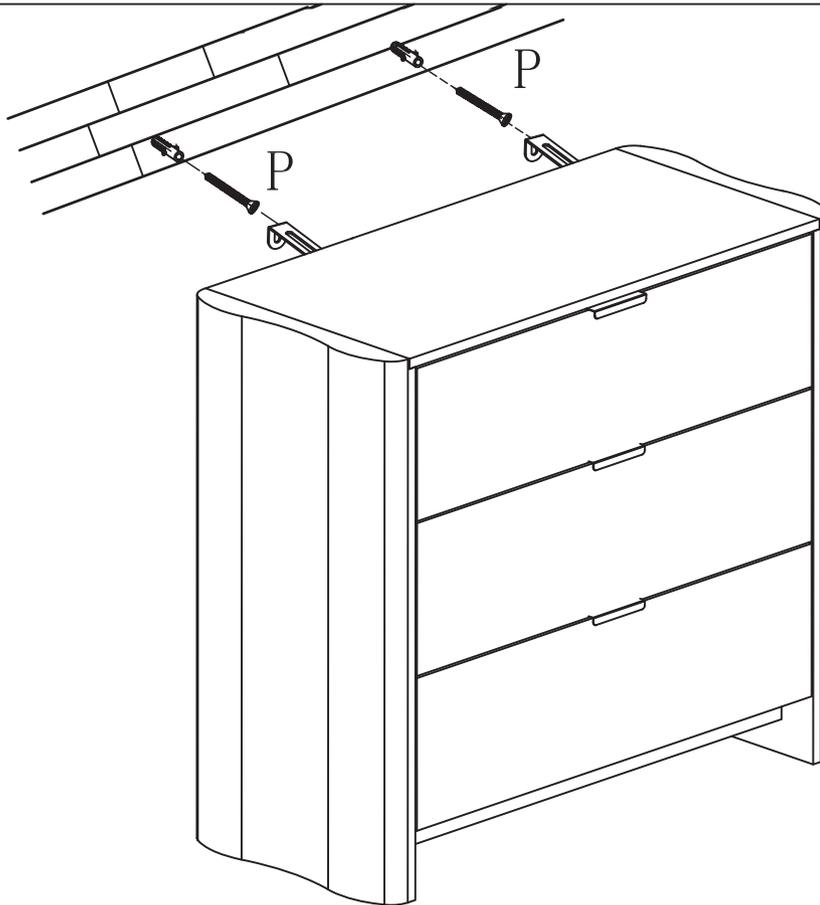

P - X2

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

⚠ WARNING	
<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none"> • ALWAYS secure it with an anchor device. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heavy items down low. 	
<p>NEVER put a TV on this furniture</p>	
<p>This is a permanent label. Do not remove!</p>	

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

<p>TOPPLING HAZARD</p>	<p>WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.</p>	
------------------------	---	--