


HAZEL HALL TABLE

Instruction Manual

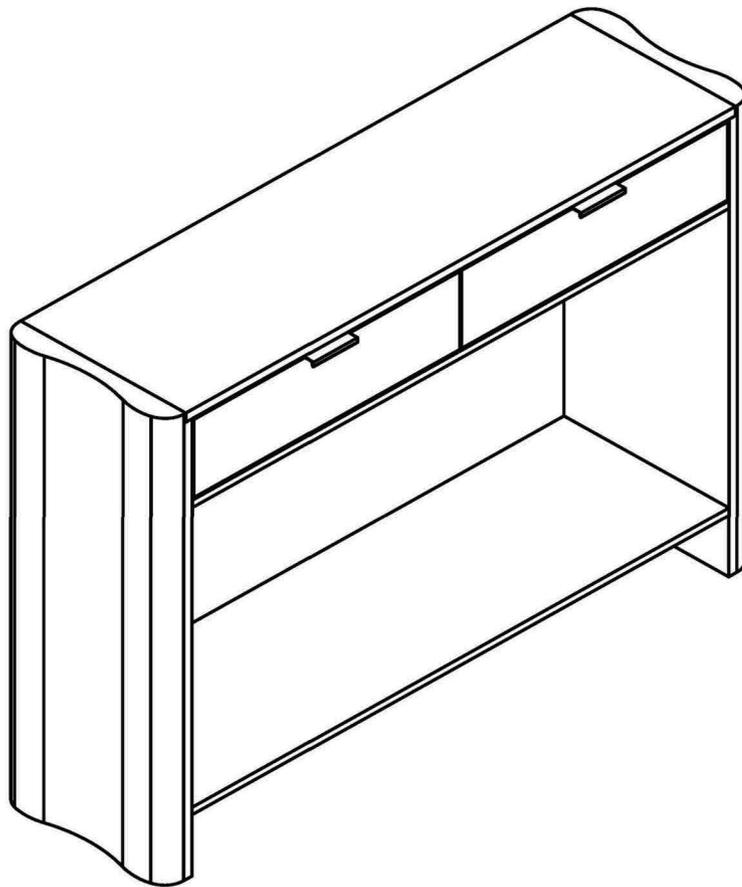

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Assembly Instructions

43636099 HAZEL HALL TABLE

CARE INSTRUCTIONS:

TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE.
WIPE CLEAN WITH A SOFT DAMP CLOTH.
NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS.
CHECK AND TIGHTEN ALL PARTS REGULARLY.
KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT.
STORE IN A DRY PLACE.
FOR INDOOR AND DOMESTIC USE ONLY.

 

WARNING:

DO NOT STAND, SIT OR LEAN ON THIS UNIT.
DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES.
ADULT ASSEMBLY REQUIRED.
USE ONLY ON A FLAT SURFACE.
DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED











MAXIMUM SAFE LOAD:

15KG FOR TOP PANEL ,10KG FOR EACH SHELF,5KG FOR EACH DRAWER


1 Hardware List

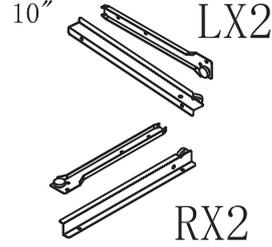A		6X30mm	22	B		6X35mm	32	C		15X10mm	32	D		4X35mm	13
E		3X12mm	28	H		4X35mm	8	J			2	L=80	 10" LX2 RX2		
O		4X12mm	2	P		4X35mm	2	Q			4				


2 Parts List

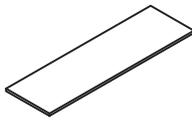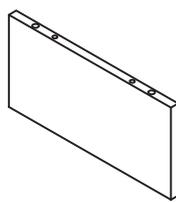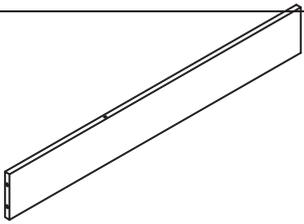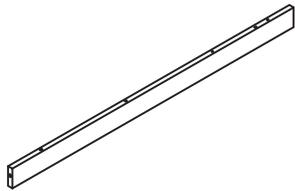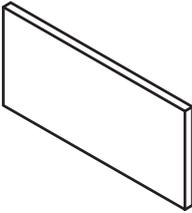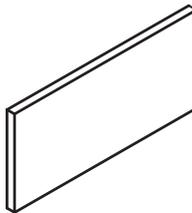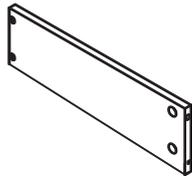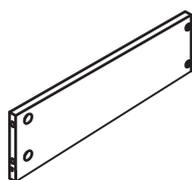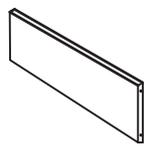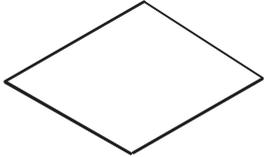① /1PC	② /1PC	③ /1PC	④ /1PC
			
⑤ /1PC	⑥ /1PC	⑦ /1PC	⑧ /2PCS
			
⑨ /1PCS	⑩ /1PCS	⑪ /2PCS	⑫ /2PCS
			
⑬ /2PCS	⑭ /2PCS		
			

PANEL LAYOUT

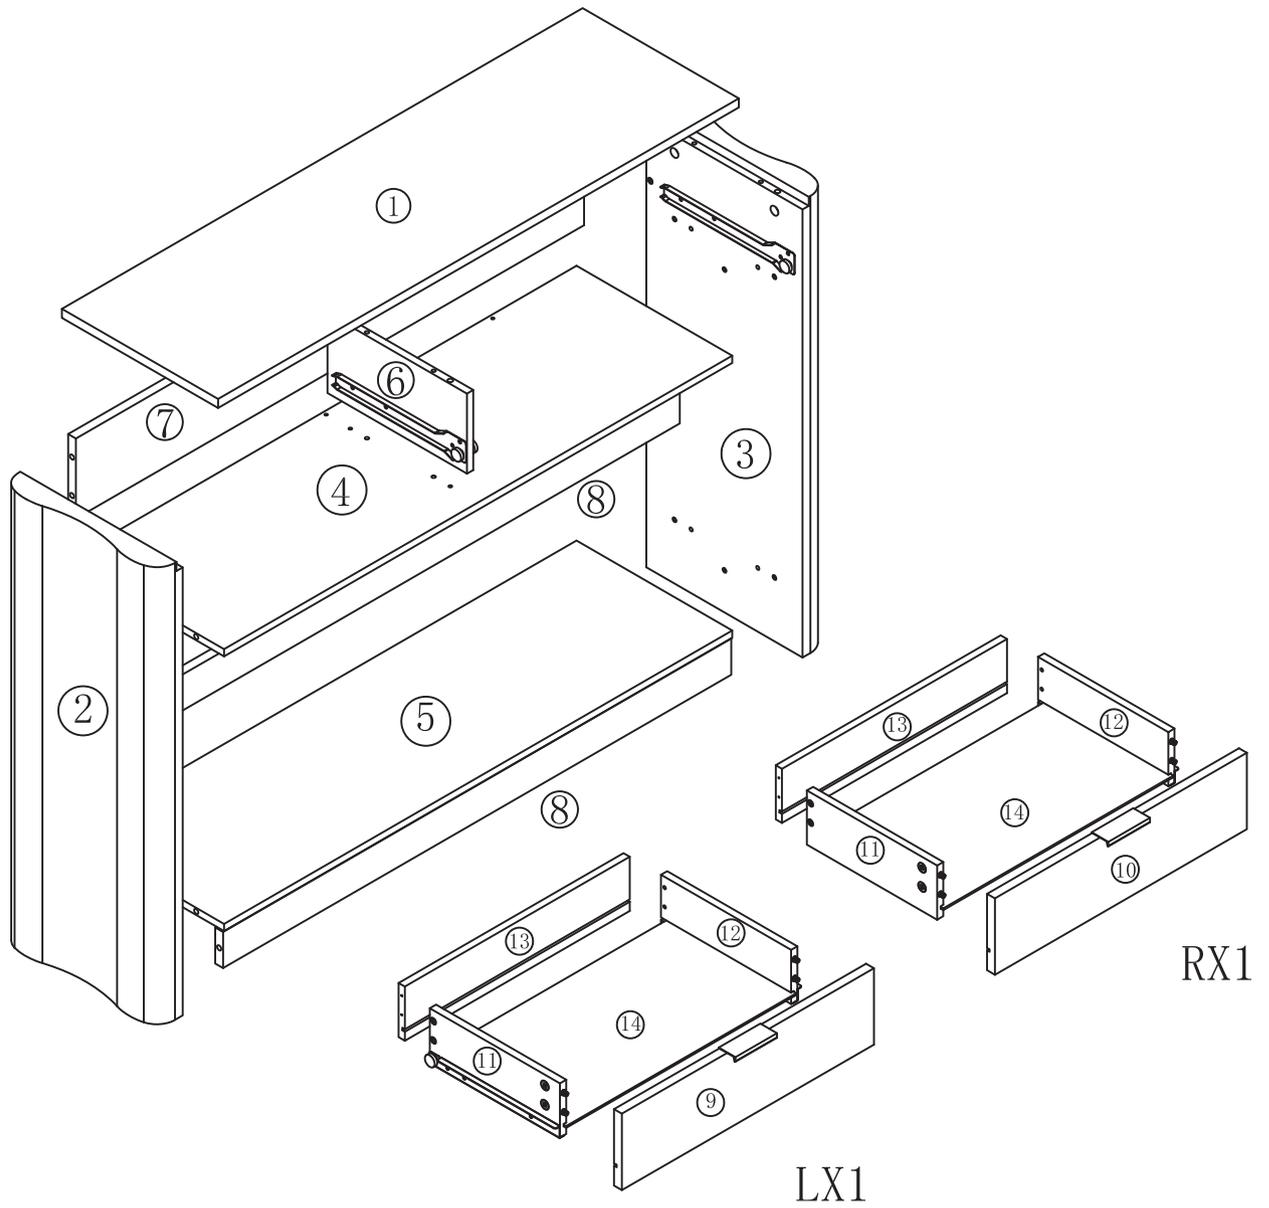


STEP 1

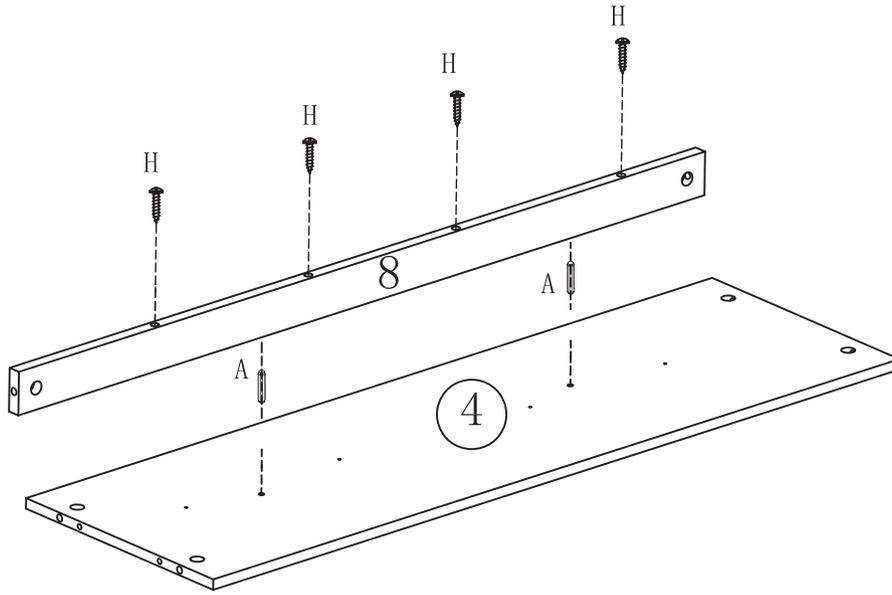



A -  X2
H -  X4

STEP 2

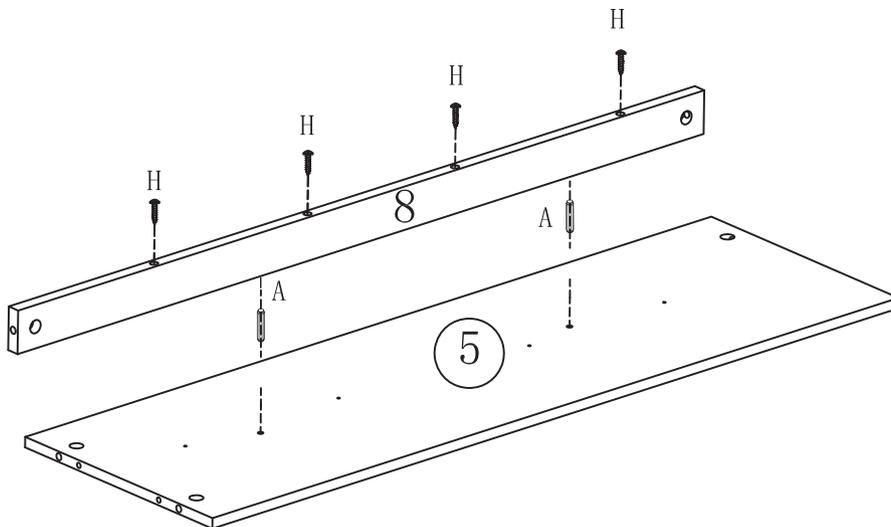



A -  X2
H -  X4

step:3

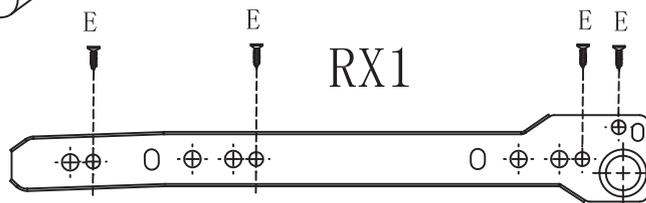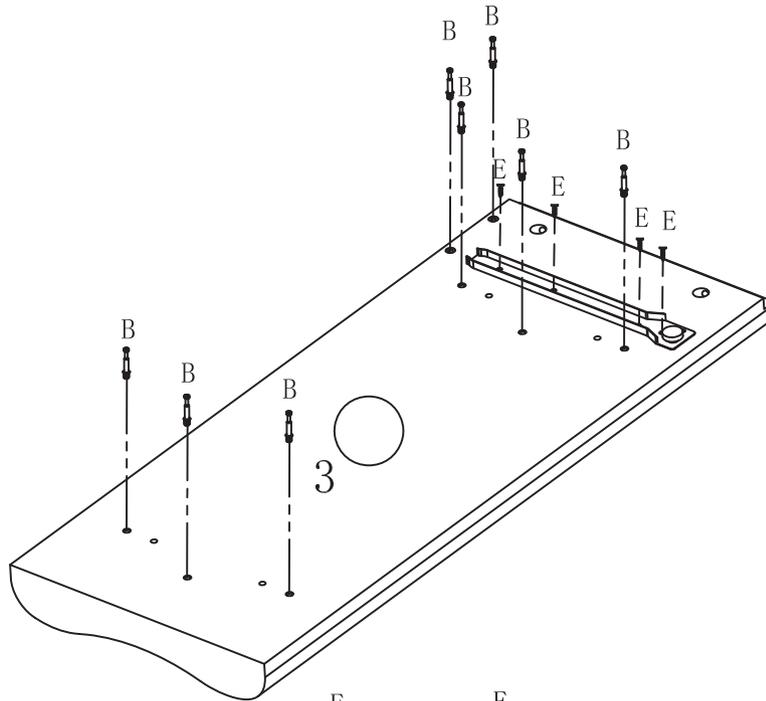


B -		X8
E -		X4

step:4

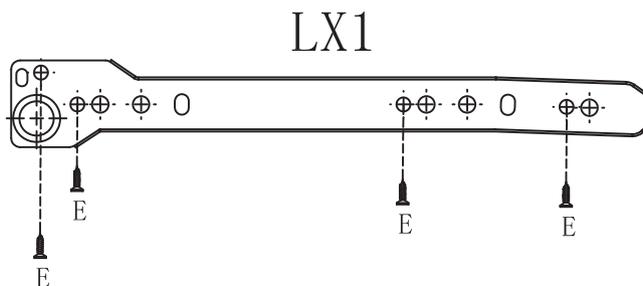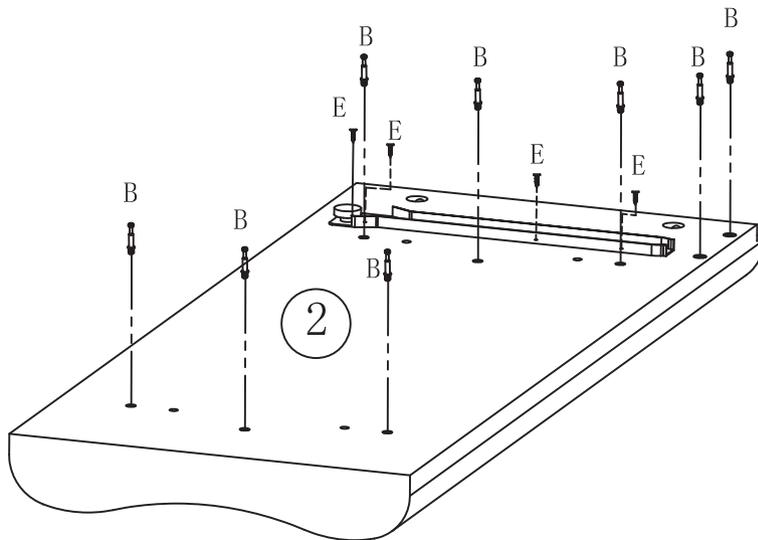


B -		X8
E -		X4

STEP 5

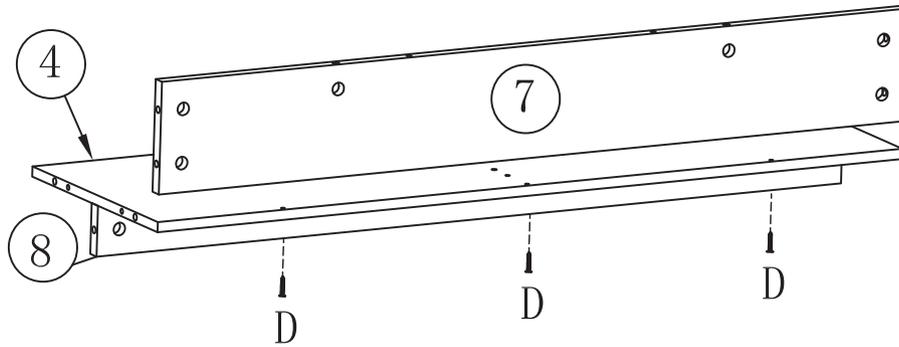



D -  3

STEP 6

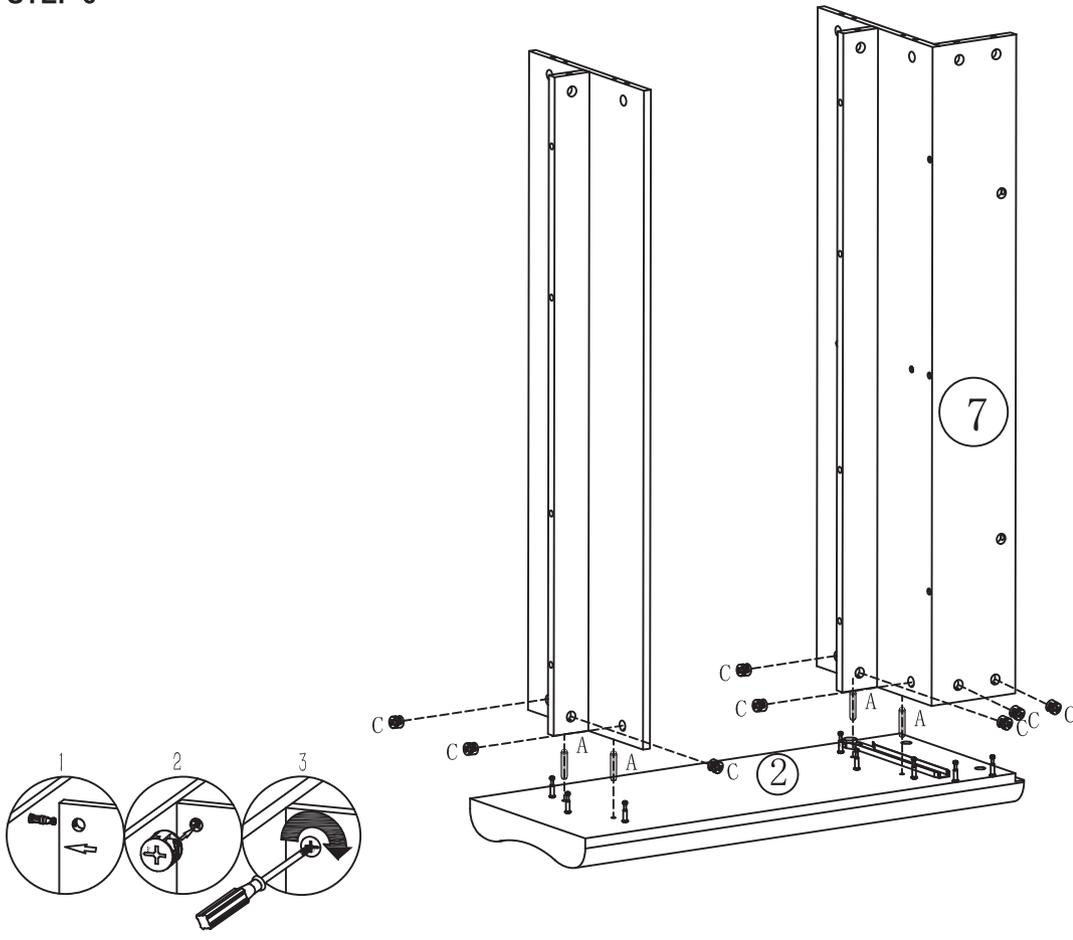


A -  4
C -  8

step:7

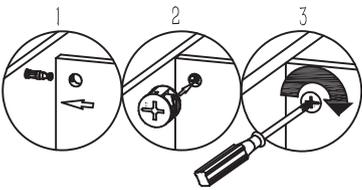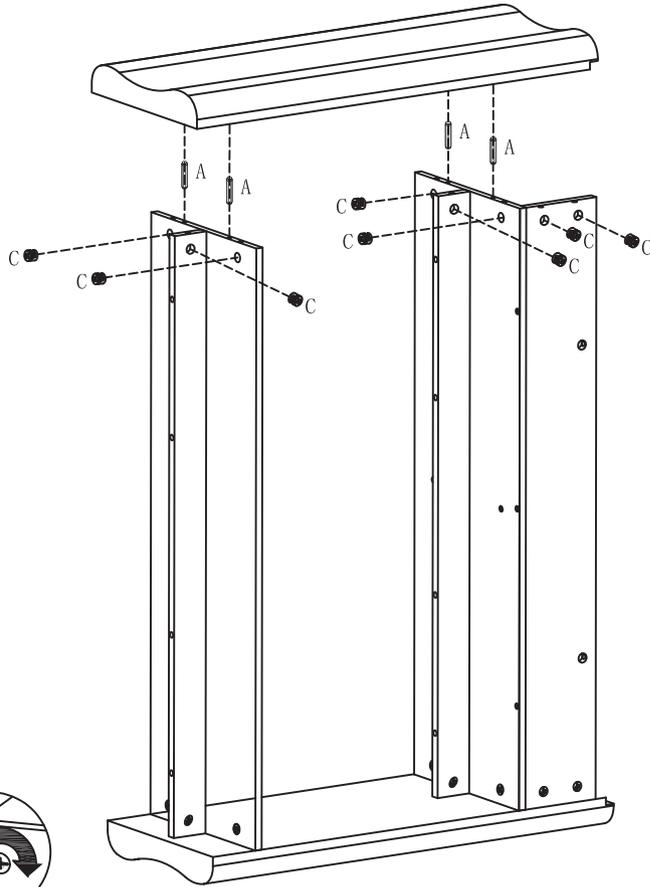


A -		4
C -		8

step:8

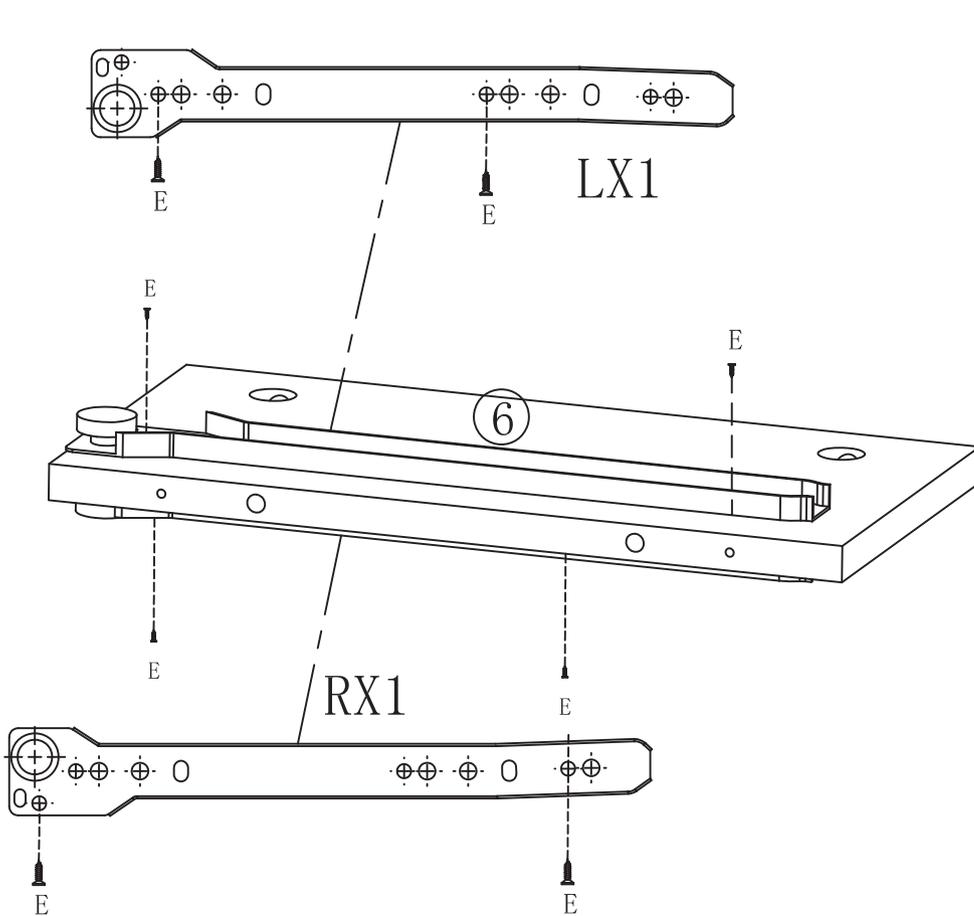


L- 1 R-1		
E -		X4

STEP 9

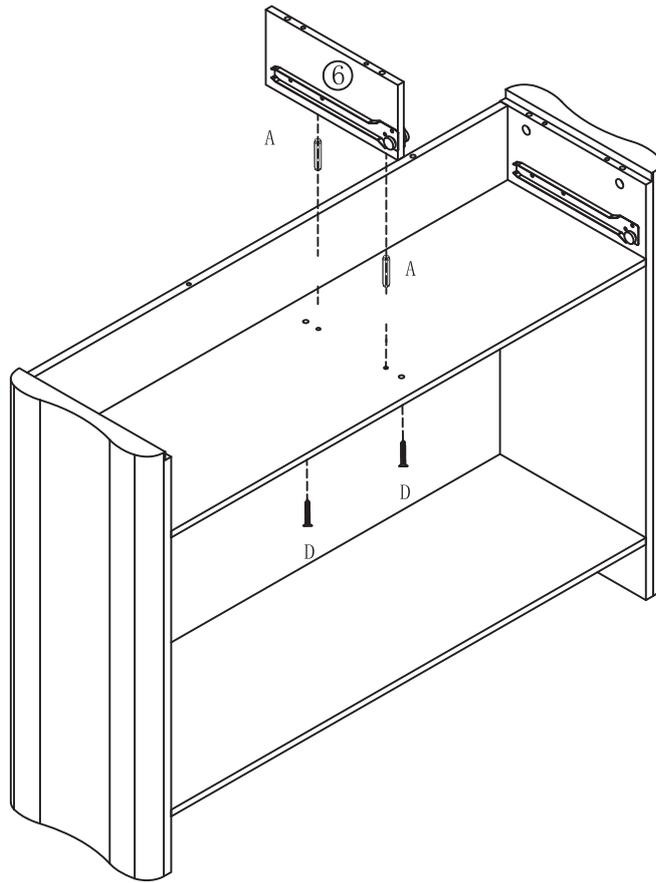


A -		8
D -		X2

STEP 10

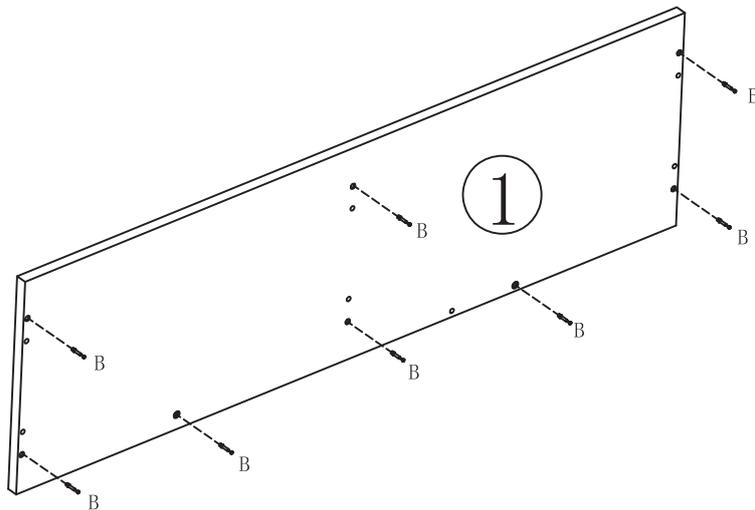


B -		X8
-----	---	----



STEP 11

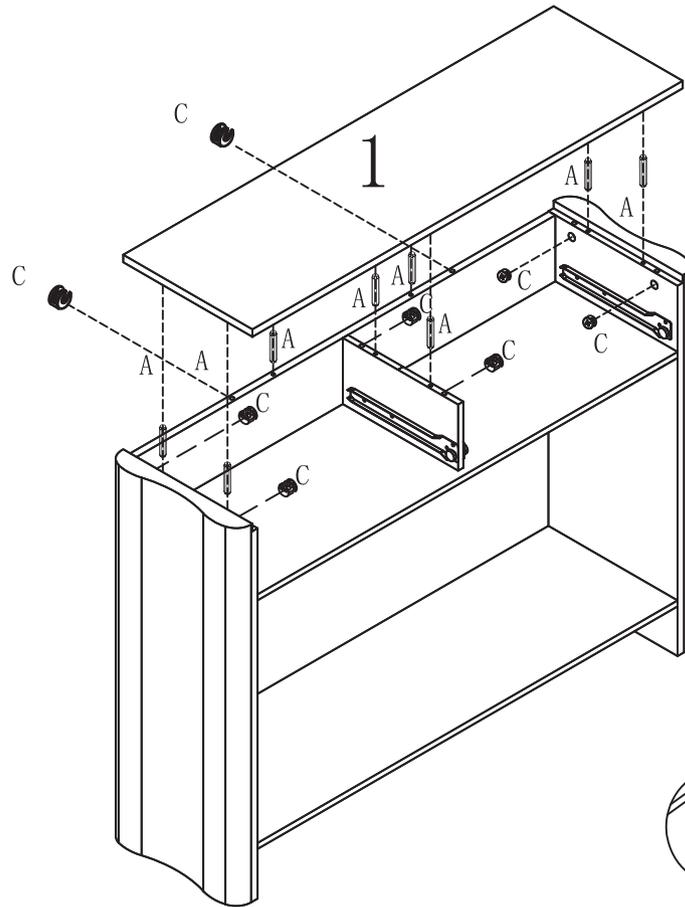

A -		8
C -		8



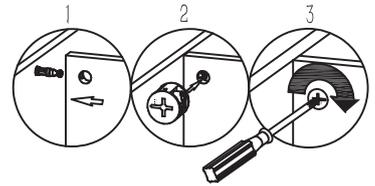


STEP 12

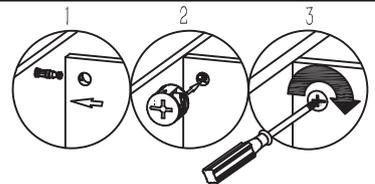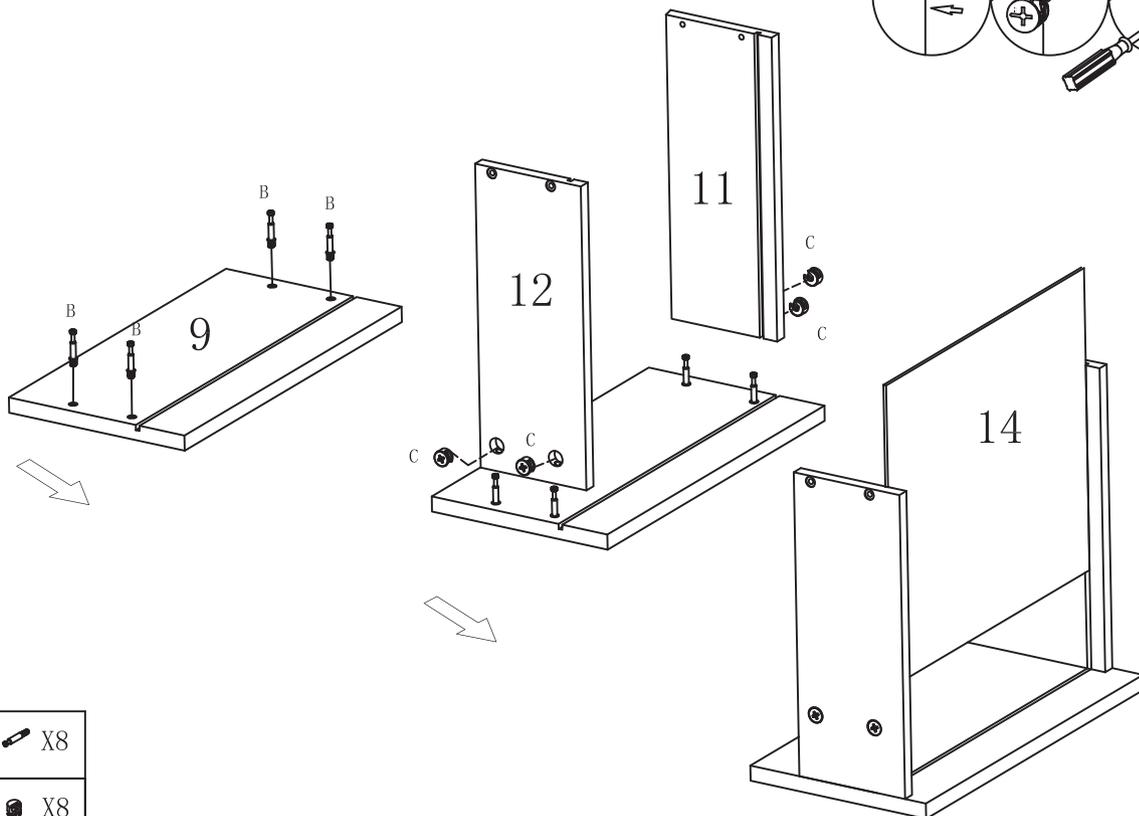


B -		X8
C -		X8

 STEP 13

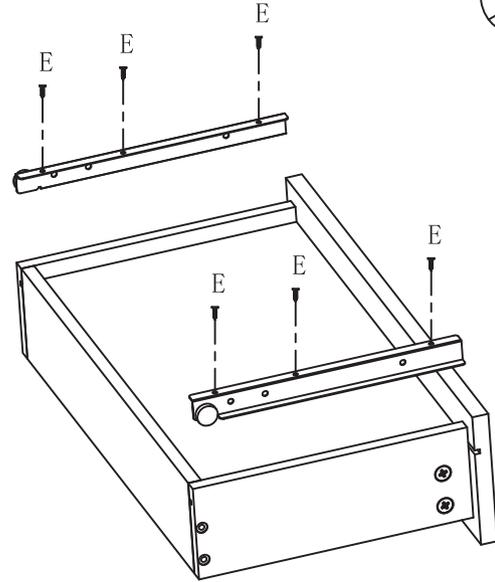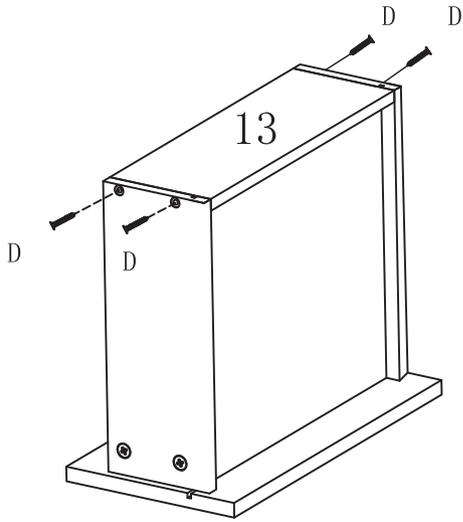


- | |
|---|
| E -  X12 |
| D -  X8 |

STEP 14

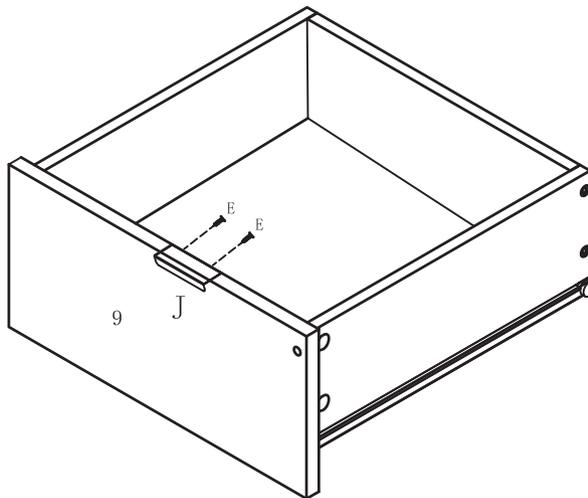


LX1

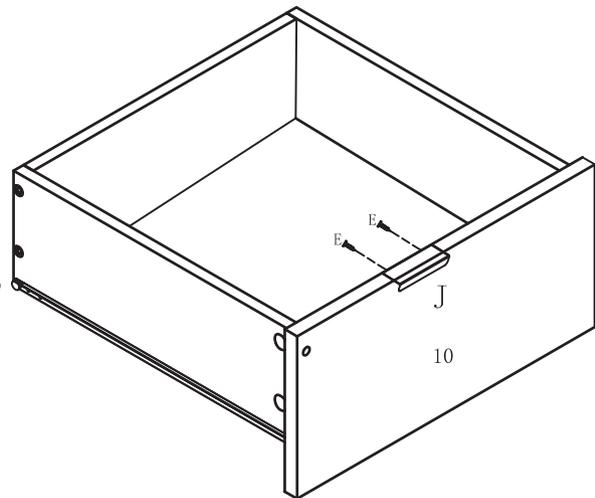


RX1

- | |
|--|
| E -  X4 |
| J -  X2 |


STEP 15

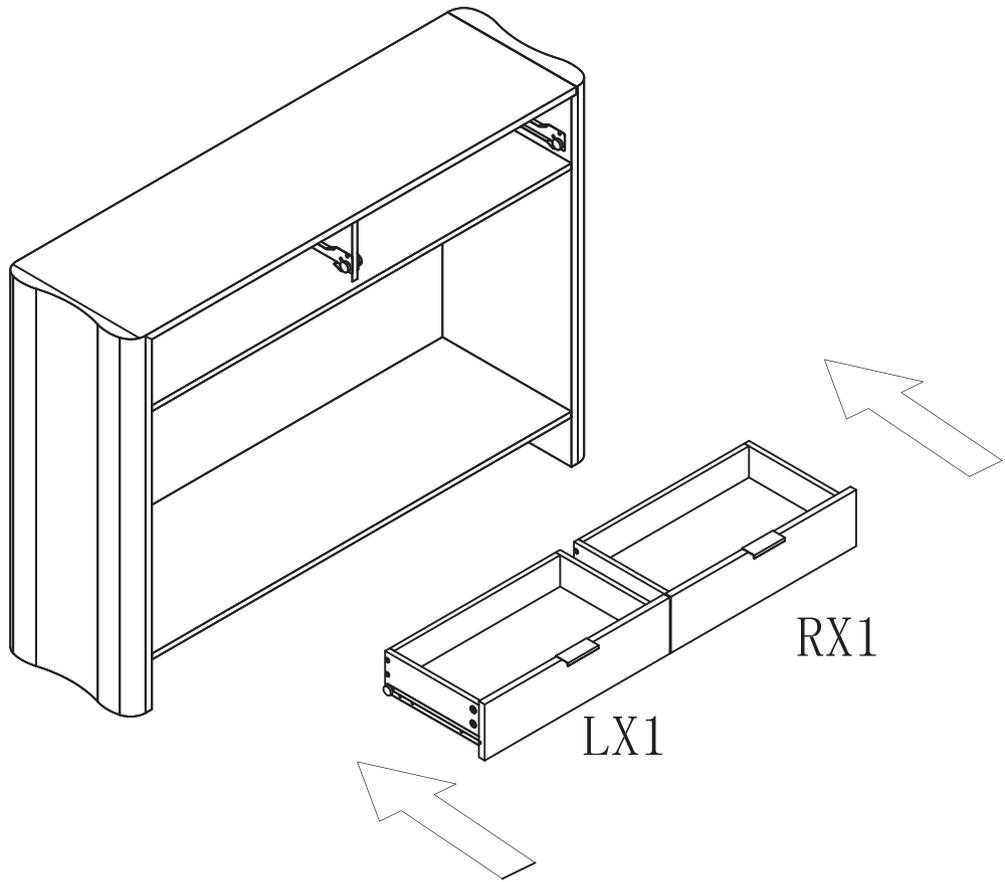

STEP 16

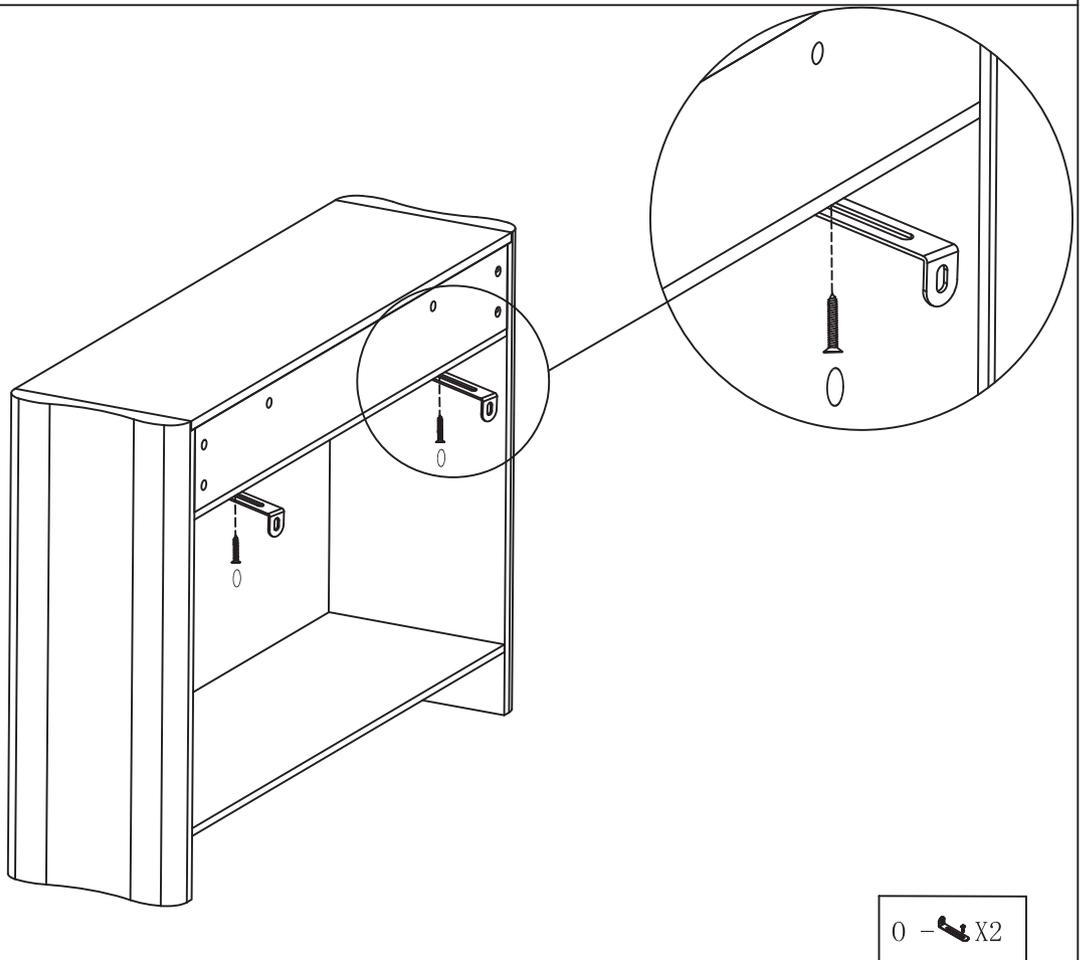

STEP 17


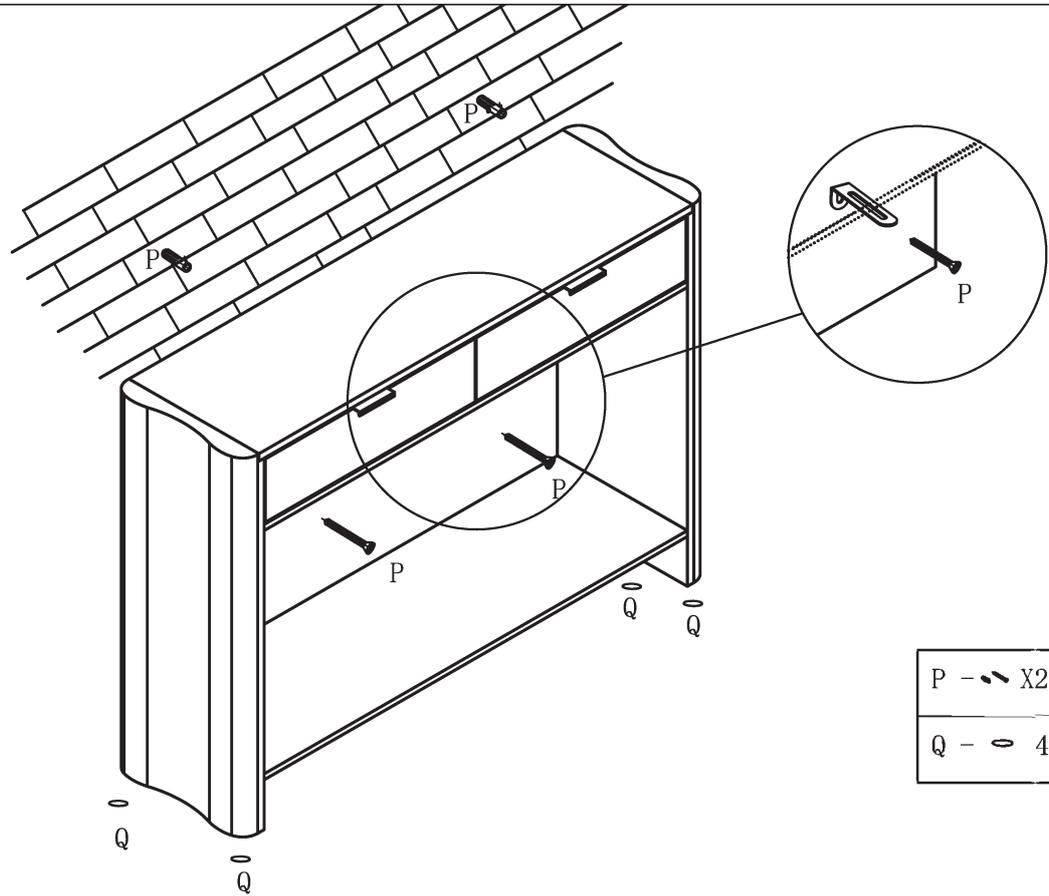


P -		X2
Q -		4

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- Use safety drawer locks to prevent children climbing.
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

 ⚠ WARNING

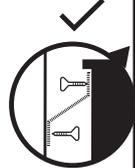Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

