


When using any electrical product, always follow these basic safety precautions:

When using any electrical product, always follow these basic safety precautions:



1. Always disconnect the USB cable with power supply when not in use, before charging or storing.
2. Never use the appliance if the cable, main unit or port are not damaged.
3. Keep the product away from water, moisture, heat, fire, and other hazardous conditions.
4. Do not leave the product in excessive heat or high temperatures as it can cause the product to malfunction.
5. Children should be supervised to ensure that they do not play with the product.
6. Do not use the product if the power supply is damaged or if the new instructions supplied with the product and manual do not match for other purposes.
7. Do not touch the power supply with wet hands.
8. Do not plug the product into a power outlet with a different voltage, burner or other electrical water heater.
9. Never immerse the appliance in water or other liquids.
10. **WARNING!** Keep the product dry.
11. Do not touch the product if the power supply is not in good shape or being dropped.
12. For electrical safety, always repair the product should be carried out by a qualified electrical person only if the instructions do not permit disposal of.
13. The light source of this luminaire is not replaceable; when the light source reaches the end of its life, the whole luminaire must be replaced.
14. Use only the USB cable supplied with the product.
15. Ensure that the USB cable is not stretched fully to its maximum length.
16. This product is not to be directly connected to mains supply.
17. The appliance must be approved by *ANSI/IEEE C63.11* & *ANSI/IEEE C63.13* certified power busbar and *ANSI/IEEE 1582* 216 class III SELV power supply with output 12V/1A/10W.
18. Do not use the phone cord or CLS (Cable Locking System) and MAINTENANCE cord.
19. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
20. Cleaning and maintenance should be carried out with caution without supervision.
21. For further use see page 10.
22. The product must be mounted on a flat, stable surface.
23. Use water resistant luggage cover or similar damping device to protect the appliance from being damaged by the manufacturer or his service agent for a usual qualified person in order to allow future use.

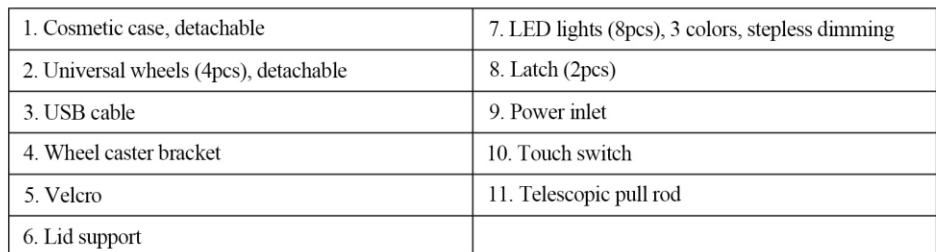


To use the mirror

1. Open the latches on both sides.
 2. Peel off the plastic film from the mirror.
 3. Rotate the LED support in clockwise direction to put it in locking position to prevent LED mirror case from closing.
 4. Connect the product to a SELV USB power source (12V DC 1.5A) with the supplied USB cable, the touch switch will light up in blue.
 5. Touch the switch to turn on the light (default cold white). Touch a 2nd or 3rd time to change the colour (nature light, warm white) of the light. Touch and hold the switch to stepless adjust the brightness.
- Note: The atmosphere light will light up with the last setting of light brightness.
6. Always touch the switch another time to turn off the light after use.
 7. Unplug the product after it is switched off.
 8. Rotate the LED support in anticlockwise direction to release it from locking position and move back inside the mirror case.
 9. Close the mirror case and close the latches on both sides.

To put the lid support in locking position

Before use, rotate the lid support in clockwise direction to put it in locking position.

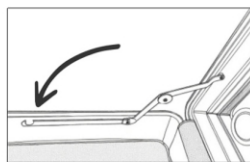

After use, rotate the lid support in anticlockwise direction to release it from locking position and move back inside the mirror case.

To detach the cosmetic case

The cosmetic case is adhered with the LED mirror case with Velcro. To get it out, grasp both sides of the cosmetic case and pull it out of the mirror case vertically.

To put it back, align the Velcro on cosmetic case base and mirror case interior to adhere properly.

To put it back, align the Velcro on cosmetic case base and mirror case interior to adhere properly.

To assemble the wheels

To assemble the wheels, align the wheel with the groove of the casters bracket and push the wheels in.



To disassemble the wheels, push both sides of the quick-release button on the wheel and pull off the wheels.



1. Clean the product regularly to maintain optimal performance and prolong the life of the product.

1. Clean the product regularly to maintain optimal performance and prolong the life of the product.
WARNING! Do not use a steel ball, abrasive cleaners or corrosive liquid (such as gasoline, acetone) to clean the product.
2. Wipe the product with a dry microfiber cloth. Do not rinse, soak or spray water or other liquids onto the product to avoid damage.
3. Ensure the product is clean and dry before storage.

CASE DIMENSIONS: 480 (H) x 400 (W) x 220 (D) mm

CASE DIMENSIONS: 480 (H) x 400 (W) x 220 (D) mm
Note: The dimensions do not include wheels and handle extended.
Total height with handle fully extended to wheels: 970 (H)

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. c/- Customer Service Centre 690 Springfield Road, Melbourne Vic 3170 Customer Service: 1800 124 125 (Australia) or 800 945 995 (New Zealand) or Customer Help at kmart.com.au	Target Australia Pty Ltd c/- Customer Service Centre 2 Kessell Street, Williams Landing, Vic. 3027 Customer Service: 1800 753 567 or via Customer Help at target.com.au/help/contact-us