

# KMT说明书折页 128g双铜 尺寸: 89\*127mm

anko

K: 43-637-492 | T: 71-797-274

Model No.: PW566

## 3 in 1 Powerbank Charger Station User Manual

### Includes:

- › Powerbank
- › Charging cable



## 12 month warranty

Thank you for your purchase.

This product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### MADE IN CHINA

### CUSTOMER SERVICE:

KMART AU: 1800 124 125


KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

### WARNING:

- This product shall not be connected to power supply source less than 18W.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Require a minimum 30W wall charger input (not included).

## Function overview:

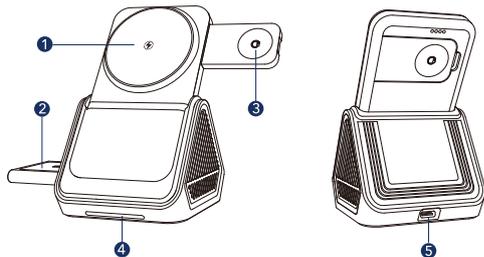

- 1 Mobile phone charging area
- 2 Earphone charging area
- 3 Smart watch charging area
- 4 Earphone wireless charging indicator
- 5 Input charging port

## Specifications:

### Charger base

Type C input/output : 5V $\equiv$ 2A; 9V $\equiv$ 2A; 12V $\equiv$ 2A

Output for earphone: 5W max

### Power bank with wireless charging

Battery capacity: 5000mAh 3.7V 18.5Wh

Type C input/output : 5V $\equiv$ 2A; 9V $\equiv$ 2A

Wireless charging output power:

7.5W Max for compatible iPhone

10W Max for compatible Samsung smartphone


15W Max for other compatible android models

Output for watch: 2.5W max


## Operation Instruction :

Under combined mode, it works as a 3 in 1 wireless charger and powerbank can be charged.

When charging for watch, press the button on left side of powerbank to start.

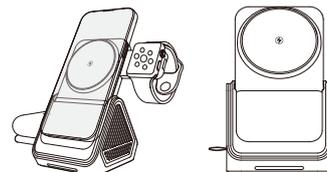

Under split mode, powerbank can be used separately for mobile phone or watch wireless charging.

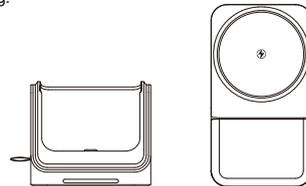

## Indicators and Protection :

1. The powerbank indicator: The indicator lights will display according to the battery percentage, the four indicators keep on when the battery is fully charged.
2. No indicator is displayed when the mobile phone and smart watch are charging.
3. The base indicator: The blue light keeps on when connect to the power, and it turn off 10 seconds later. The blue light keeps on when the earphone charging. It will turn off after 5 seconds once removed the earphone.
4. FOD for mobile phone: When put metal or magnet objects like coins and keys on the charger, it will stop power supply and wireless charging.
5. FOD for earphone: When put metal or magnet objects like coins and keys on the charger, the blue light flashing all the time.
6. Perfect protective function based on over-voltage, over-current, over-temperature and short-circuit protection.

1. Please read this manual carefully before use.
2. Children must not use this product without adult supervision.
3. Keep away from water, liquids, or wet areas.  
Do not expose the product to fire or high temperatures over 45 °C .
4. To preserve battery lifespan, use and recharge at least once every 3 months.
5. For long-term storage (over 3 months), charge the device between 50% to 75% charge level.