

Assembly Instructions

43637683 WAVE BOOK STORAGE

CARE INSTRUCTION: Wipe clean with a soft dry or damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.

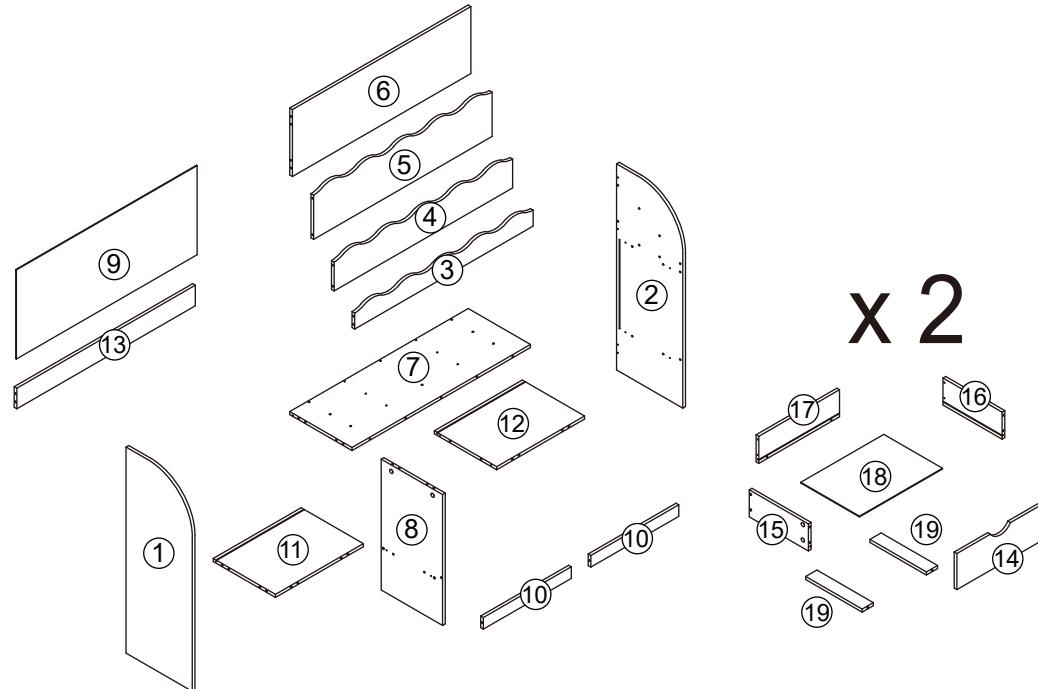
WARNINGS: Do not stand or sit on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

MAXIMUM TOTAL LOADING WEIGHT: 3KGS FOR EACH LAYER OF BOOKSHELF, 5KGS FOR EACH DRAWER, 7KGS FOR EACH SHELF, 36KGS IN TOTAL.

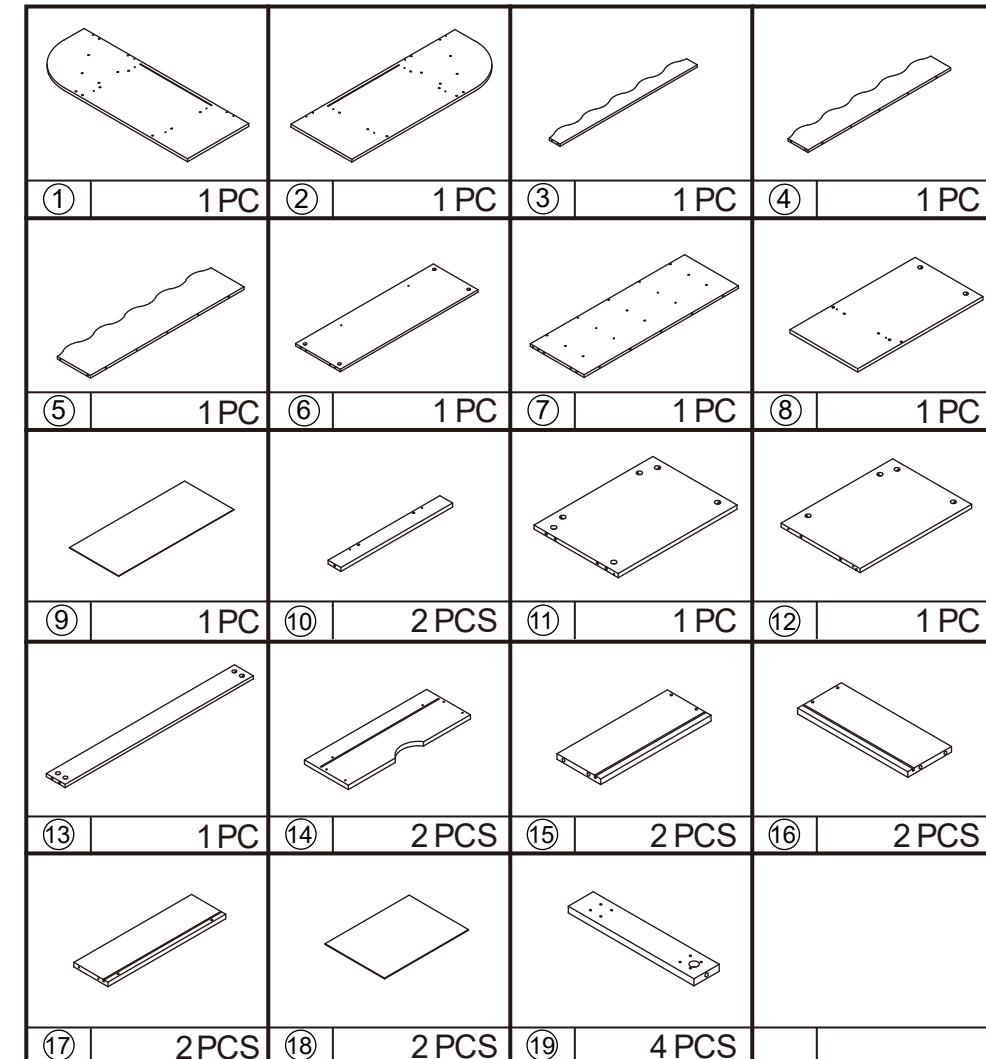
Hardware list

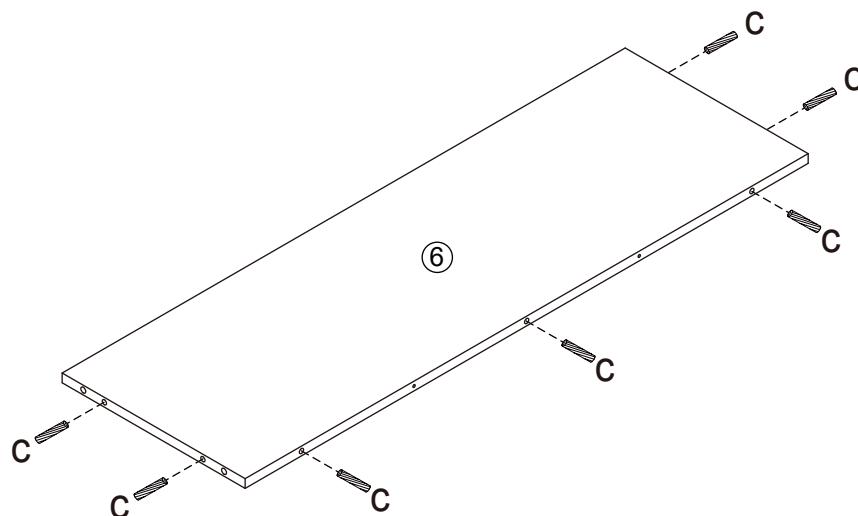
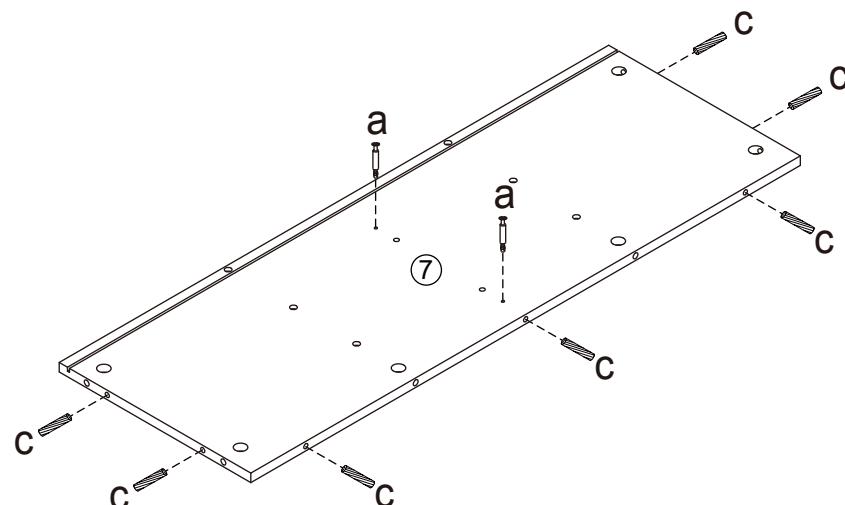
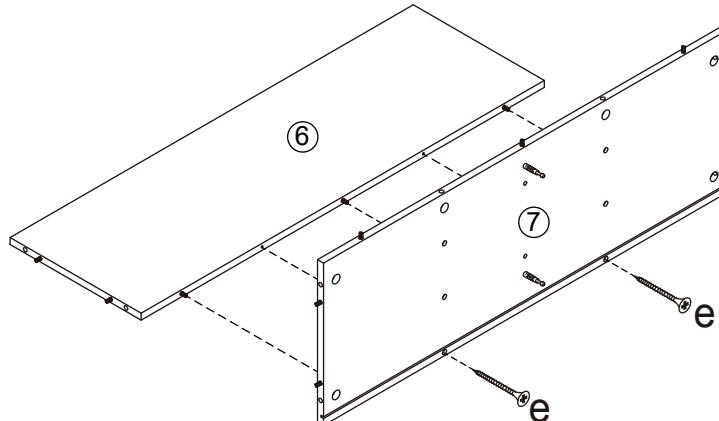
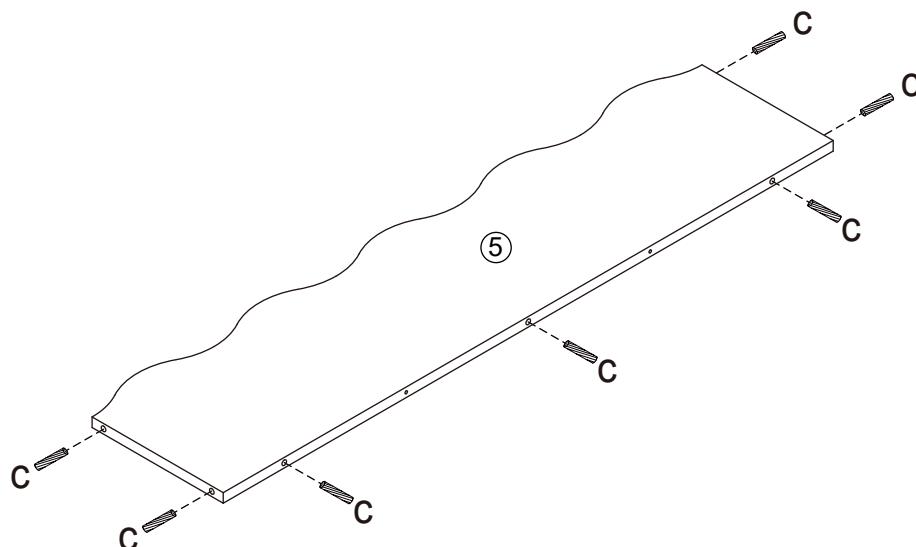
	a		38PCS
	b		38PCS
	c	6X30mm	44PCS
	d	6X50mm	3PCS
	e	4X35mm	20PCS
	f	4X12mm	32PCS
	g		4PCS

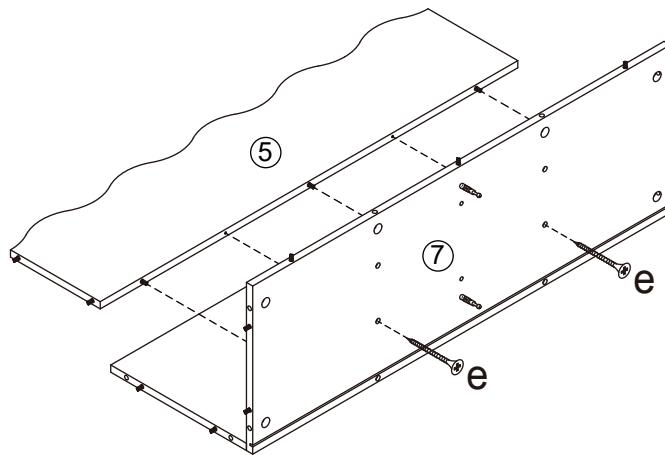
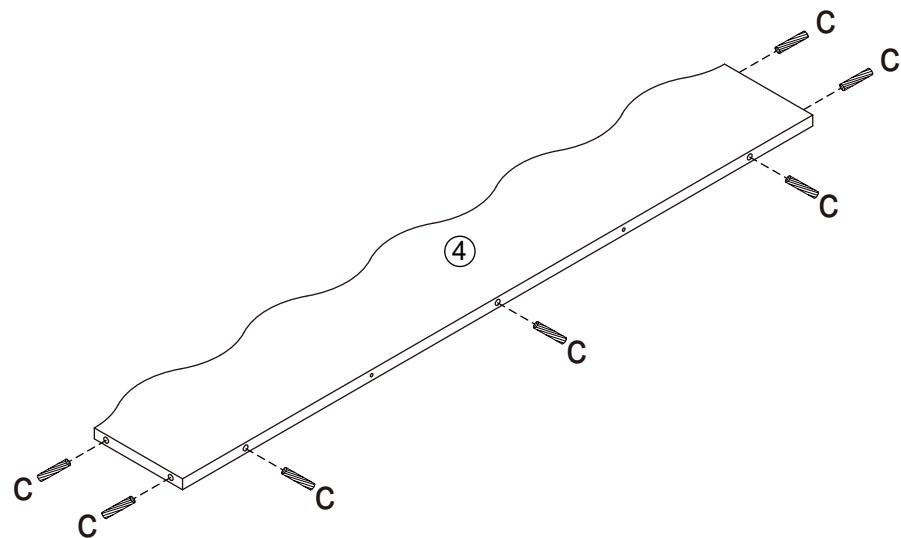
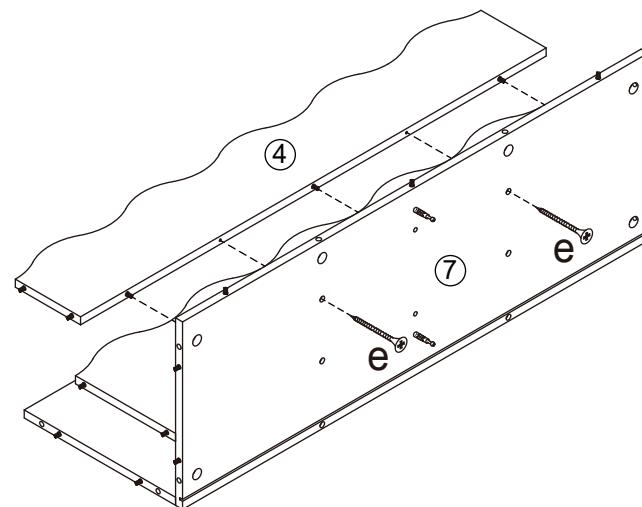
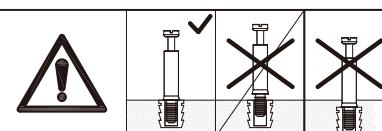
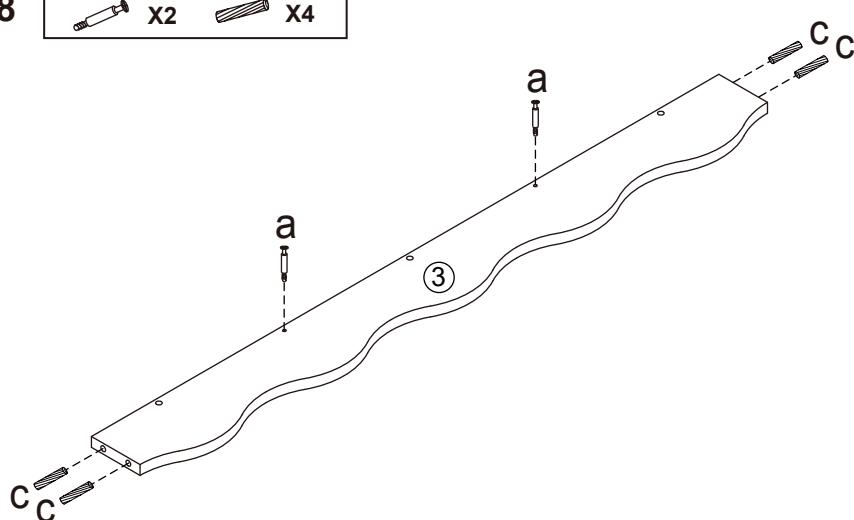
	h		4PCS
	i	4X12mm	2PCS
	j		4PCS
	k		2PCS
	l	4X30mm	2PCS
	m		2PCS
	n		4PCS

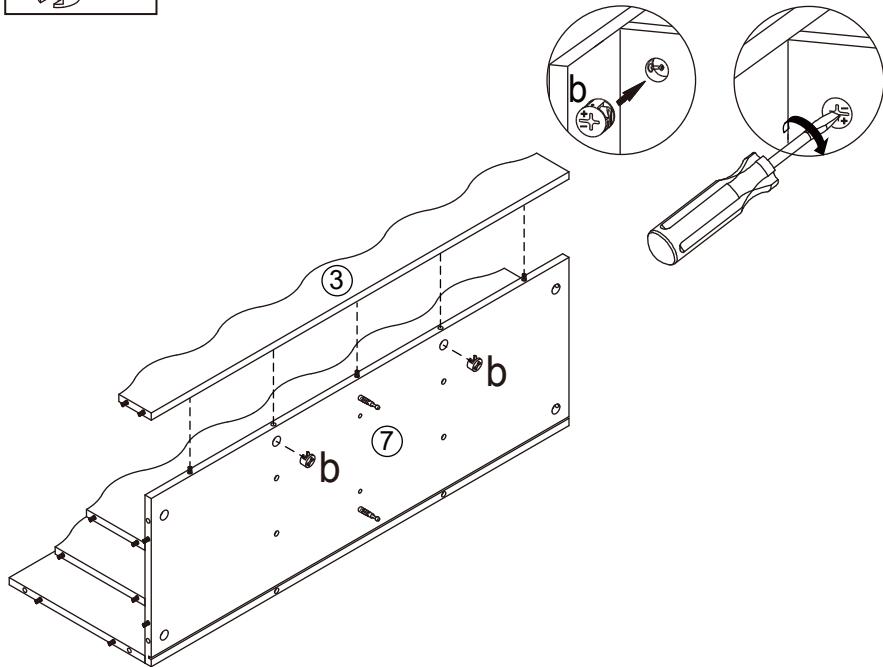
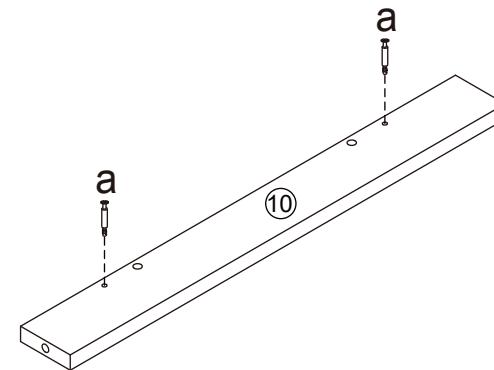


DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.

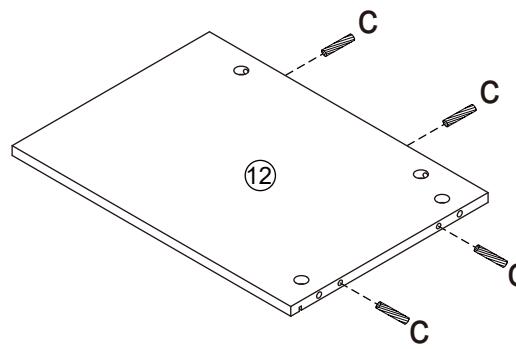
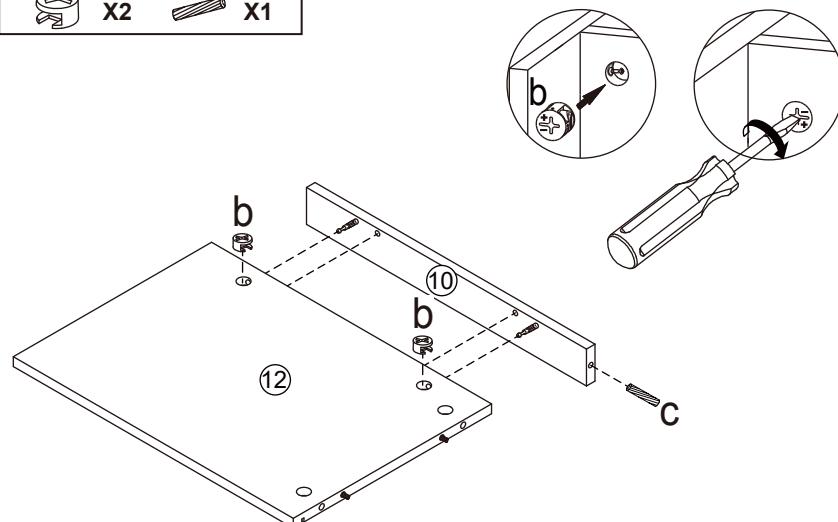


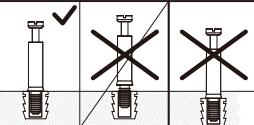
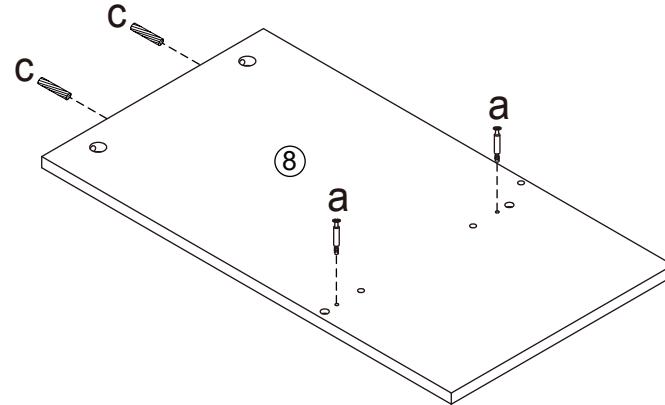
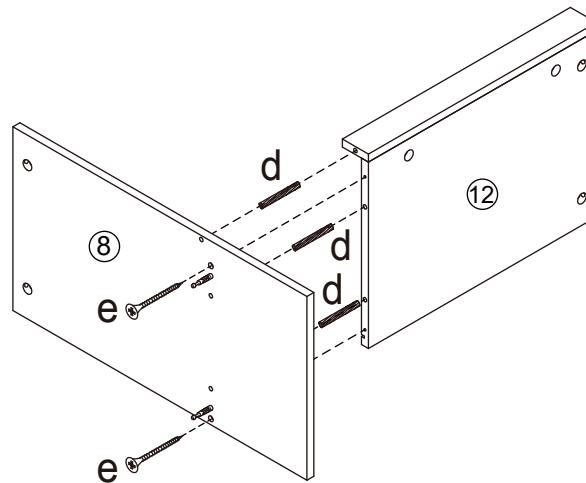
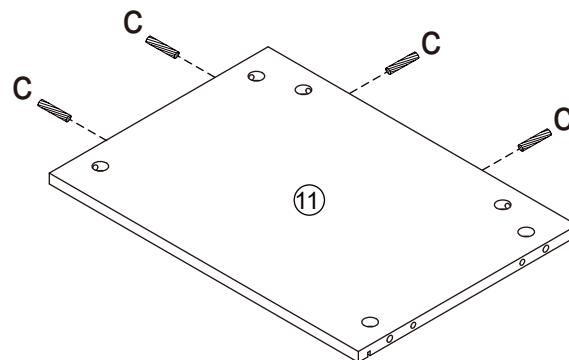
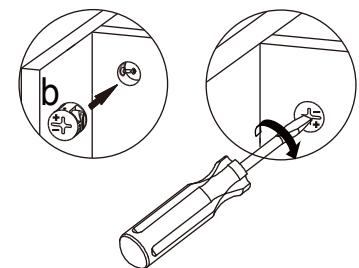
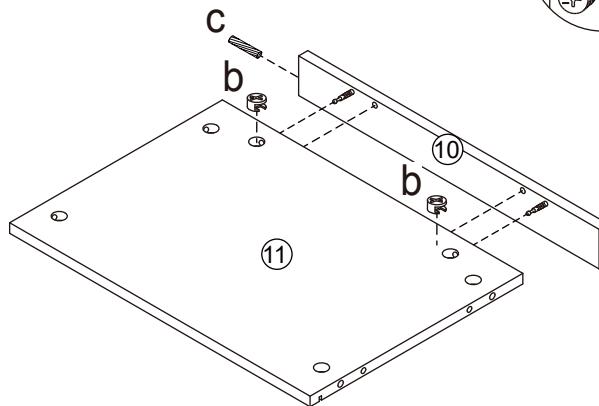
STEP 1 x7**STEP 2** x2  x7**STEP 3** x2**STEP 4** x7

STEP 5 x2**STEP 6** x7**STEP 7** x2**STEP 8** x2  x4

STEP 9 x2**STEP 10** x4

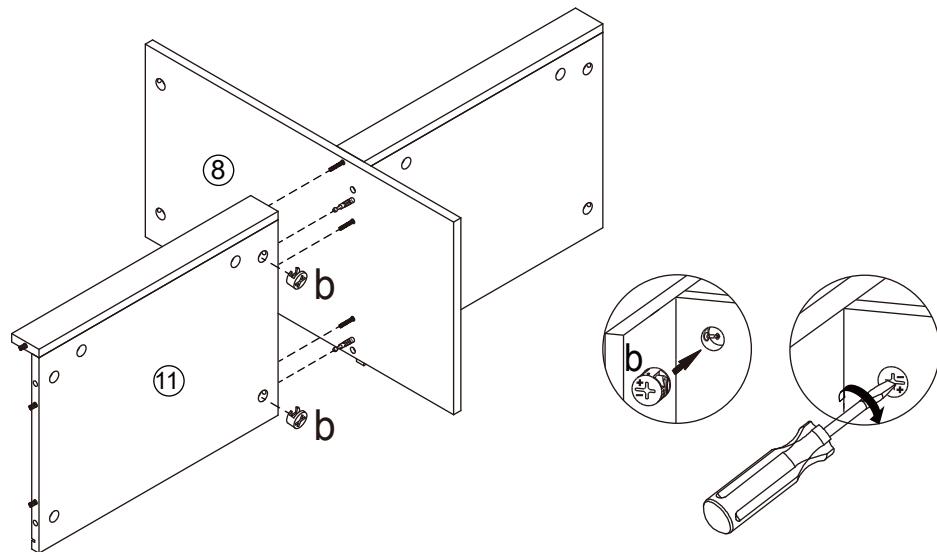
x 2

STEP 11 x4**STEP 12** x2  x1

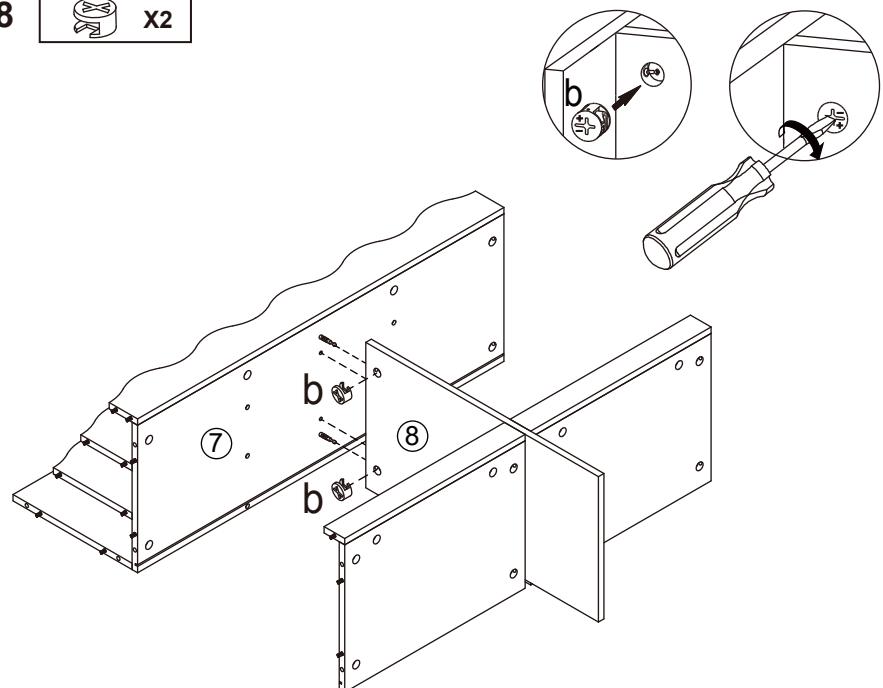
STEP 13 x2  x2**STEP 14****STEP 14** x3  x2**STEP 15** x4**STEP 16** x2  x1

STEP 17

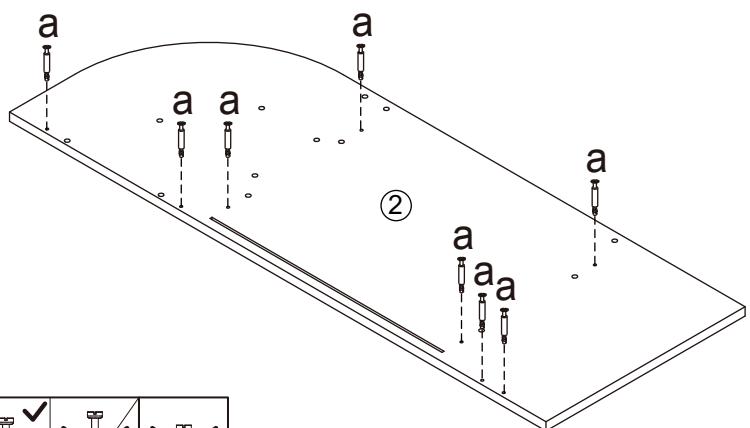
x2

**STEP 18**

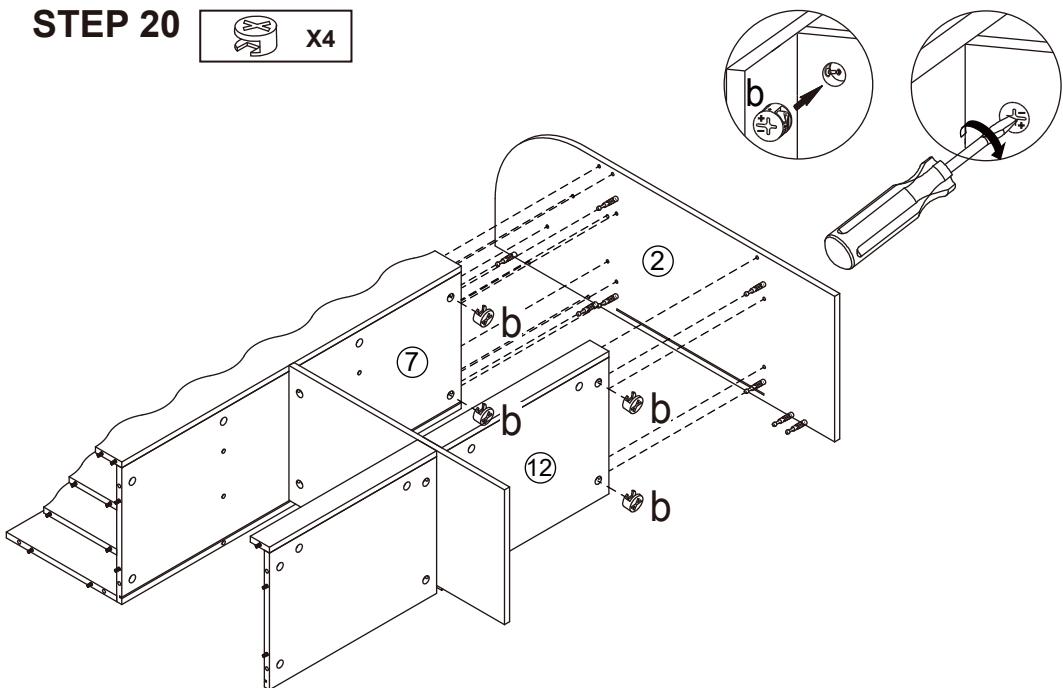
x2

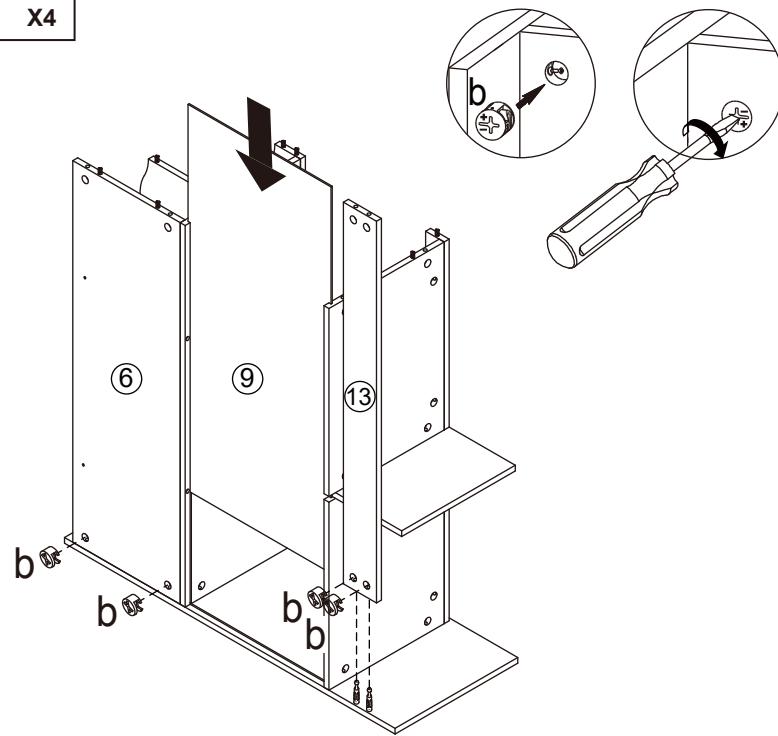
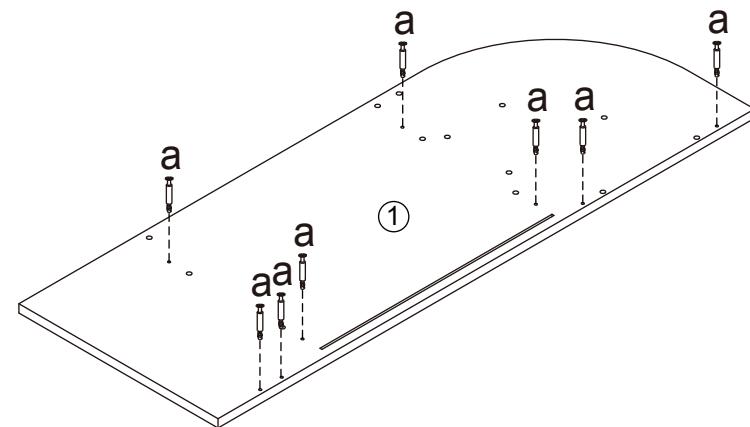
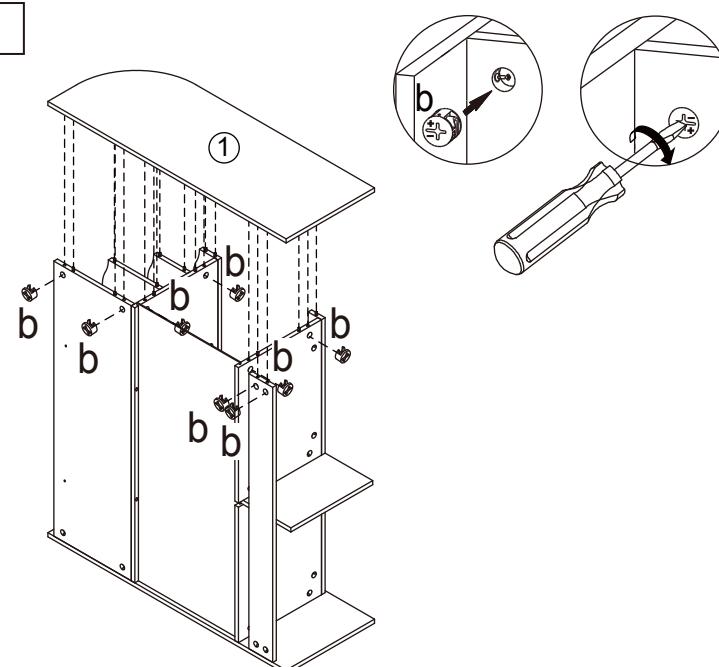
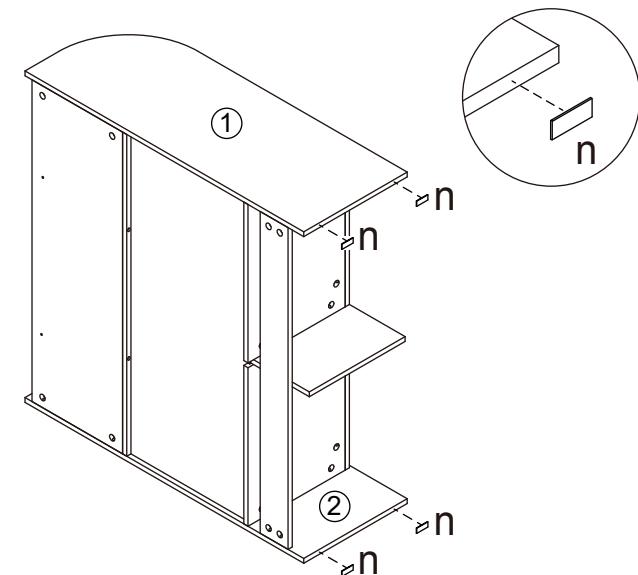
**STEP 19**

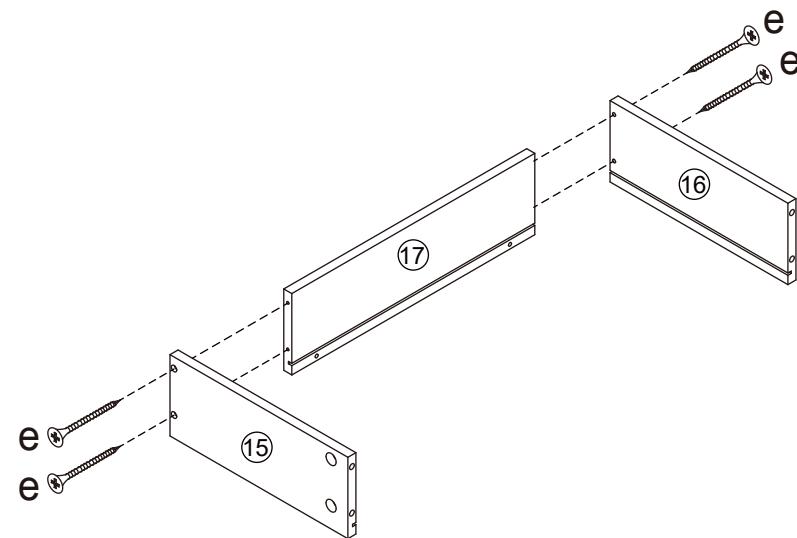
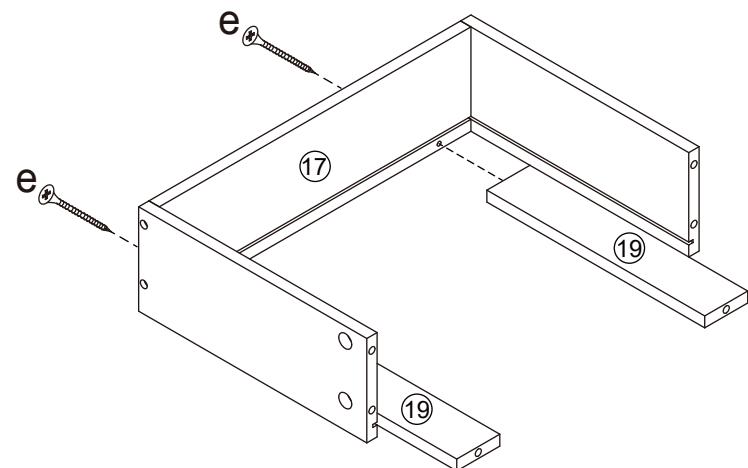
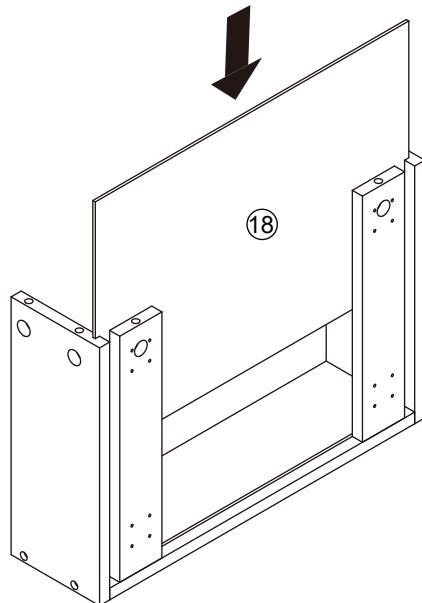
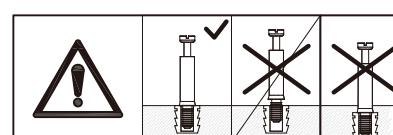
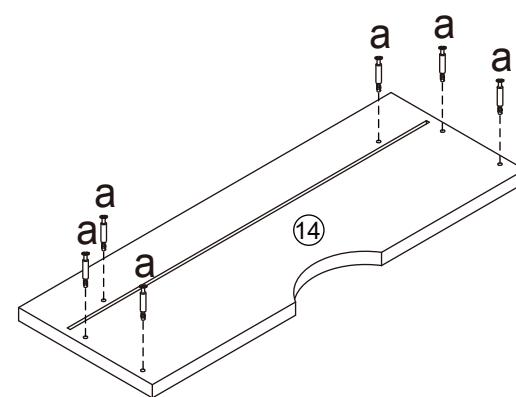
x8

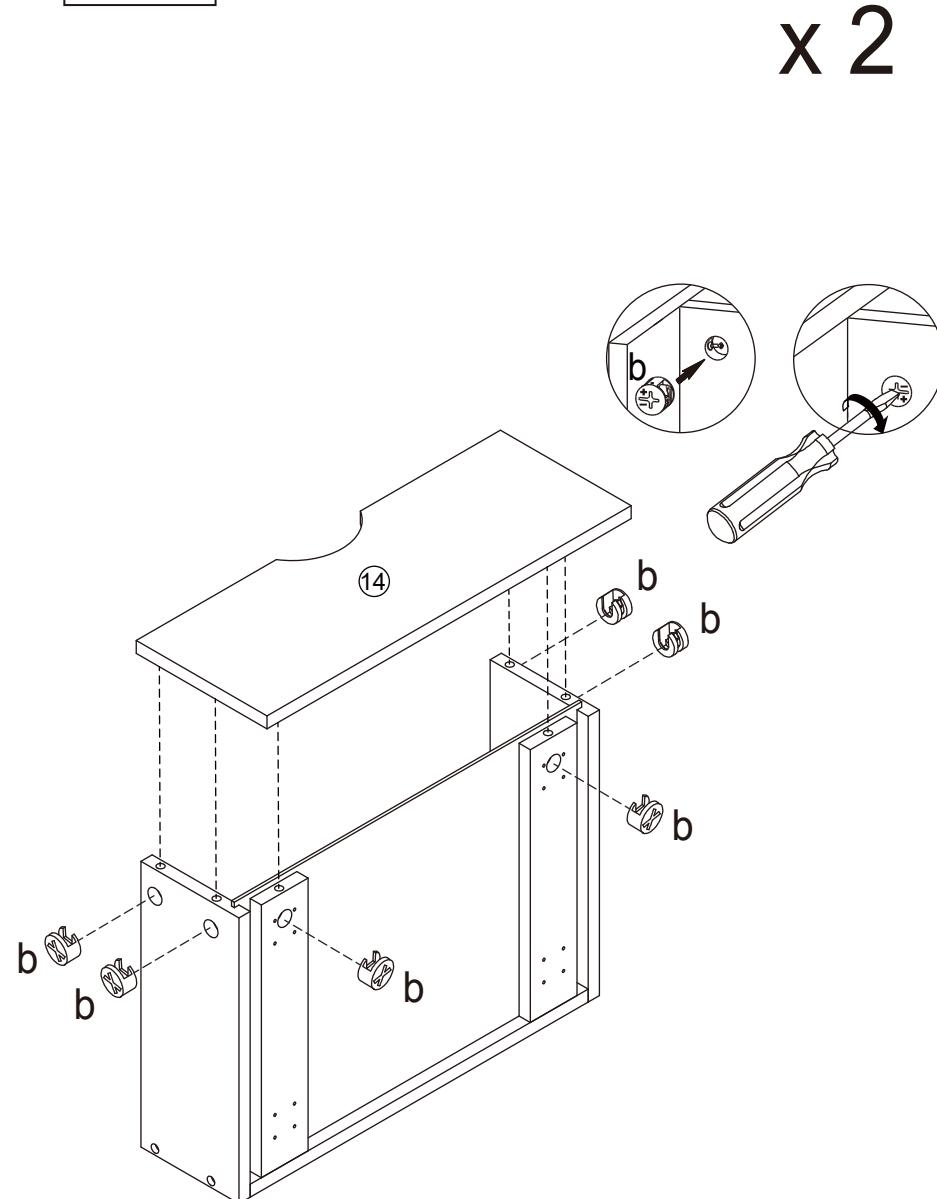
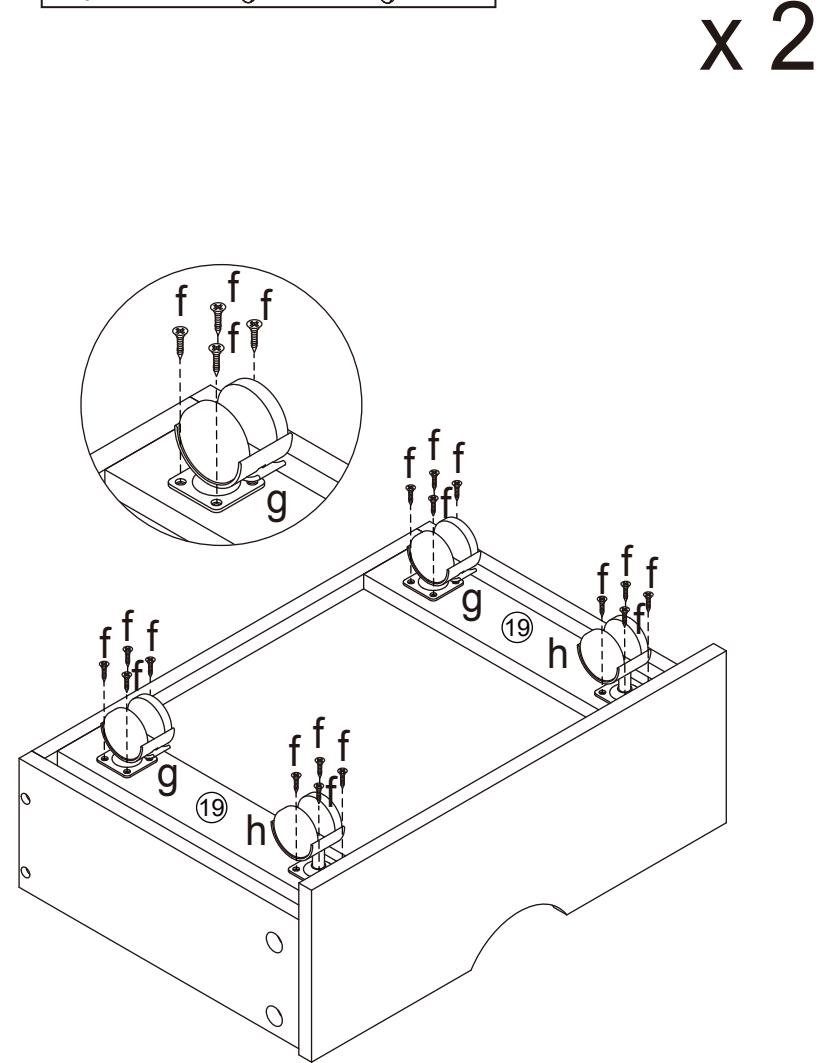
**STEP 20**

x4



STEP 21 x4**STEP 22** x8**STEP 23** x8**STEP 24** x4

STEP 25**x 2****STEP 26****x 2****STEP 27****x 2****STEP 28****x 2**

STEP 29 X12**STEP 30** X32  X4  X4

STEP 31



Warning:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

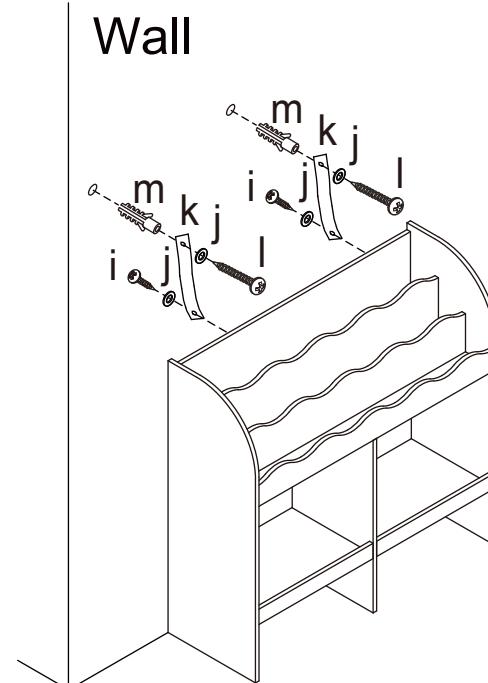
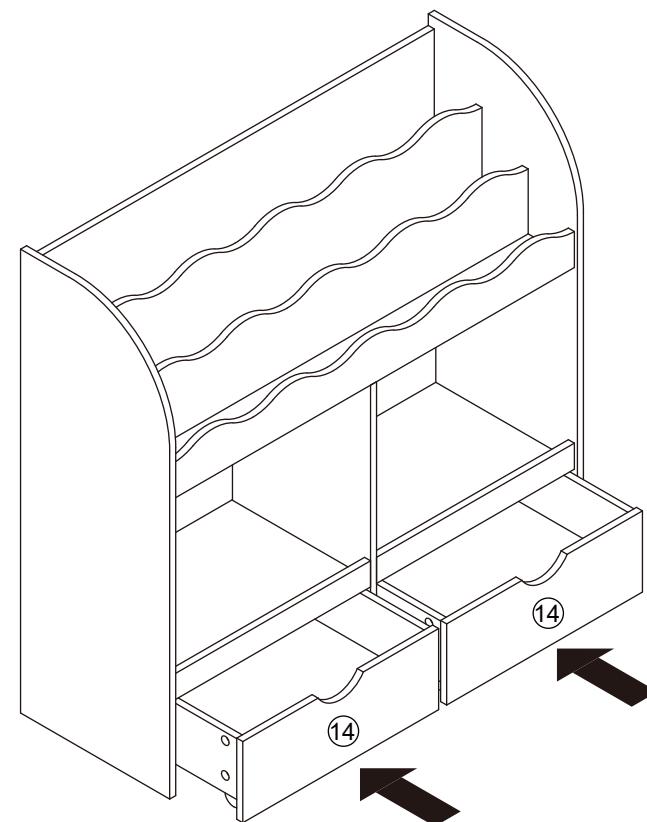
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



STEP 32



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!