

# Assembly Instructions













## 43637706 WAVE BOOKSHELF

 
**CARE INSTRUCTION:** Wipe clean with a soft dry or damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.

**WARNINGS:** Do not stand or sit on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.










**MAXIMUM TOTAL LOADING WEIGHT:** 10KGS FOR EACH SHELF, 40KGS IN TOTAL.

### Hardware list

	a		14PCS
	b		14PCS
	c	6X30mm	20PCS
	d	4X35mm	6PCS
	e	5X40mm	4PCS
	f		1PC
	g		6PCS
	h	3X14mm	6PCS
	i	4X12mm	1PC
	j		1PC
	k		1PC
	l		4PCS

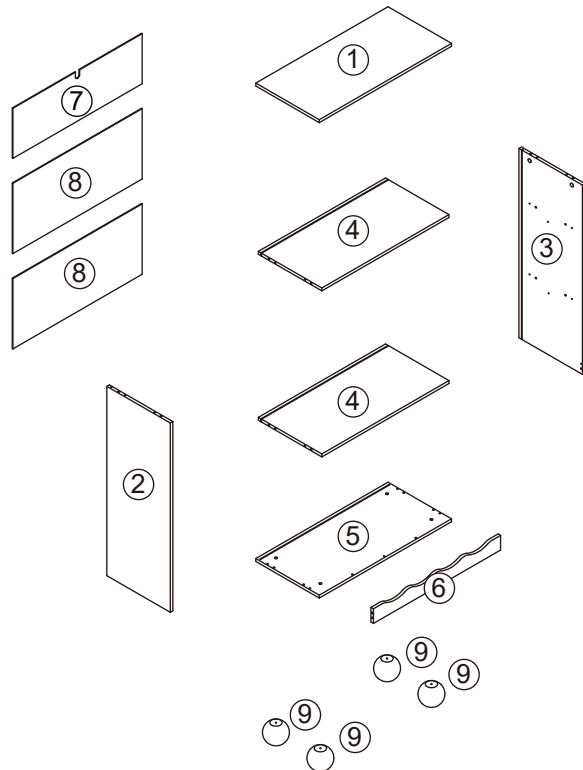


**DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.**

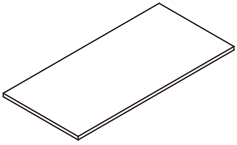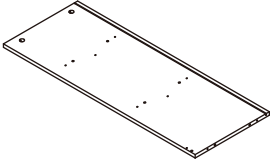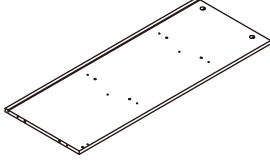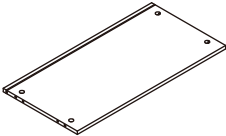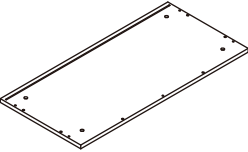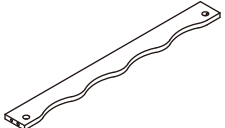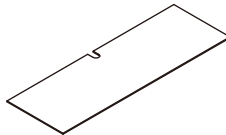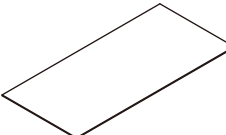        		
① 1 PC	② 1 PC	③ 1 PC
		
④ 2 PCS	⑤ 1 PC	⑥ 1 PC
		
⑦ 1 PC	⑧ 2 PCS	⑨ 4 PCS



# STEP 1




 
x 2

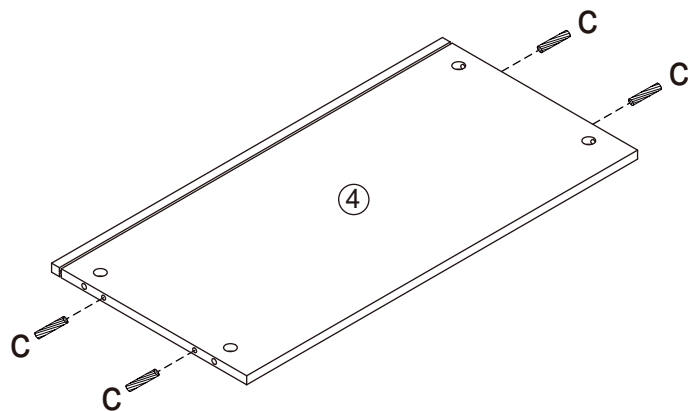


# STEP 2

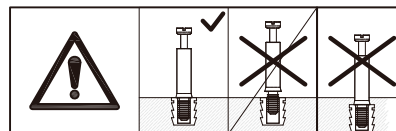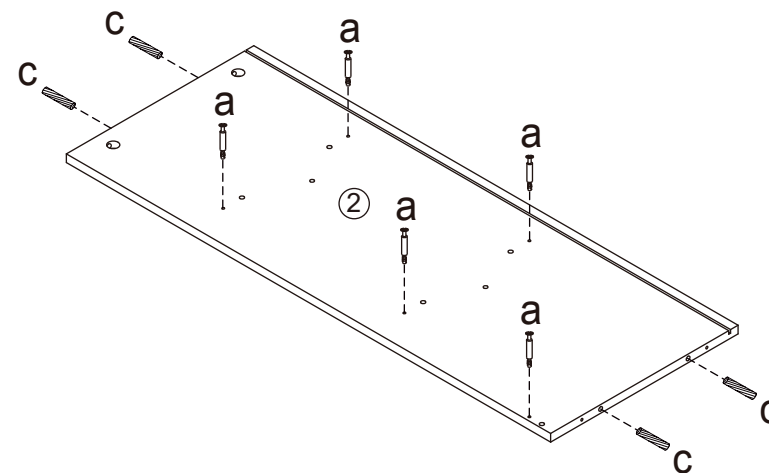  

# STEP 3

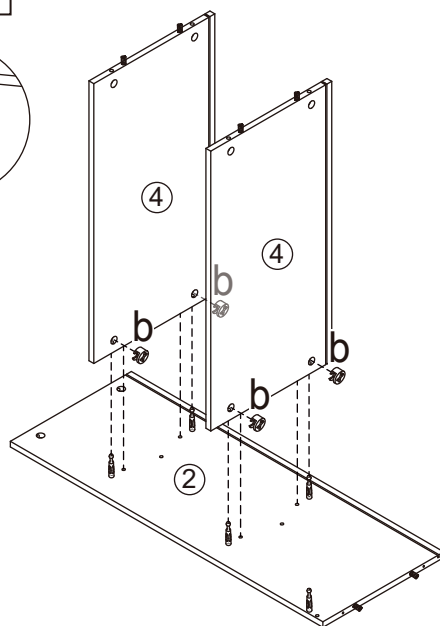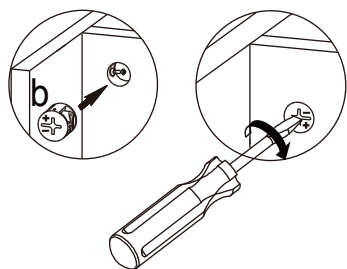  


# STEP 4

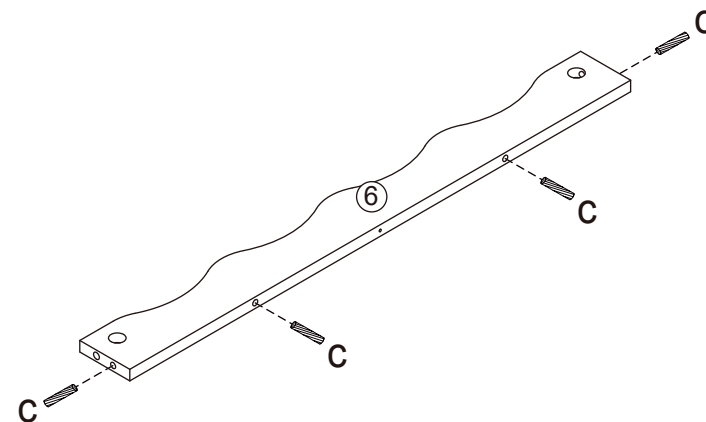 


## STEP 5



 X1

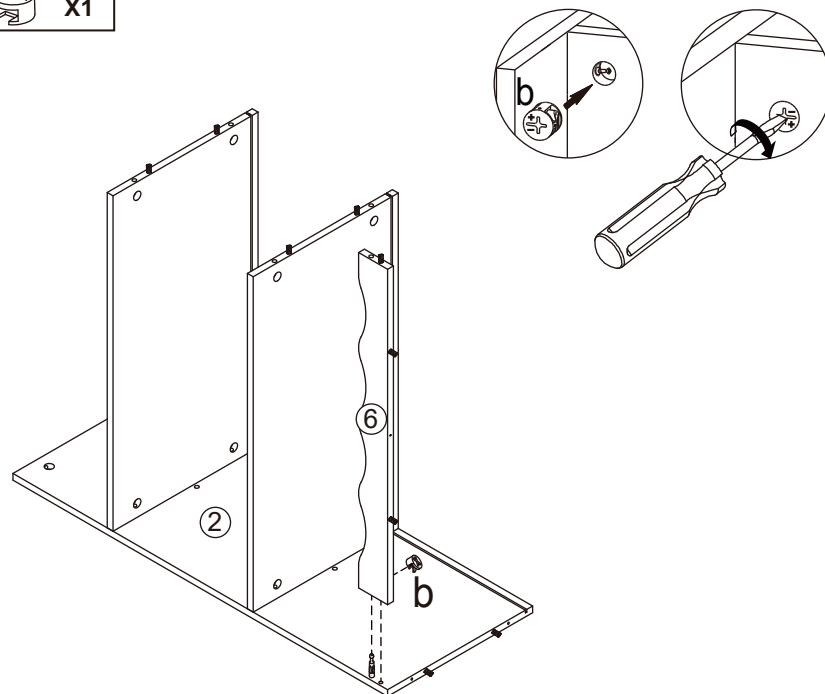

## STEP 6

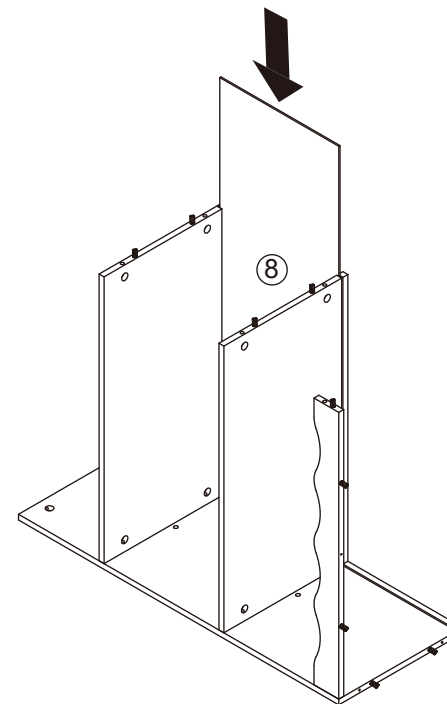 


## STEP 7



X5




 
X4

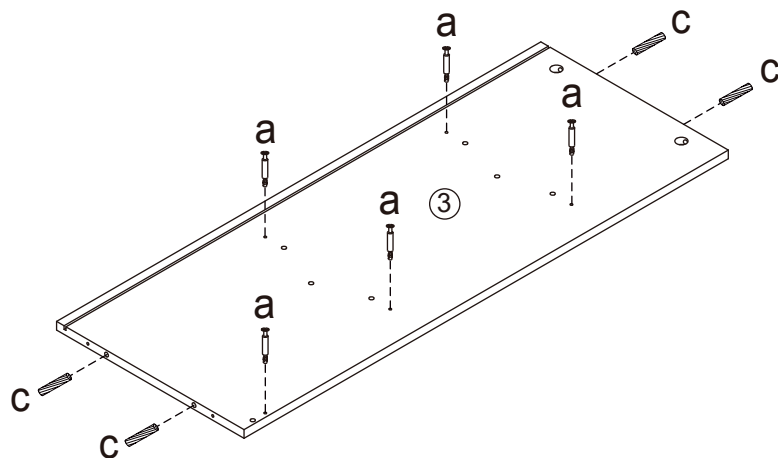


## STEP 8



  X5

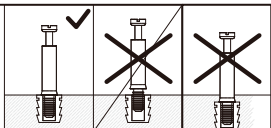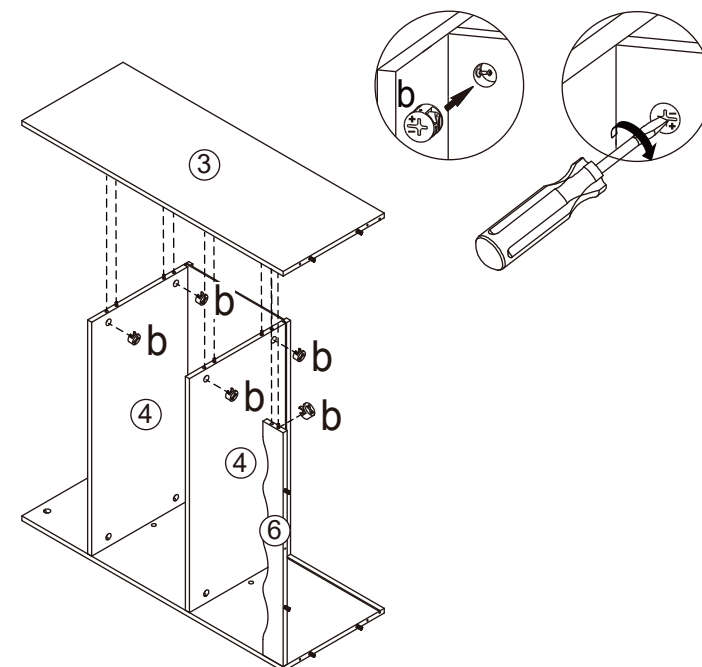


## STEP 9

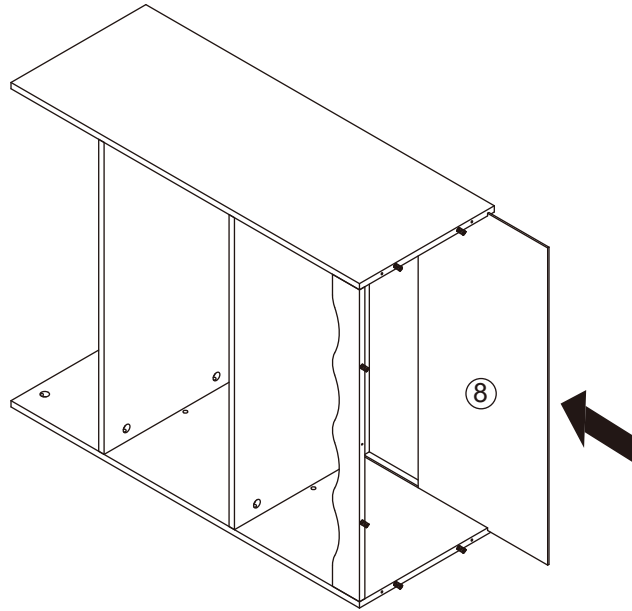 


## STEP 10

  X5

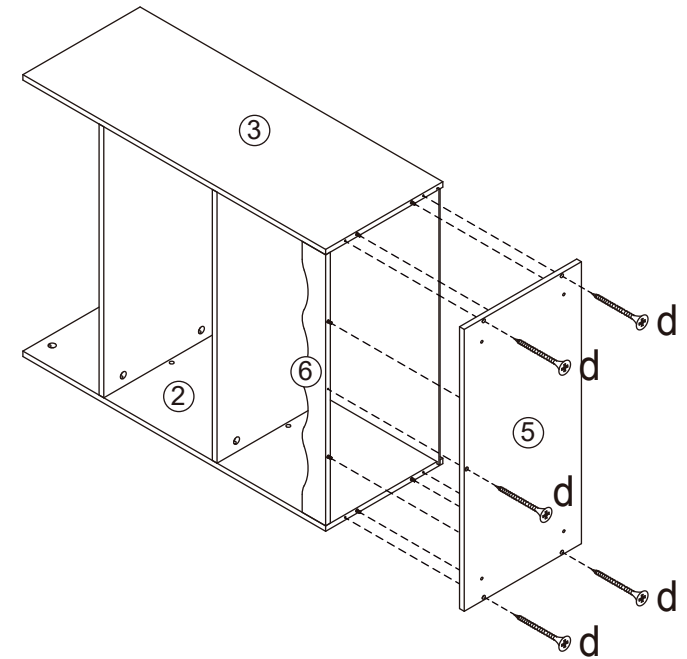


## STEP 11

  X4

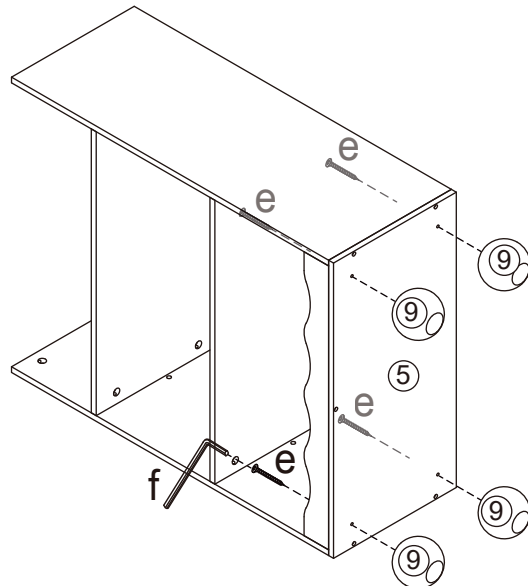

## STEP 12

  X4



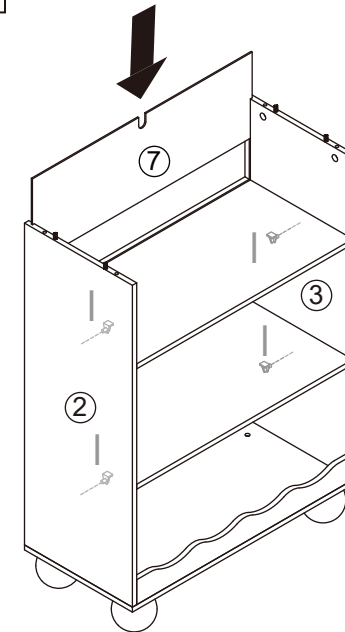


## STEP 13

 X4



 X1

    X1

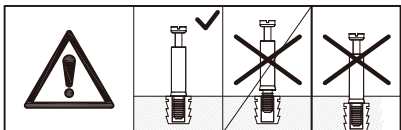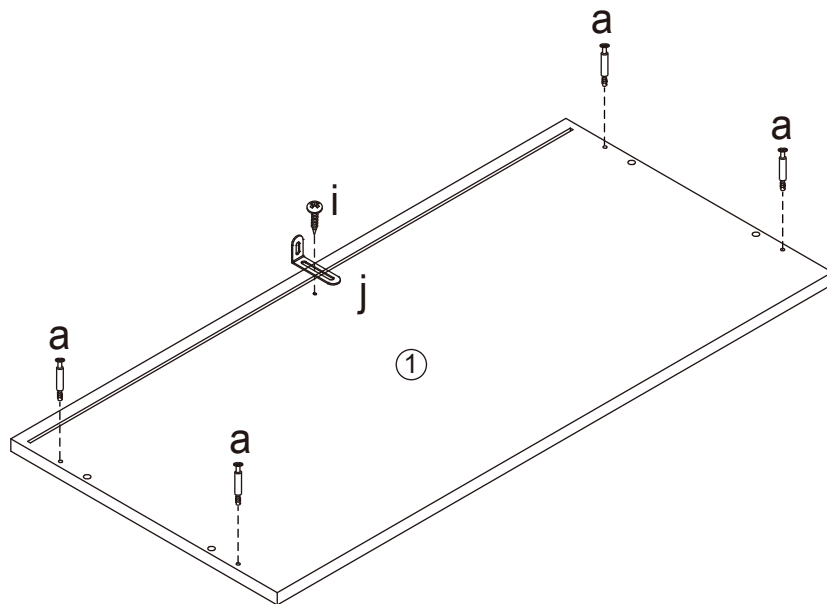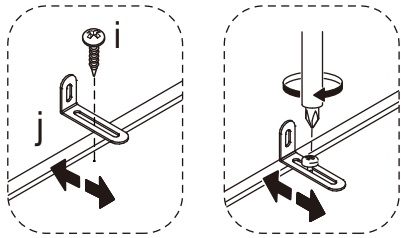

## STEP 14

   X4

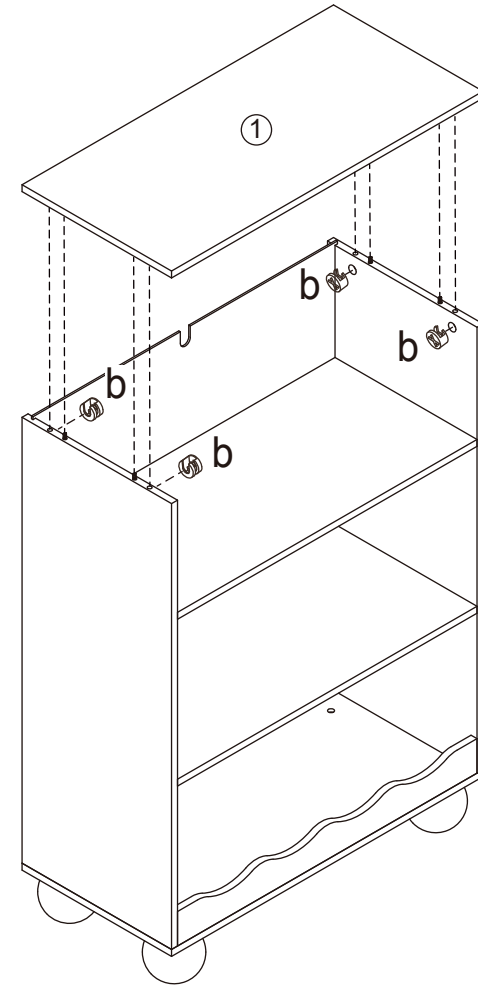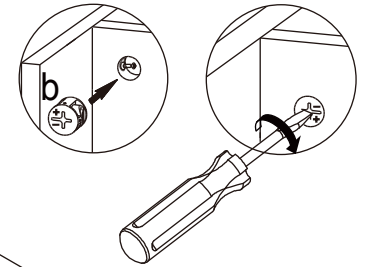



## STEP 15



X6



  X6

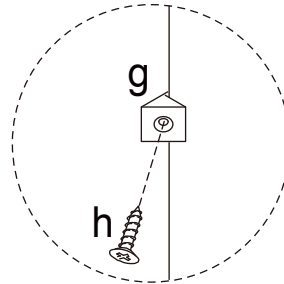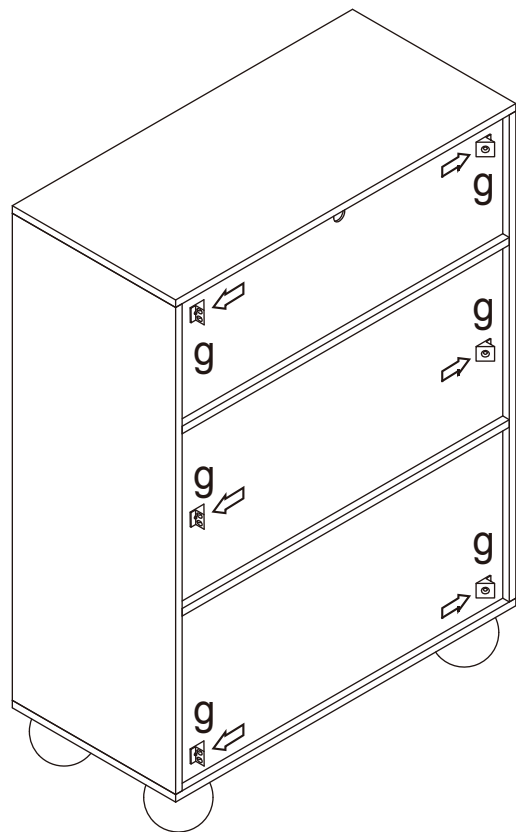

## STEP 16



X1



X1

### Warning:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)

 


TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



# WARNING

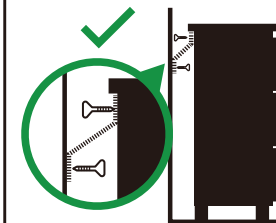


### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



 This is a permanent label. Do not remove!

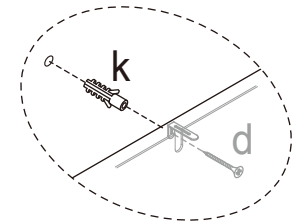

Wall

