


# LIGHTS & SOUNDS CAMERA

## Instruction Manual

18+  
months

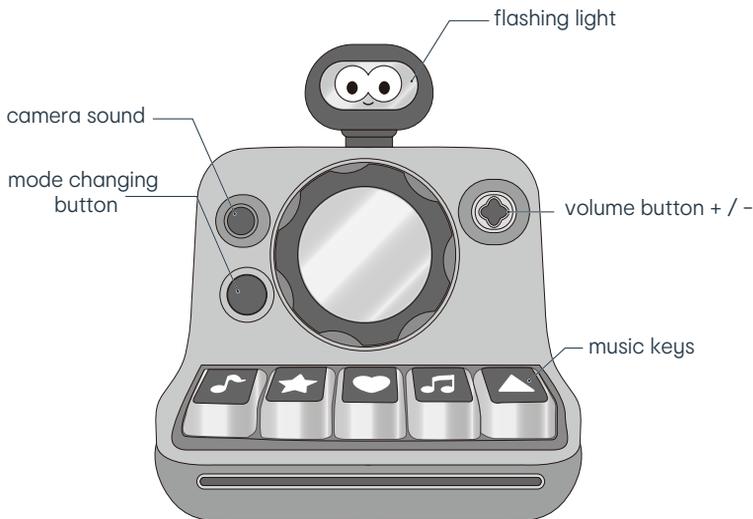

Piano Mode

Playing Mode

Lullaby Mode

Reaction Game Mode


1. Piano Mode: play five distinct musical notes by pressing the keys.
2. Playing Mode: enjoy songs by pressing the keys.
3. Lullaby Mode: each key plays a unique soothing lullaby.
4. Reaction Game Mode: engage with randomly lit keys. Pressing an incorrect key or not pressing the key in time will trigger a failure sound, while inactivity activates sleep mode.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**CAUTION:** BATTERY INSTALLATION BY AN ADULT REQUIRED.

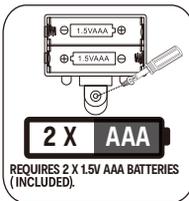

REQUIRES 2 X 1.5V AAA BATTERIES (INCLUDED).

THE INCLUDED BATTERIES ARE FOR INSTORE DEMONSTRATION PURPOSES ONLY. PLEASE REPLACE THE BATTERIES IMMEDIATELY AFTER THE PURCHASE.



MADE IN CHINA

**CUSTOMER SERVICE:**  
 KMART AU: 1800 124 125  
 KMART NZ: 0800 945 995  
 TARGET AU: 1300 753 567

**ADULT SUPERVISION REQUIRED.**  
 PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.  
 PRODUCT MAY VARY FROM THE IMAGE SHOWN.  
 K: 43-637-836 | T: 71-885-438