

WOODEN PLUSH STORAGE

Assembly Instructions

K: 43-639-212 / T: 72-214-930

PARTS LIST

| | | |
|---|--|----|
| ① | | x1 |
| ② | | x4 |
| ③ | | x4 |

| | | |
|---|--|----|
| A | | x8 |
| B | | x1 |
| C | | x1 |

IT IS NOT A TOY.

WARNING: CHOKING HAZARD

SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS PRODUCT TO YOUR CHILD.

WARNING: ADULT ASSEMBLY IS REQUIRED. UNASSEMBLED PARTS CONTAIN SCREWS WITH FUNCTIONAL SHARP POINTS. PLEASE KEEP UNASSEMBLED PARTS AWAY FROM SMALL CHILDREN.

WARNING: PLEASE SECURE THIS PRODUCT WITH SUPPLIED WALL FIXING. FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE CHECK FOR ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE. REGULARLY CHECK THAT ANCHOR IS SECURELY MAINTAINED.


CAUTION: PLEASE CHECK CONDITION OF PRODUCT REGULARLY, AS SCREWS MAY LOOSEN WITH USE OVER TIME. TIGHTEN SCREW FITTINGS IF NECESSARY. DISCONTINUE USE OF THE PRODUCT IF EXCESSIVE WEAR AND TEAR IS FOUND.

WARNING: DO NOT STAND ON THE PRODUCT. DO NOT USE THE PRODUCT AS A STEP LADDER. DO NOT USE THE PRODUCT UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED. CHECK AND TIGHTEN ALL PARTS REGULARLY.


ADULT SUPERVISION IS REQUIRED.

ASSEMBLY


1

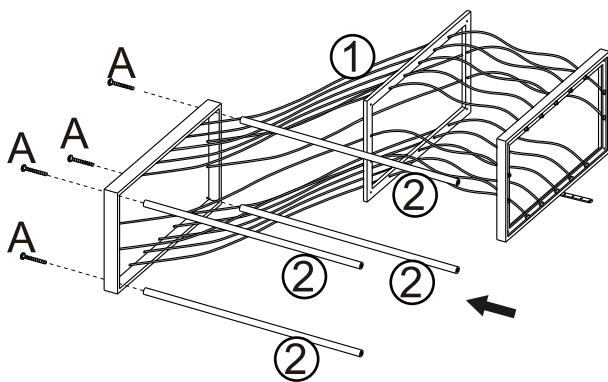


2

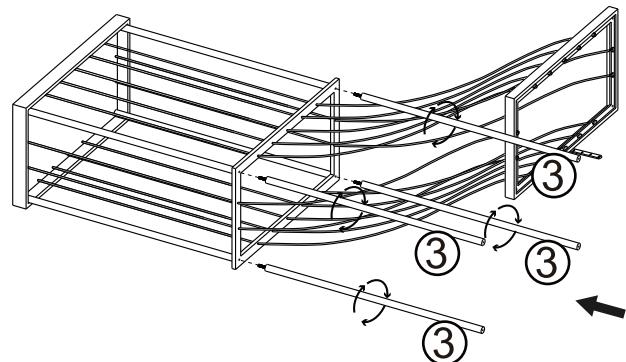

3

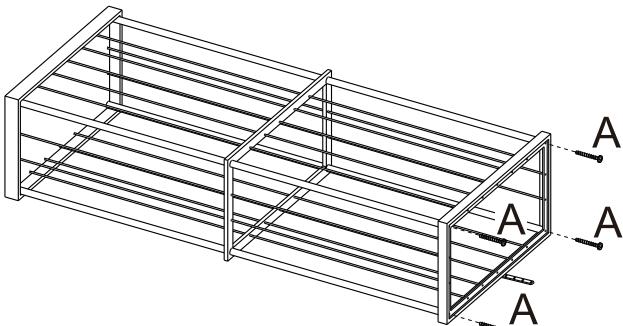

4 Wall Fixing

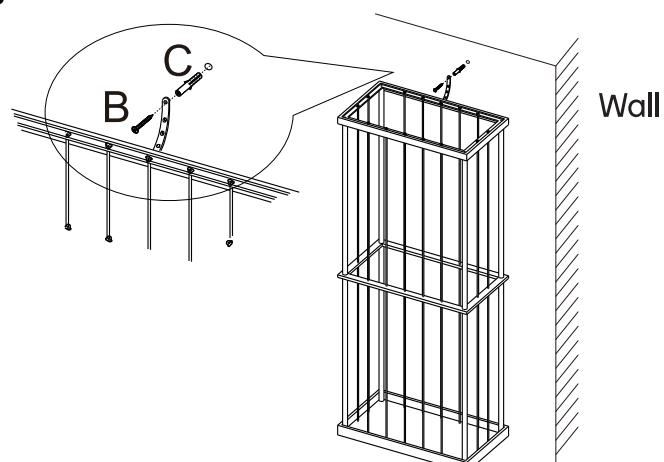

WARNING: PLEASE SECURE YOUR PRODUCT WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

