

# Assembly Instructions

**K: 43639830 STEVIE STORAGE UNIT WITH SHELF**

## CARE INSTRUCTIONS:


Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.

## WARNING:



Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

**MAXIMUM SAFE LOAD: 5KG FOR TOP, 5KG FOR SHELF, 3KG FOR EACH DRAWER.**












## Parts List

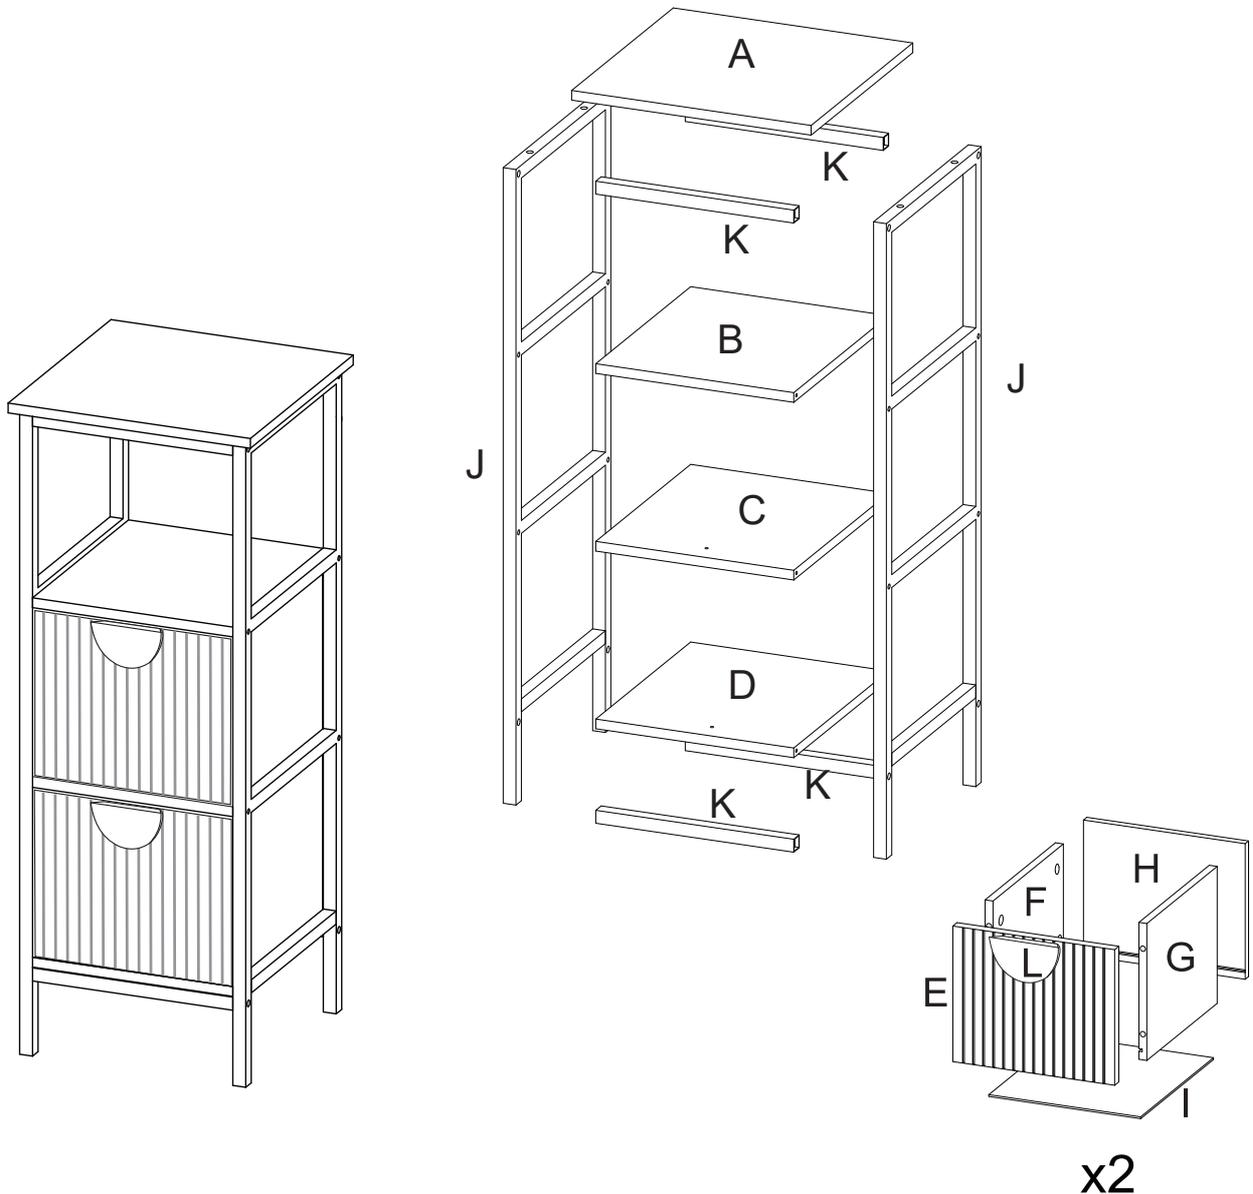




# 1 Hardware list

  	a		8pcs		b		8pcs
	c	4x25mm	4pcs		d	5x22mm	16pcs
	e	5x40mm	16pcs		f	3x12mm	3pcs
	g		2pcs		h		1pc
	i		1pc	 	j	4x30mm	1set

# 2 Parts list

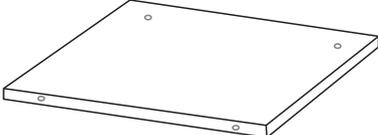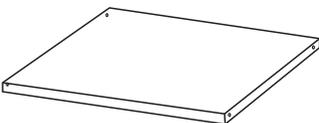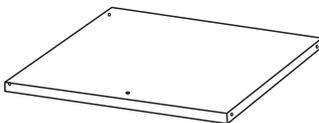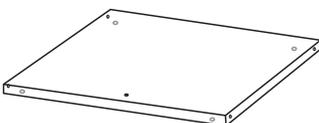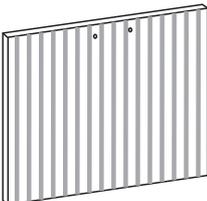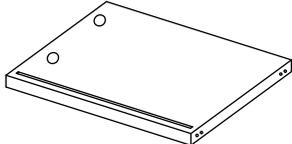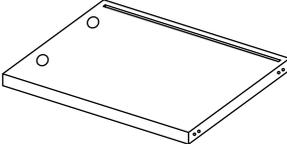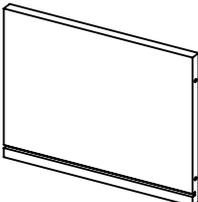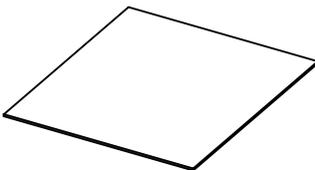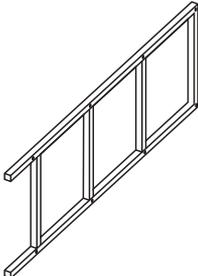
 
	Ax1pc		Bx1pc		Cx1pcs		Dx1pcs
	Ex2pcs		Fx2pcs		Gx2pcs		Hx2pcs
	Ix2pcs		Jx2pcs		Kx4pcs		Lx2pcs

STEP 1

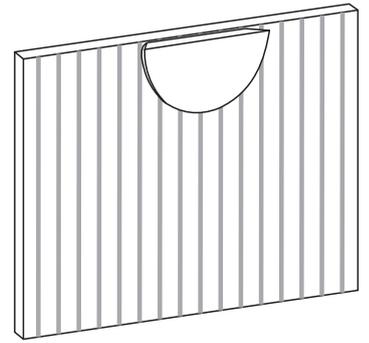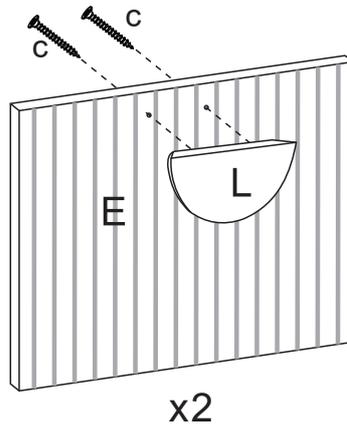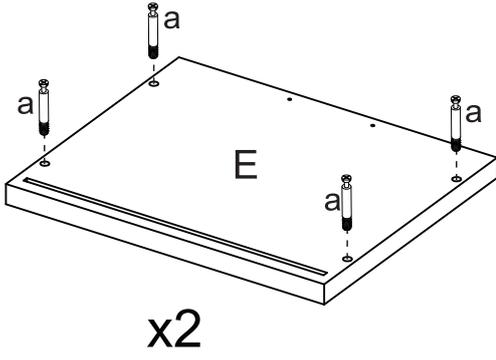


a	x8	c	x4

STEP 2

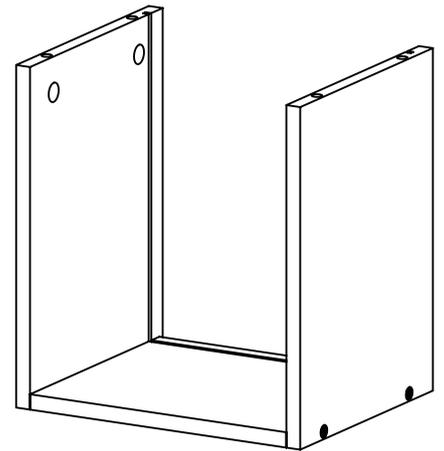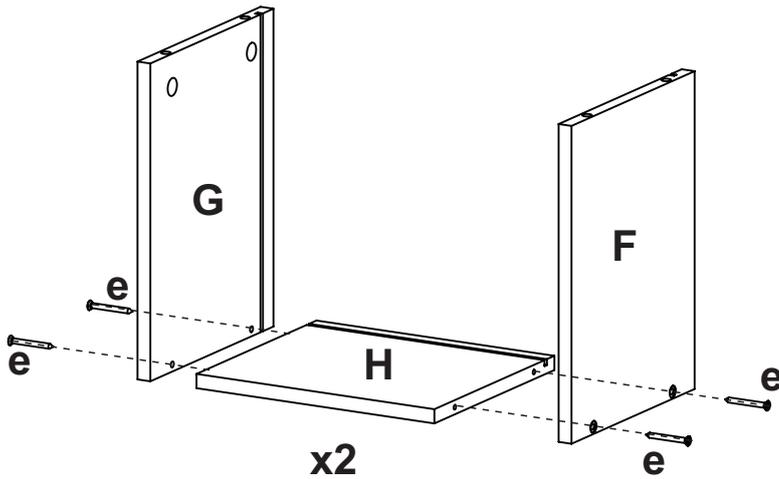


e	x8

STEP 3


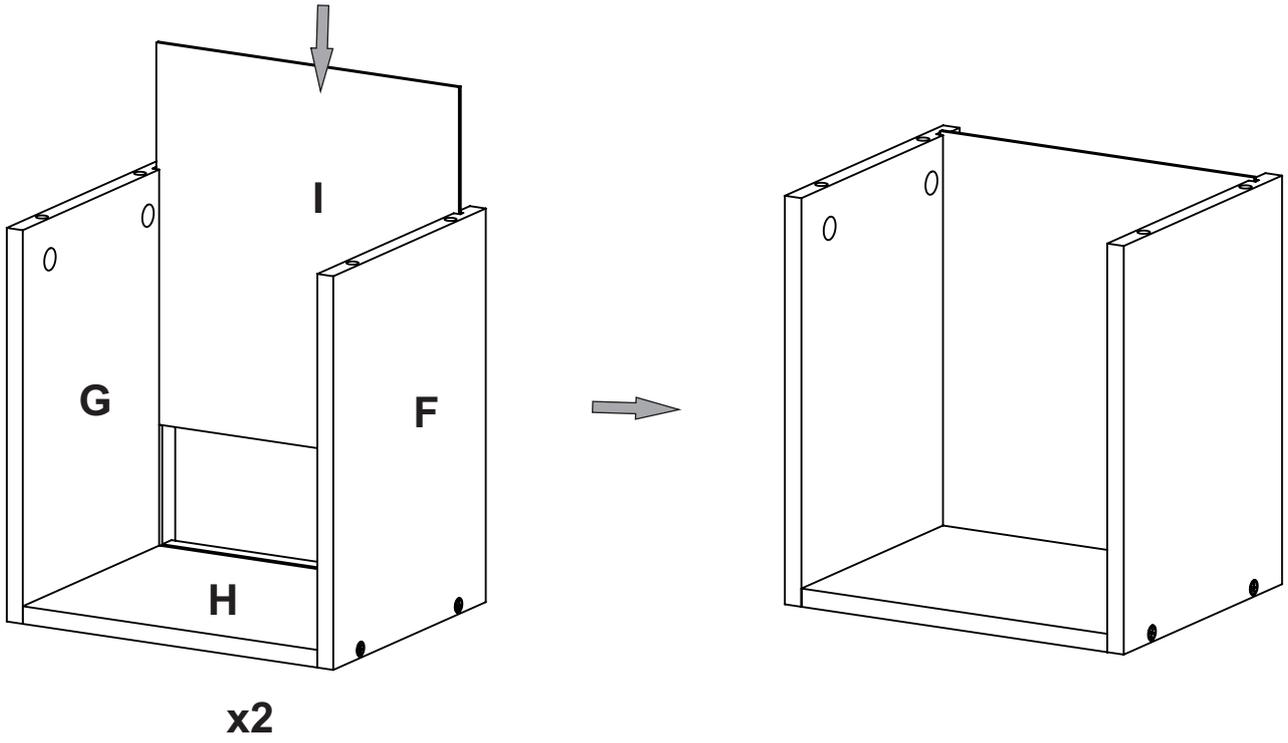


STEP 4

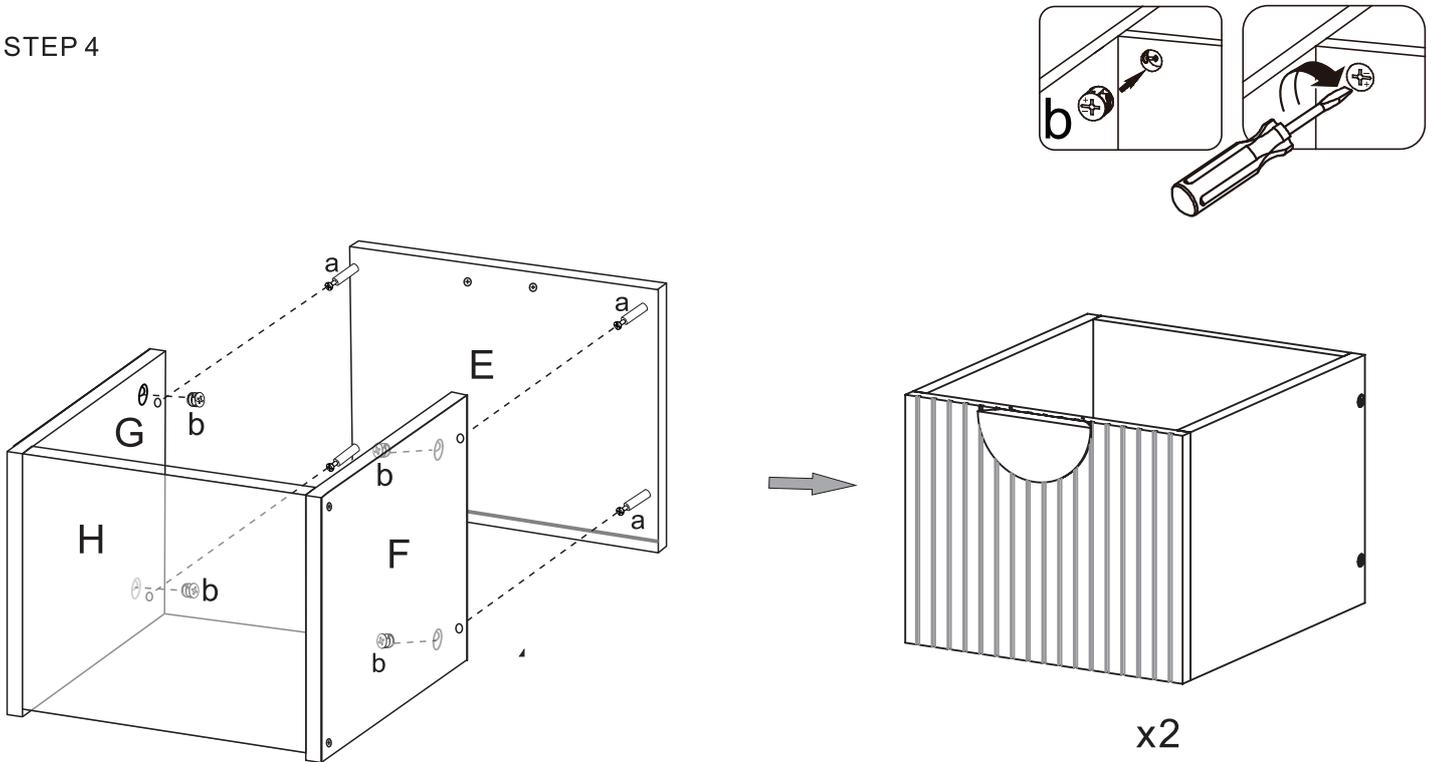


b	x8
	

STEP 5

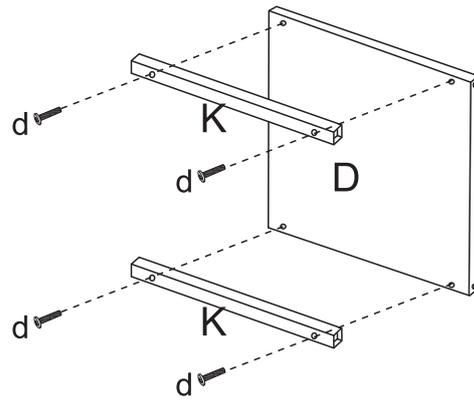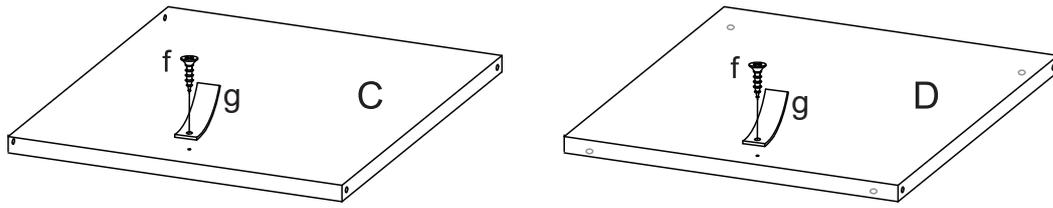


g	x2	d	x4	f	x2	i	x1
							

STEP 6

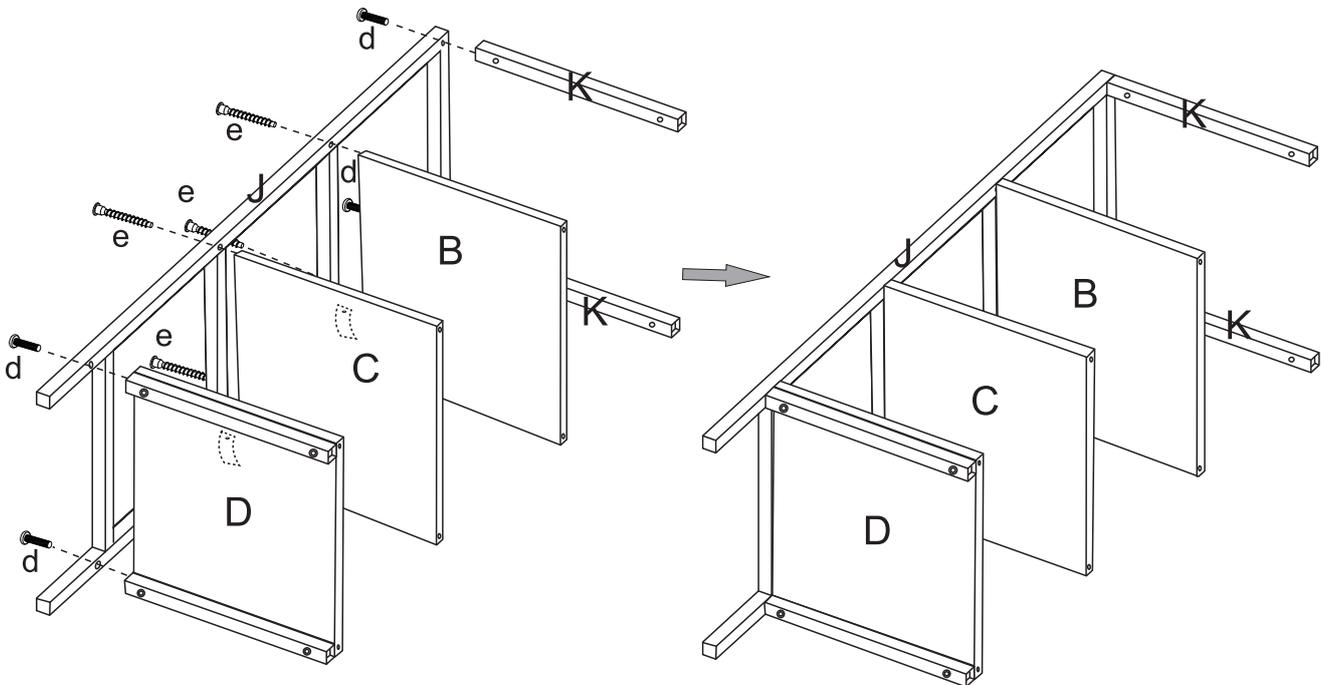


d	x4	e	x4	i	x1
					

STEP 7

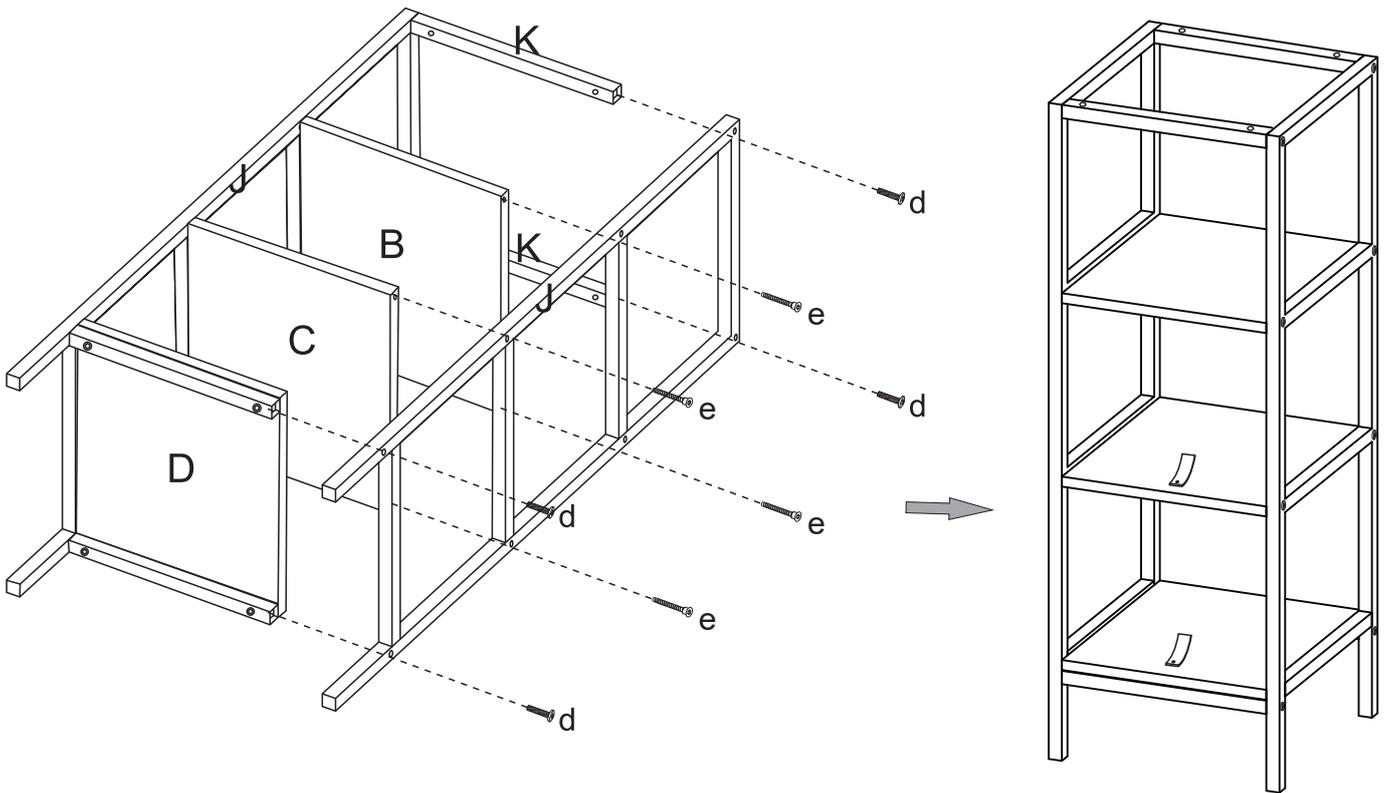


d	x4	e	x4	i	x1
					

STEP 8

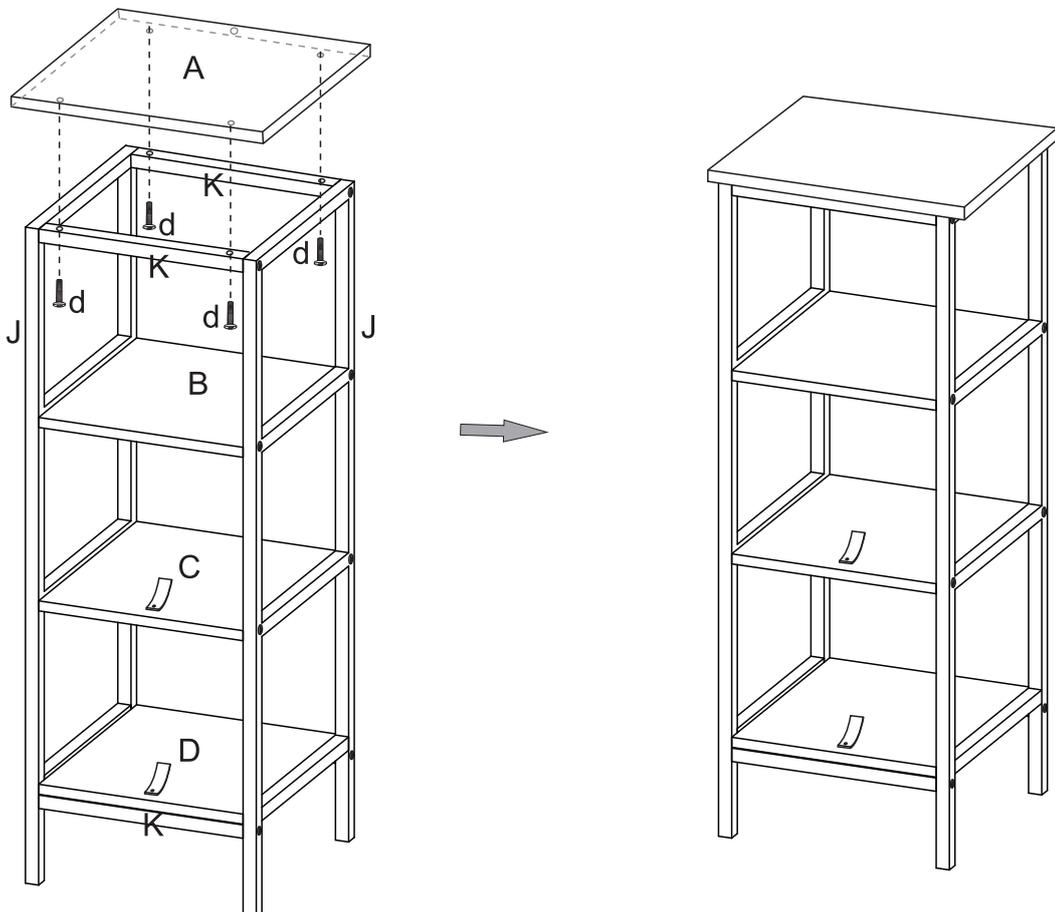




d	x4
	

STEP9

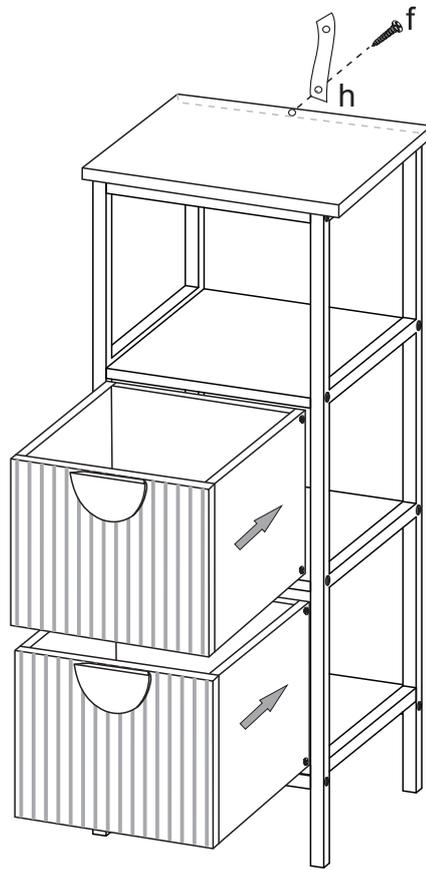


f	x1	h	x1
			

STEP10

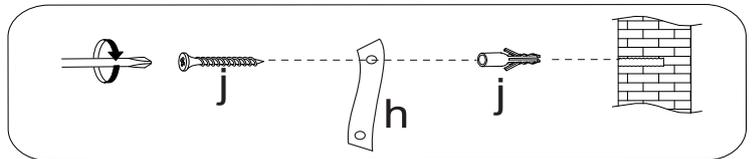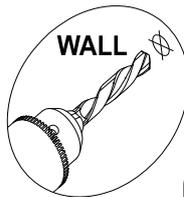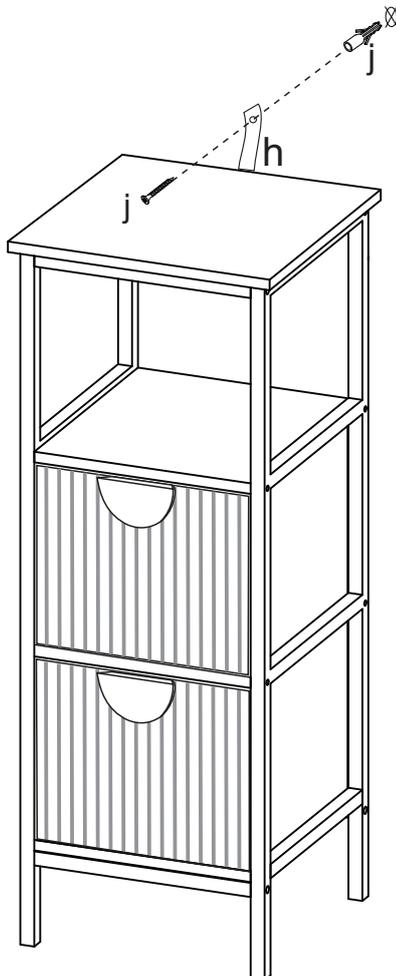

j	x1
	

**⚠ WARNING**

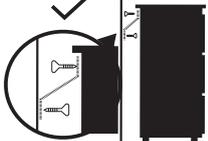**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

**NEVER put a TV on this furniture** 

**This is a permanent label. Do not remove!**

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

