

Assembly Instructions

K: 43639847 STEVIE TALL STORAGE UNIT WITH SHELVES

CARE INSTRUCTIONS:



Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.

WARNING:


Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

MAXIMUM SAFE LOAD: 5KG FOR EACH SHELF.

Parts List











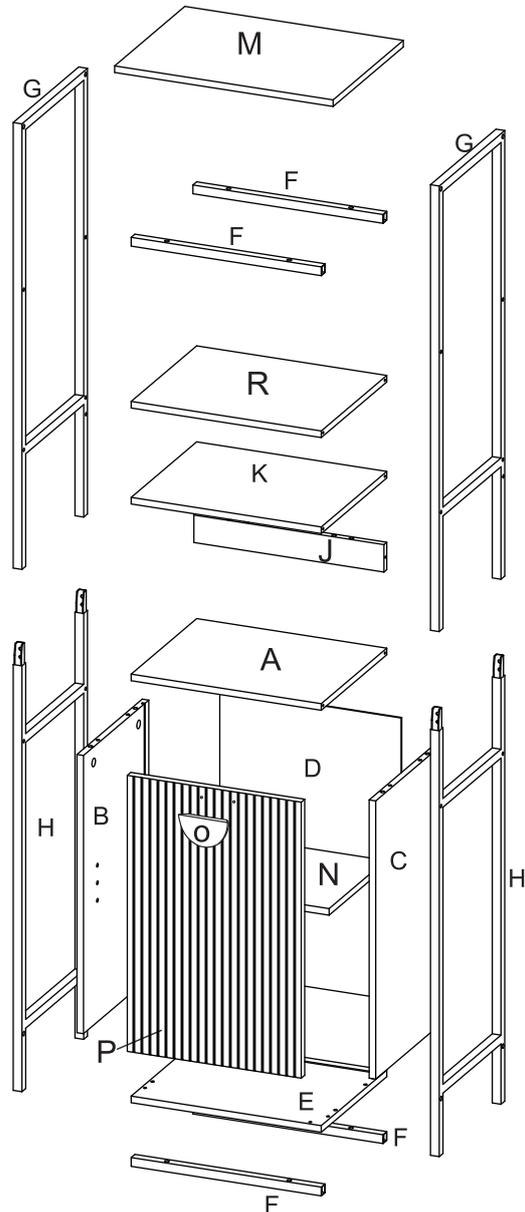
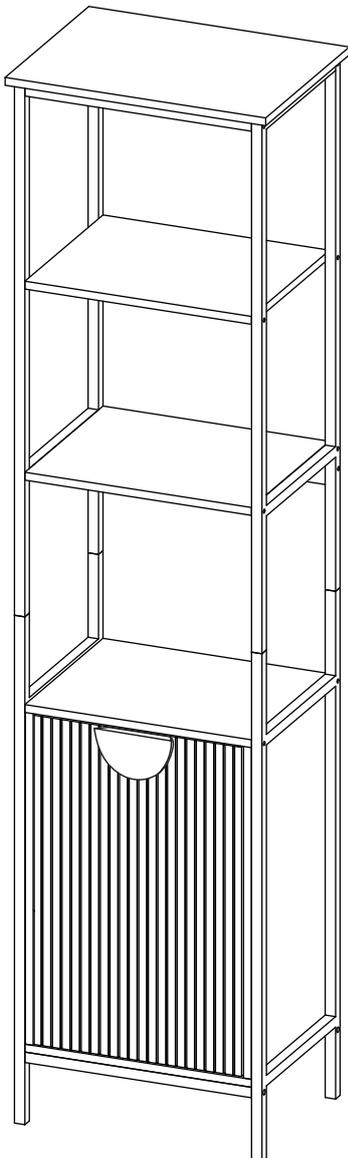


1 Hardware list

 
	a		6pcs
	c		8pcs
	e	m5x8mm	8pcs
	g		4pcs
	i	m4x25mm	2pcs
	k		1pc
	m		1pc
	O	3x16mm	4 sets

	b		6pcs
	d	m5x22mm	16pcs
	f	5x40mm	18pcs
	h	3x12mm	7pcs
	j		2pcs
	l	4x12mm	1set
	n	4x30mm	1set
	p		1pc

      2 Parts list

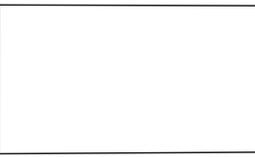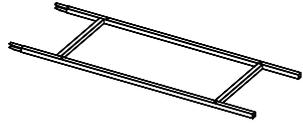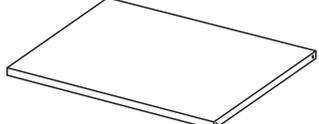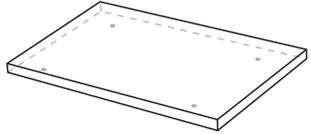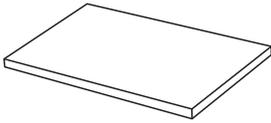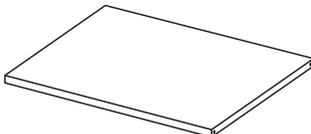			
Ax1pc	Bx1pc	Cx1pc	Dx1pc
			
Ex1pc	Fx4pcs	Gx2pcs	Hx2pcs
			
Jx1pc	Kx1pc	Mx1pc	Nx1pc
			
Ox1pc	Px1pc	Rx1pc	

STEP 1

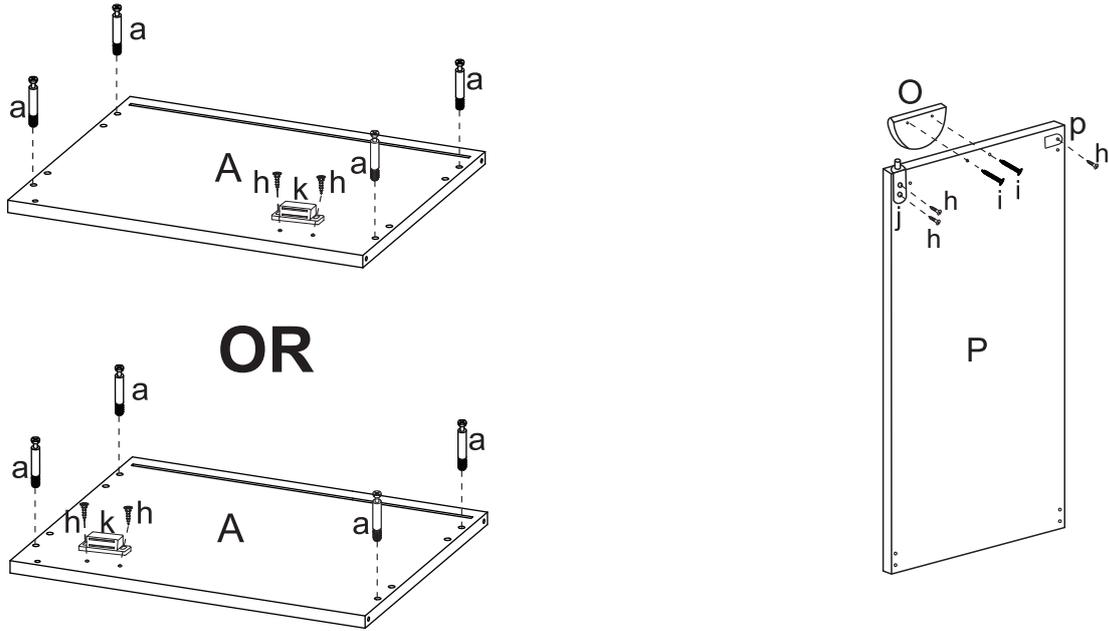


OR

The door magnet can be assembled on both sides



a	x4	h	x5	i	x2	k	x1	j	x1	p	x1

STEP 2

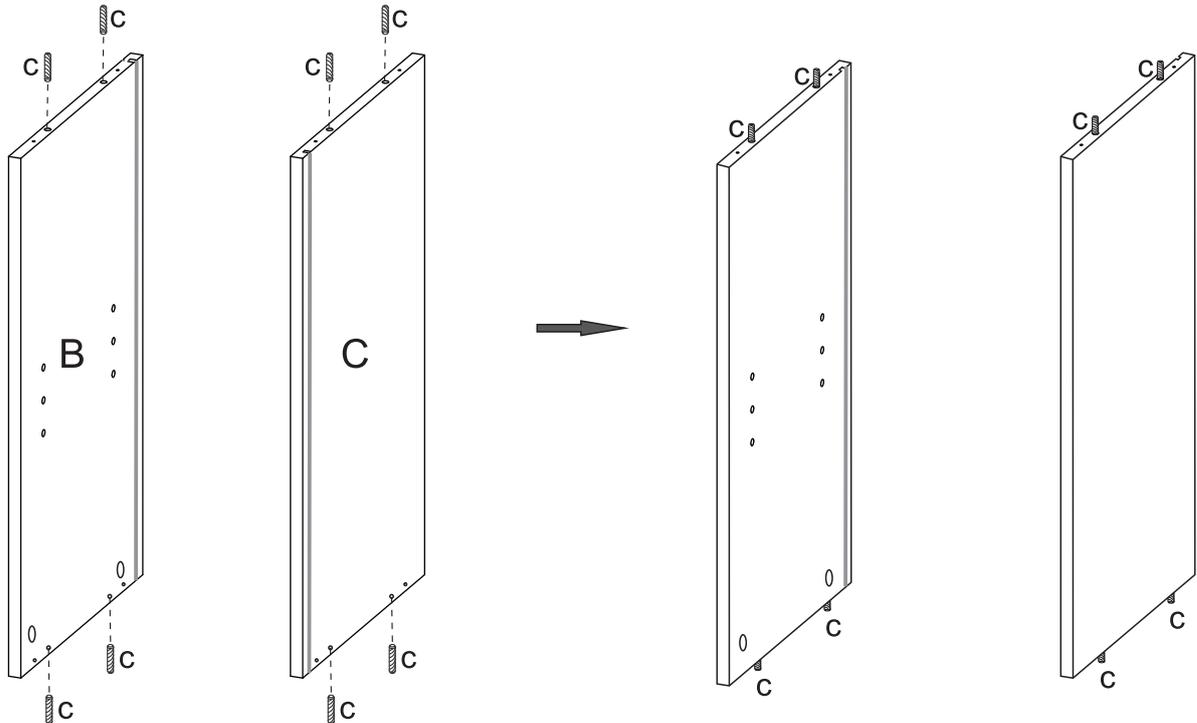



C	x8

STEP 3

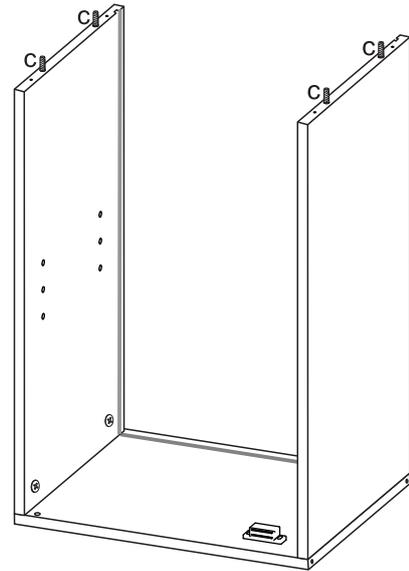
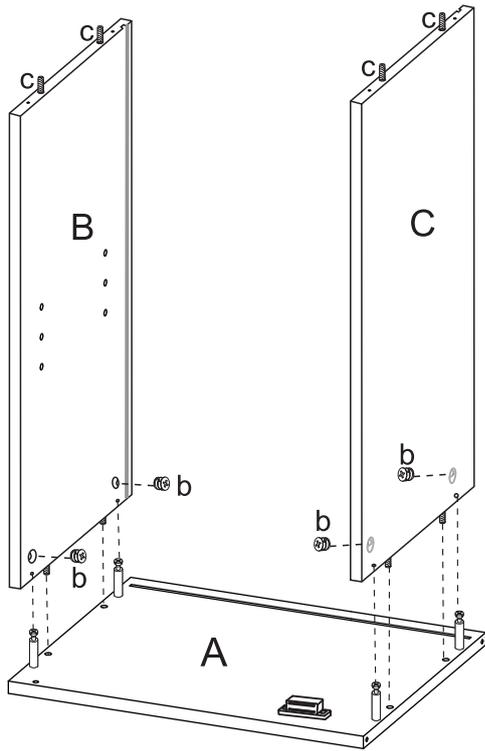


b	x4

STEP 4

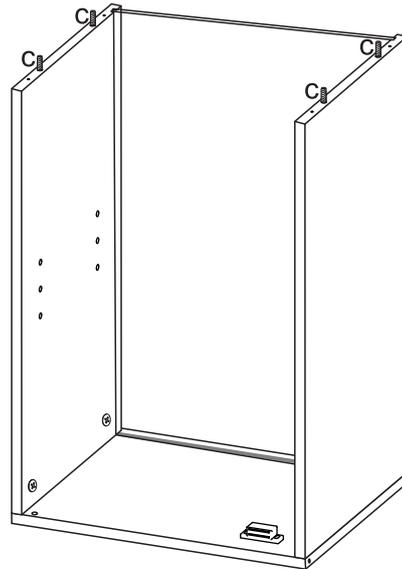
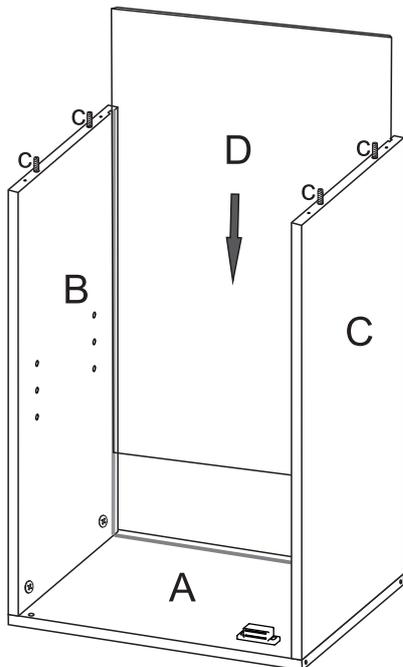


STEP 5

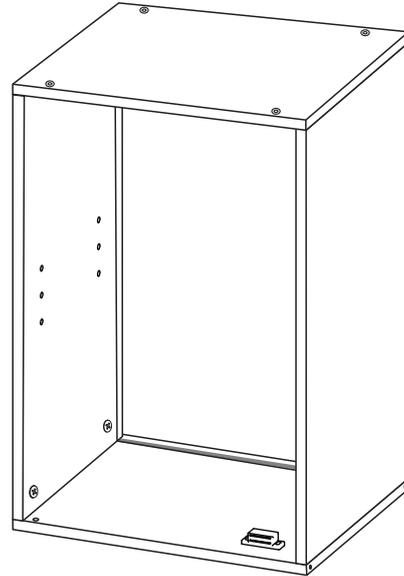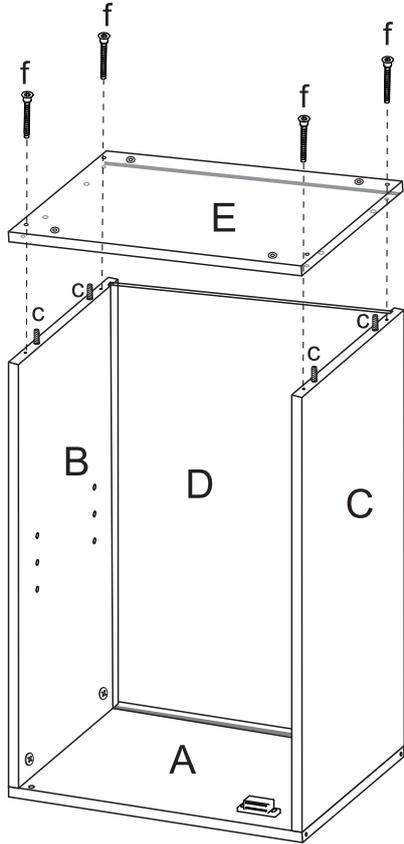


f	x4	m	x1

STEP 6

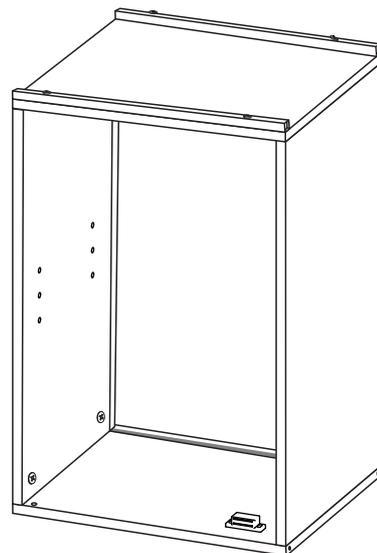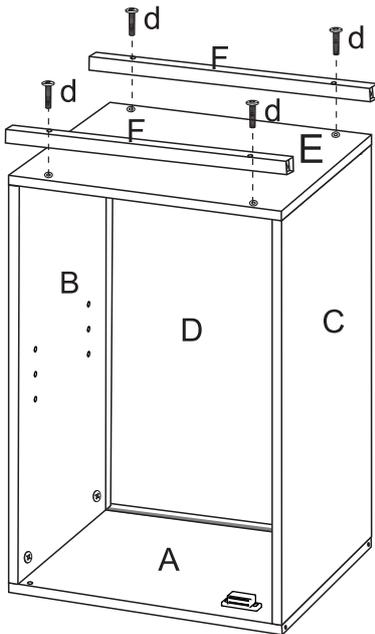



d	x4	m	x1

STEP 7

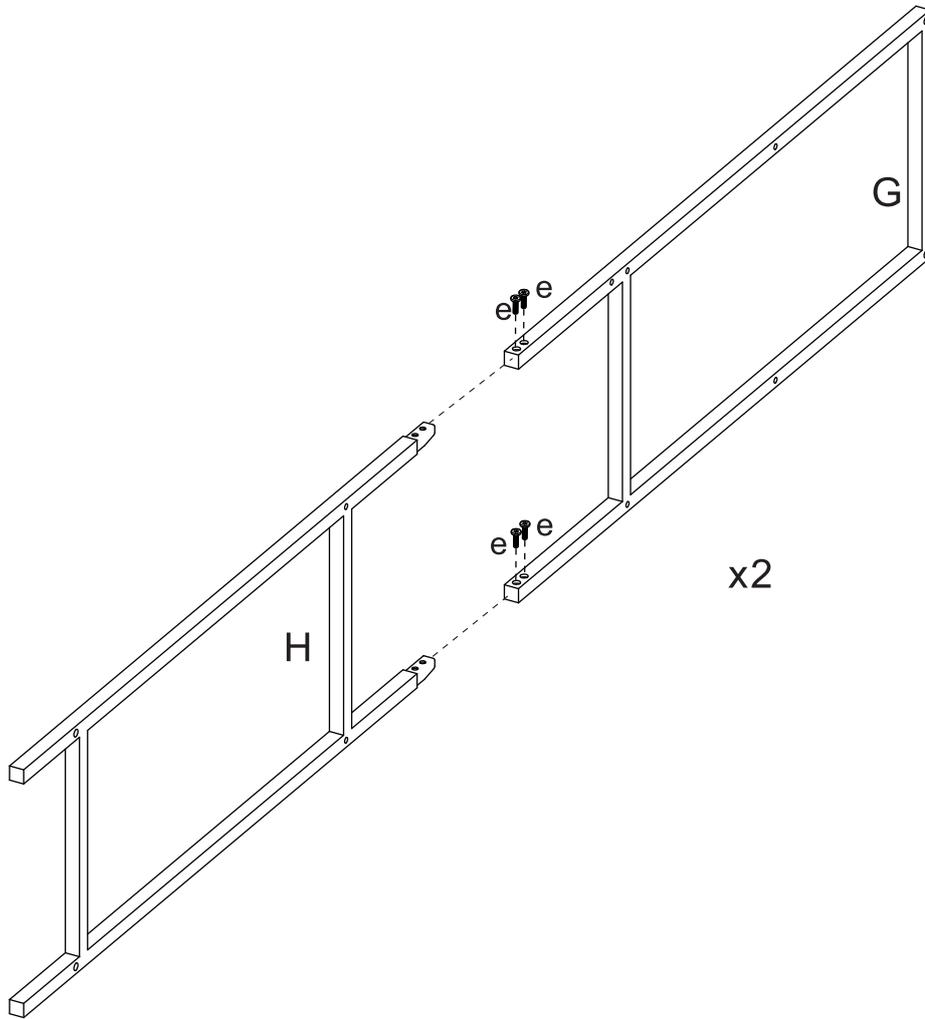



e	x8
	

STEP 8

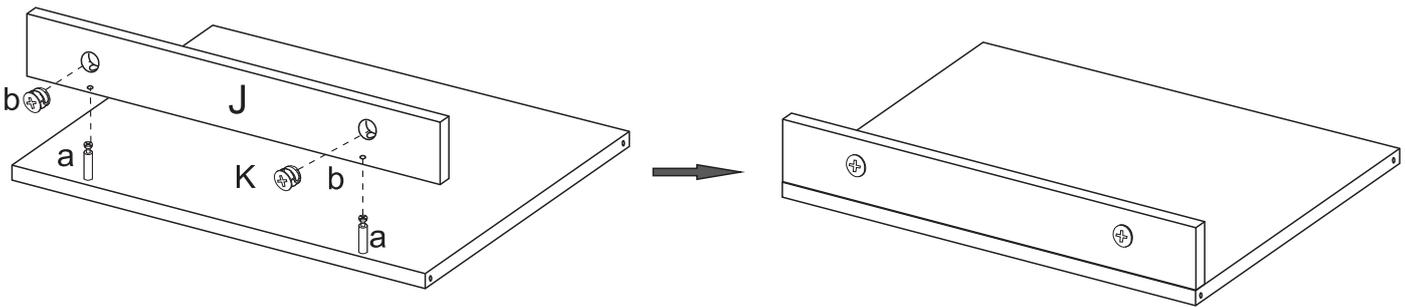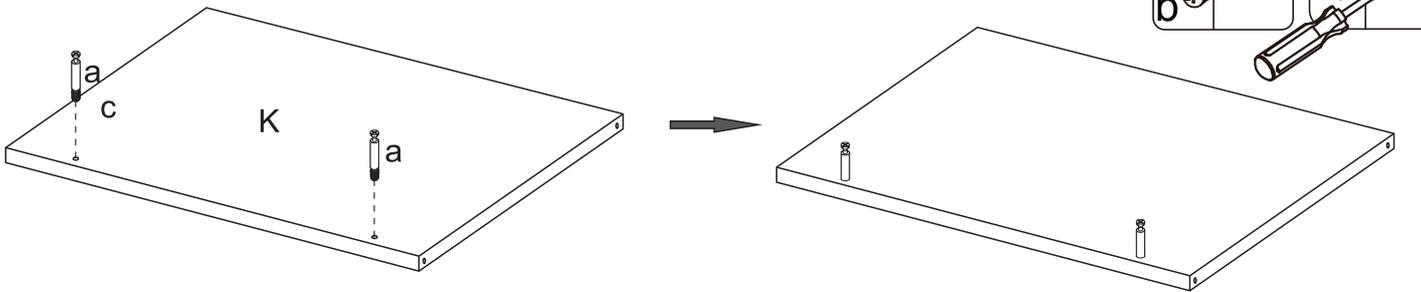



a	x2	b	x2
			

STEP 9

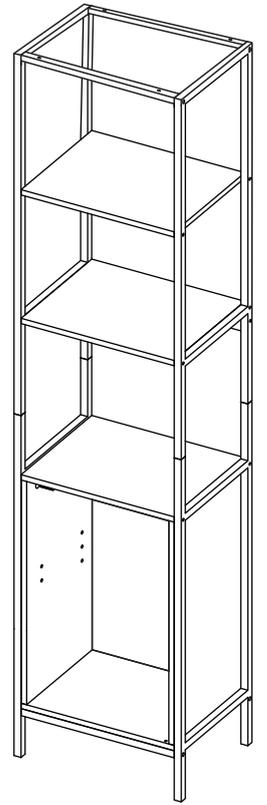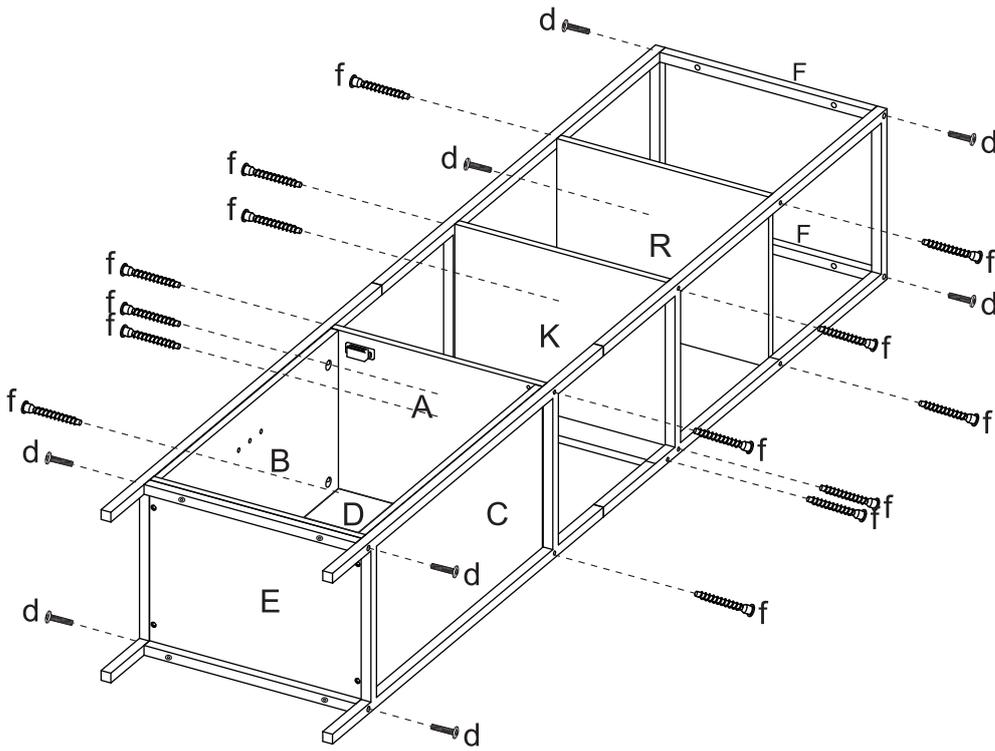


d	x8	f	x14	m	x1
					

STEP 10

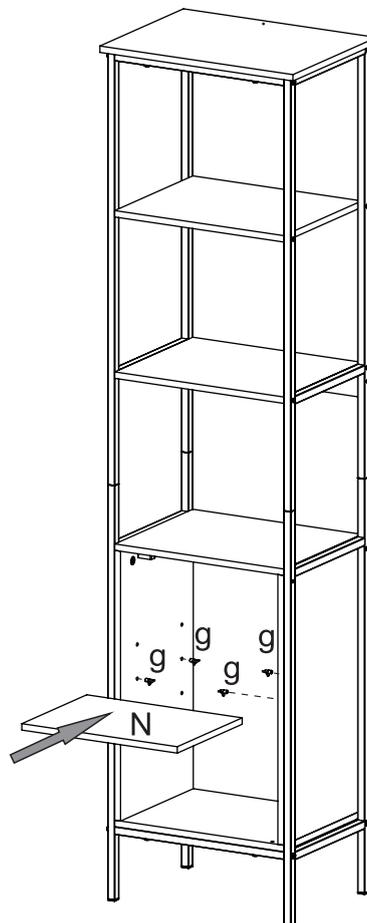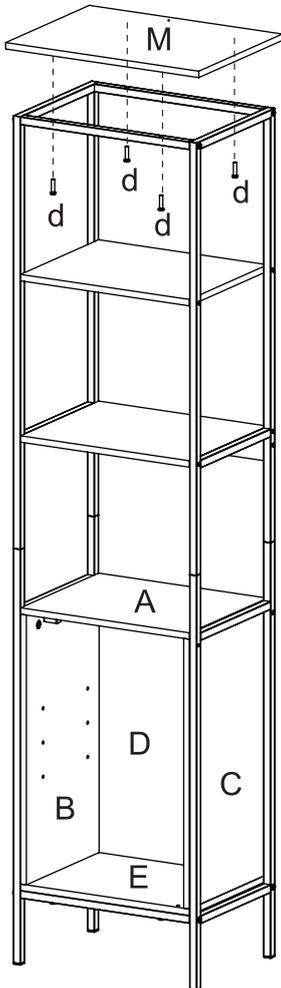


g	x4	d	x4
			

STEP 11

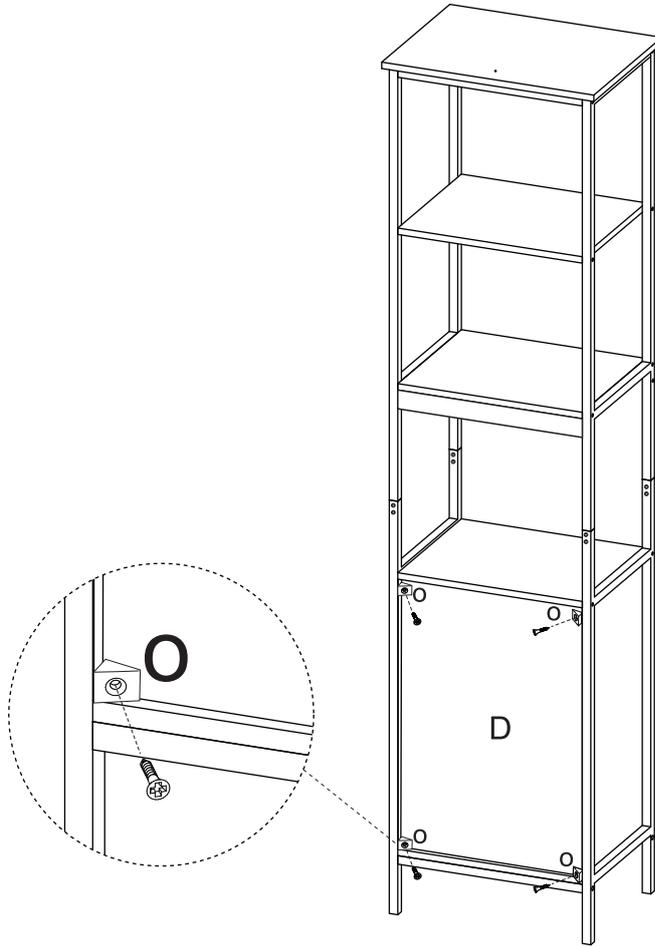


O	x4
	

STEP 12

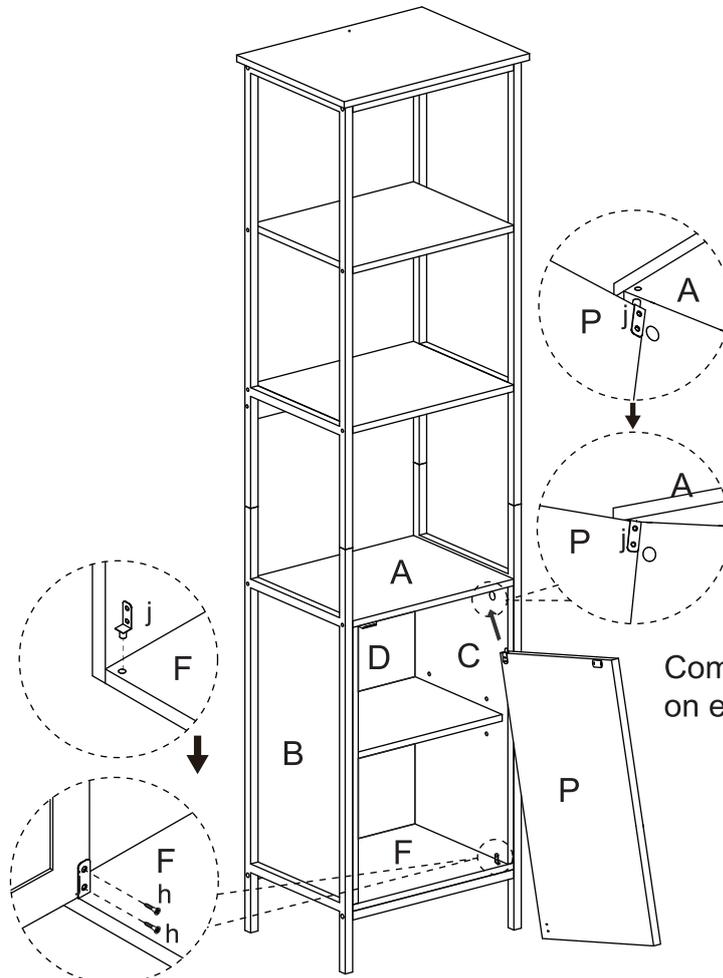

Comment: the door can be hung on either the left or the right

h	x2	j	x1
			

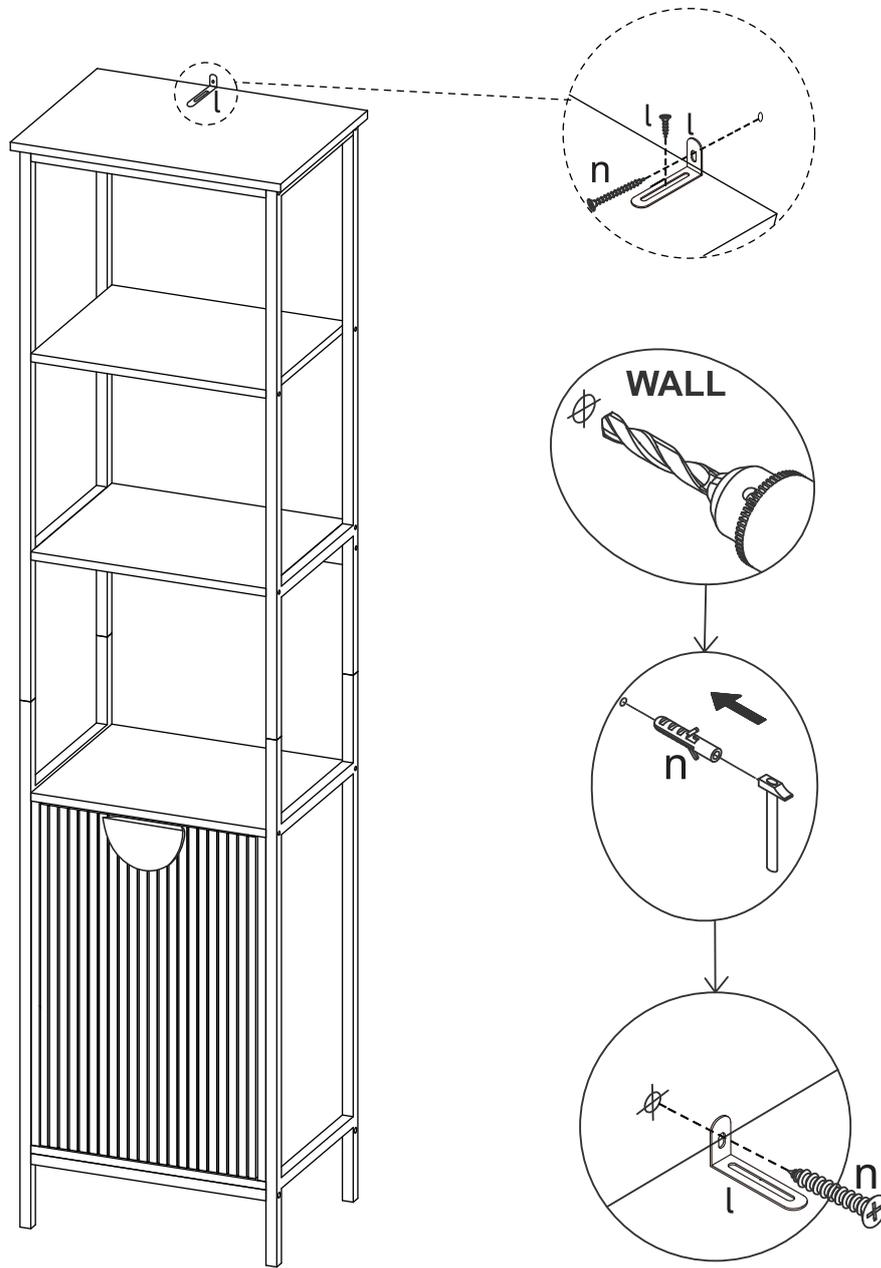

▲ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV on this furniture

This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



l	x1	n	x1