

Assembly Instructions

K: 43639854 STEVIE 2 DOOR CABINET

CARE INSTRUCTIONS:


Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.

WARNING:



Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

MAXIMUM SAFE LOAD: 5KG FOR EACH SHELF.













Parts List

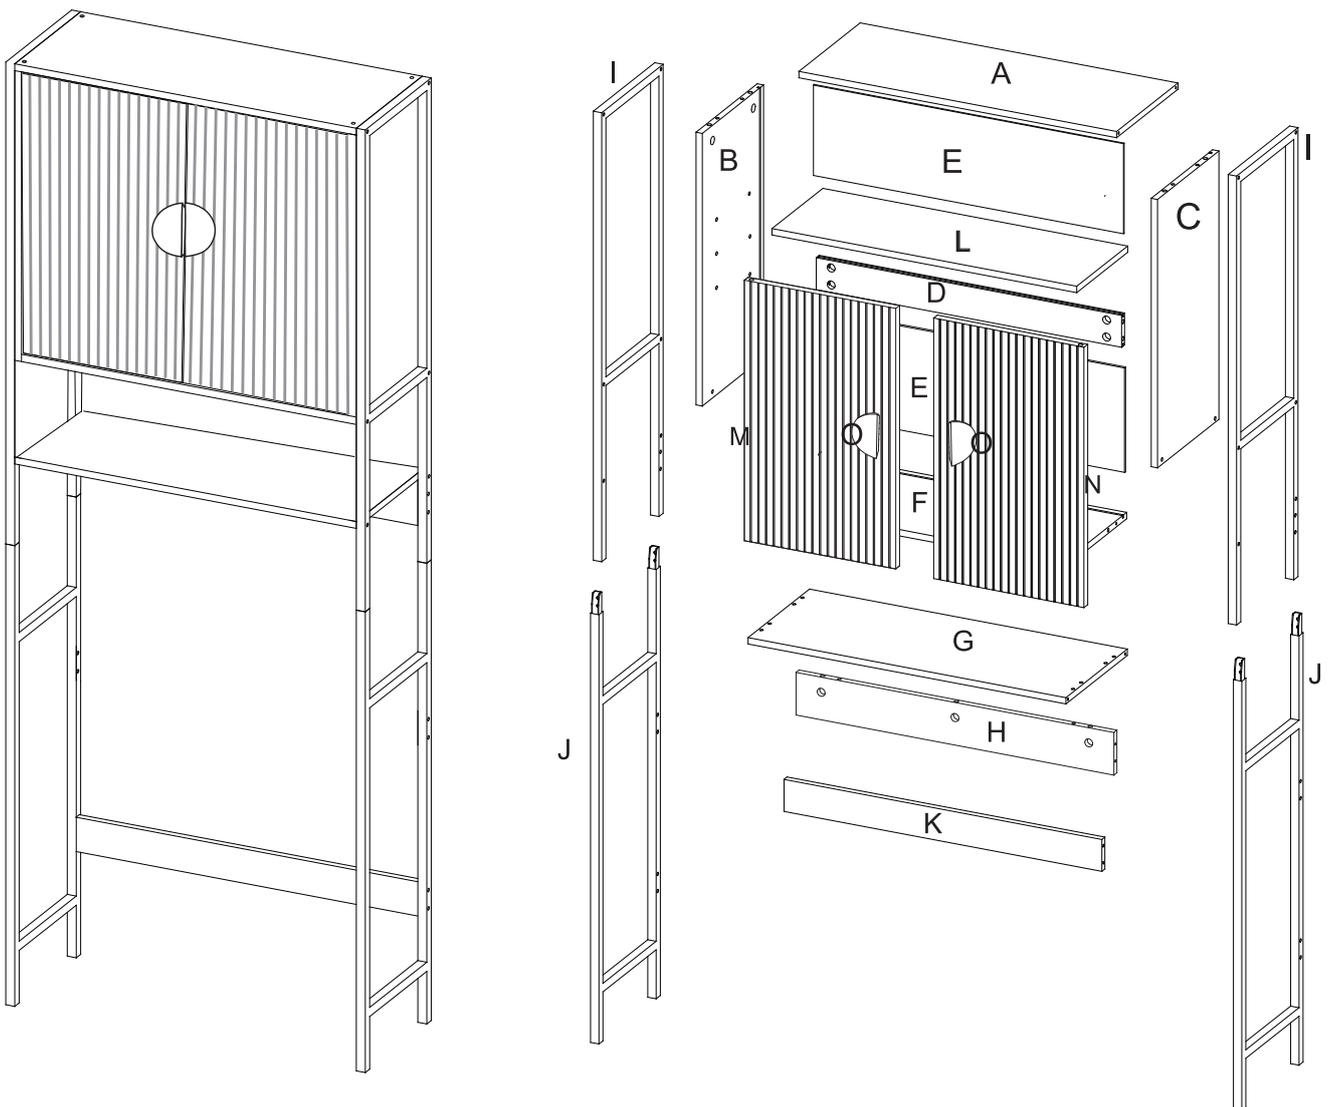


1 Hardware list

  	a		11pcs		b		11pcs
	c		8pcs		d	5x40mm	24pcs
	e	m4x25mm	4pcs		f	3x12mm	12 pcs
	g		4pcs		h		4pcs
	i		1pc		j		2sets
	k		1pc		l	5x8mm	8pcs
	m	3x16mm	8sets		n	4x30mm	2sets
					o		2 pcs

      2 Parts list

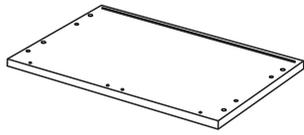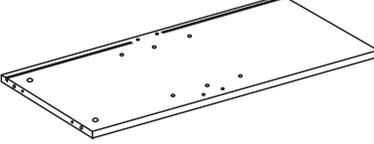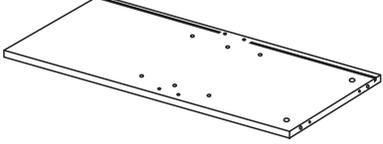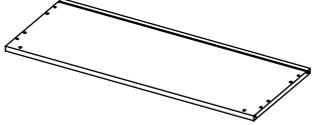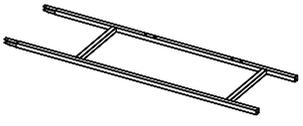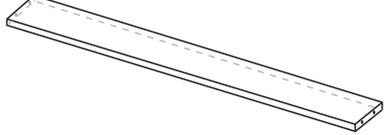
			
Ax1pc	Bx1pc	Cx1pc	Dx1pc
			
Ex2pcs	Fx1pc	Gx1pc	Hx1pc
			
Ix2pc	Jx2pc	Kx1pc	
			
Lx1pc	Mx1pc	Nx1pc	Ox2pcs

STEP 1

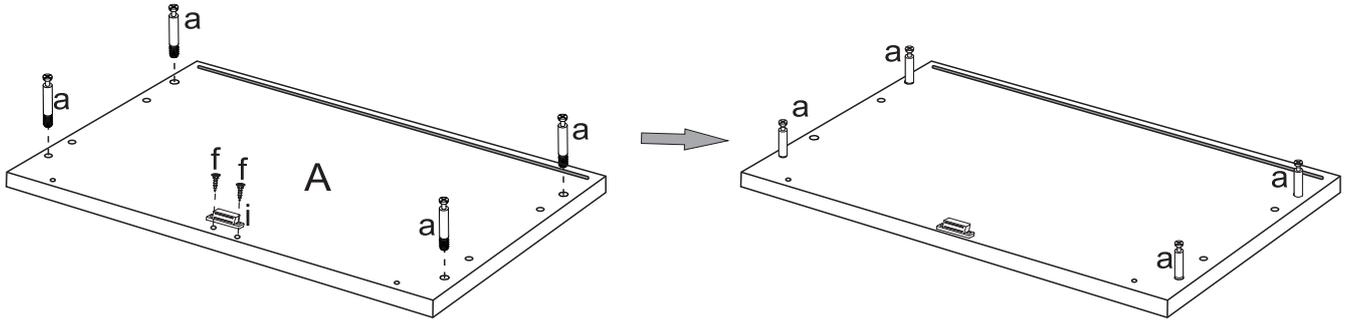


i	x1	f	x2	a	x4

STEP 2

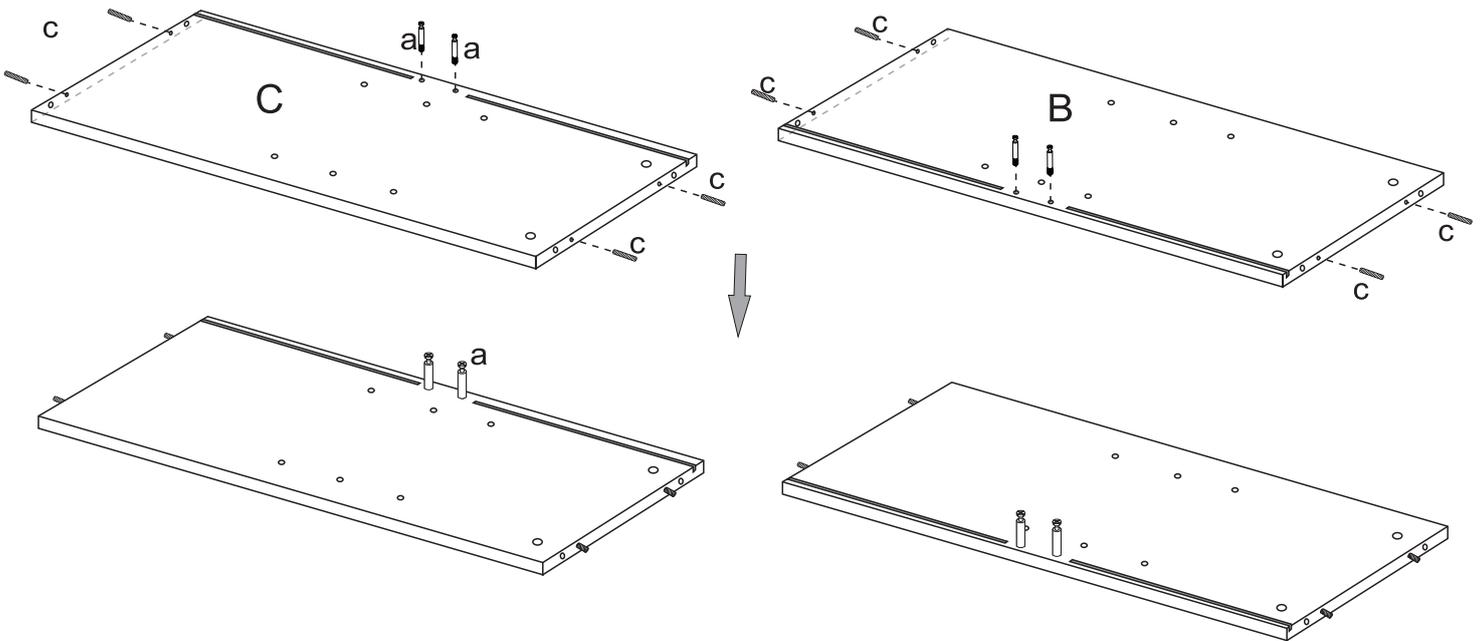


a	x4	c	x8

STEP 3



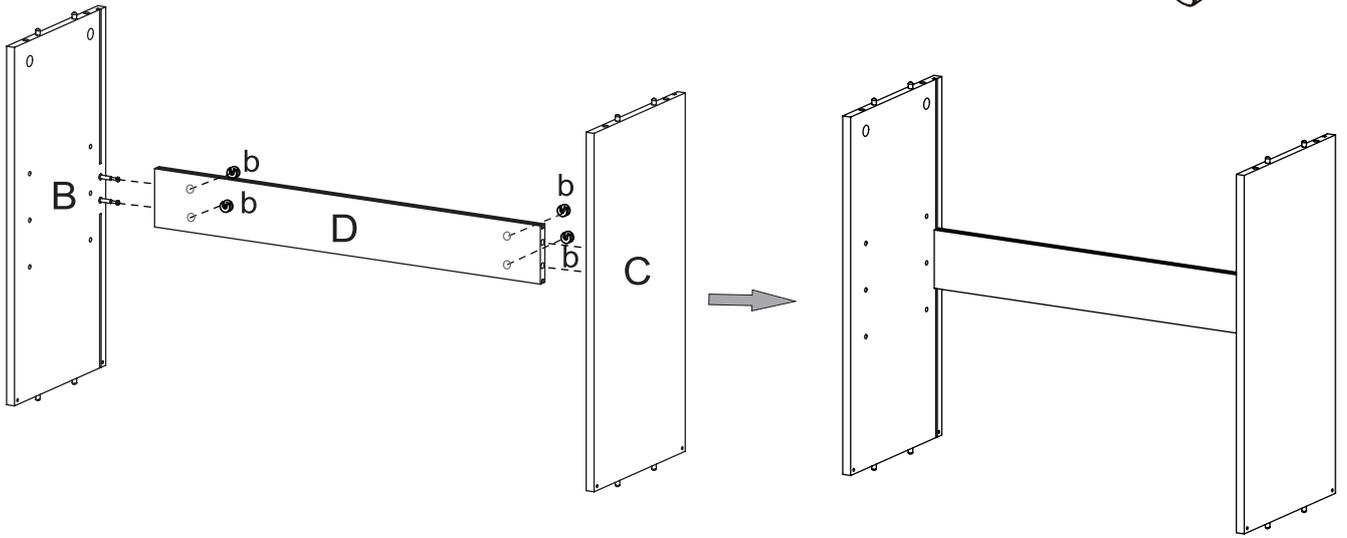


b	x4
	

STEP 4


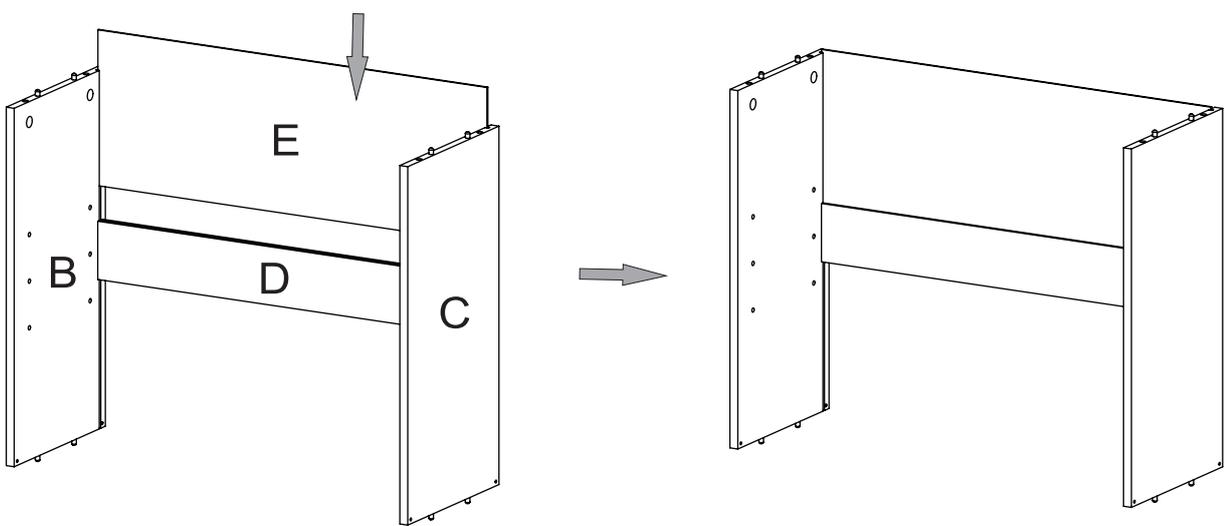


STEP 5

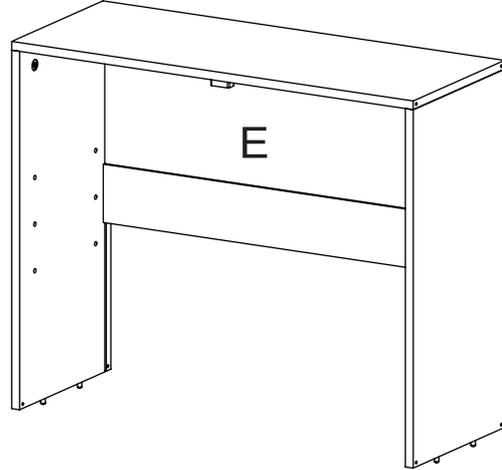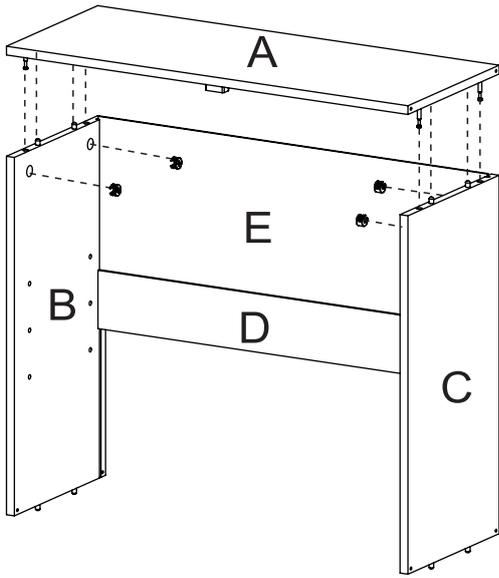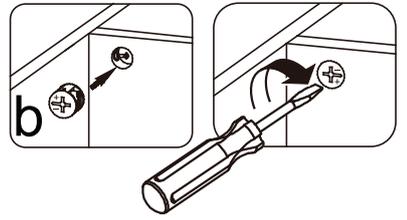


b	x4

STEP 6

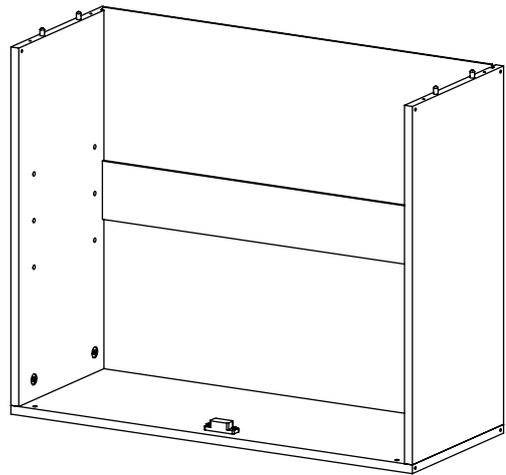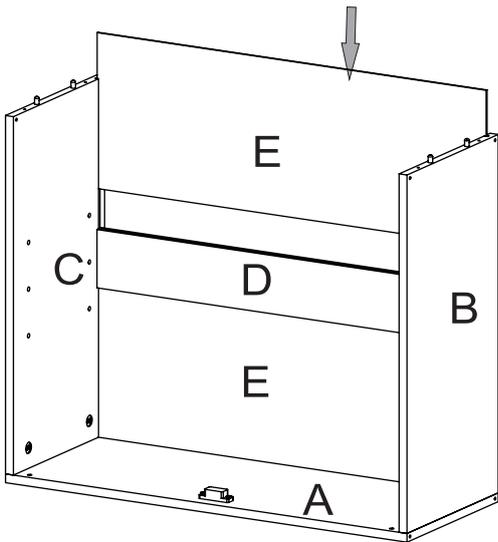


STEP 7

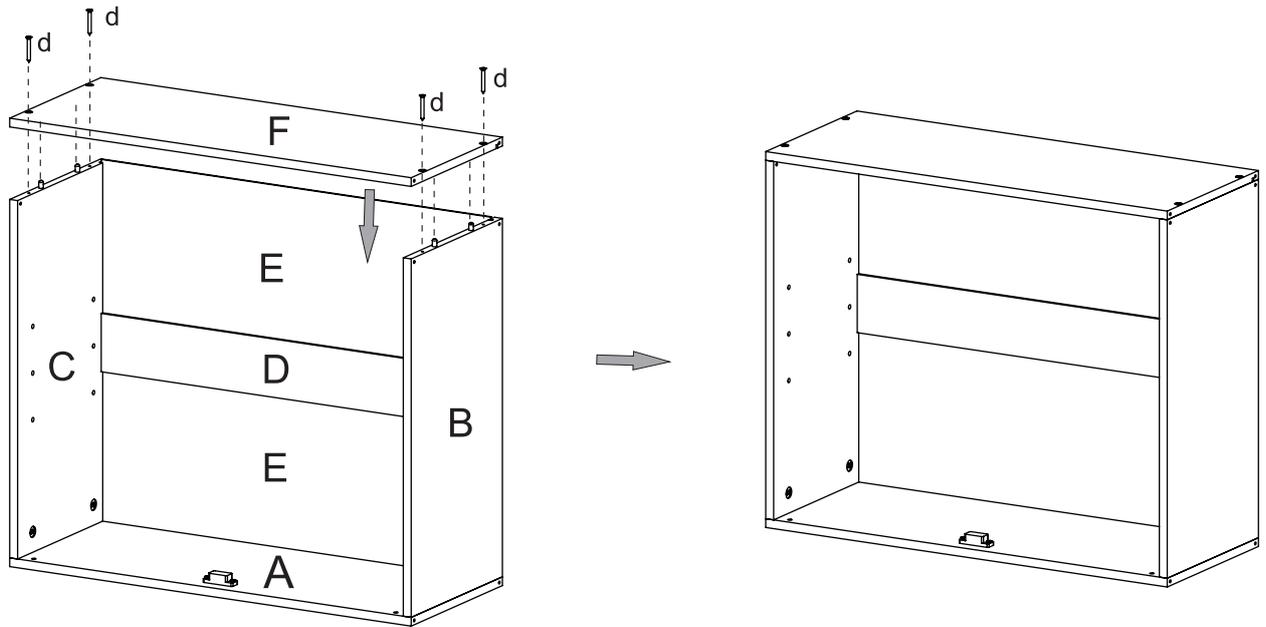


d	x4
	

STEP 8

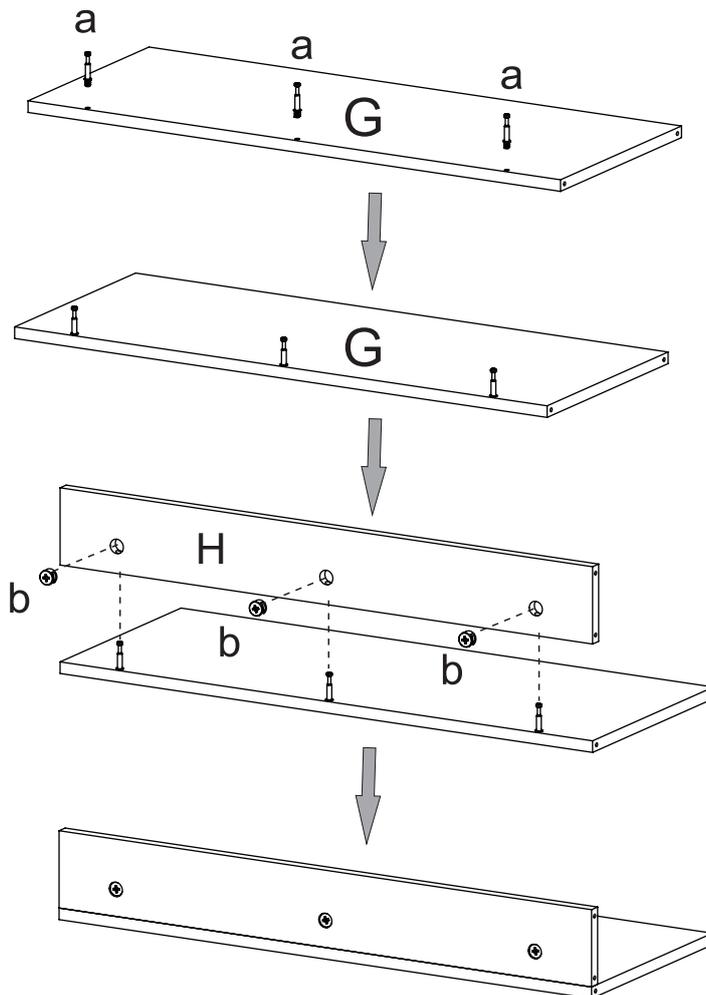


a	x3	b	x3
			


STEP 9

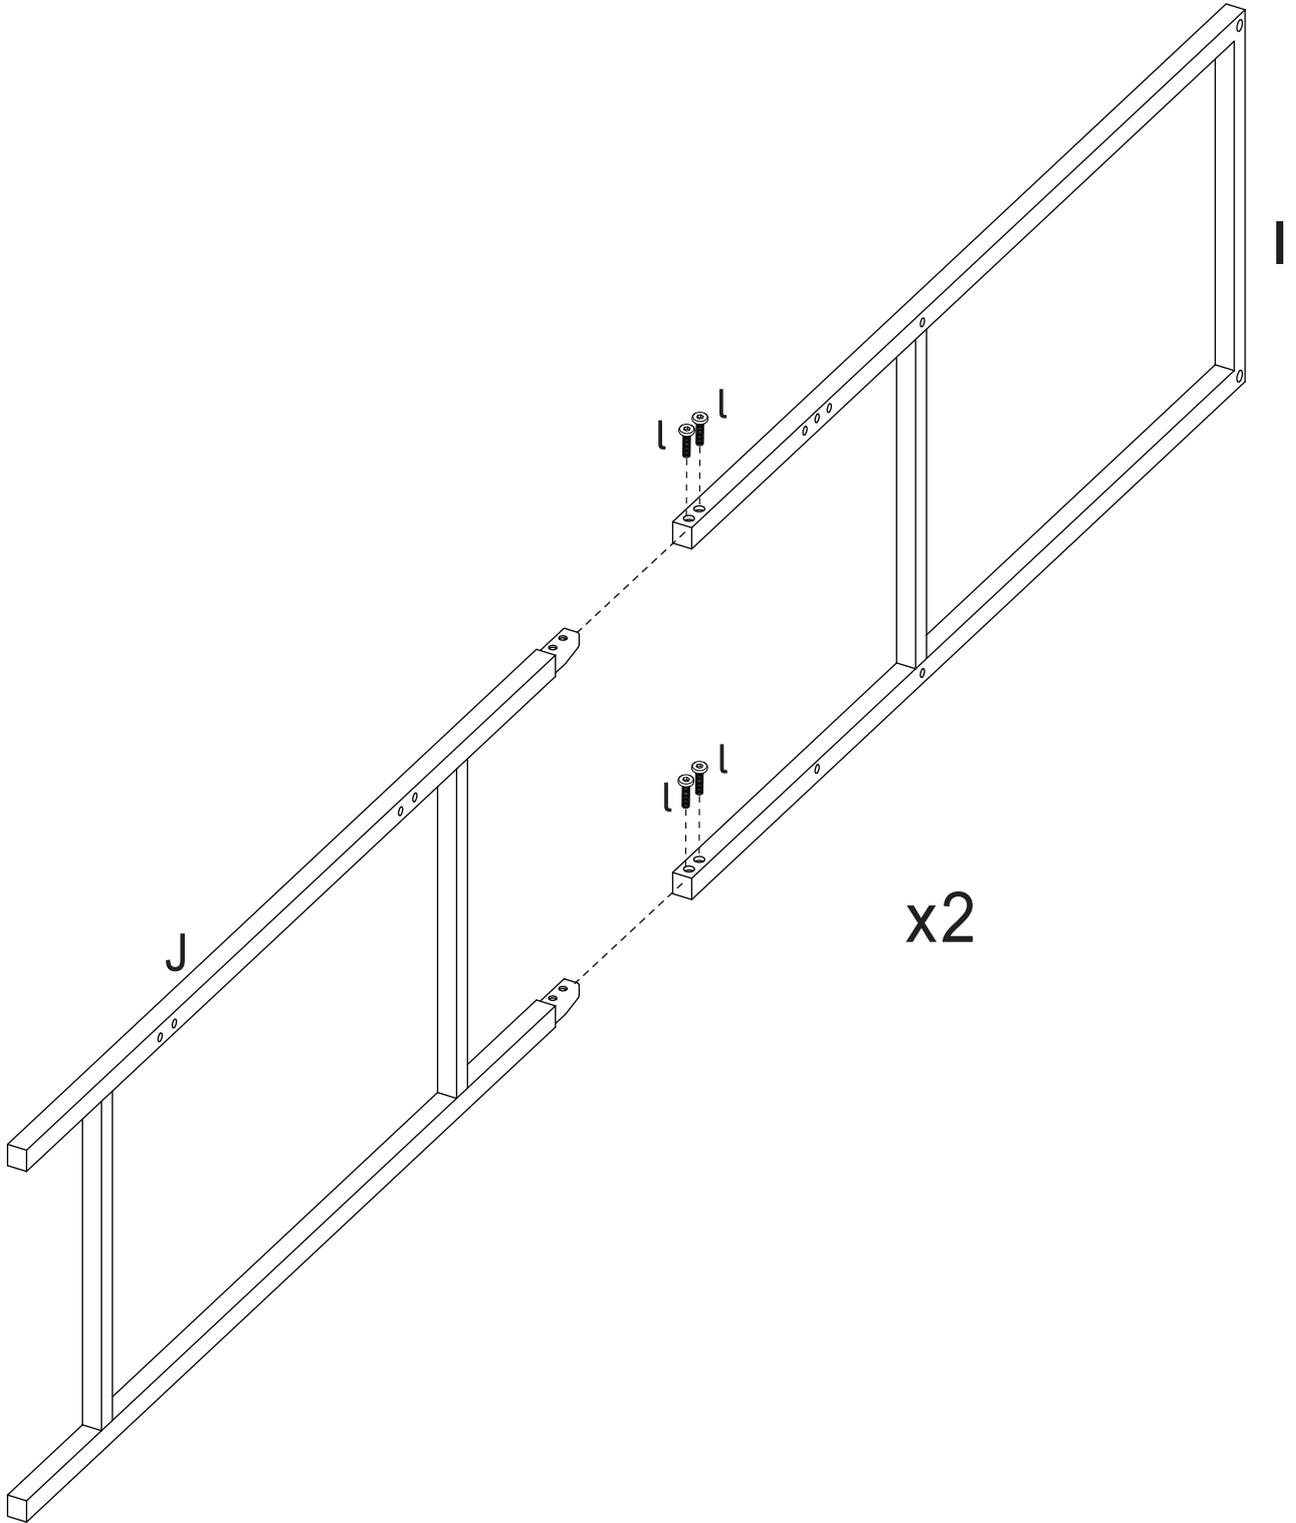

l	x8	k	x1
			

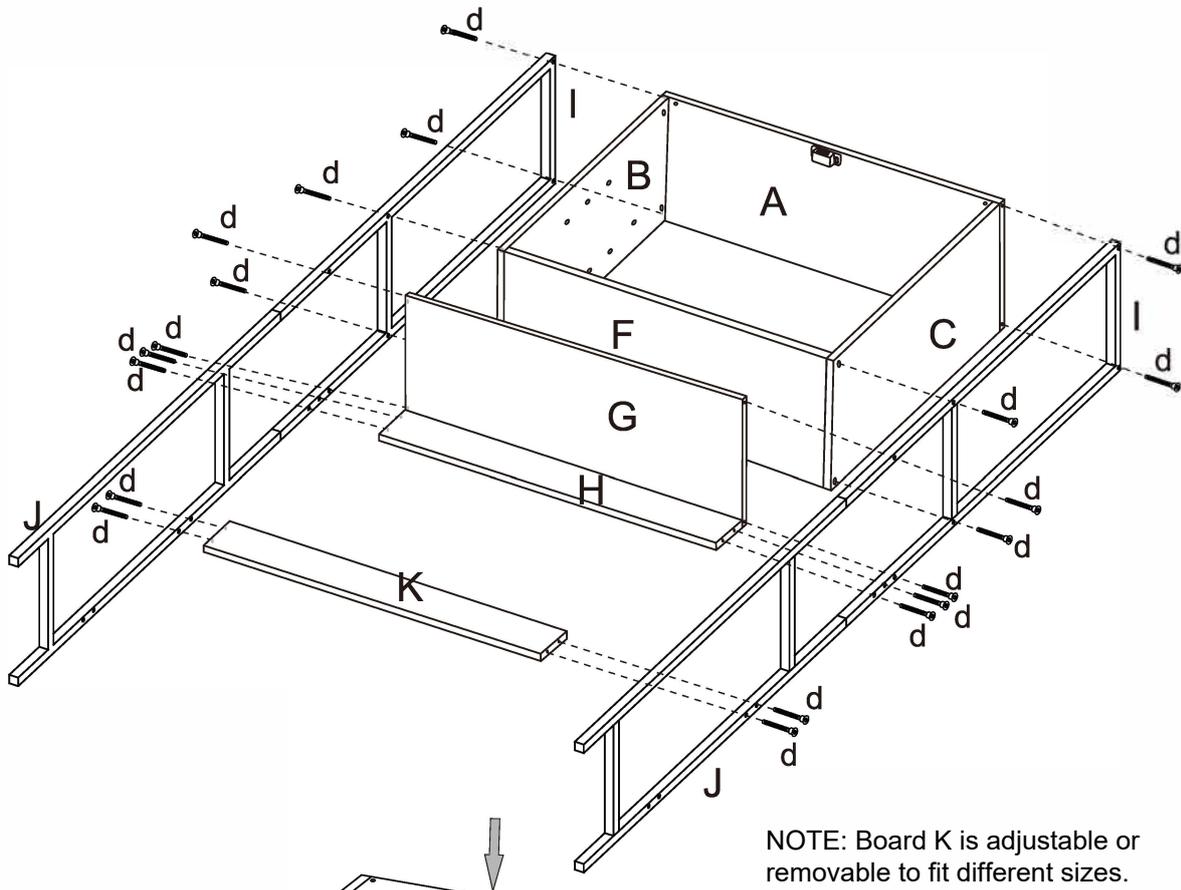


NOTE: Board K is adjustable or removable to fit different sizes.

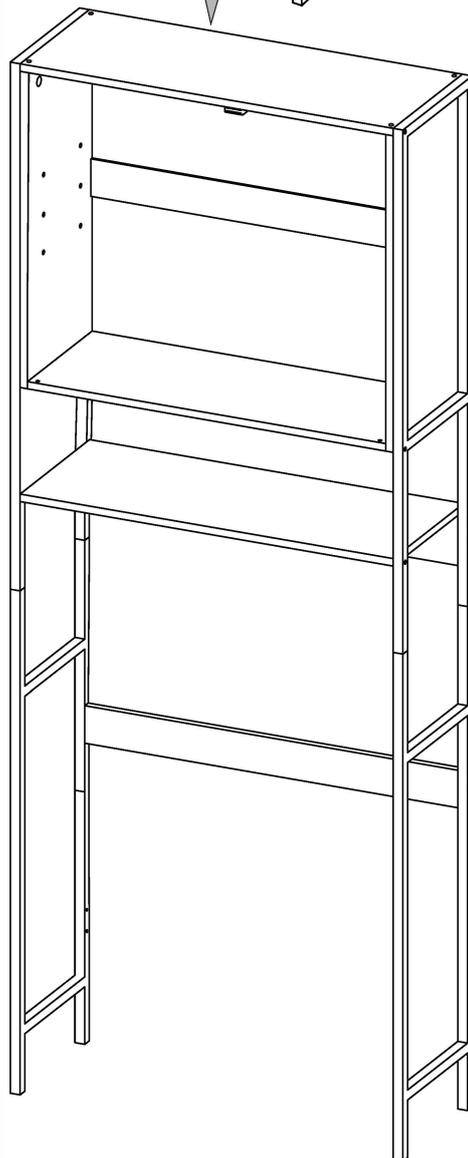


d	x20	k	x1
			

STEP 11

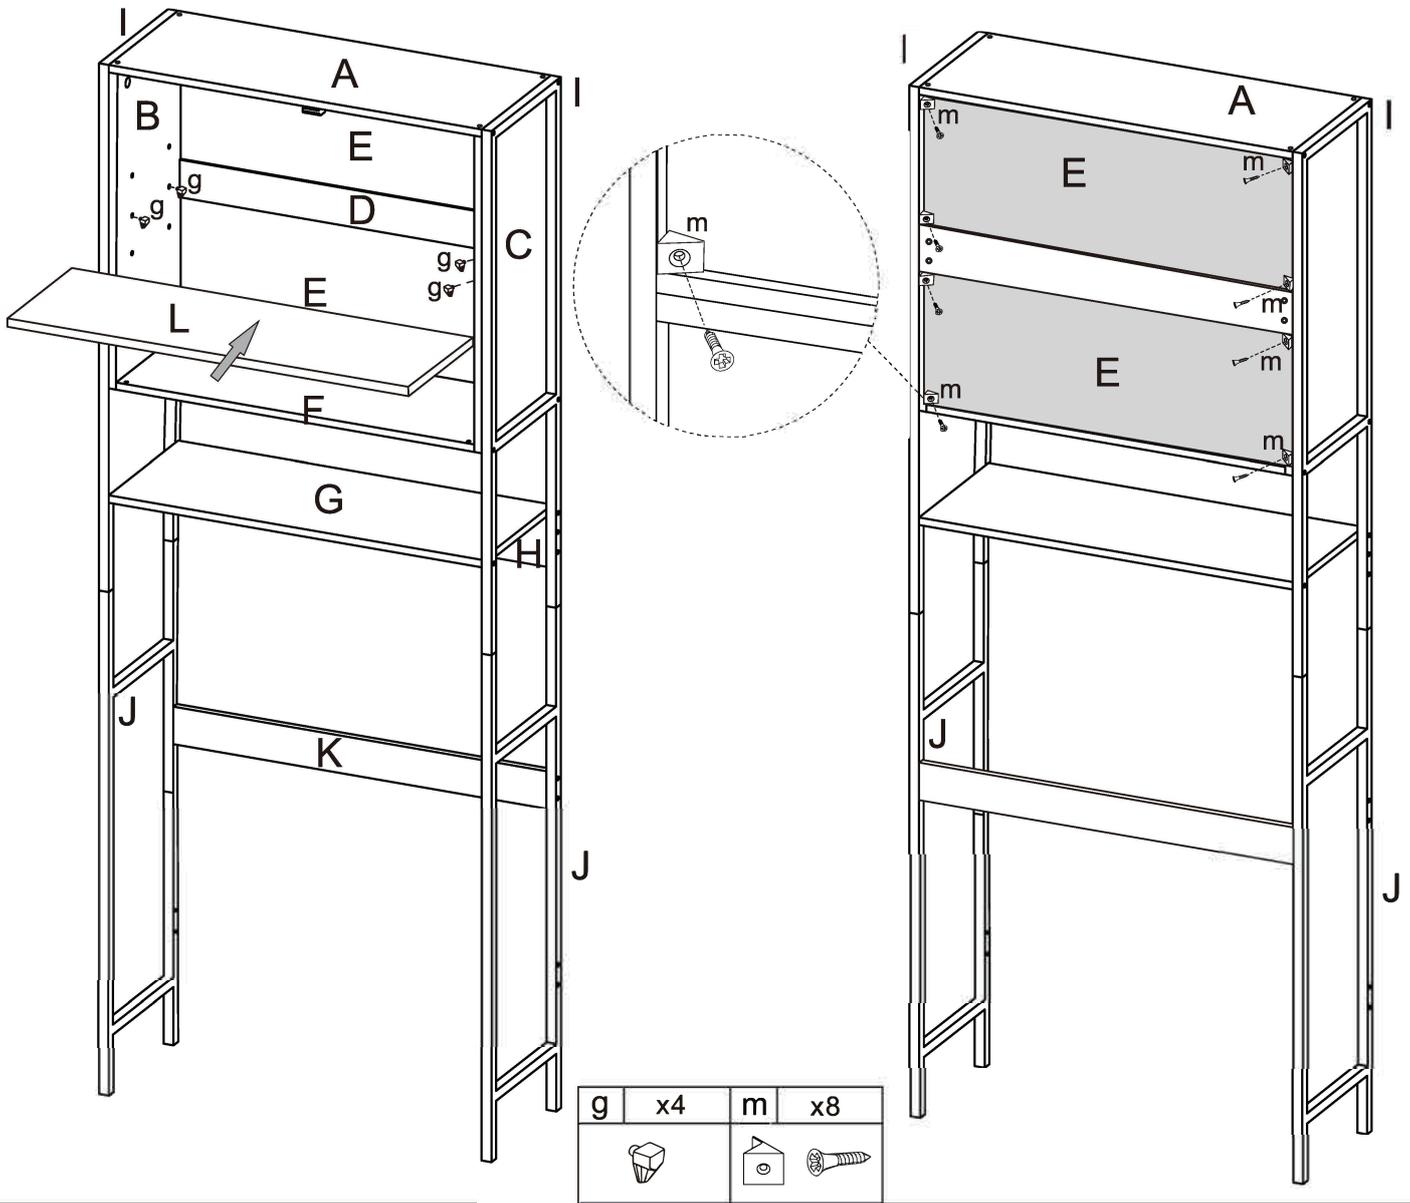


STEP 12

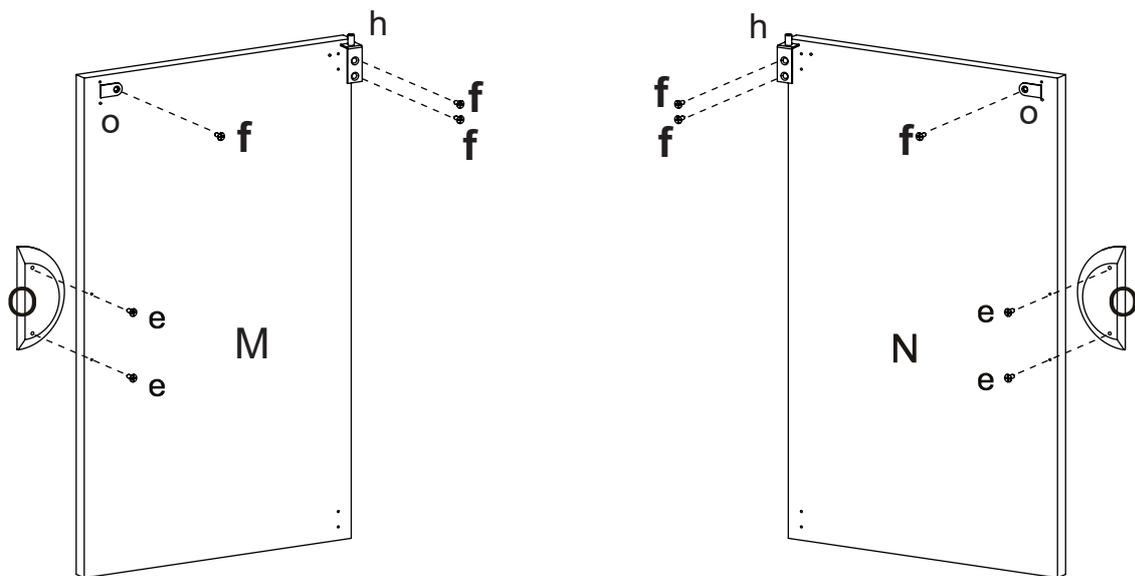


e	x4	f	x6	h	x2	o	x2
							


STEP 13

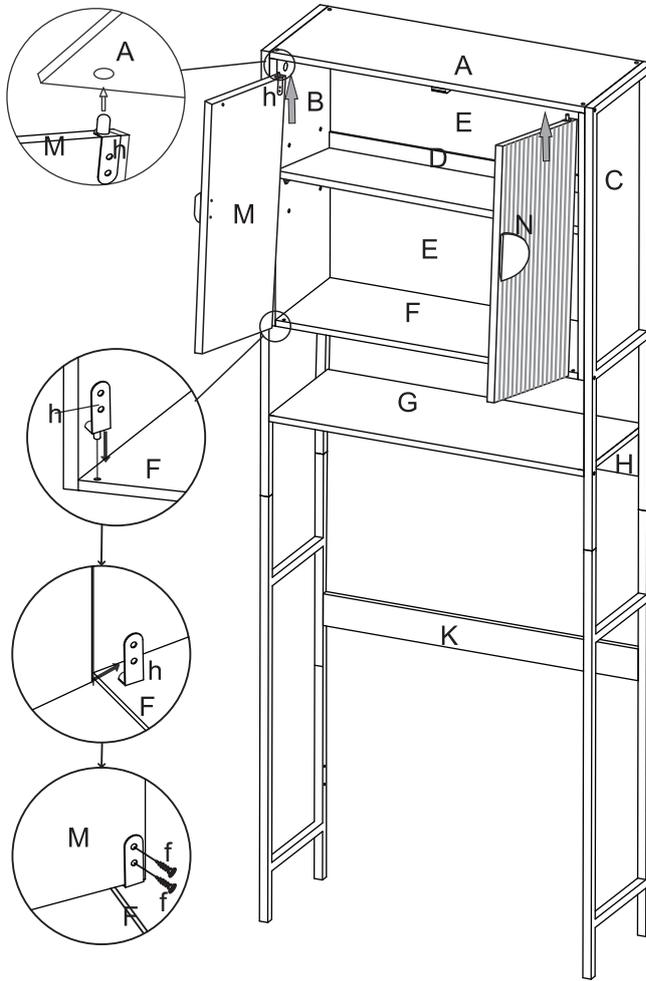

f	x4
h	x2

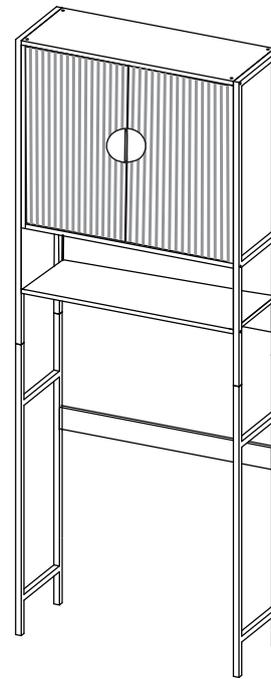

WARNING

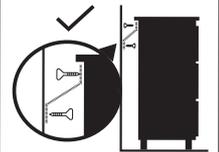



- Children have died from furniture tipover.
- ALWAYS secure it with an anchor device.
 - NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
 - NEVER open more than one drawer at a time.
 - Place heavy items down low.
 - Furniture type is at risk of toppling over.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

STEP 14

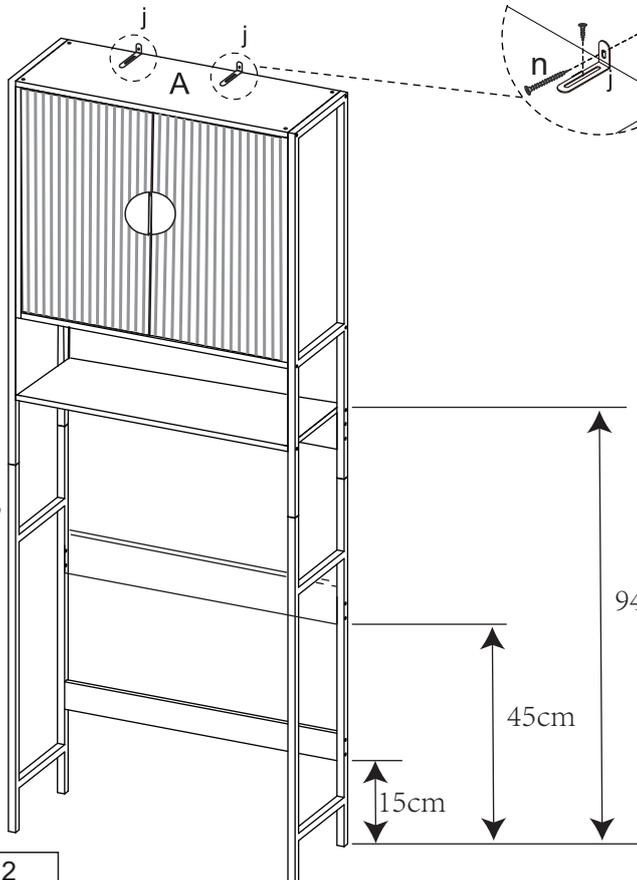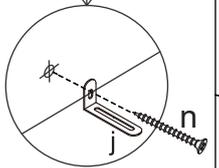

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

j	x2	n	x2



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

