

# Assembly Instructions

K: 43639878 CAMILLE 3 SECTION LAUNDRY HAMPER

## CARE INSTRUCTIONS:


Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.

## WARNING:


Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

**MAXIMUM SAFE LOAD: 20KG FOR TOP, 7KG FOR EACH CLOTH BAG.**


















## Parts List

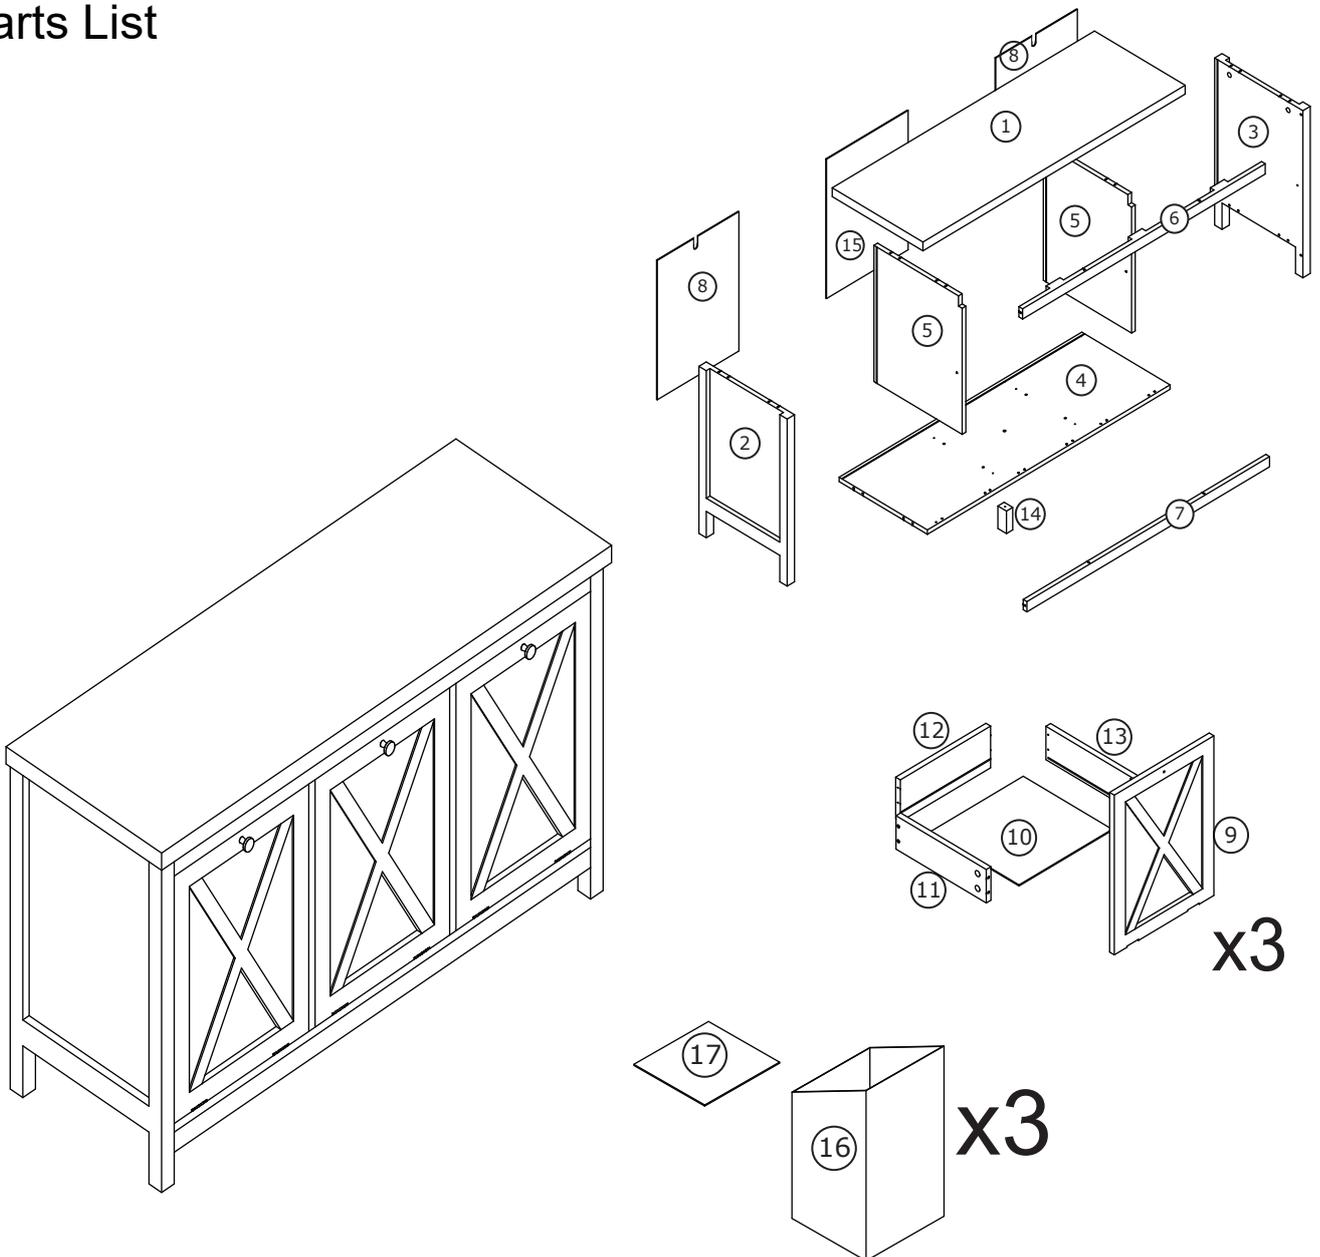

# Hardware List

 
	a	6x35mm	28pcs		h		24pcs
	b	15x10mm	28pcs		i		12sets
	c	6x30mm	16pcs		j		2pcs
	d	4x35mm	23pcs		k		6pcs
	e		3sets		l		12pcs
	f		2sets		m		2sets
	g		6pcs		n		2pcs

# PANEL LAYOUT

 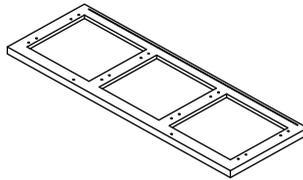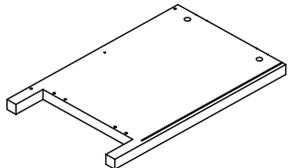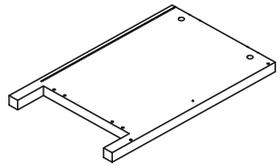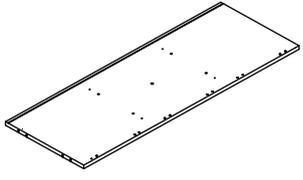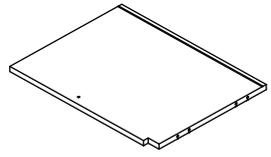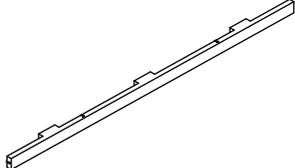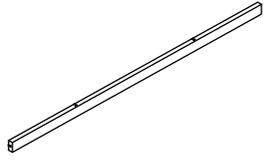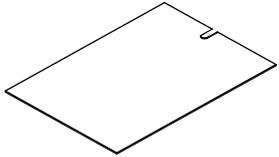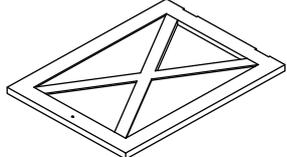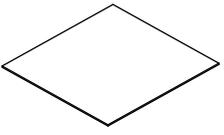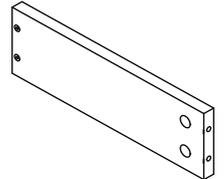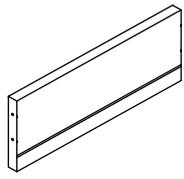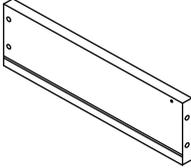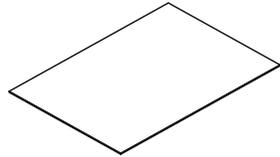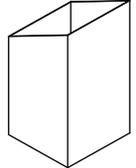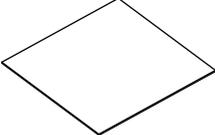
	①	1PC		②	1PC		③	1PC		④	1PC
	⑤	2PCS		⑥	1PC		⑦	1PC		⑧	2PCS
	⑨	3PCS		⑩	3PCS		⑪	3PCS		⑫	3PCS
	⑬	3PCS		⑭	1PC		⑮	1PC		⑯	3PC
	⑰	3PC									

**Do not tighten the screws fully during assembly  
Fully tighten screws after the final assembly steps**


# STEP 1

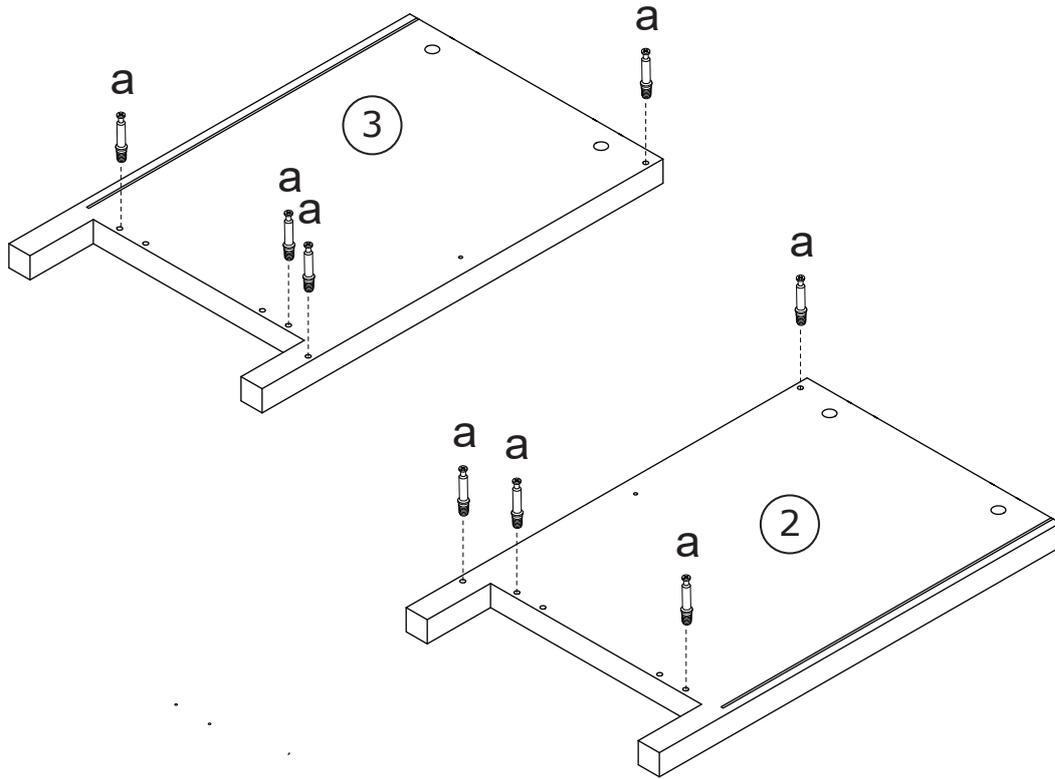

# STEP 2

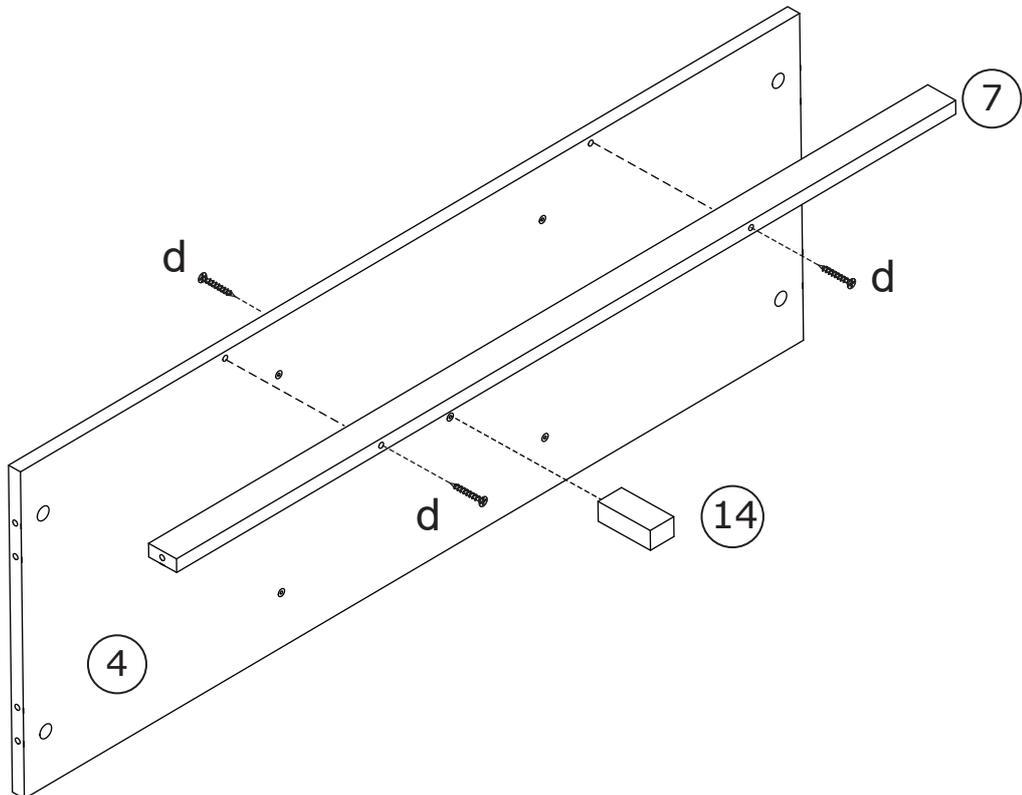


### STEP 3

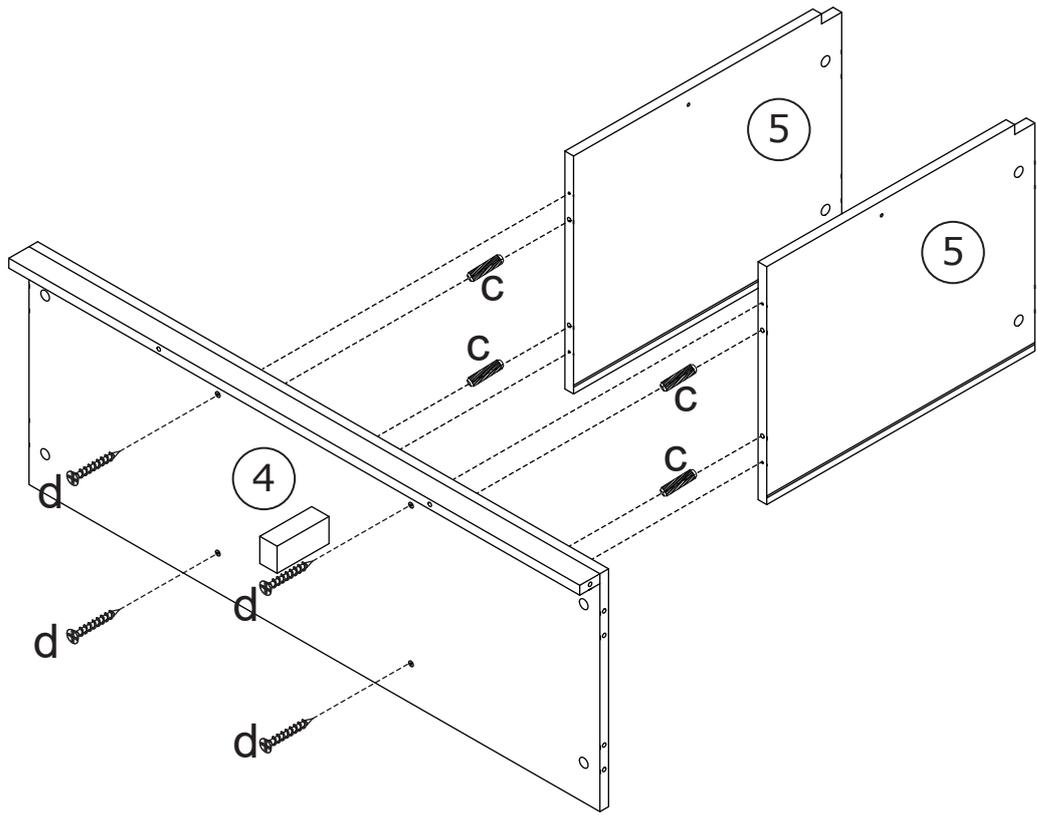

	dx4
	cx4


### STEP 4

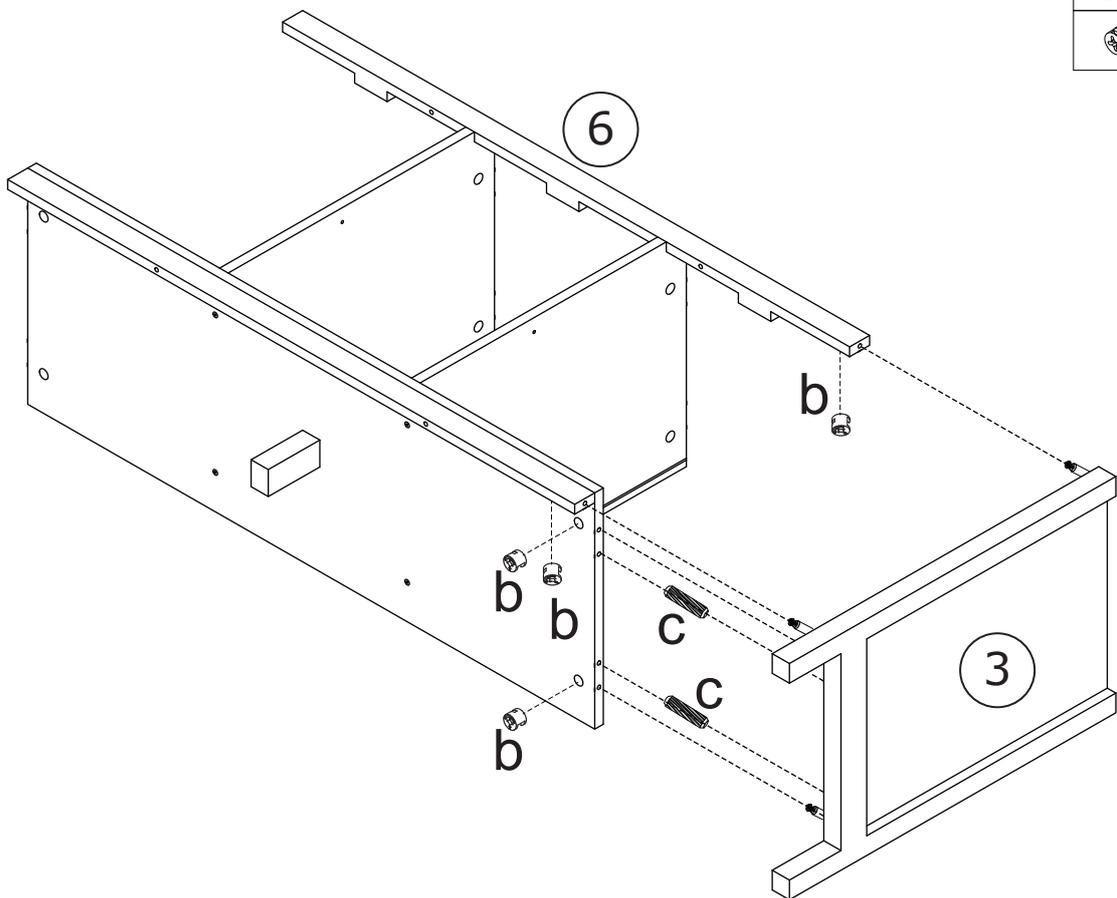

	cx2
	bx4


# STEP 5

	cx2
	bx4

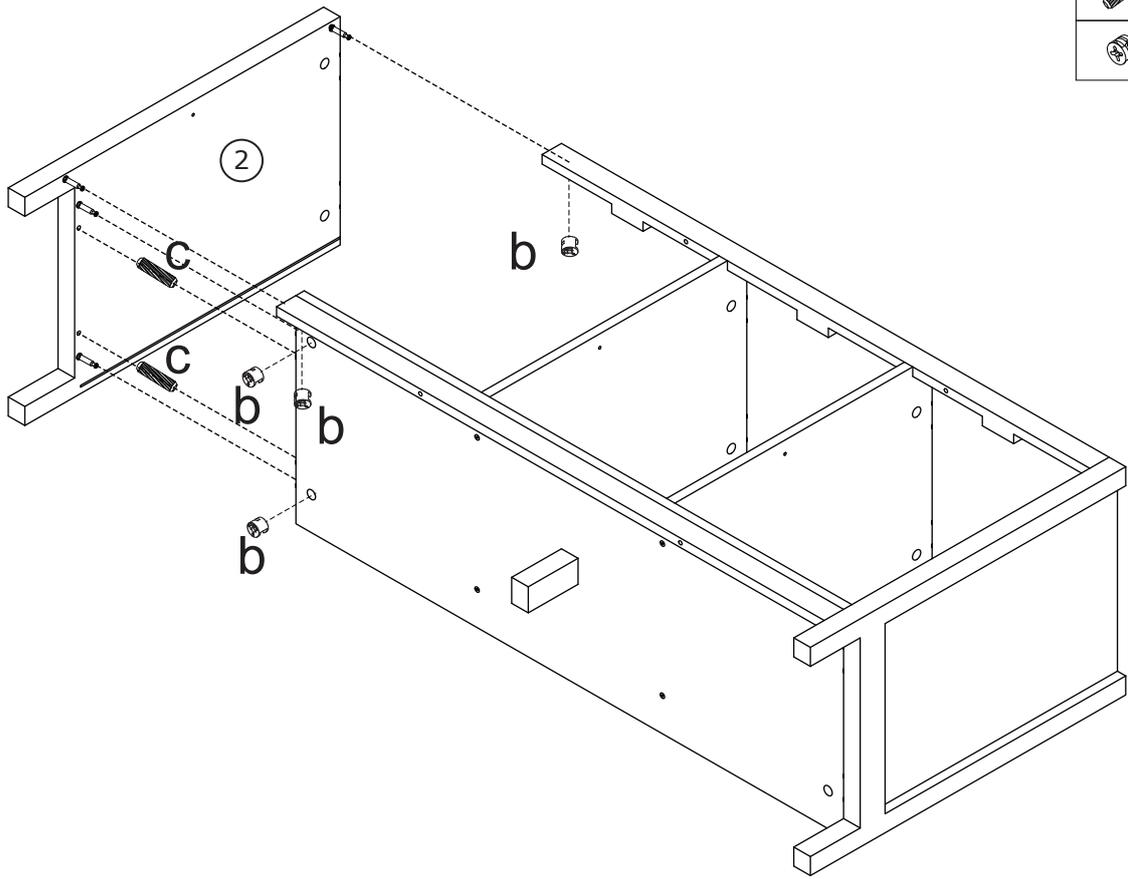


# STEP 6


	ax8
	mx2

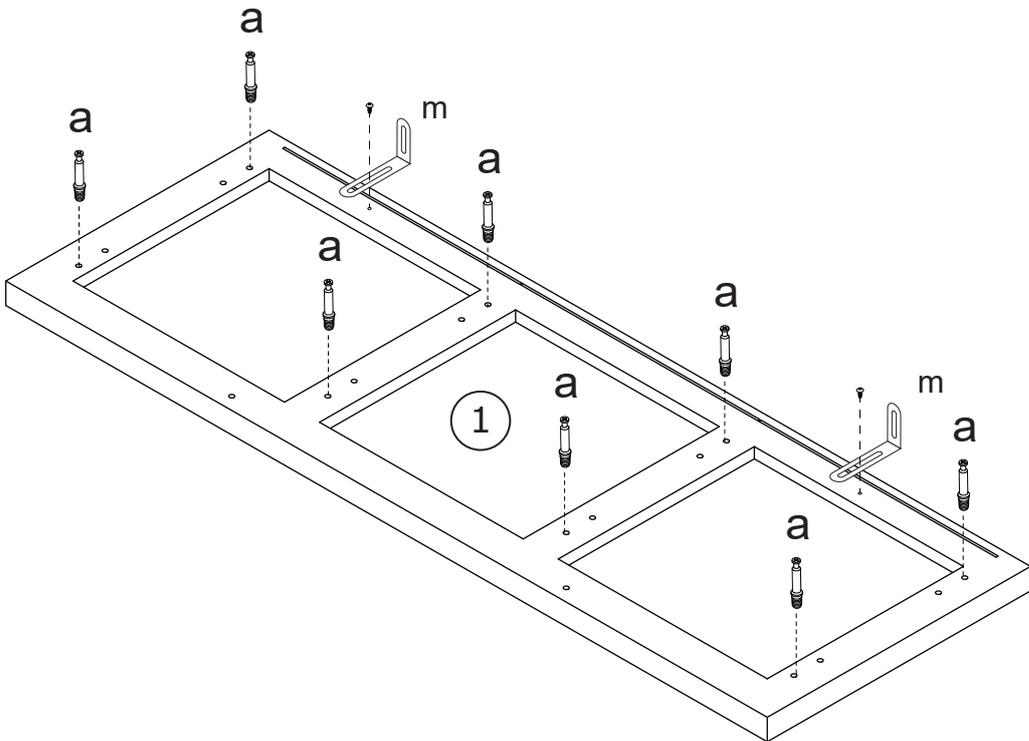

# STEP 7

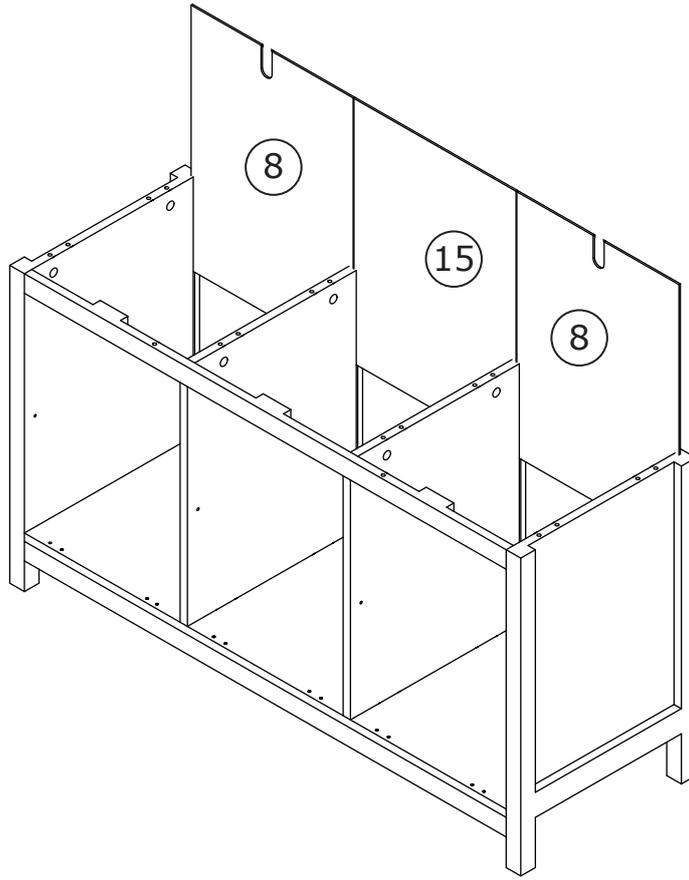


# STEP 8

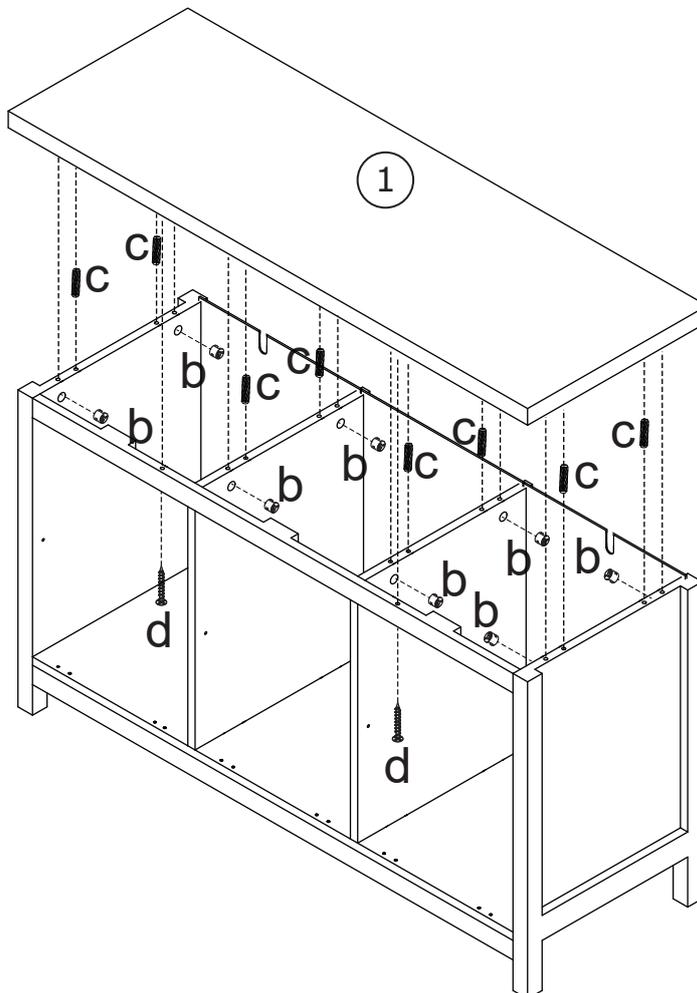

	cx8
	bx8
	dx2


# STEP 9

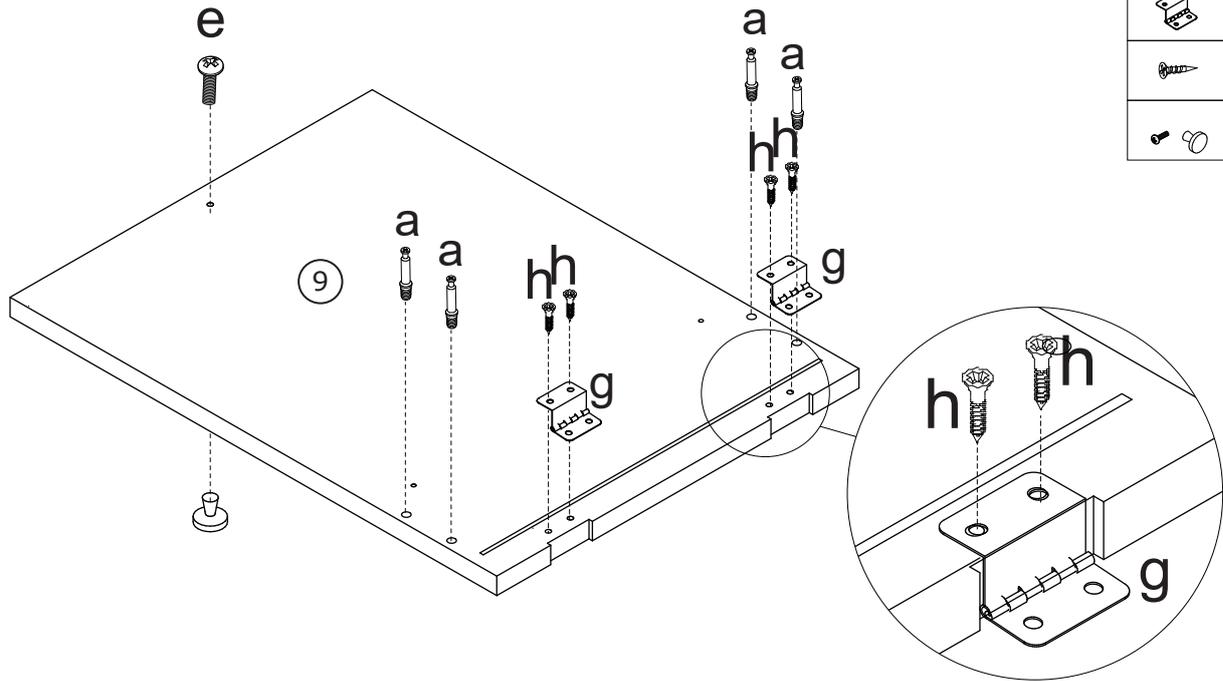

- ax12
- gx6
- hx12
- ex3

x3


# STEP 10

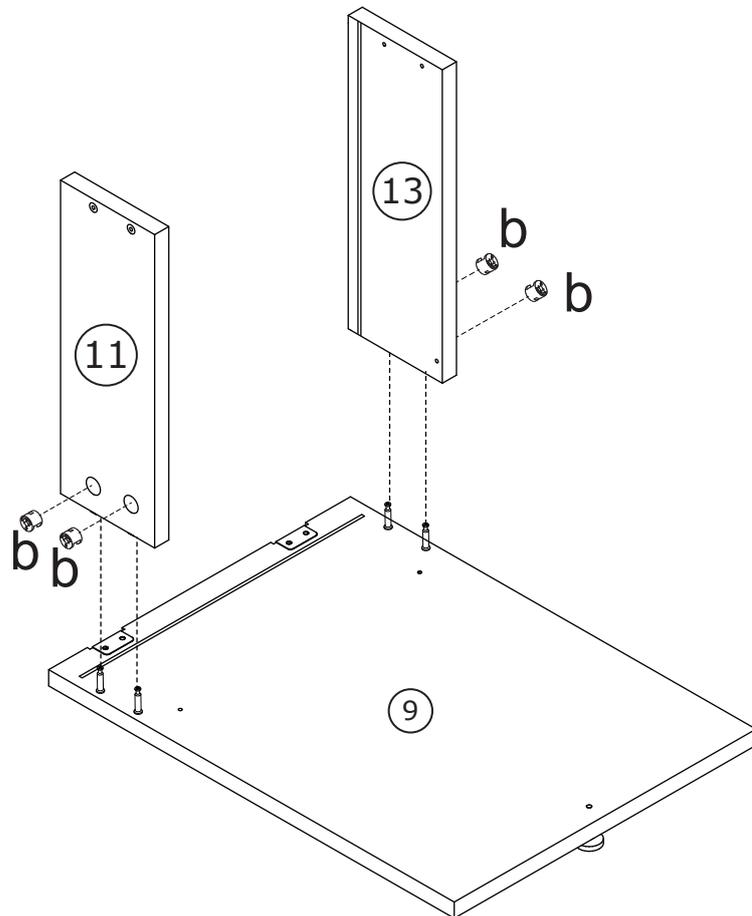

- bx12



x3

**STEP 11**

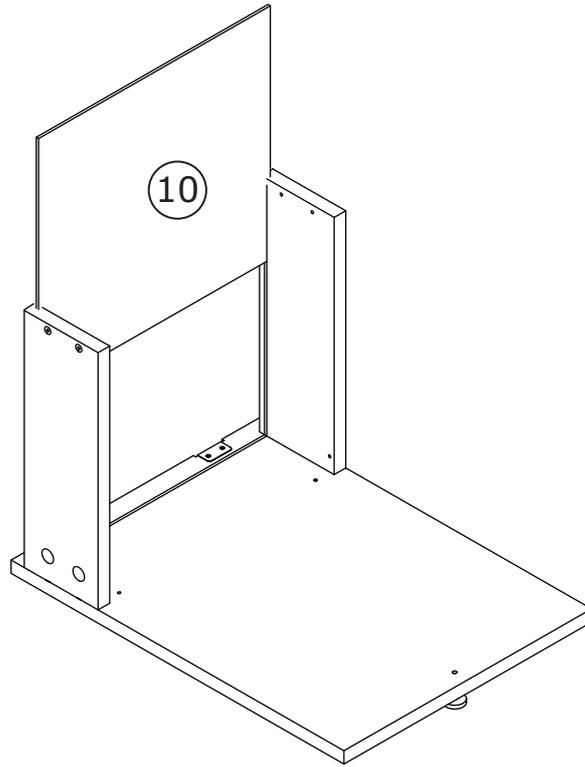

x3


**STEP 12**

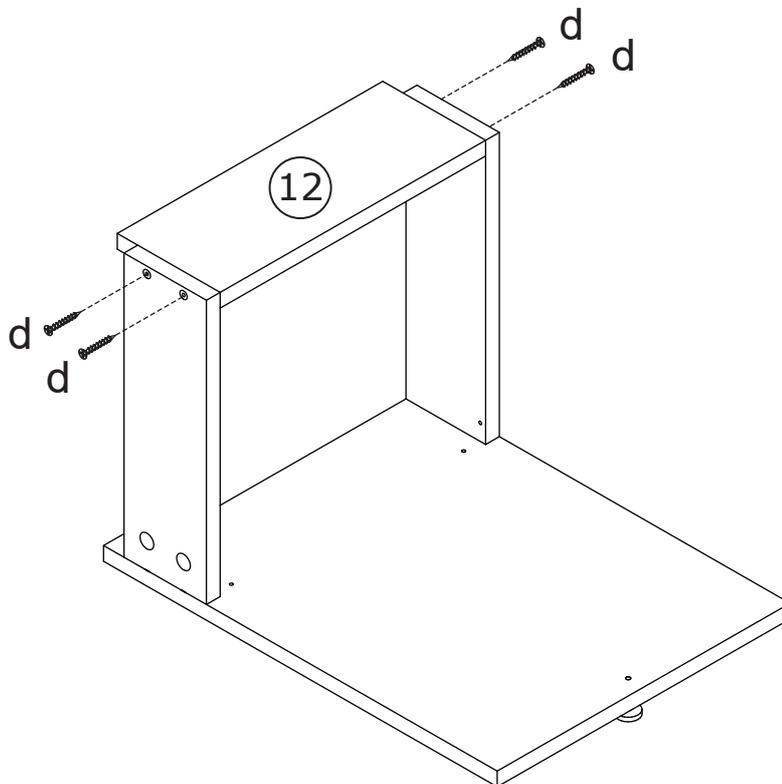 

x3


## STEP 13

	kx6
	lx12

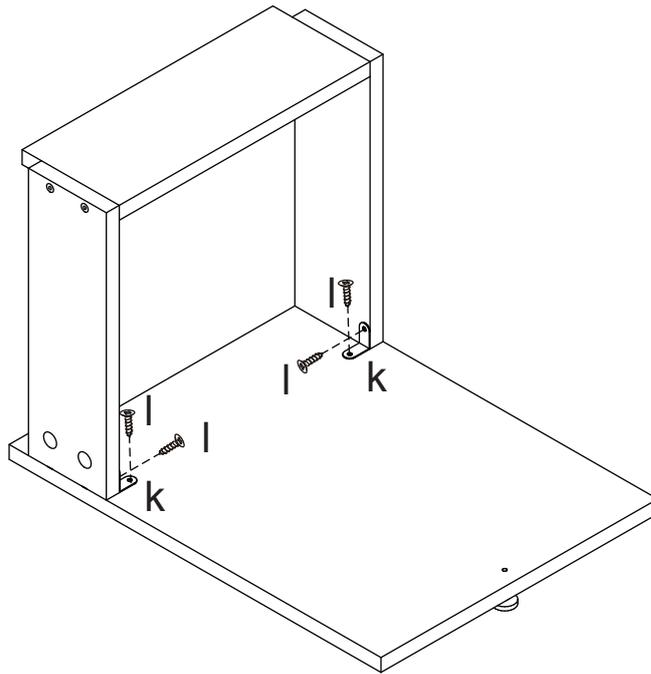


x3

## STEP 14

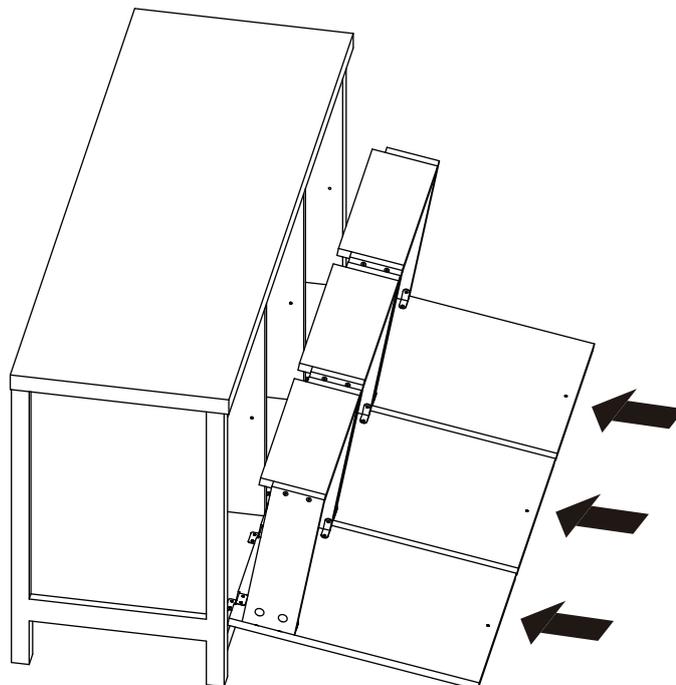


## STEP 15

 hx12

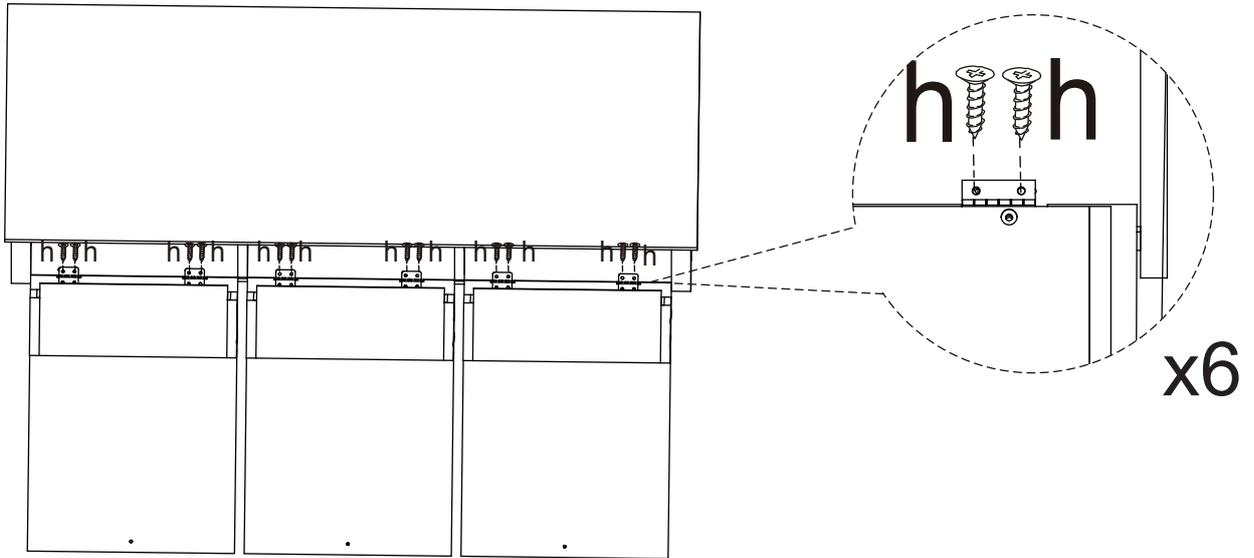

## STEP 16


Please do not tighten the screws 'f', need to leave 3-4mm on the outside.

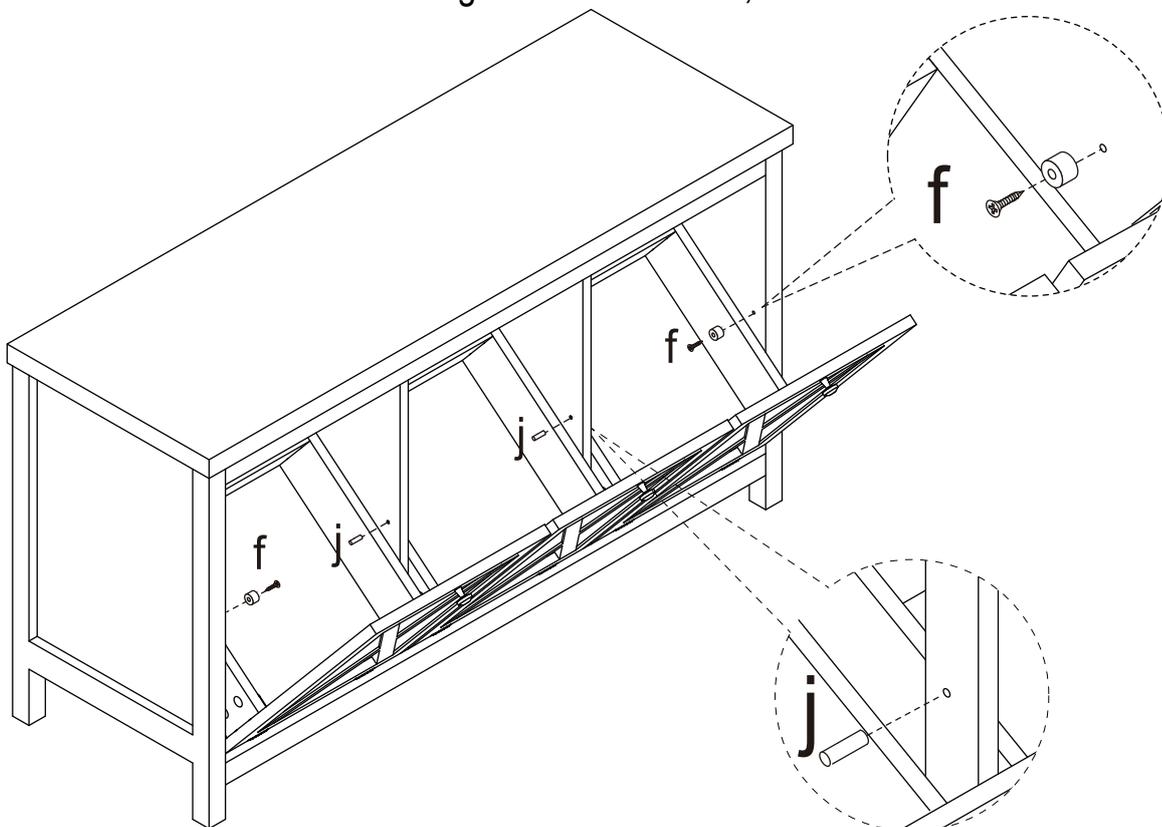


 fx2

 jx2



**STEP 17**

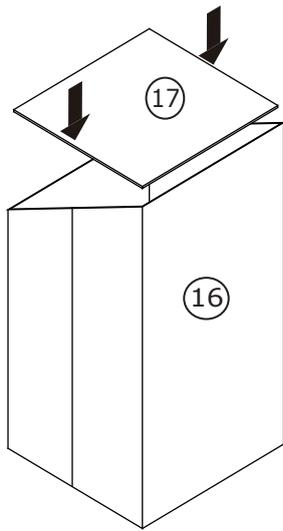

**x3**

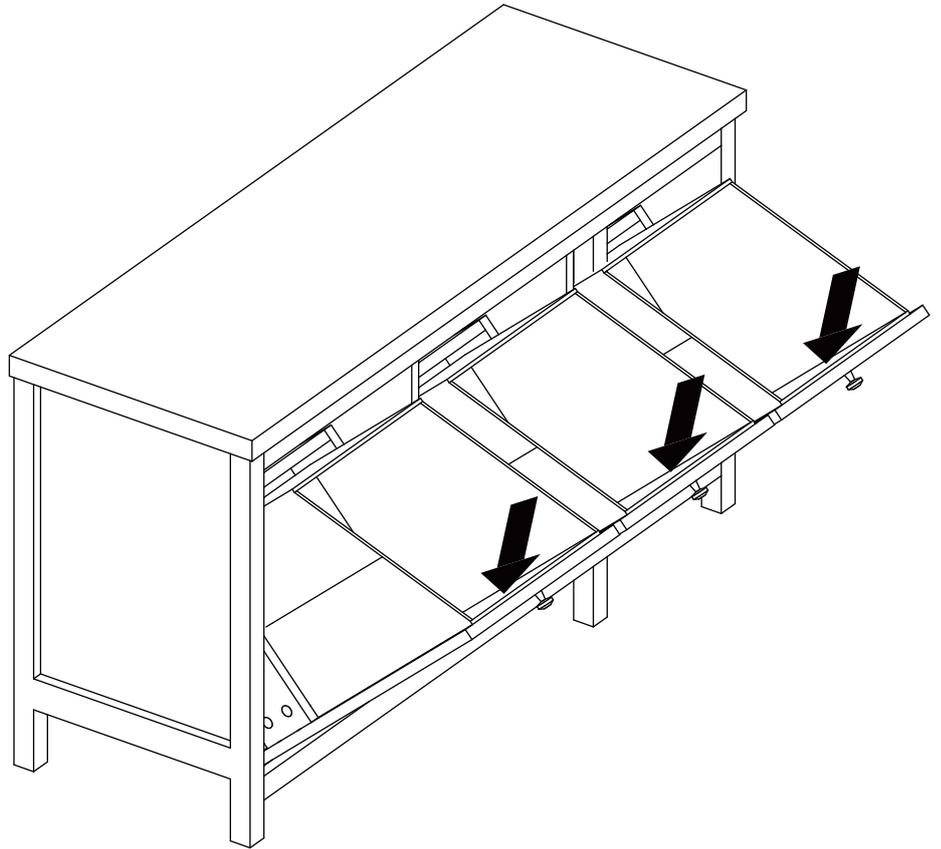



**STEP 18**

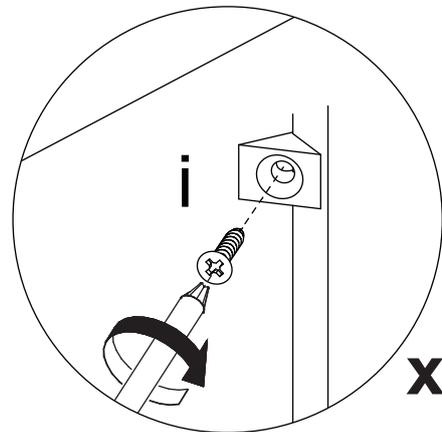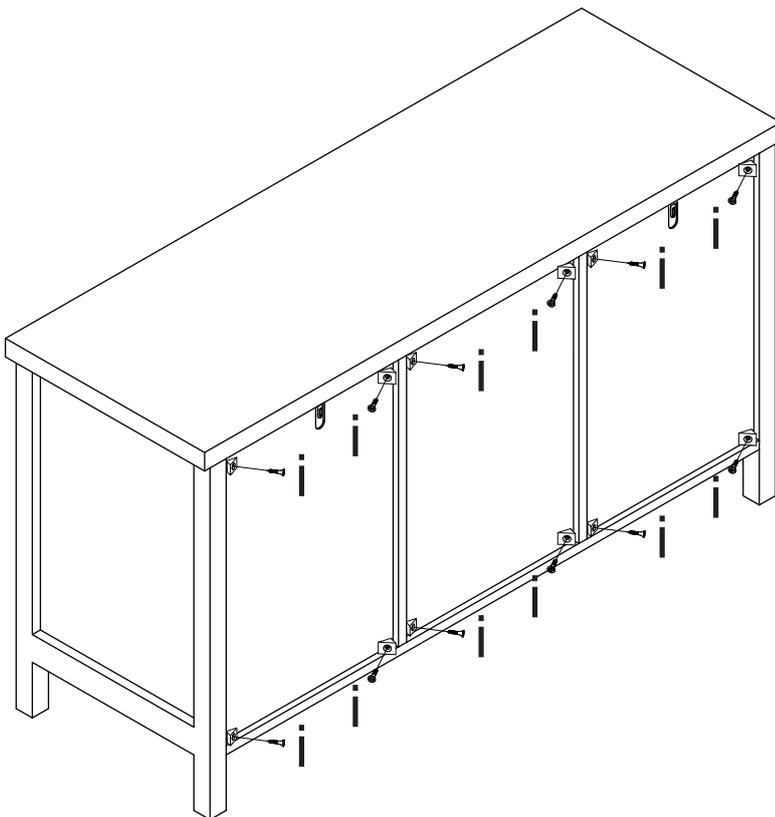

**x12**

  ix12

# STEP 19

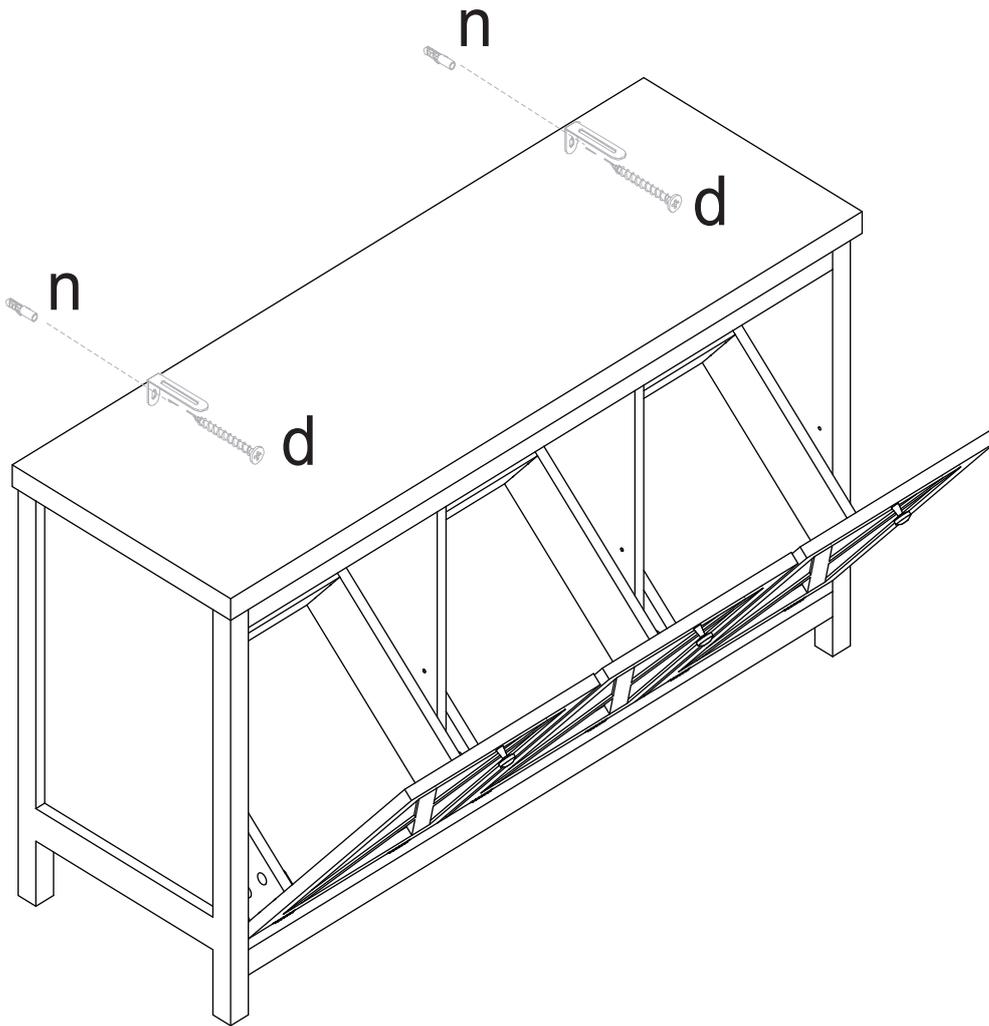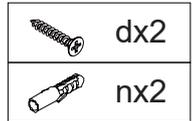

**⚠ WARNING**

**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

**This is a permanent label. Do not remove!**

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

