

Assembly Instructions

K: 43639939 STEVIE DUAL LAUNDRY HAMPER

CARE INSTRUCTIONS:


Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.

WARNING:


Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.


MAXIMUM SAFE LOAD: 10KG FOR TOP PANEL, 7KG FOR EACH CLOTH BAG.

Parts List















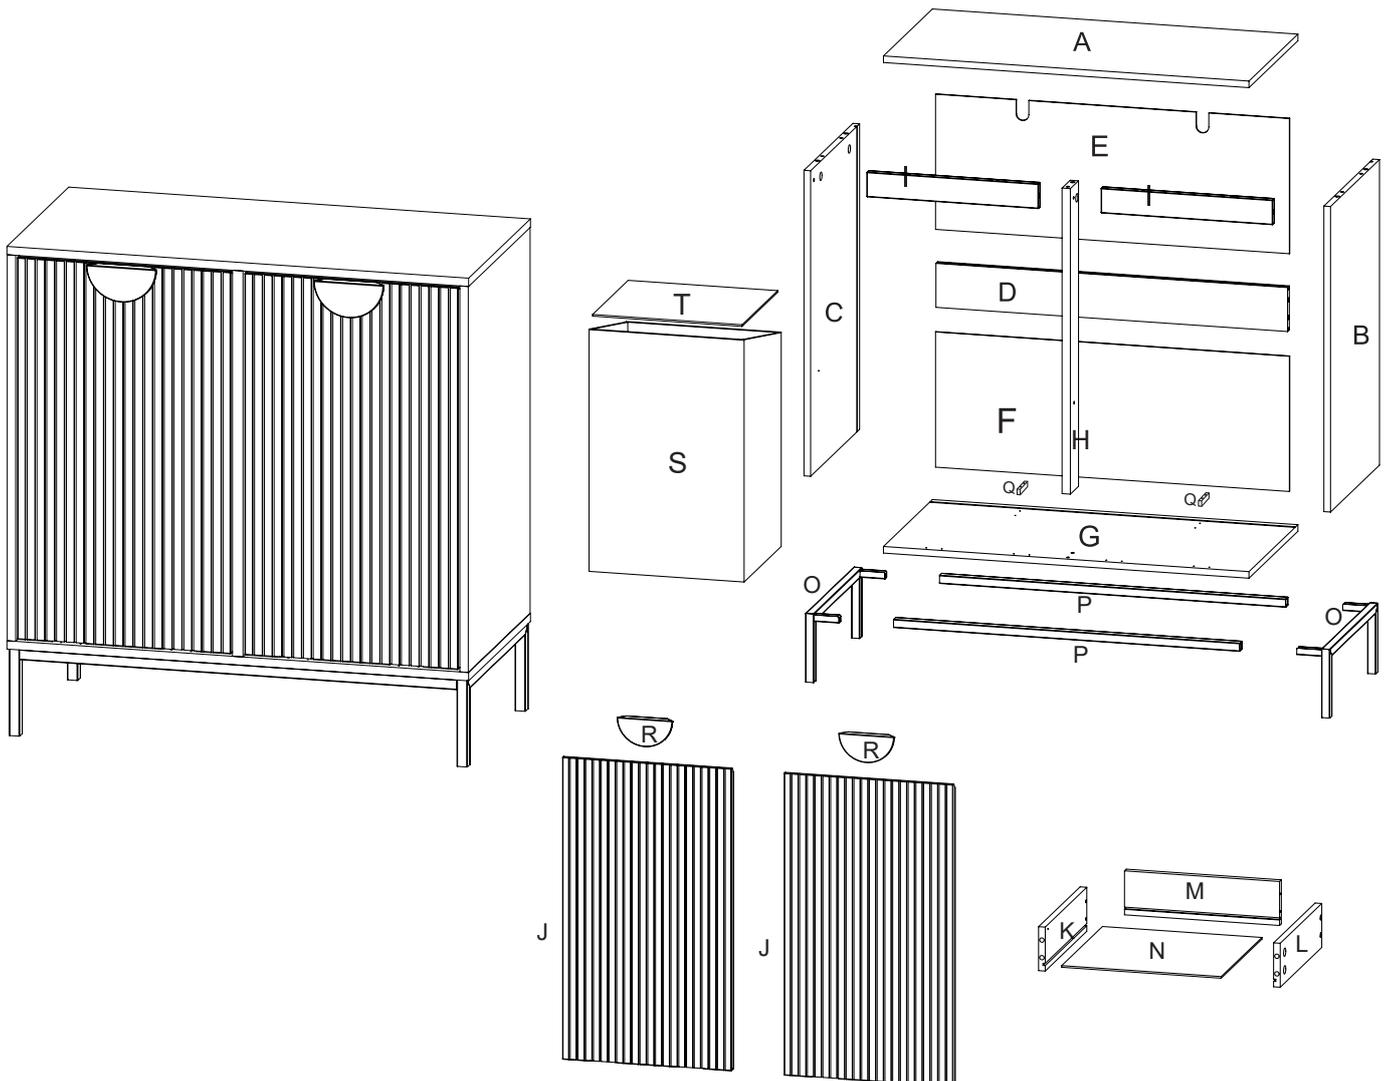


1 Hardware list

 
	a		19pcs
	c		10pcs
	e	6x12mm	4pcs
	g	4x25mm	8pcs
	i		1pc
	k		2pcs
	m		4pcs
	o		2pcs
	q		4pcs

 	b		21pcs
	d	5x40mm	13pcs
	f	5x22mm	8pcs
	h	3x12mm	24pcs
	j		1pc
	l	4x12mm	2 sets
	n	M3	1pc
	p	3x16mm	8 sets
	r	4x30mm	2 sets
	s	M4	1pc

   2 Parts list

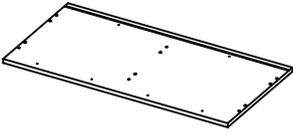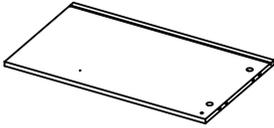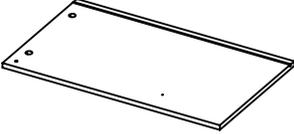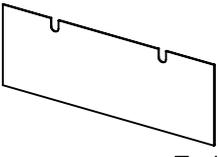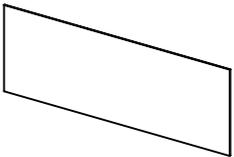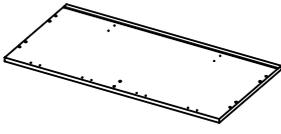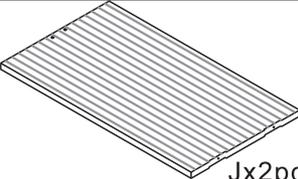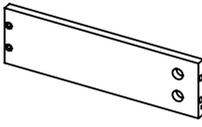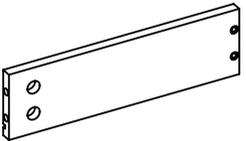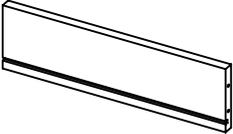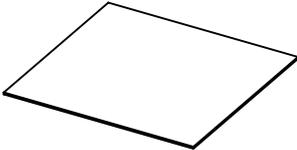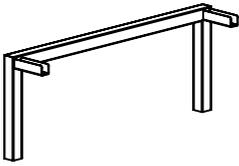
			
Ax1pc	Bx1pc	Cx1pc	Dx1pc
			
Ex1pc	Fx1pc	Gx1pc	Hx1pc
			
Ix2pcs	Jx2pcs	Kx2pcs	Lx2pcs
			
Mx2pcs	Nx2pcs	Ox2pcs	Px2pcs
			
Qx2pcs	Rx2pcs	Sx2pcs	Tx2pcs

STEP 1

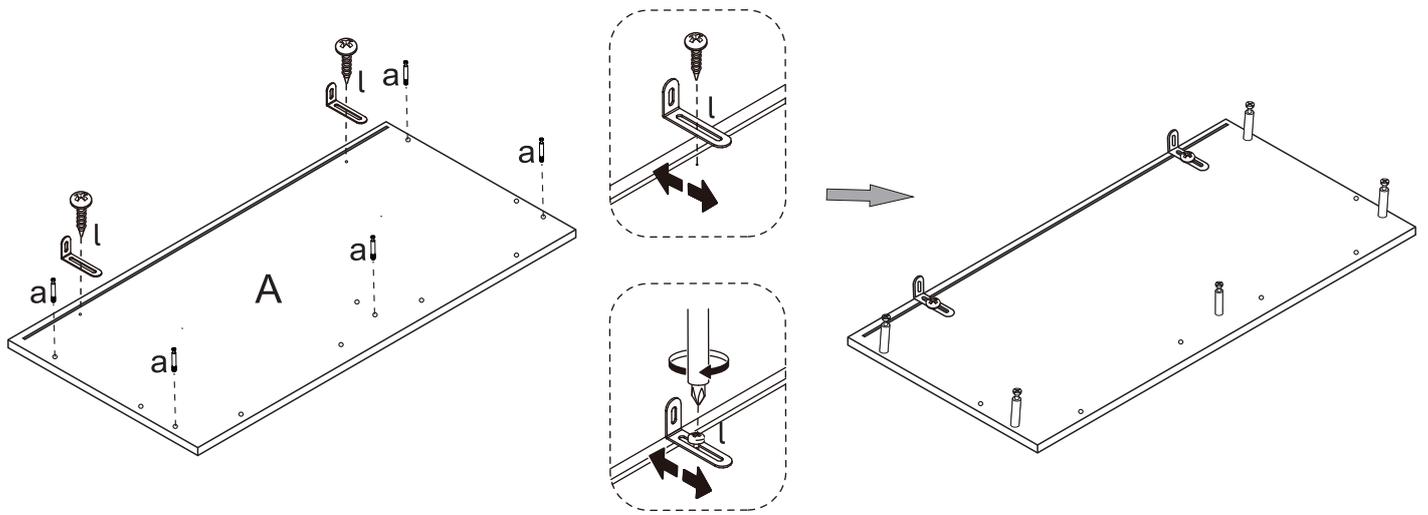


l	x2	a	x5
			

STEP 2

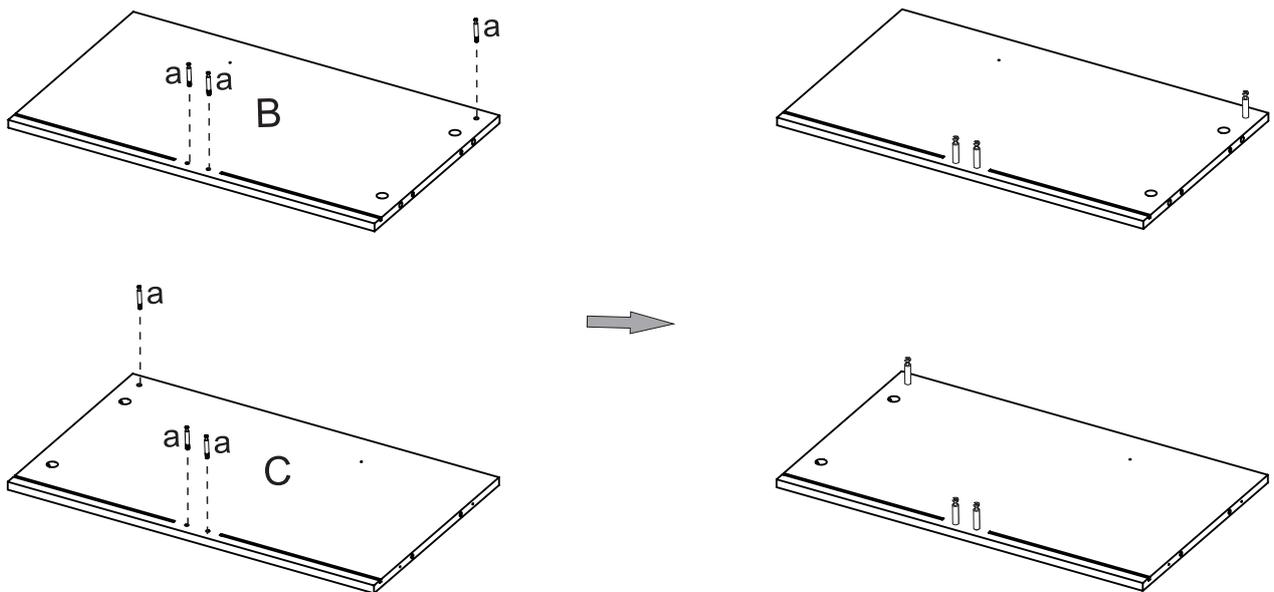


a	x6
	

STEP 3

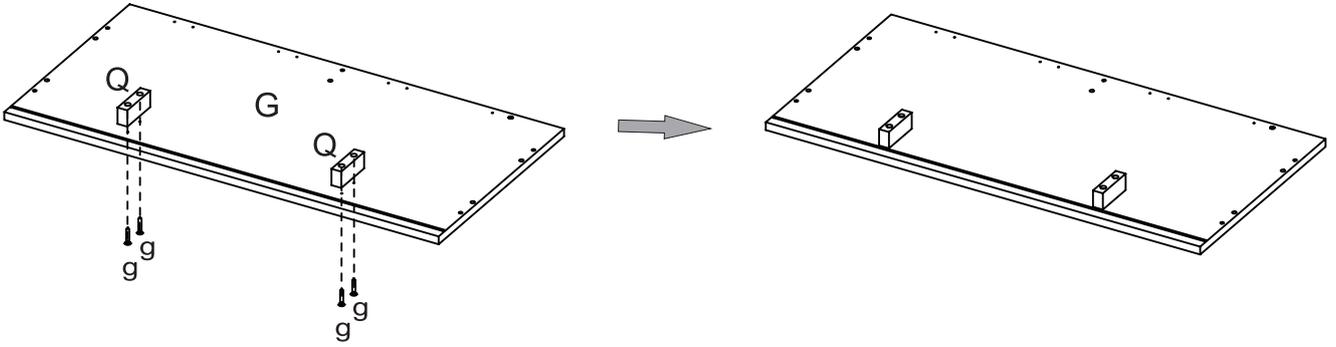




g	x4
	

STEP 4

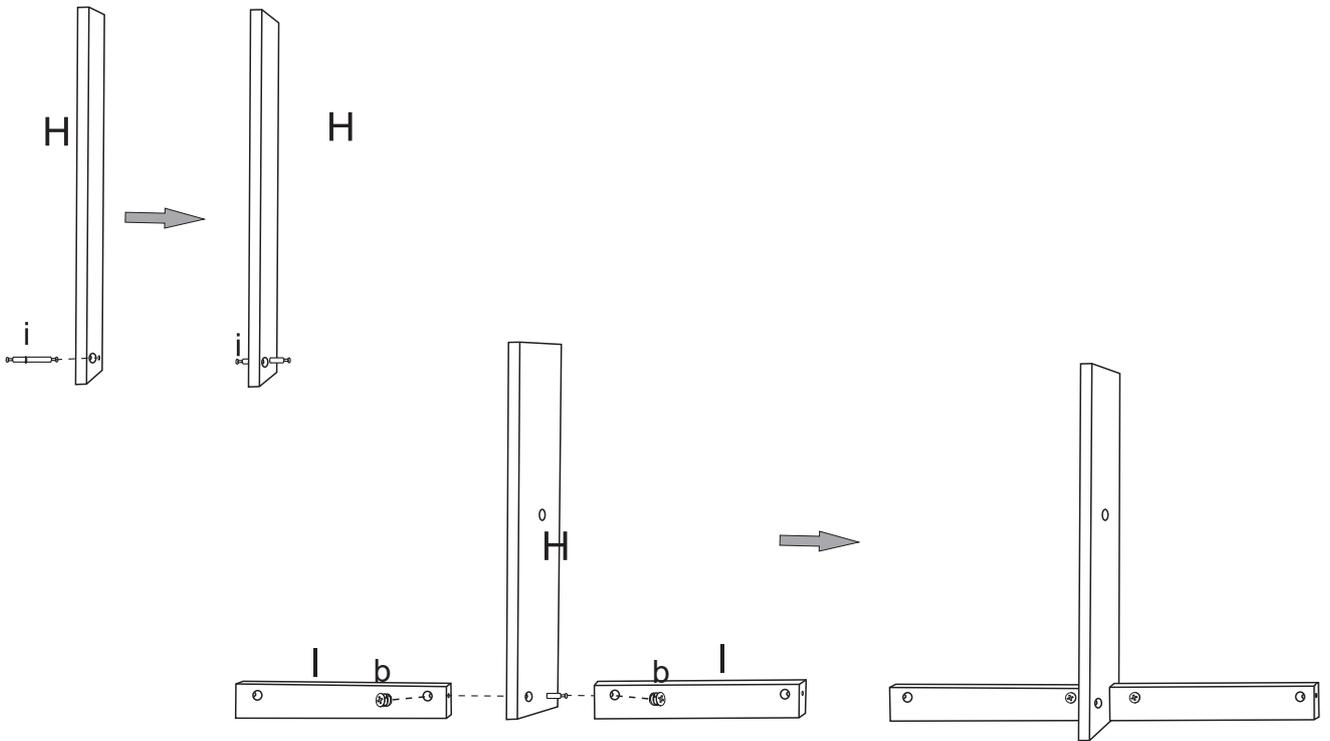




i	x1	b	x2
			

STEP 5

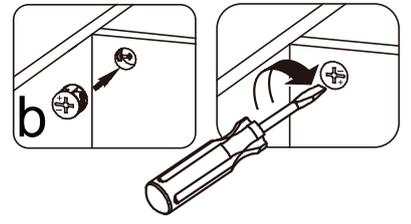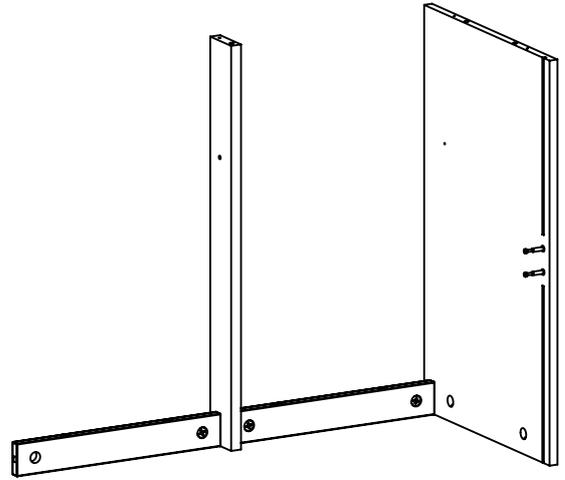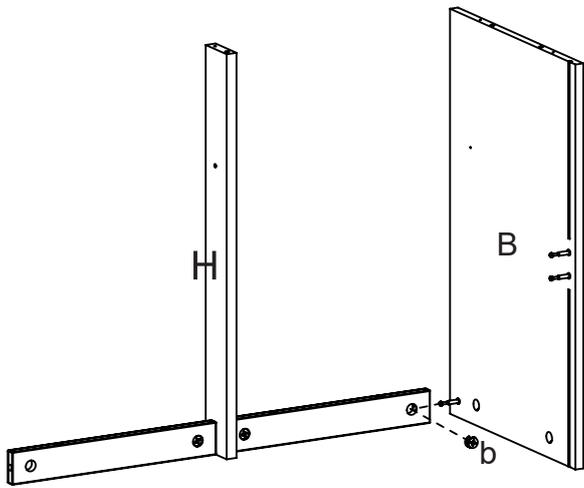



b	x1

STEP 6

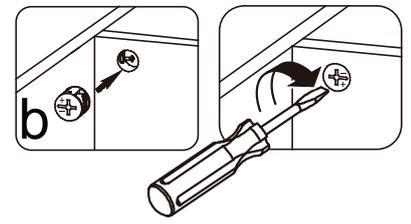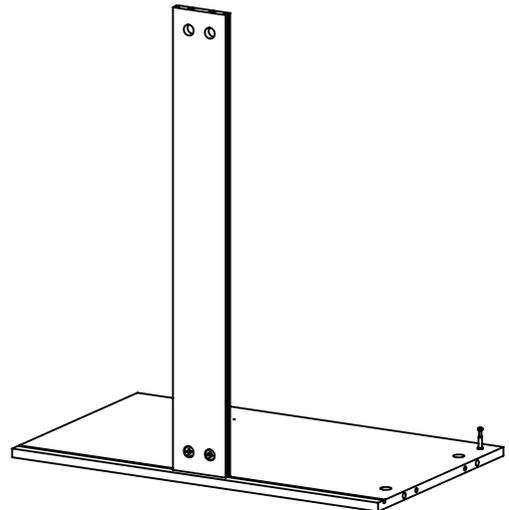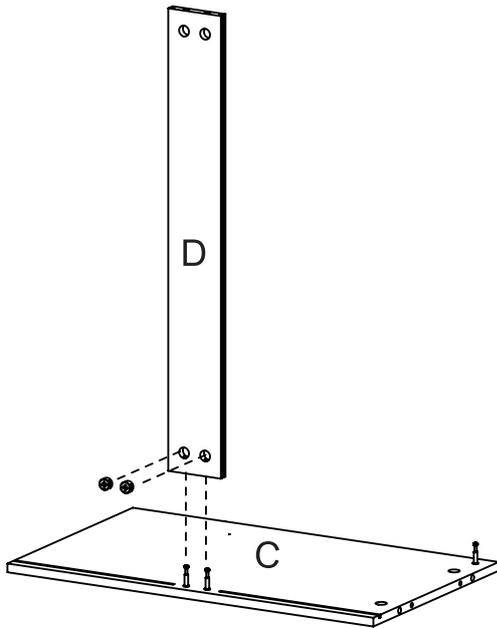


b	x2

STEP 7

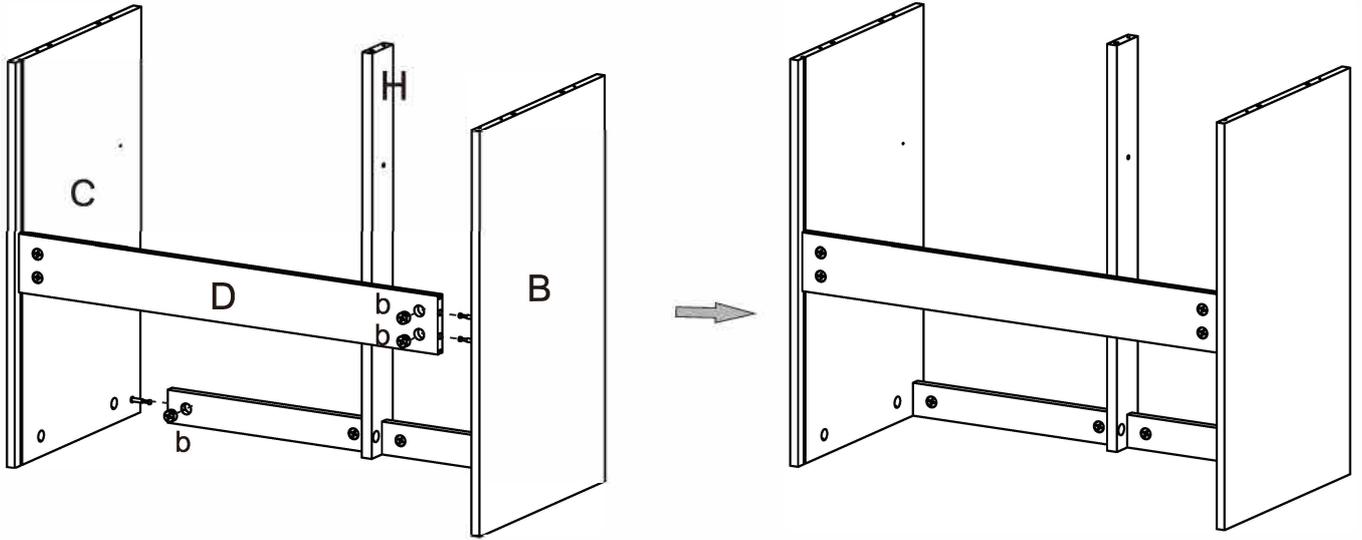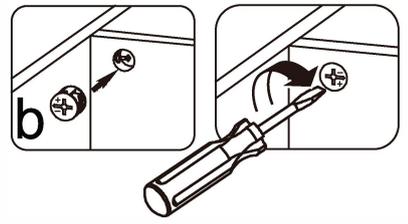


b	x3

STEP 8

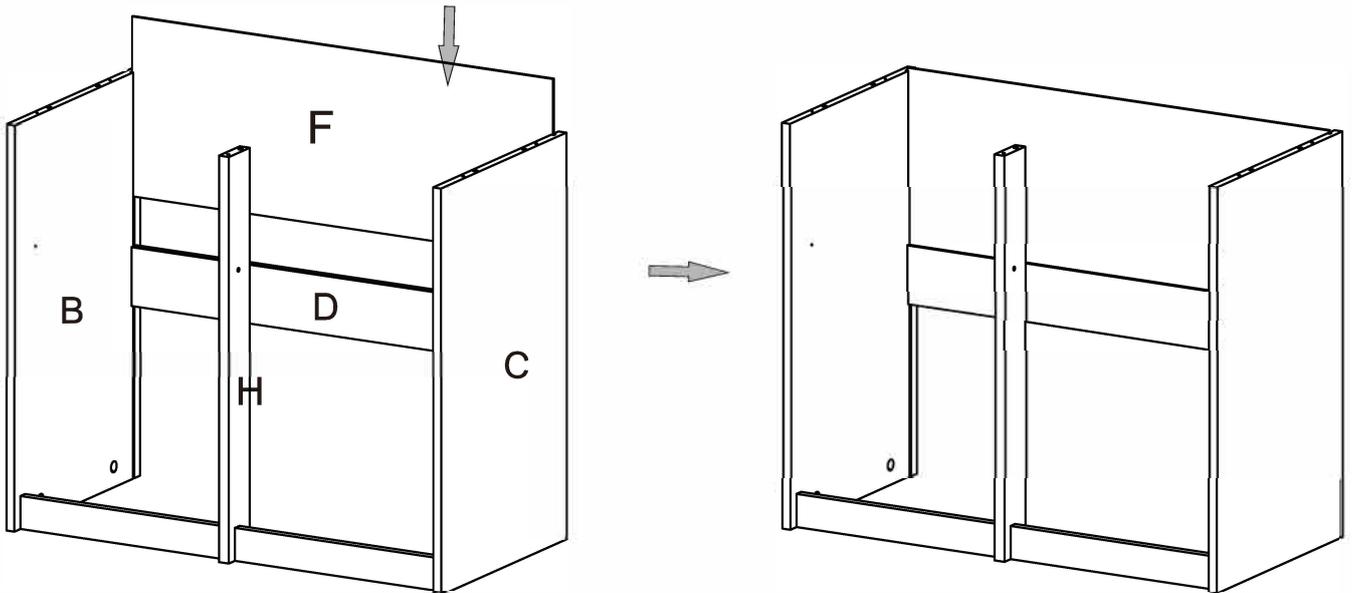


STEP 9

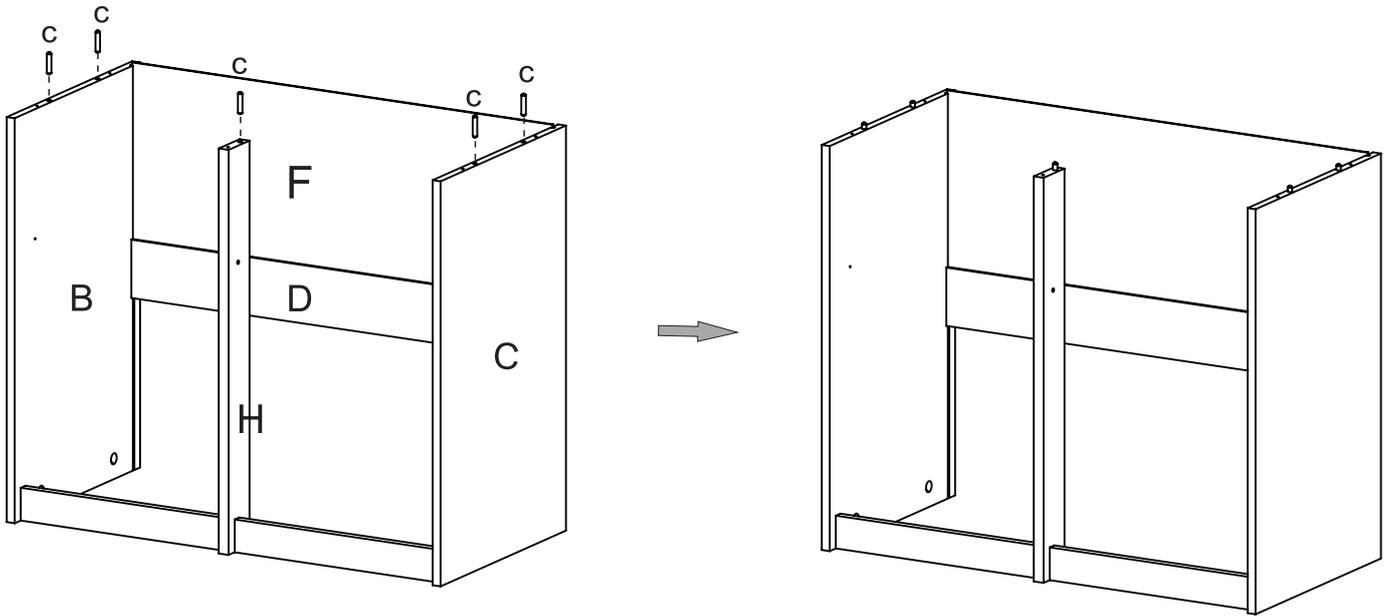


C	x5
	

STEP 10

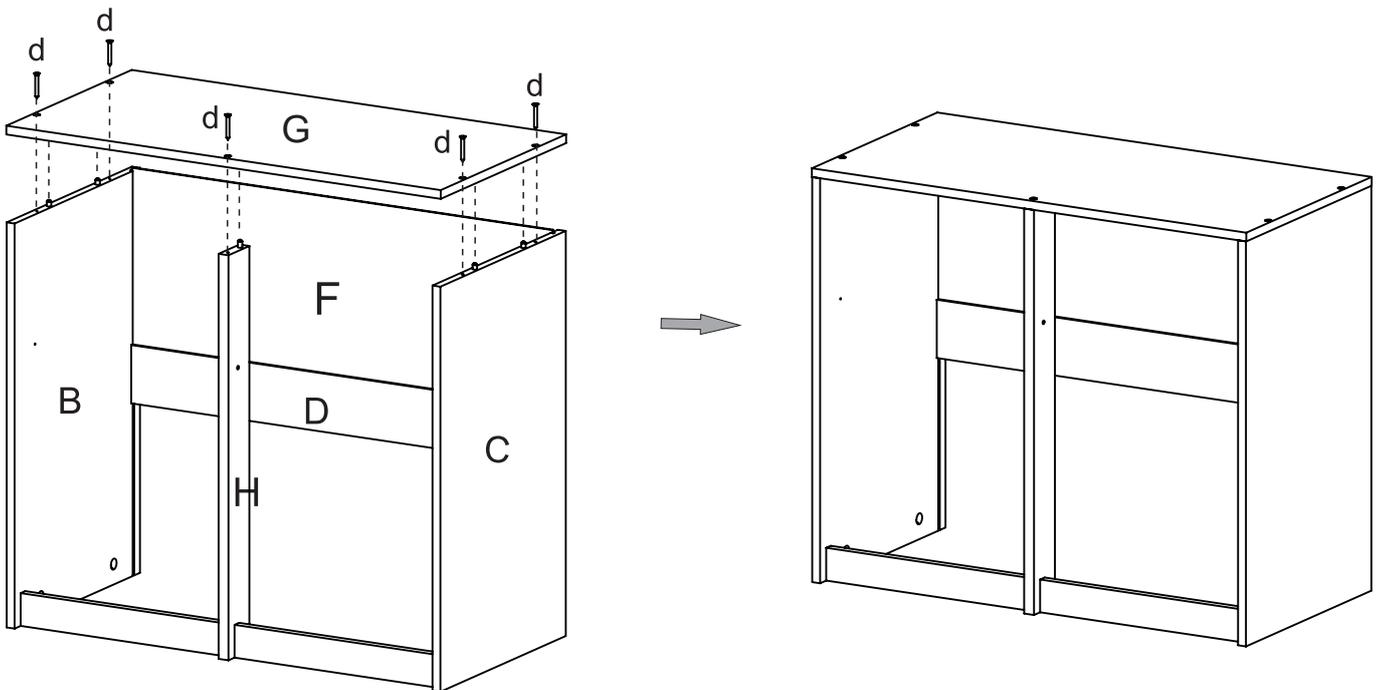


d	x5
	

STEP 11



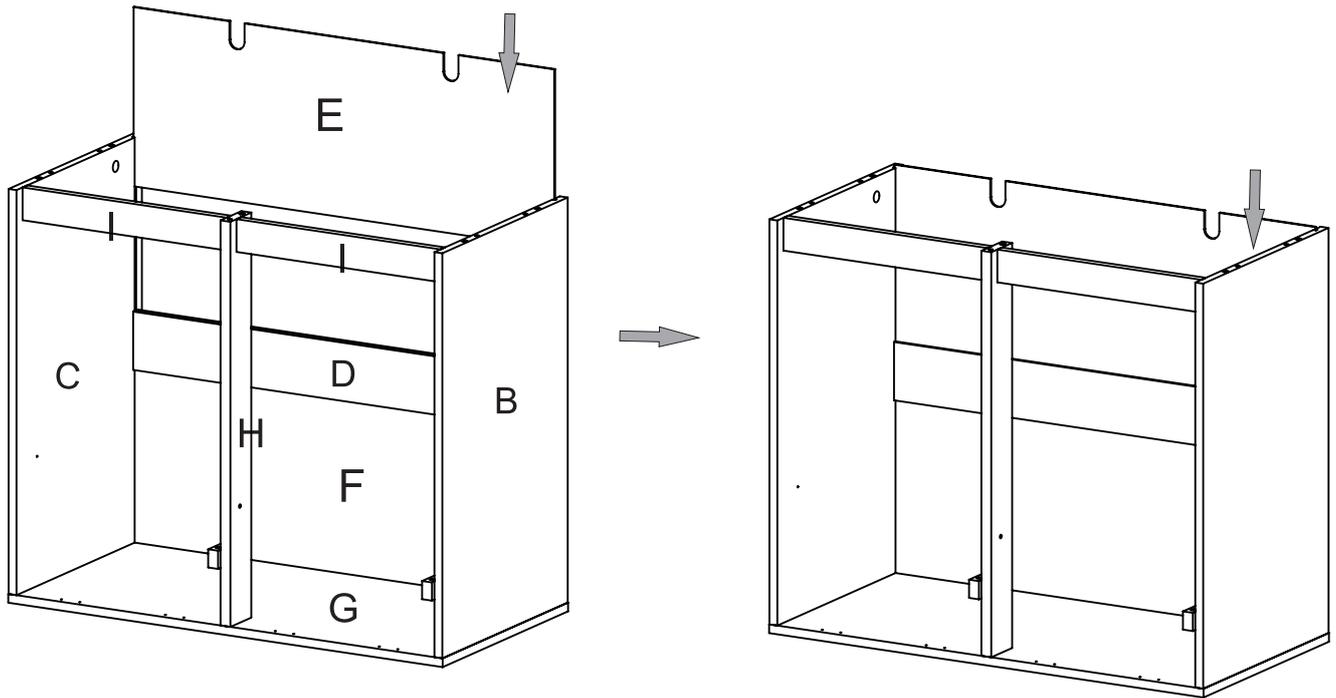


STEP 12

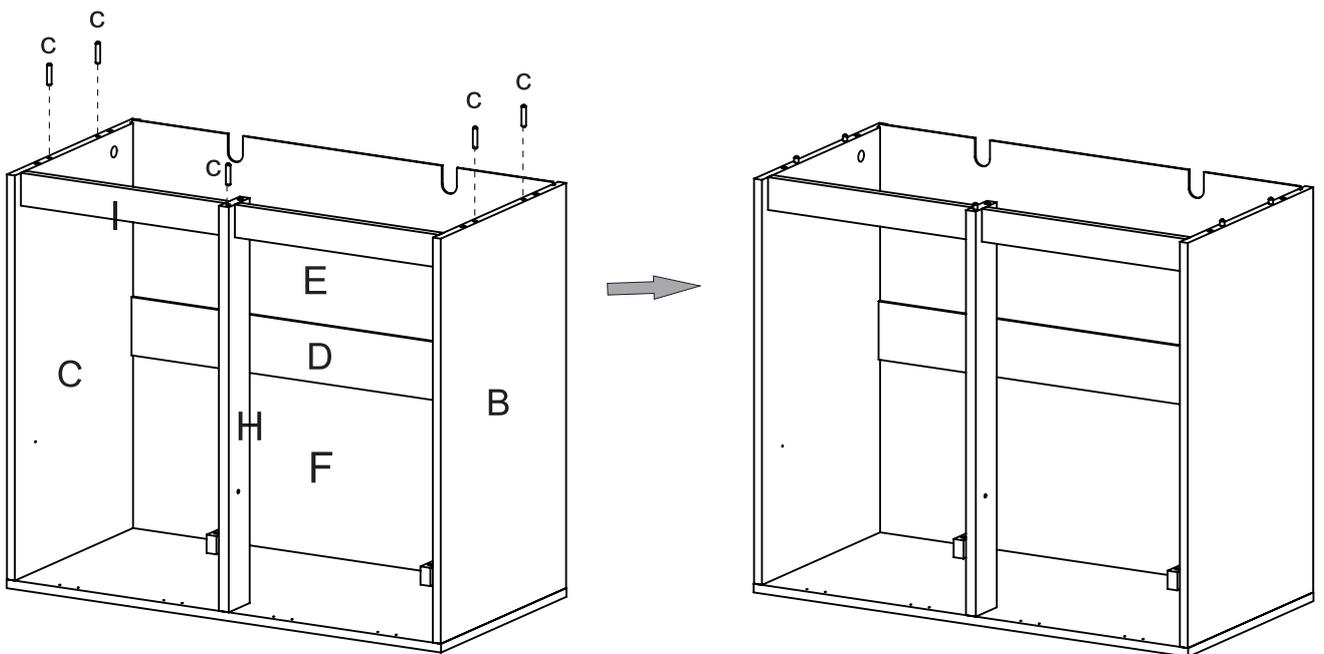



C	x5

STEP 13

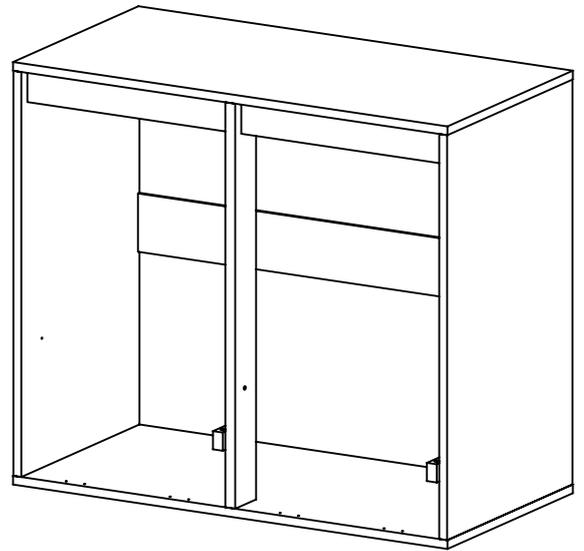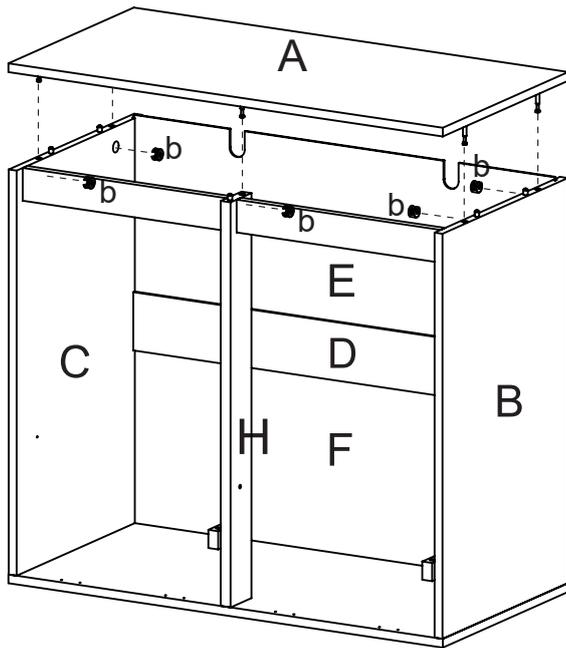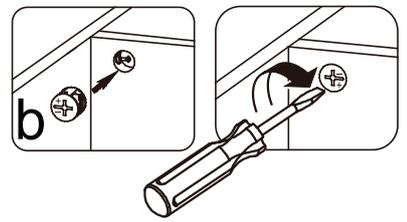


b	x5

STEP 14

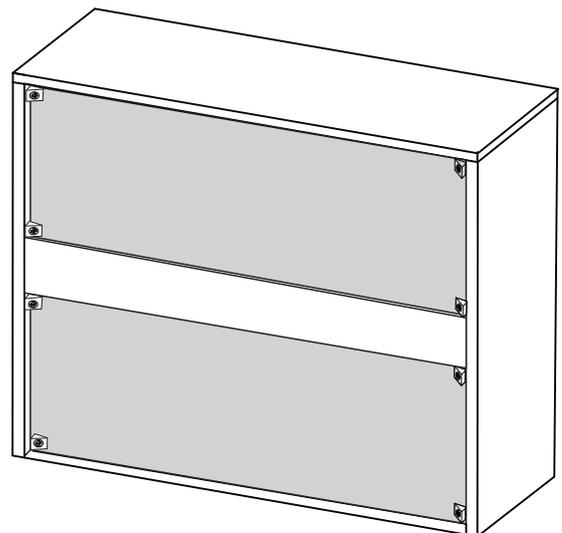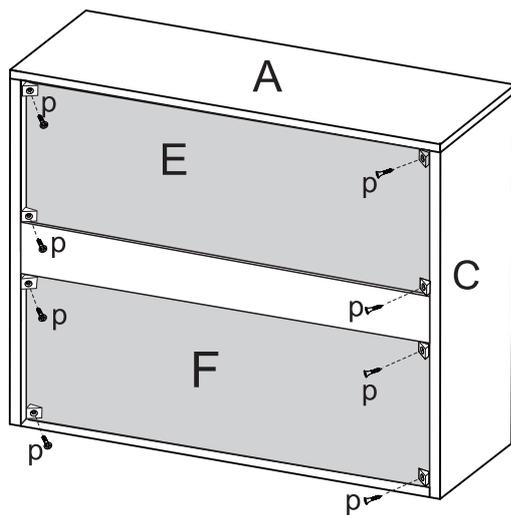


p	x8

STEP 15

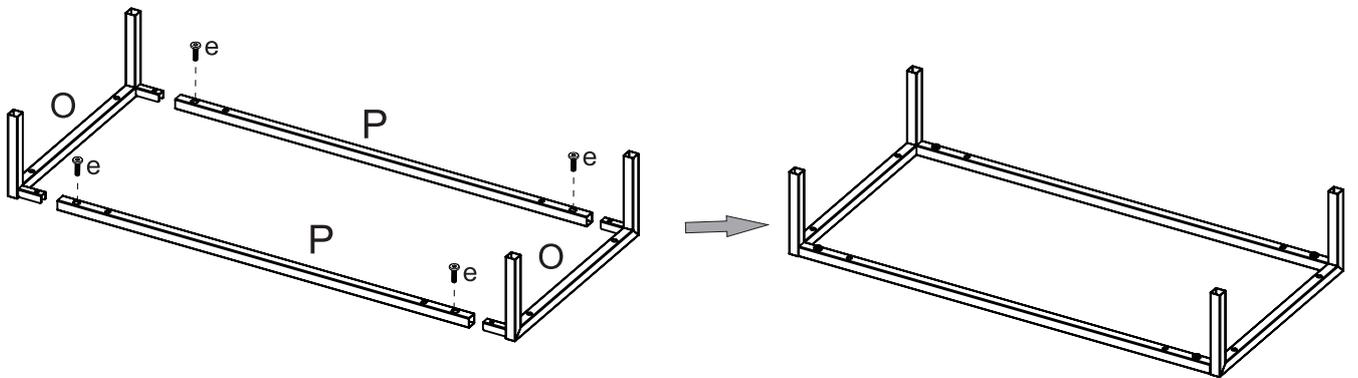


e	x4	s	x1

STEP 16

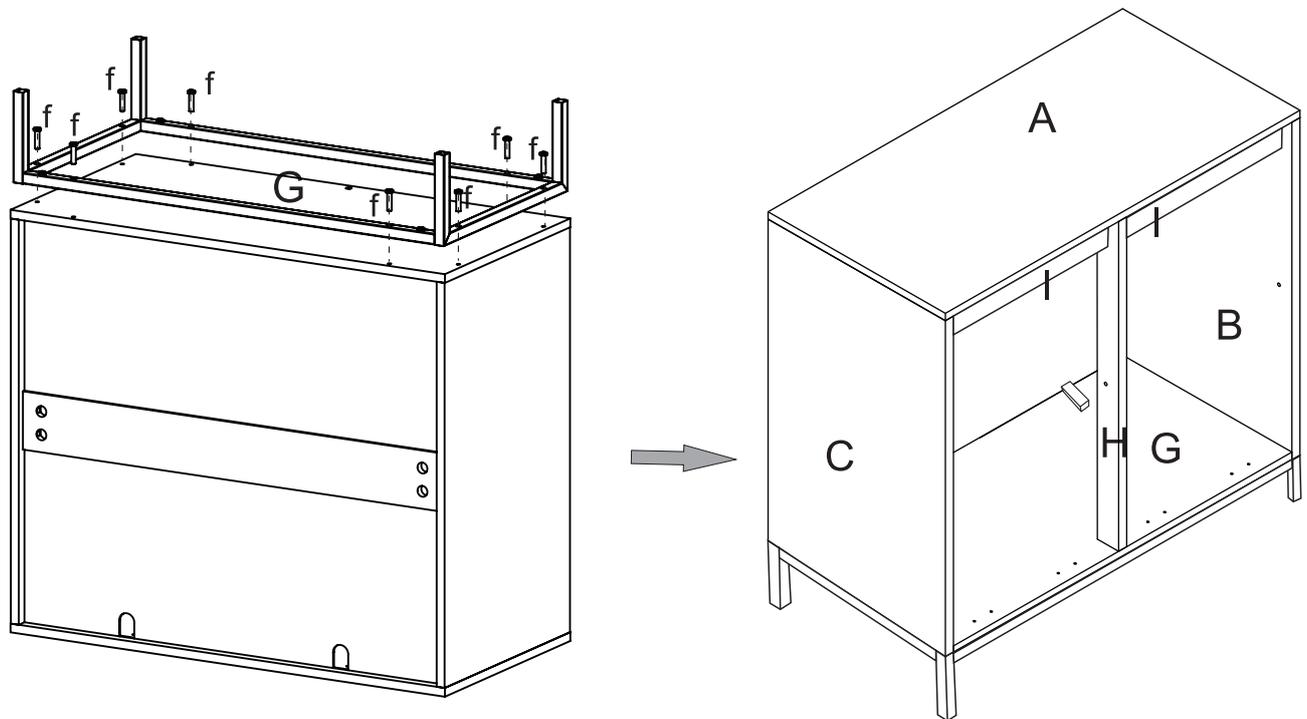


f	x8	n	x1

STEP 17

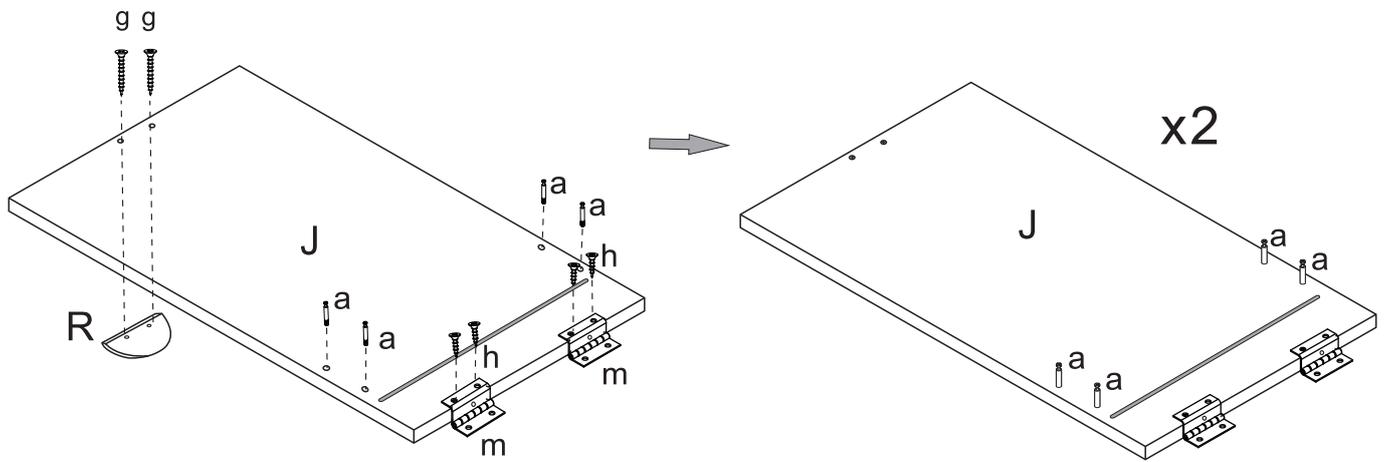

a	x8	g	x4	h	x8	m	x4


STEP 18

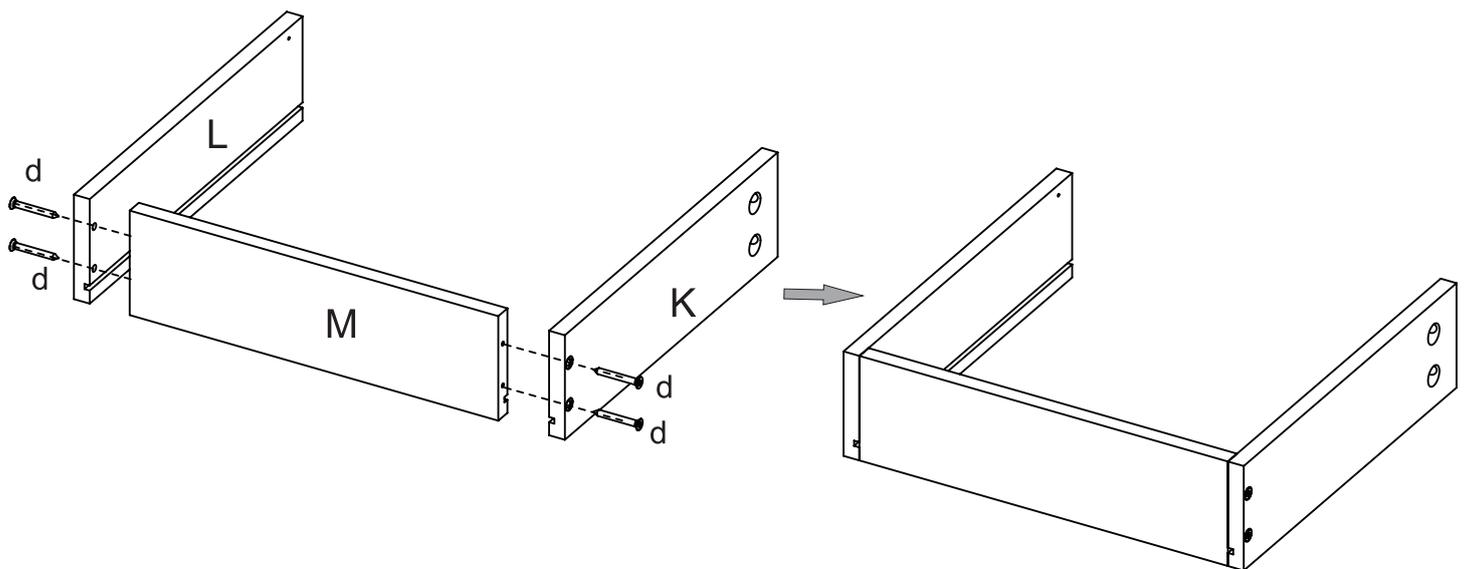


x2

d	x8




STEP 19

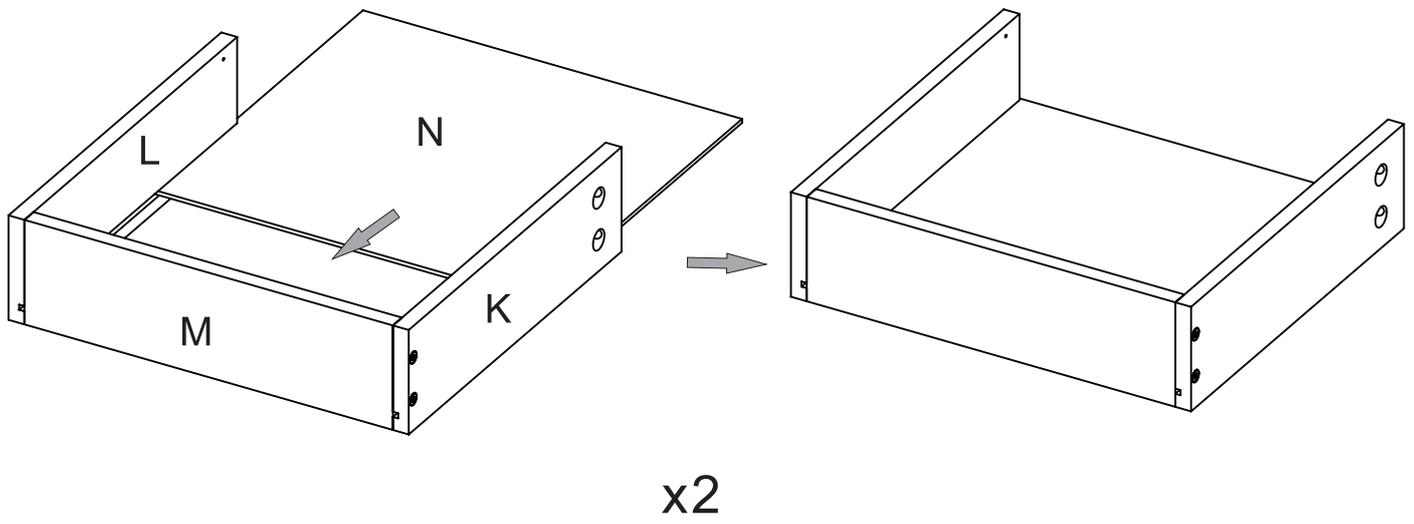

STEP 20


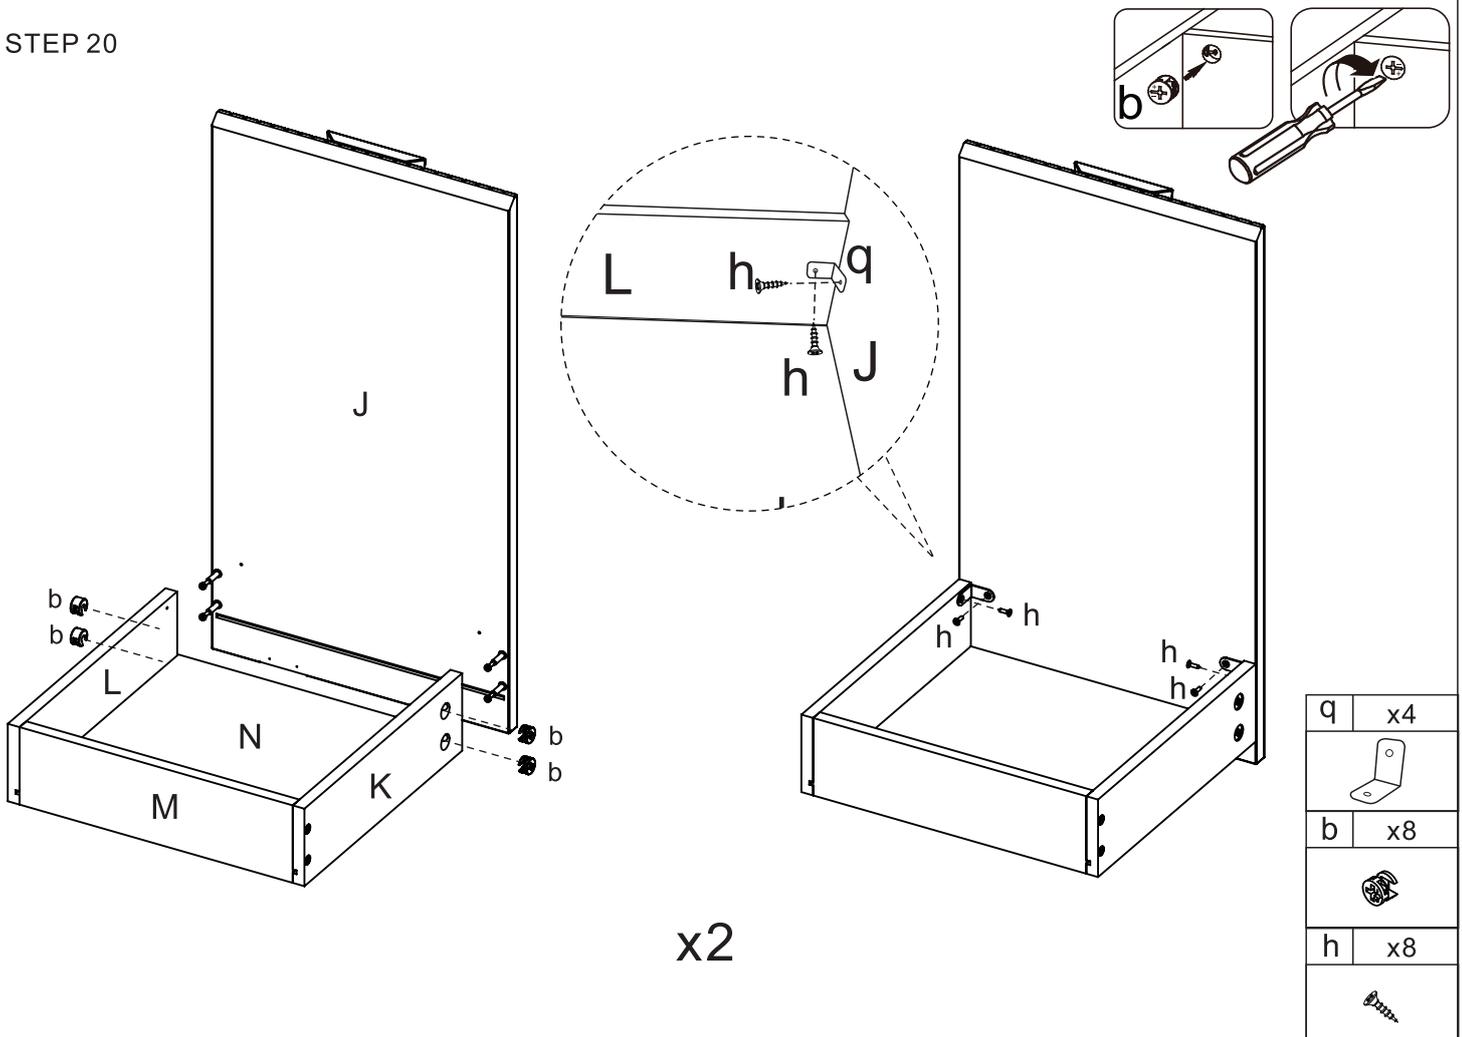


STEP 21

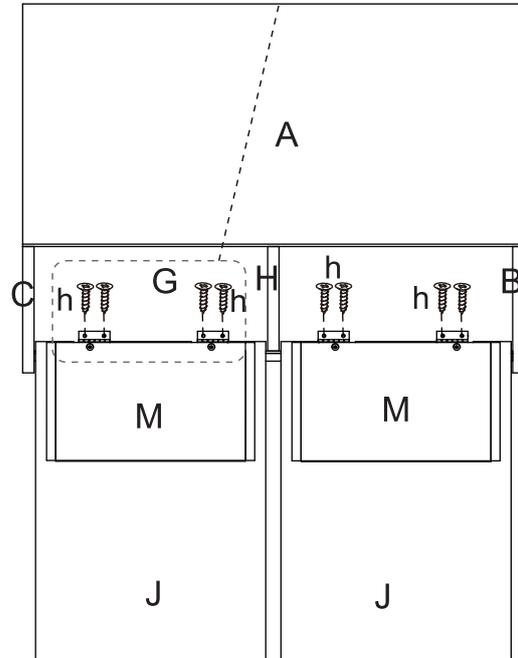
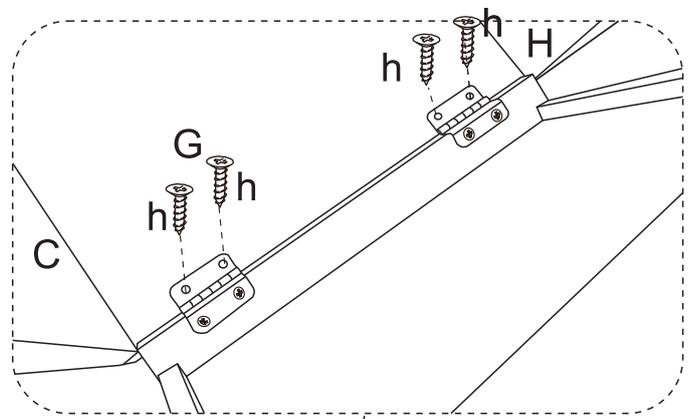
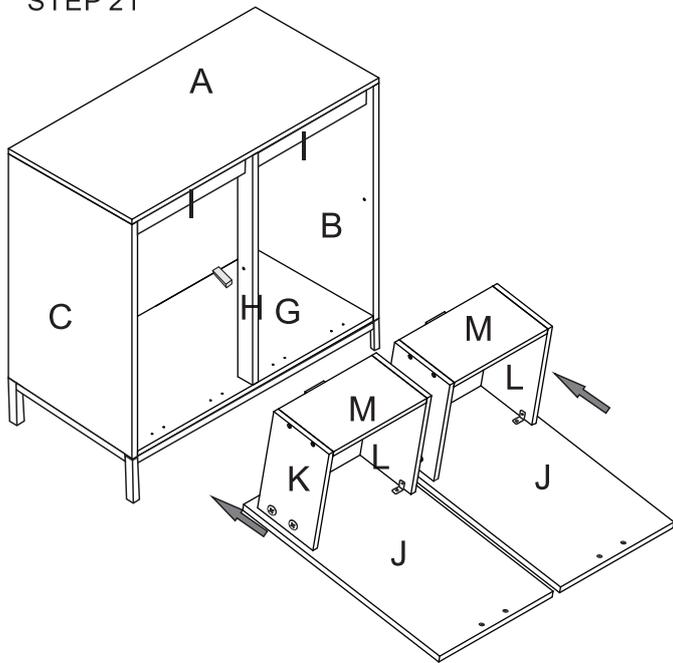


h	x8
	

STEP 22

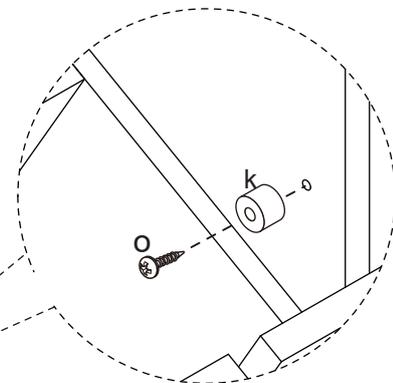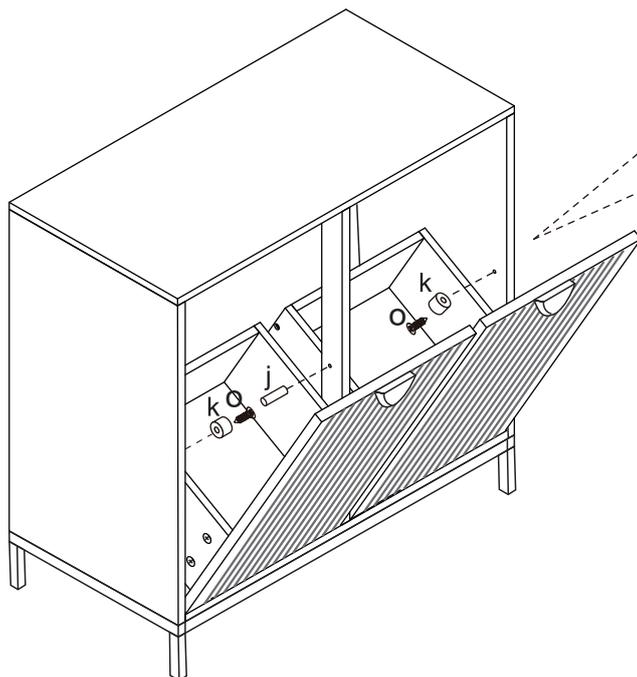

o	x2	j	x1	k	x2
					

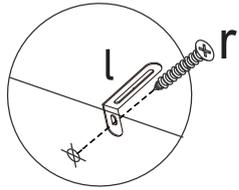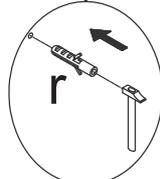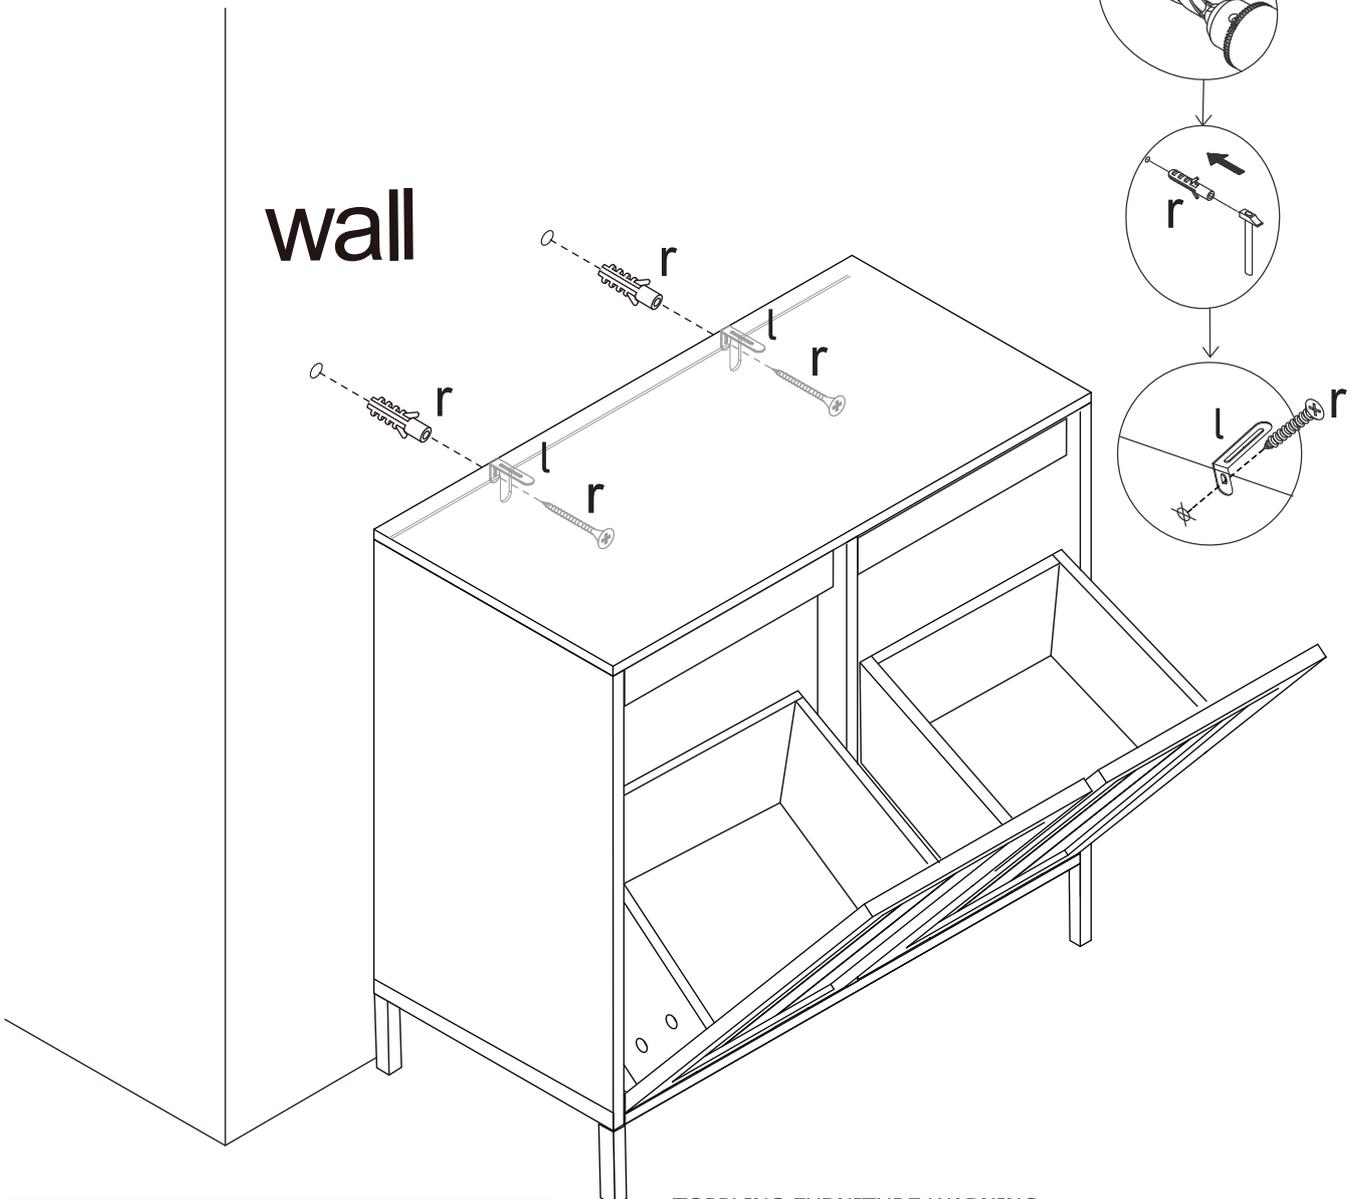

⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:



- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



STEP 24

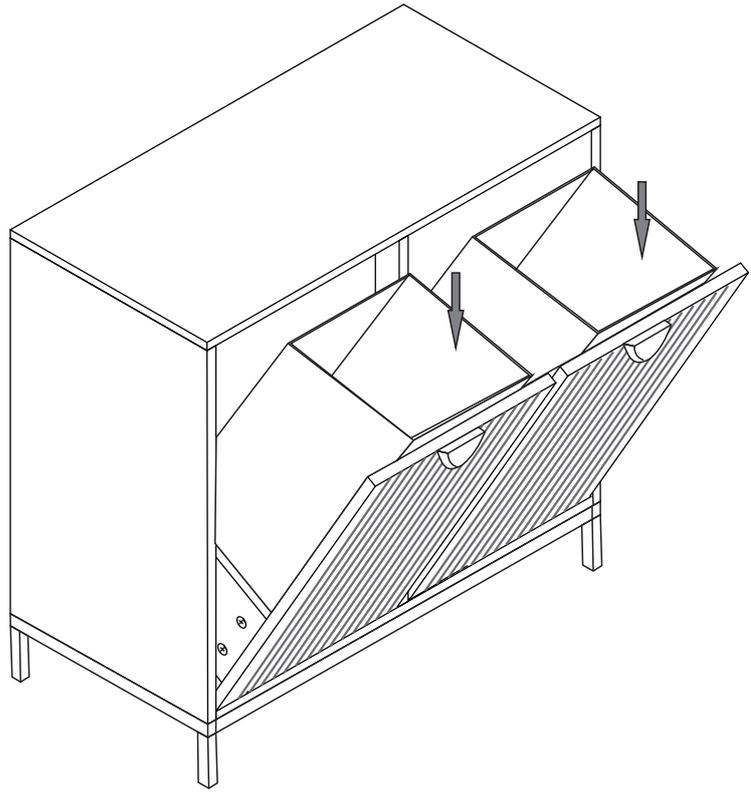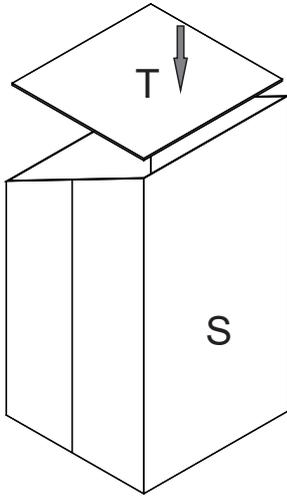

STEP 25

