

# Assembly Instructions

## K:43639946 STEVIE ENTRYWAY UNIT

### CARE INSTRUCTIONS:

Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.


### WARNING:

Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

### MAXIMUM SAFE LOAD:

10KG FOR TOP PANEL, 7KG FOR EACH SHELF, 1.5KG FOR EACH HOOK.

## Parts List

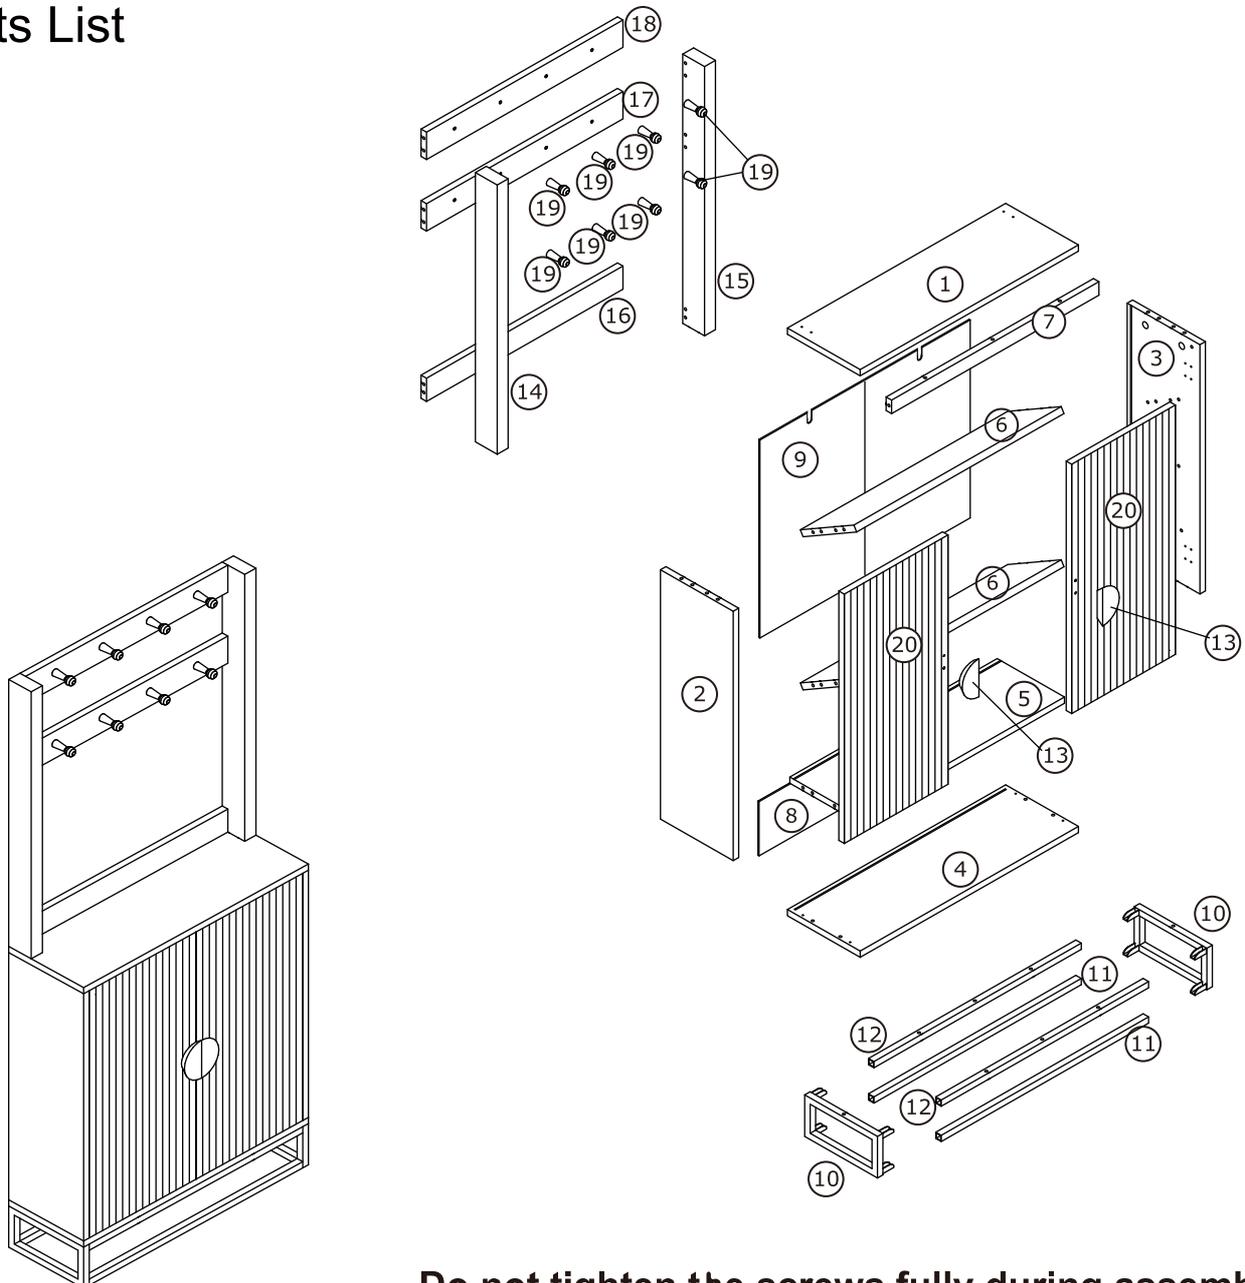





















**Do not tighten the screws fully during assembly  
Fully tighten screws after the final assembly steps**

# Hardware List

  	a	6x35mm	28pcs
	b	15x10mm	28pcs
	c	6x30mm	22pcs
	d	4x35mm	3pcs
	e		4pcs
	f		4pcs
	g	4x25mm	4pcs
	r		2sets
	s		2pcs


	h		24pcs
	i		8sets
	j		2sets
	k		8pcs
	l	4x40mm	9pcs
	m		10pcs
	n		1pc
	o		8pcs

## PANEL LAYOUT

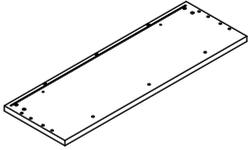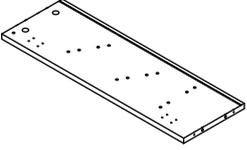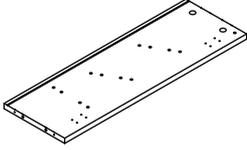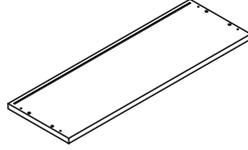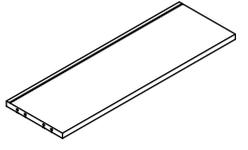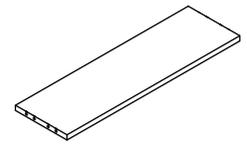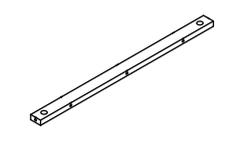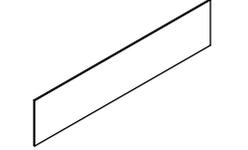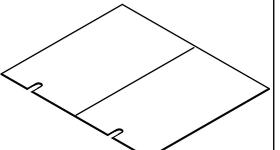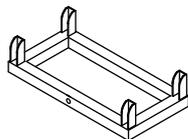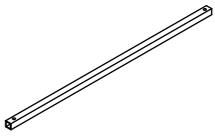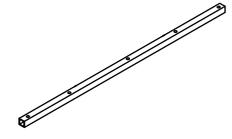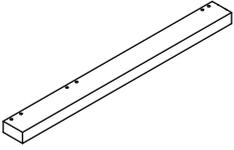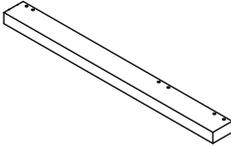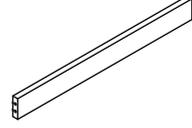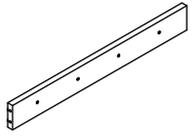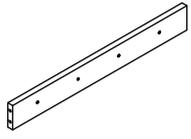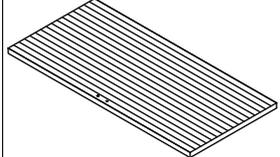			
① 1PC	② 1PC	③ 1PC	④ 1PC
			
⑤ 1PC	⑥ 2PCS	⑦ 1PC	⑧ 1PC
			
⑨ 1PC	⑩ 2PCS	⑪ 2PCS	⑫ 2PCS
			
⑬ 2PCS	⑭ 1PC	⑮ 1PC	⑯ 1PC
			
⑰ 1PC	⑱ 1PC	⑲ 8PCS	⑳ 2PCS


# STEP 1

 ox8

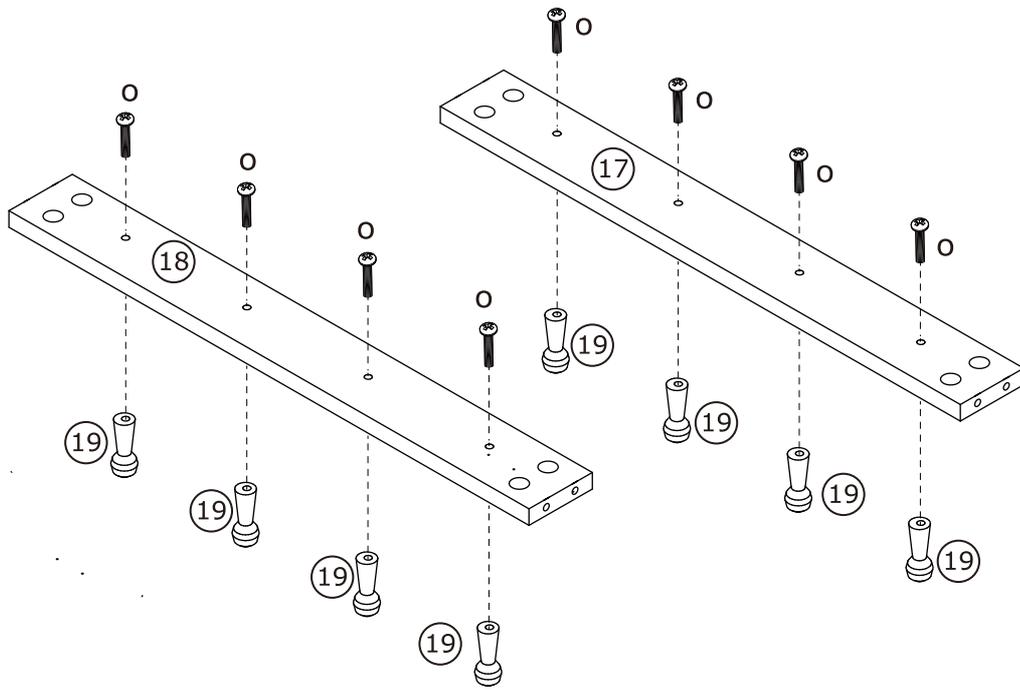


# STEP 2

 ax12

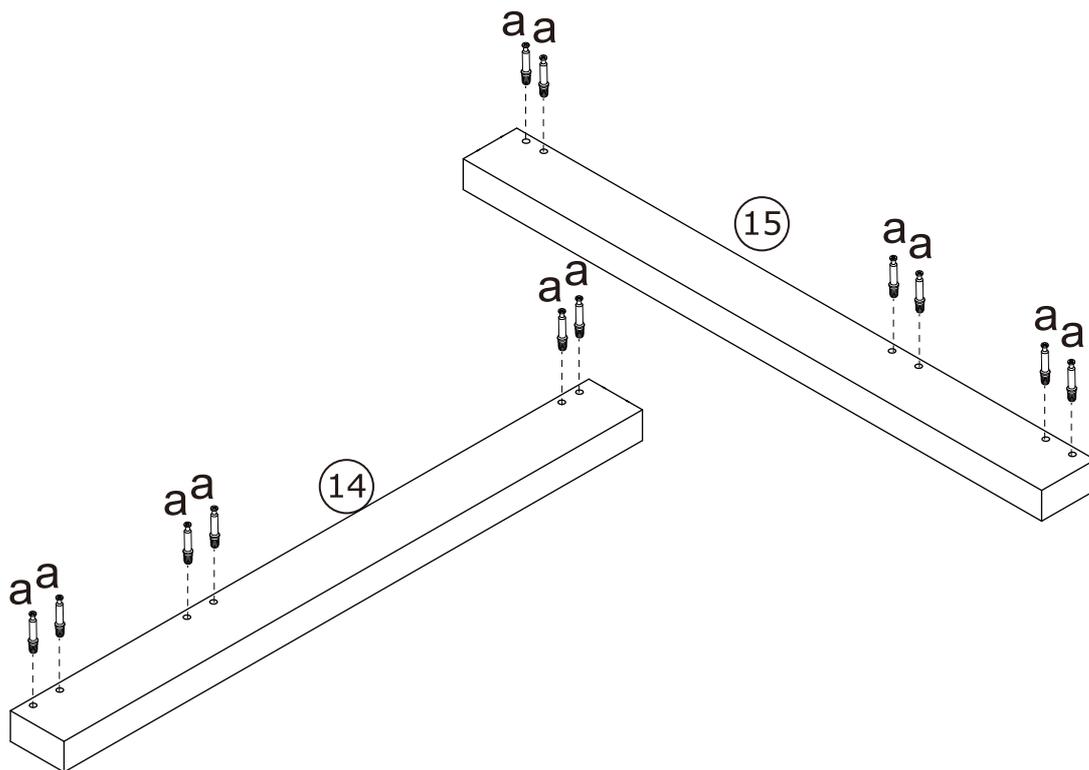


### STEP 3

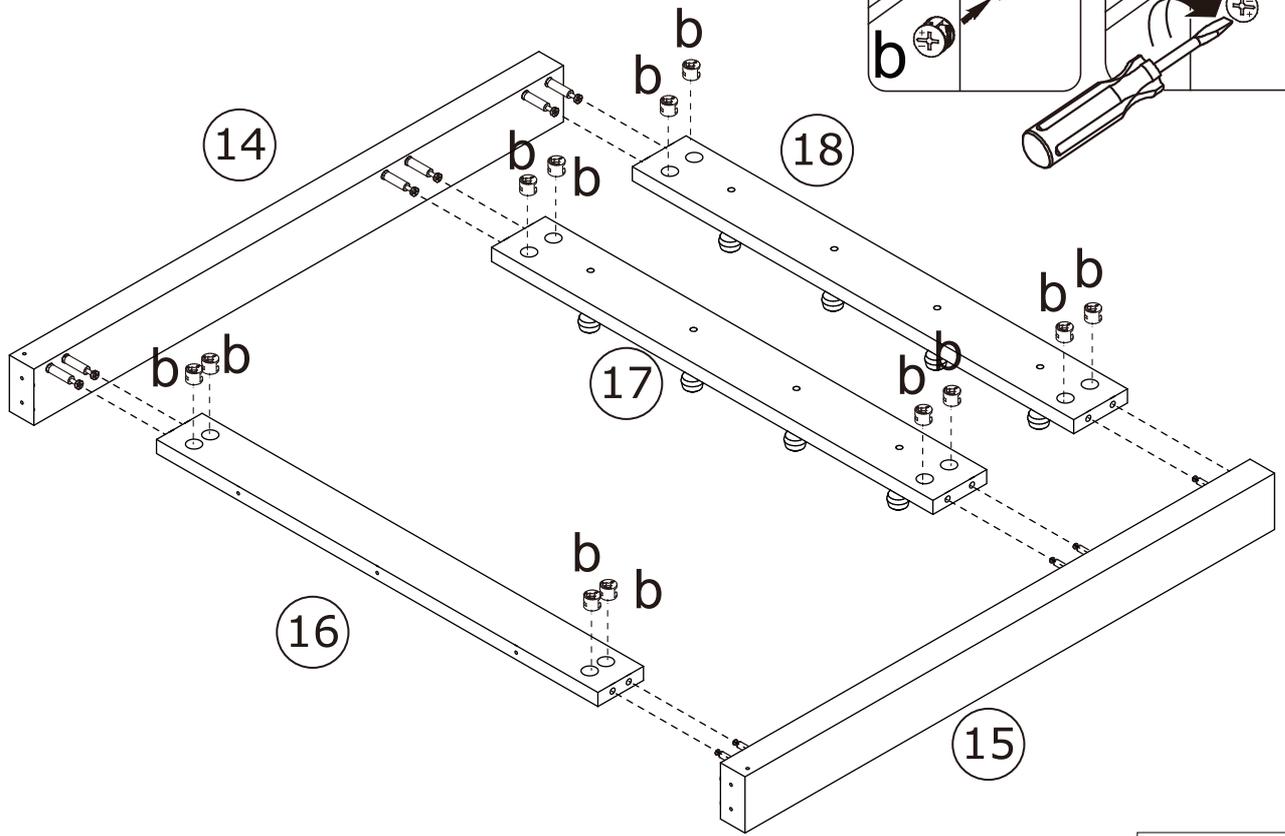



 bx12

### STEP 4

 ax12


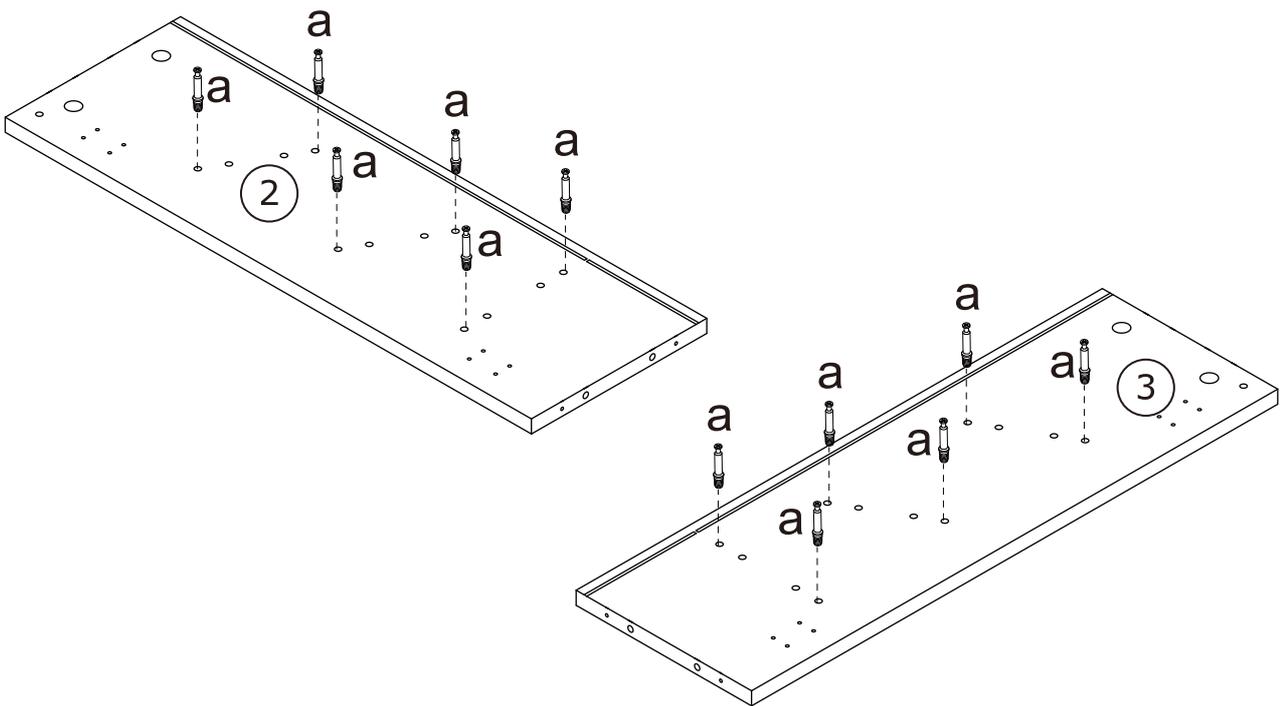


## STEP 5

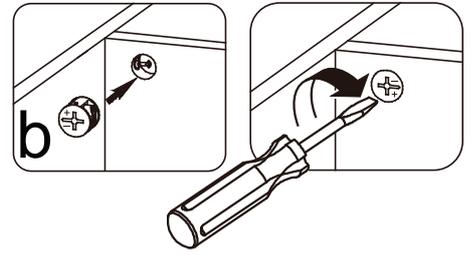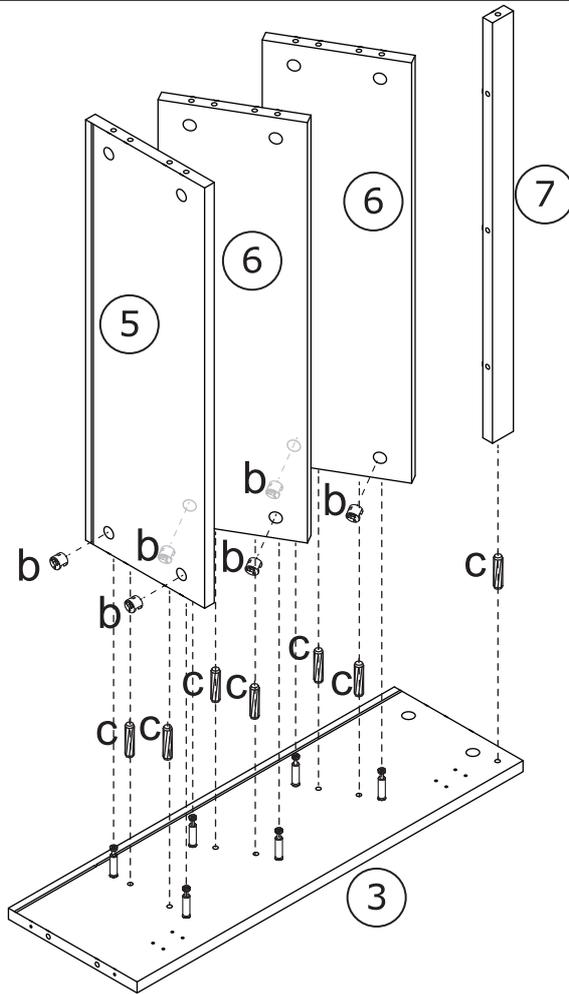


	bx6
	cx7

## STEP 6

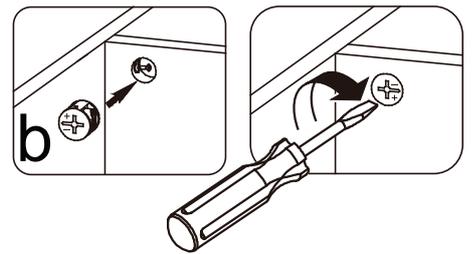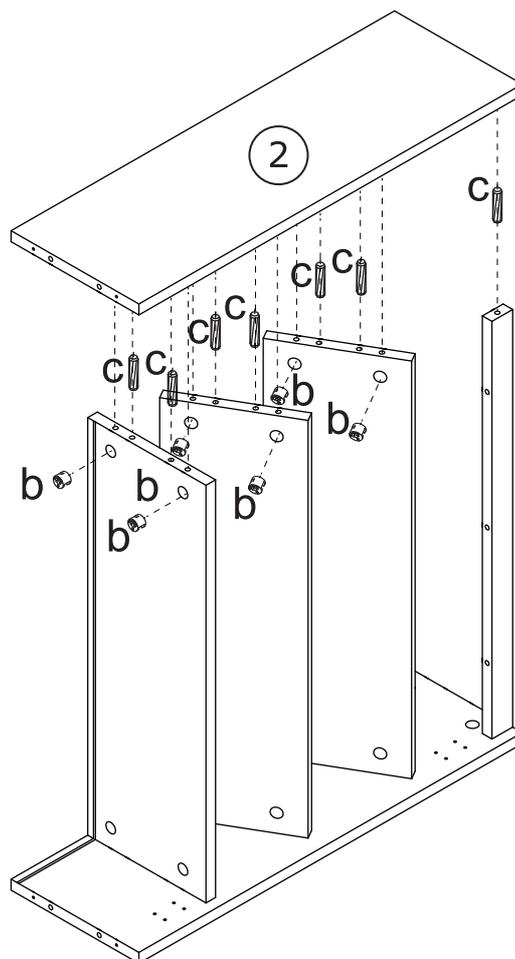


	bx6
	cx7


# STEP 7

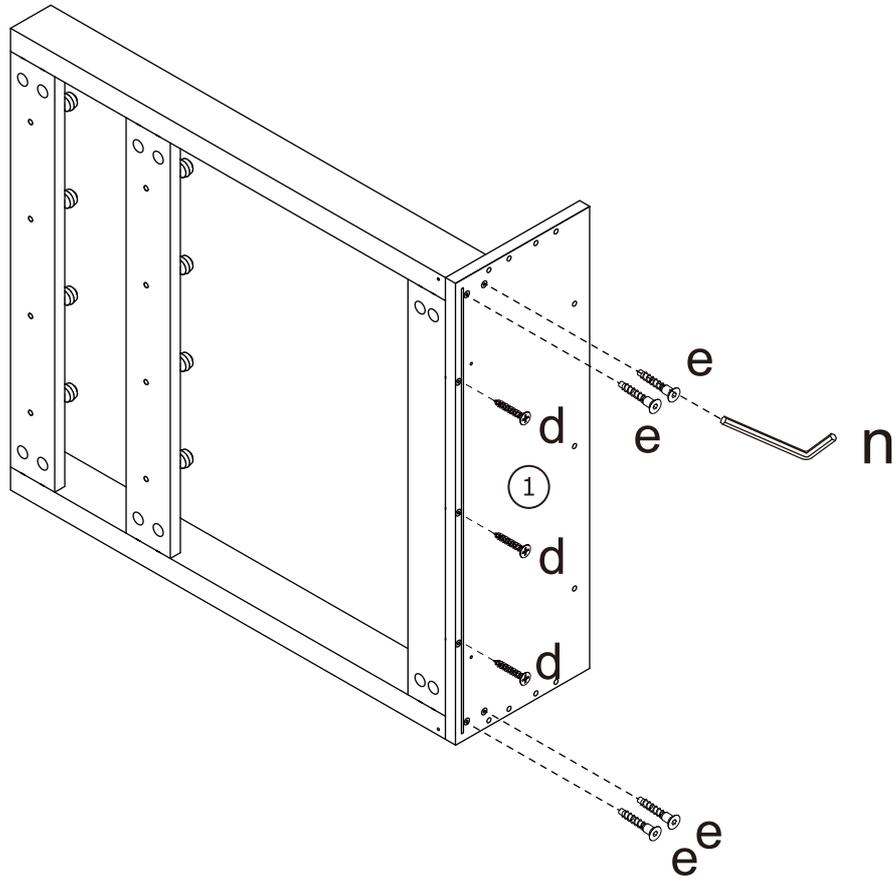



# STEP 8

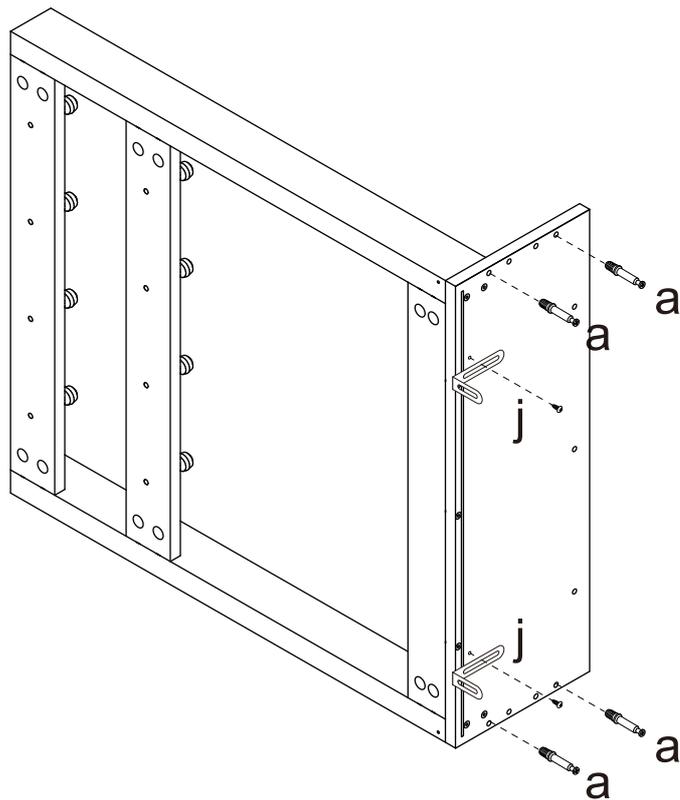

## STEP 9

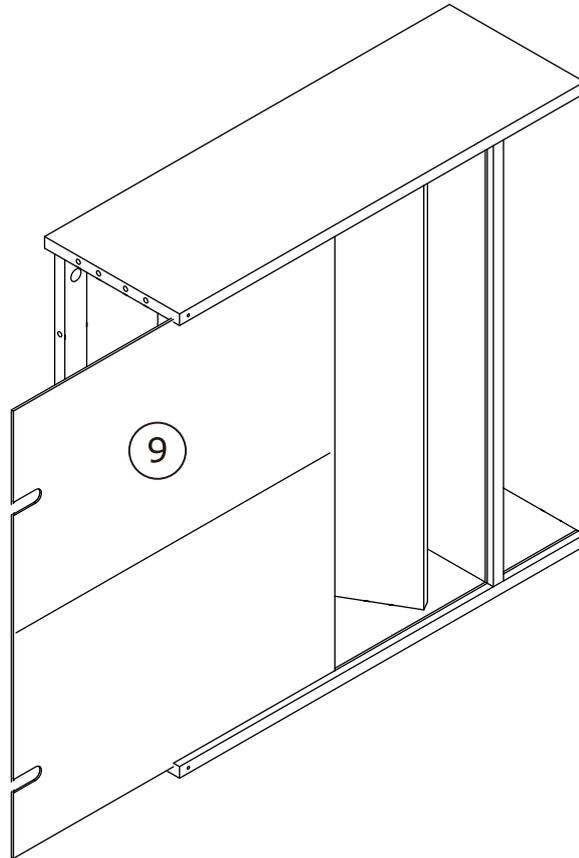


## STEP 10

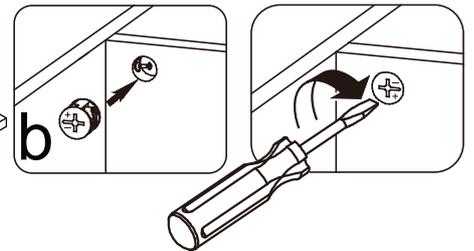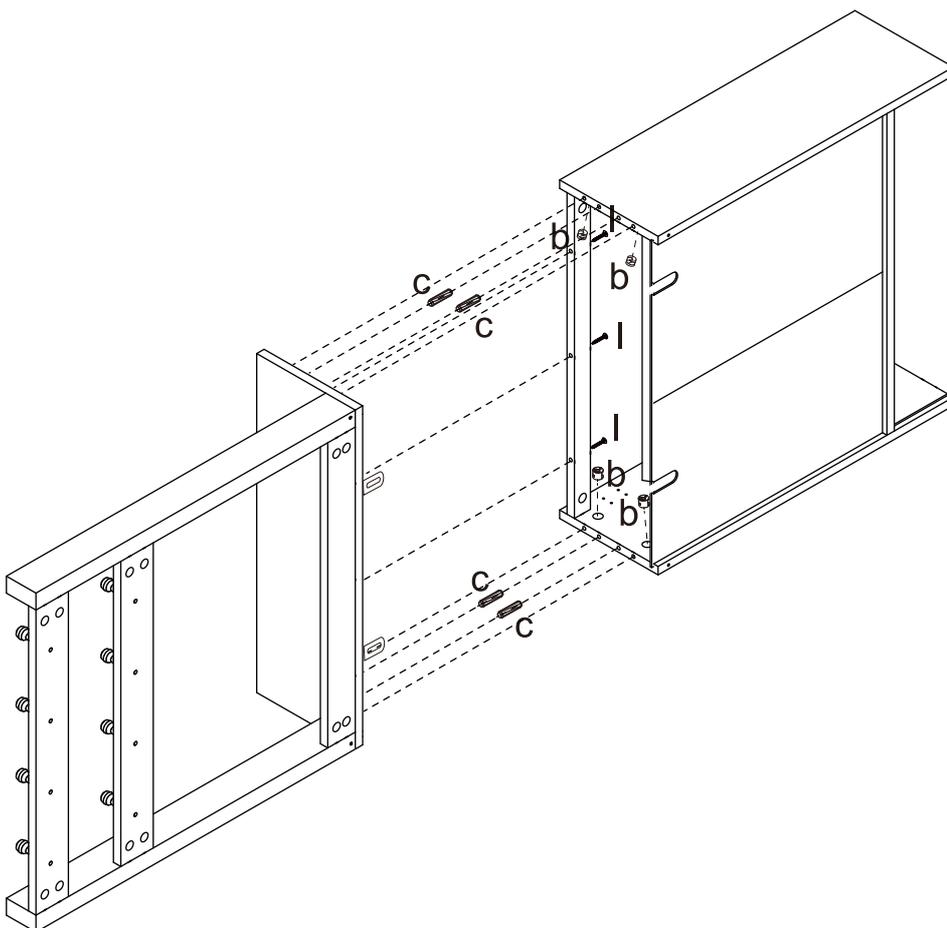


	bx4
	cx4
	lx3

# STEP 11

 rx2

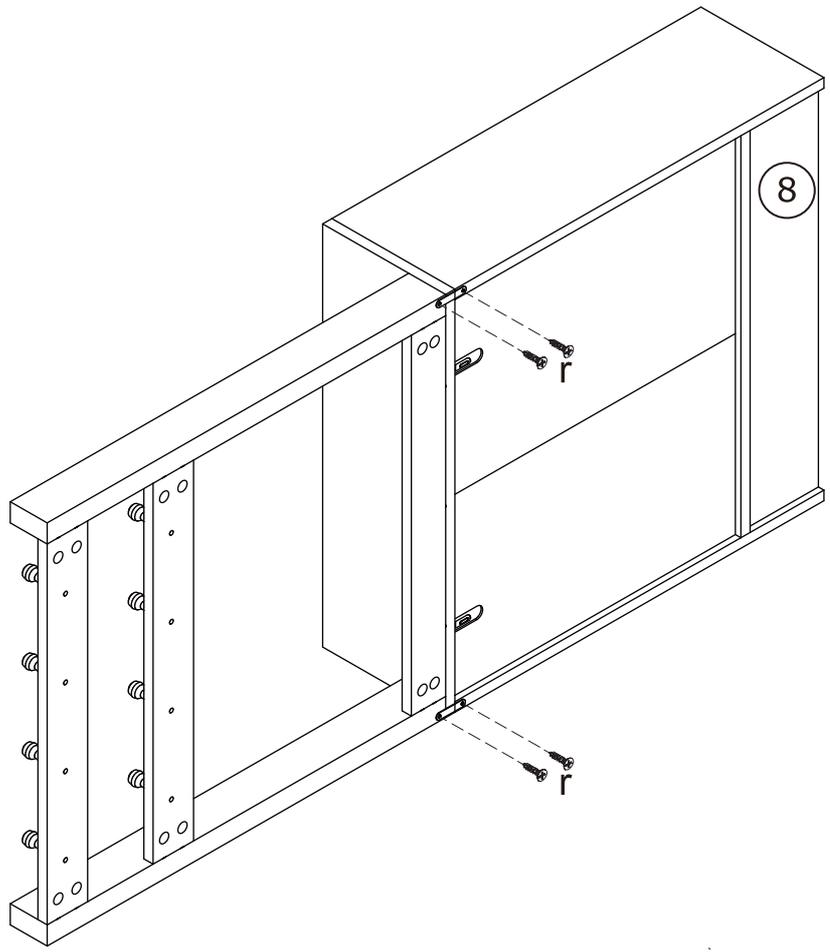


# STEP 12

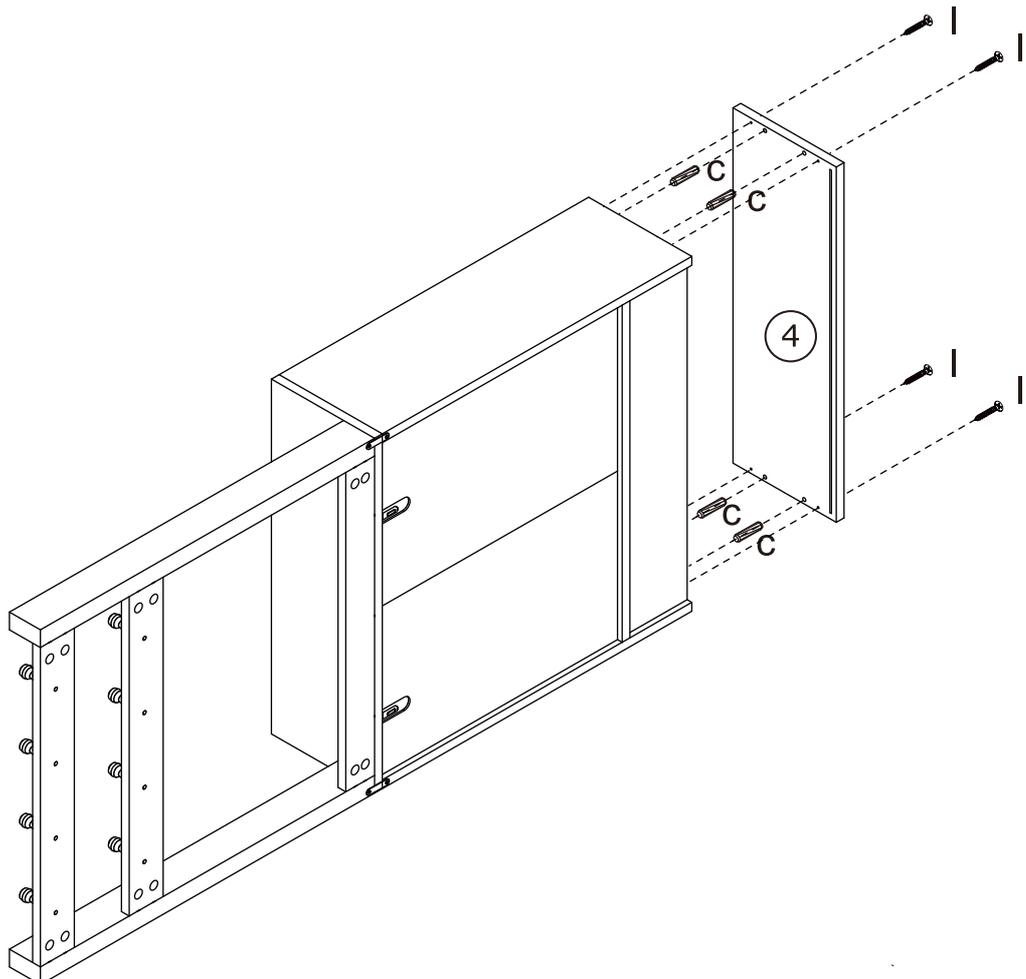


 cx4

 lx4

### STEP 13

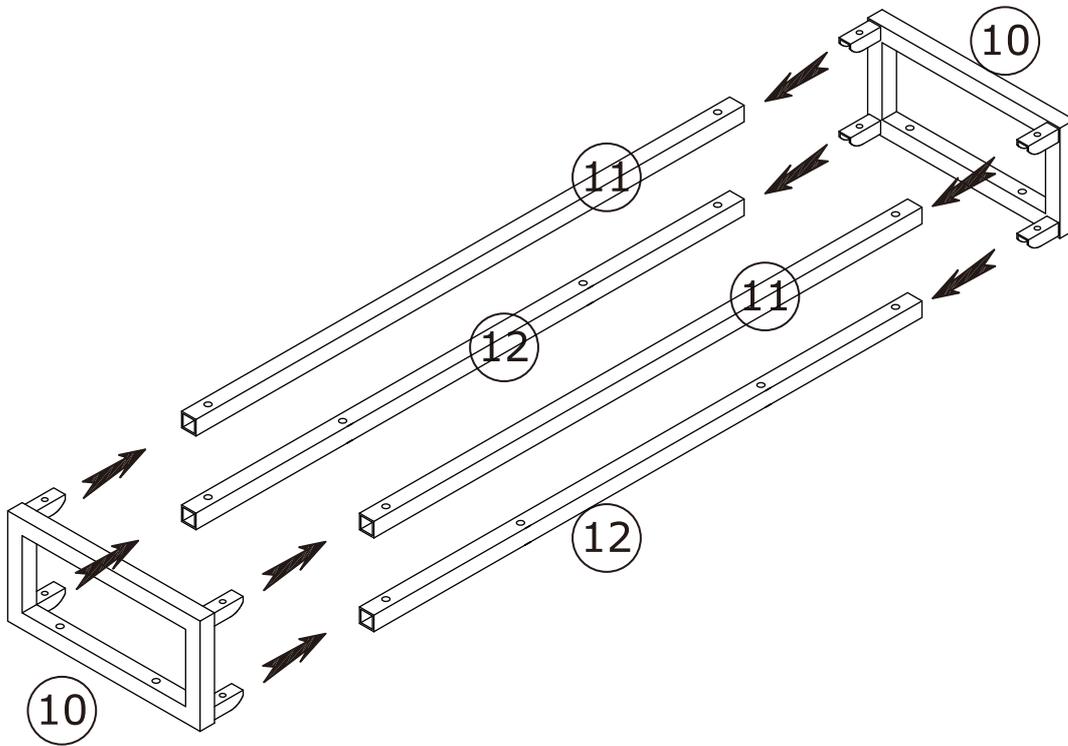


### STEP 14

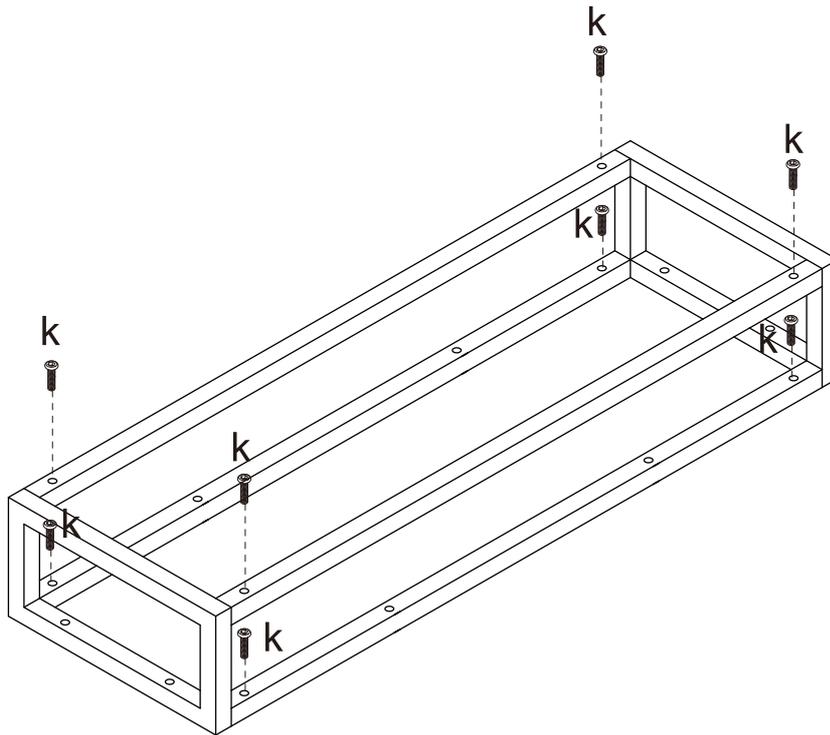


# STEP 15

 mx10

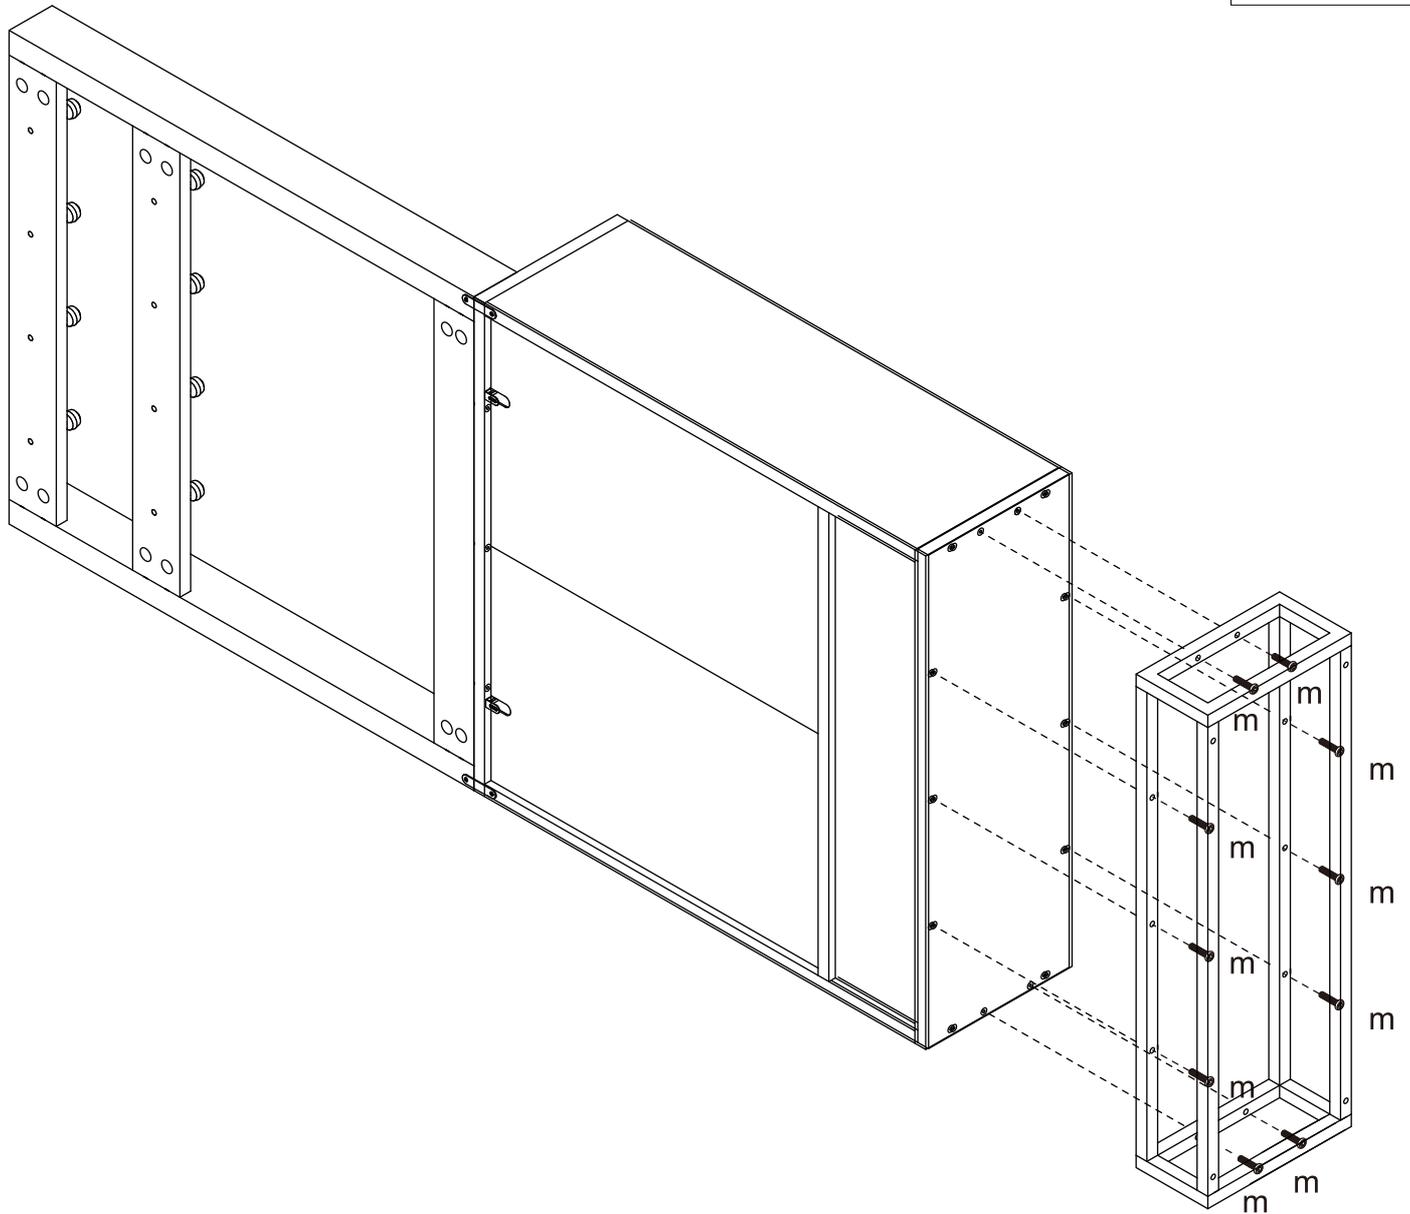


# STEP 16

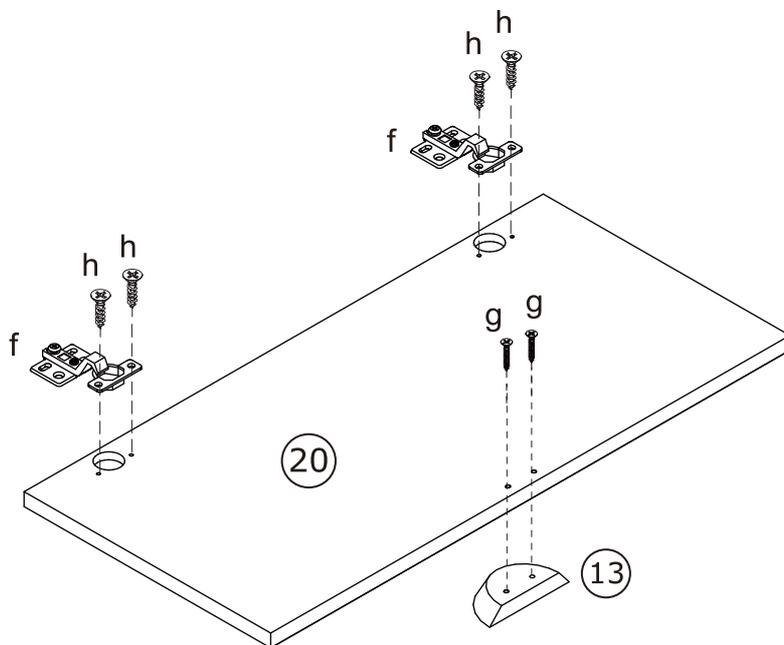

x2


- |   |
|---|
|  hx8 |
|  fx4 |
|  gx4 |

# STEP 17

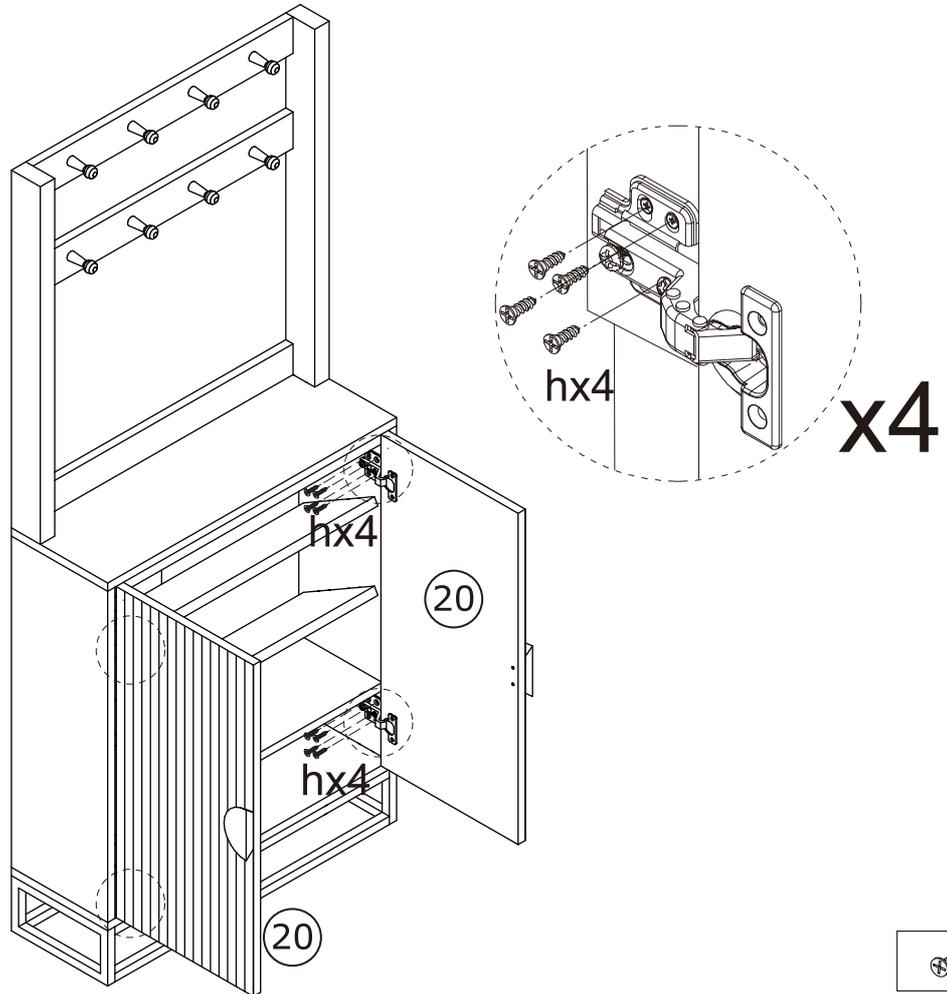

 hx16

# STEP 18

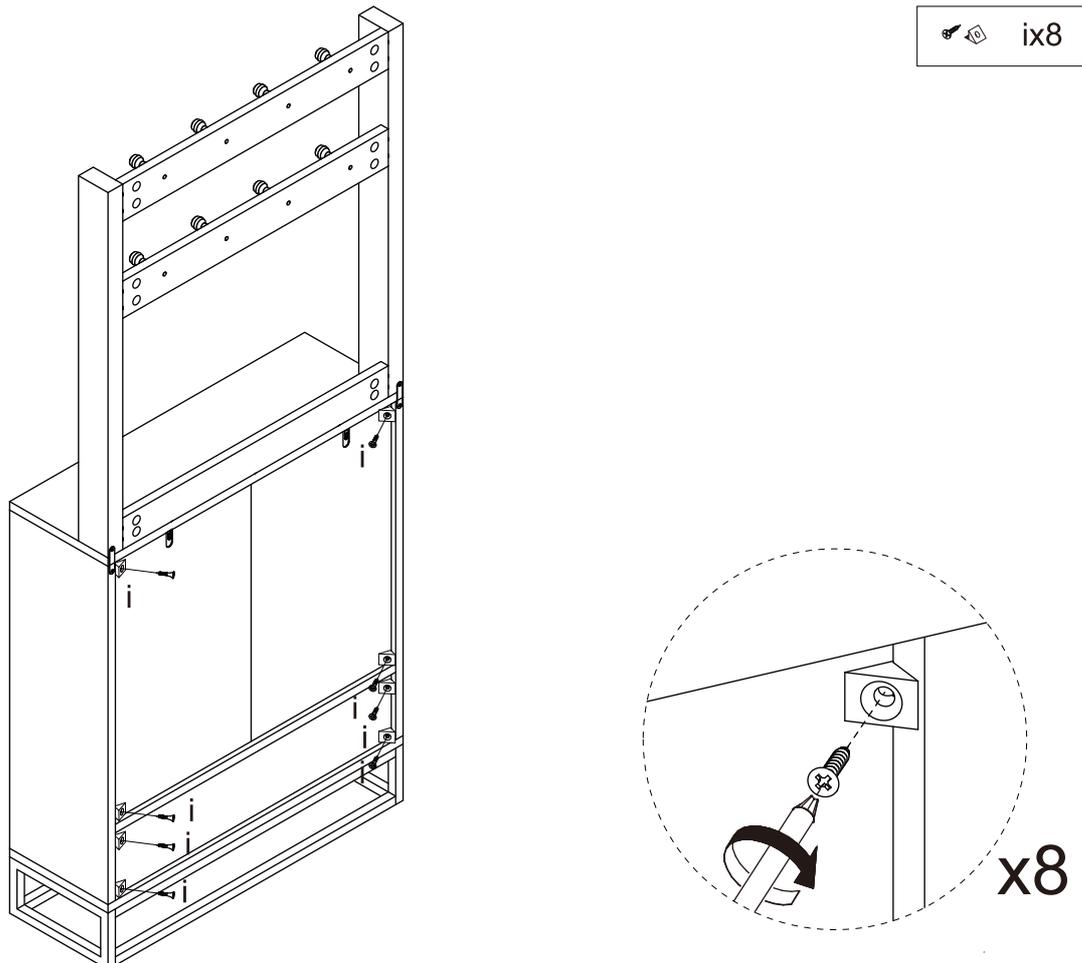


 ix8


# STEP 19

 sx2

 lx2

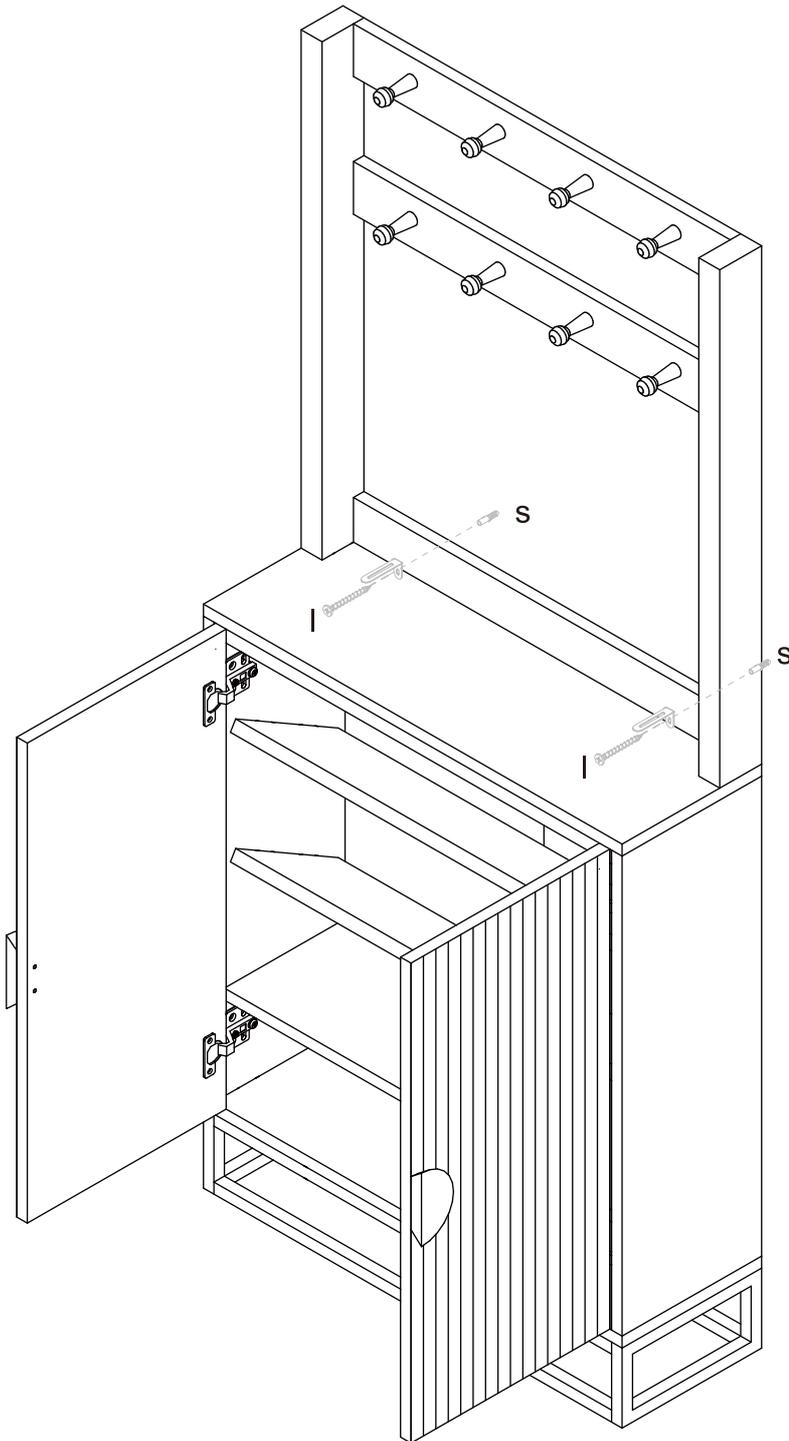

## ⚠ WARNING

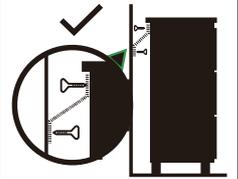

**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

### TOPPLING FURNITURE WARNING:

- **ALWAYS secure it with an anchor device.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Use safety drawer locks to prevent children climbing.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

