

# Assembly Instructions

K: 43639953 STEVIE 2 TIER SHOE STORAGE

## CARE INSTRUCTIONS:

Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.


## WARNING:

Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

## MAXIMUM SAFE LOAD:

10KG FOR TOP PANEL, 5KG FOR EACH DRAWER.

## Parts List













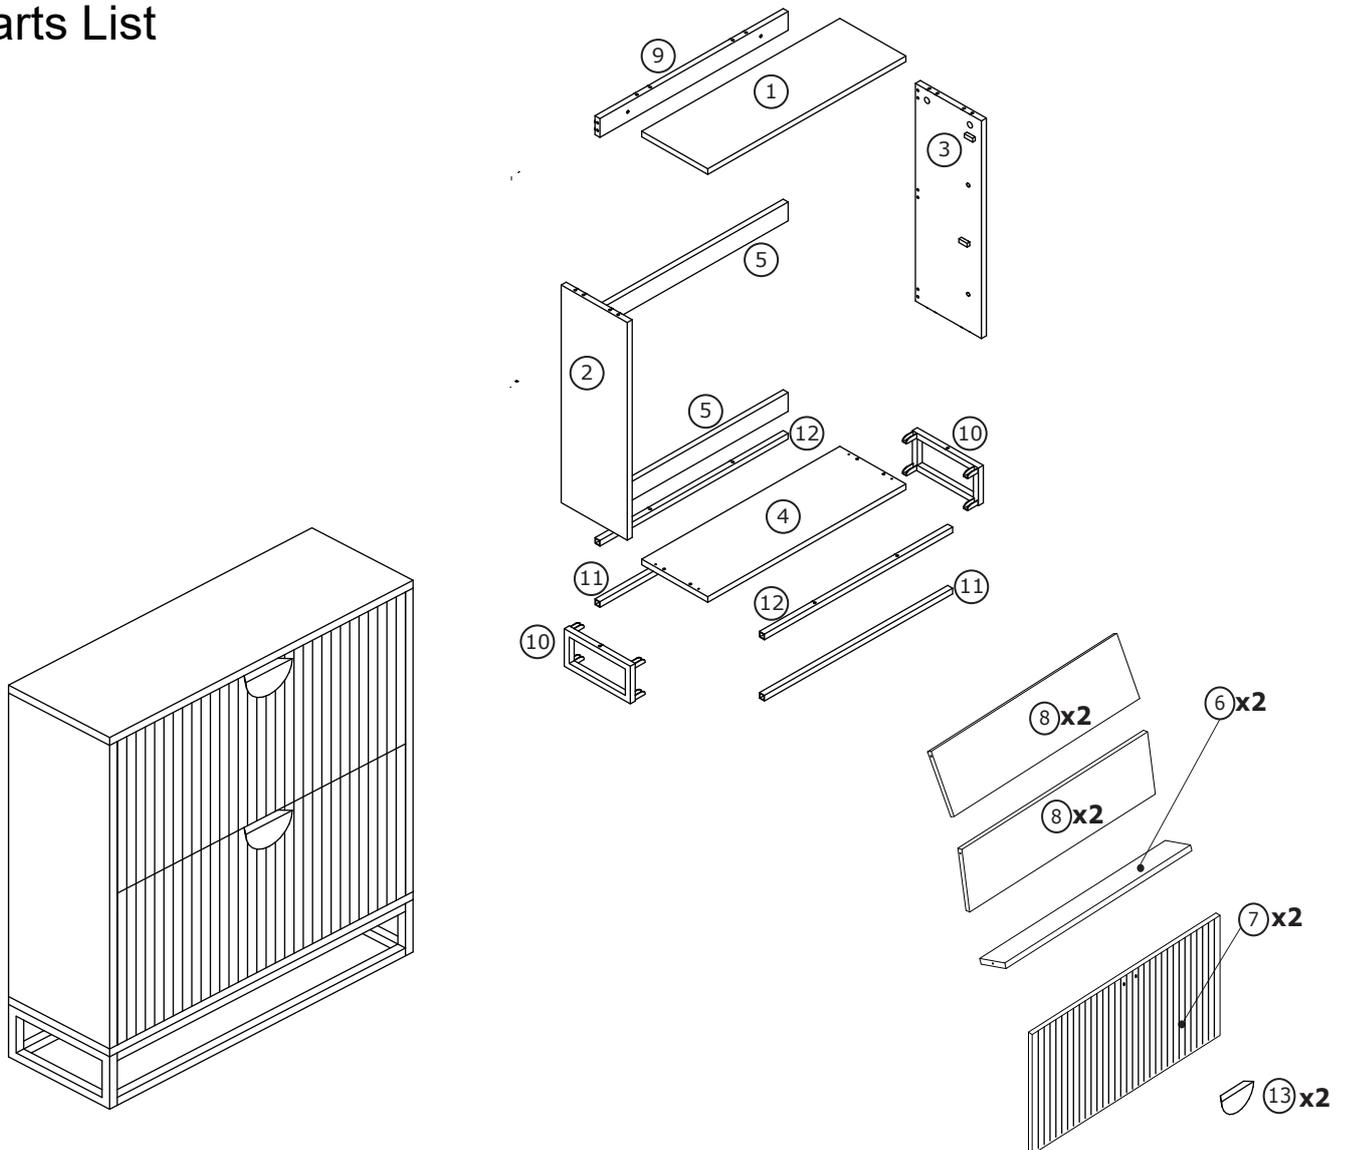


# 1 Hardware List

	a	6x35mm	18pcs
	b	15x10mm	18pcs
	c	6x30mm	10pcs
	d		4sets
	e		2pcs
	f		2pcs
	g	4x13mm	16pcs
	o		4pcs

	h		4pcs
	i	4x50mm	2sets
	j	4x35mm	4pcs
	k		8pcs
	l	4x25mm	16pcs
	m		6pcs
	n		1pc


## PANEL LAYOUT

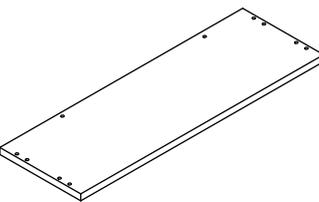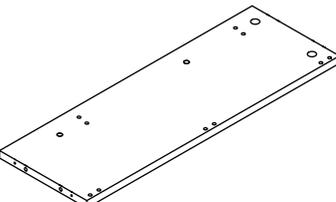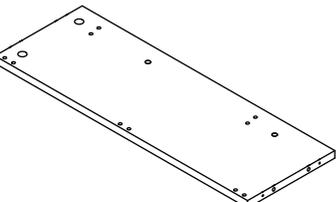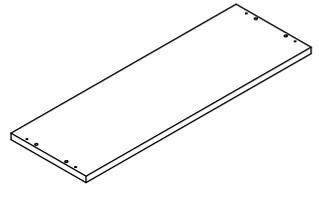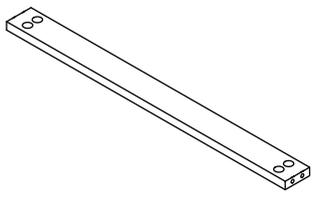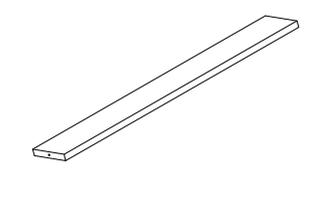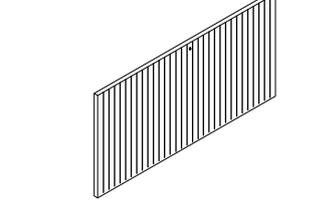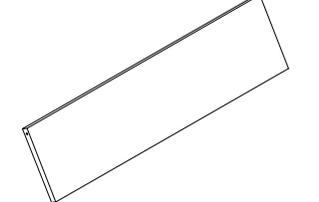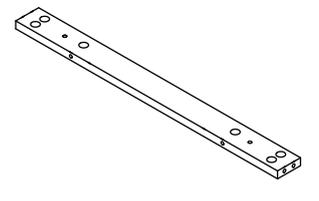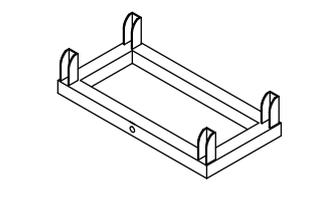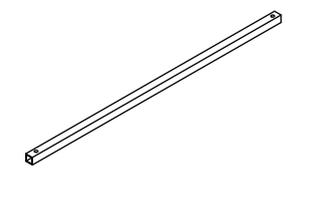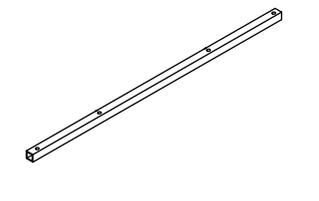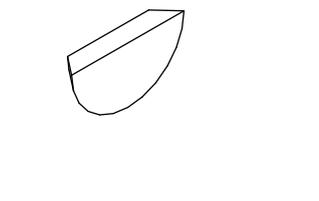			
①	1PC	②	1PC
			
⑤	2PCS	⑥	2PCS
			
⑨	1PC	⑩	2PCS
			
⑬	2PCS		

**Do not tighten the screws fully during assembly.  
Fully tighten screws after the final assembly steps**


# STEP 1

	ex2
	fx2
	gx12

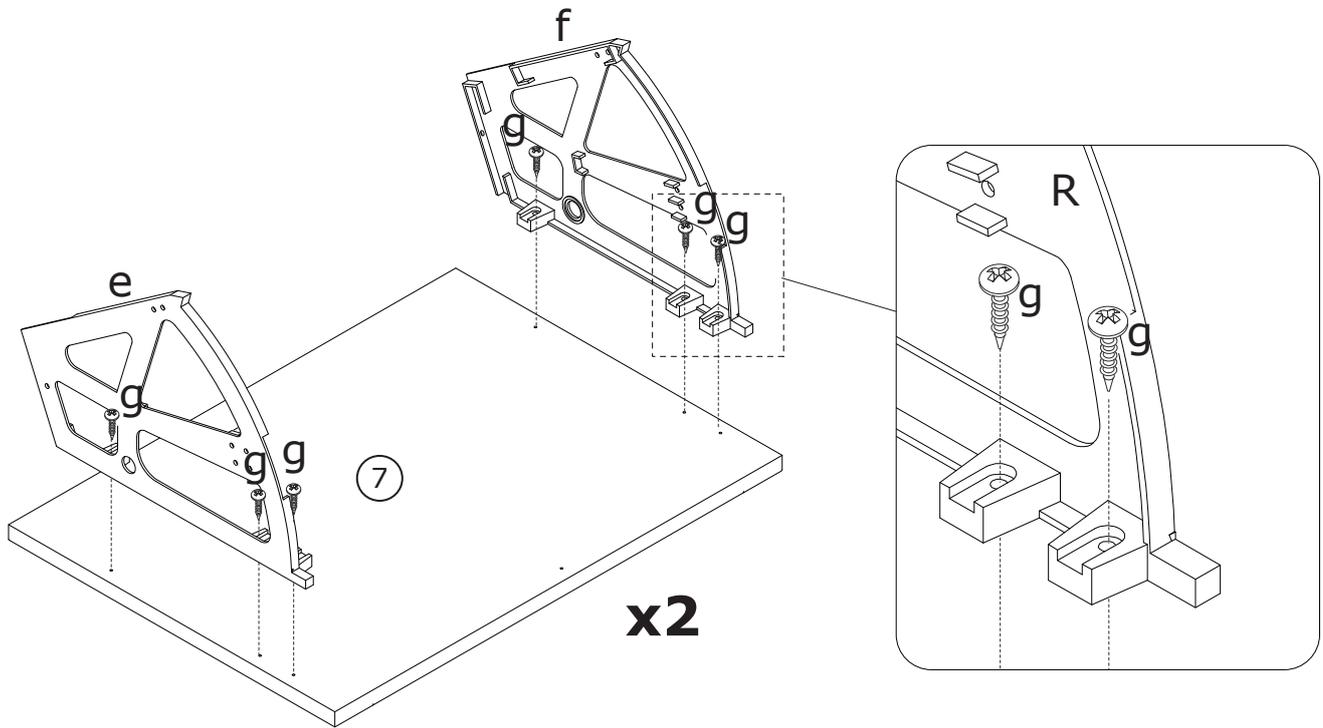


# STEP 2


	lx12
---	------

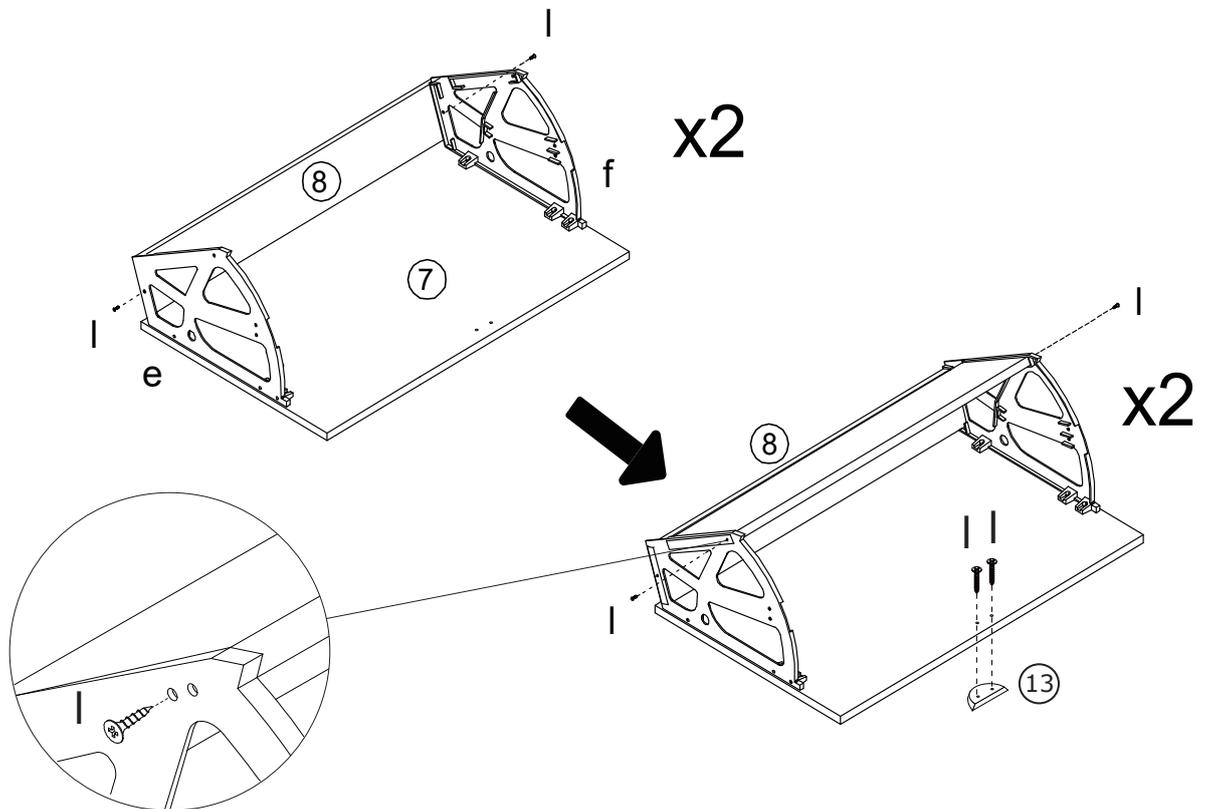


### STEP 3

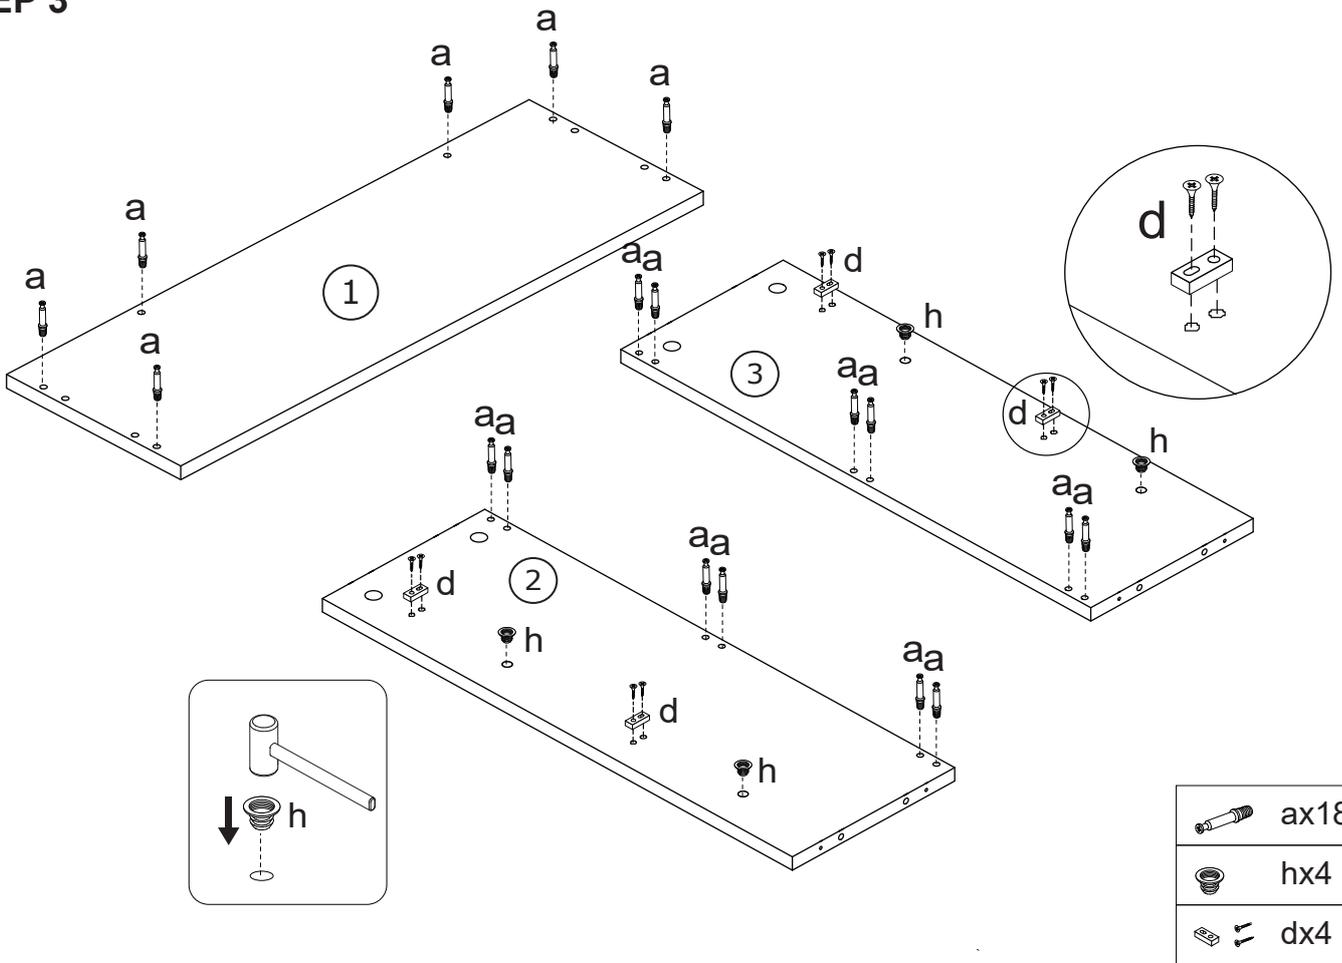

### STEP 4

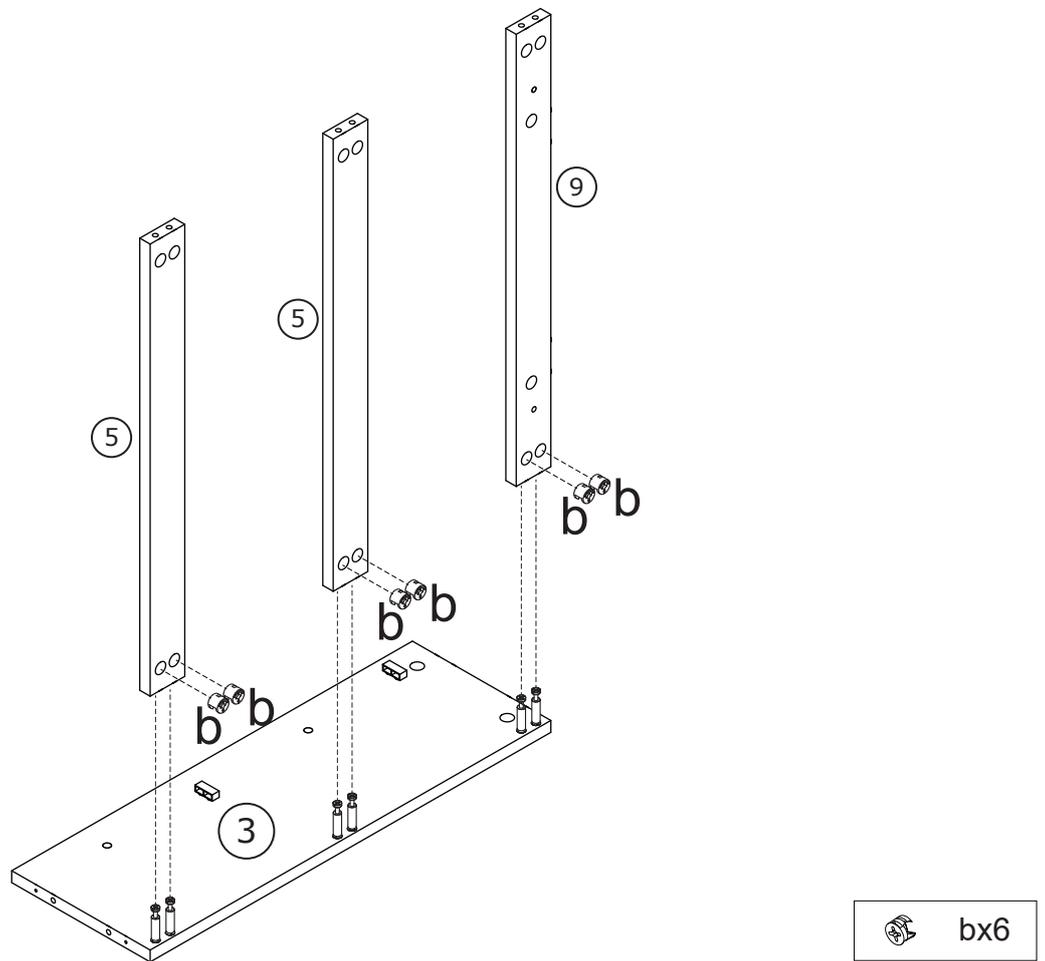


## STEP 5

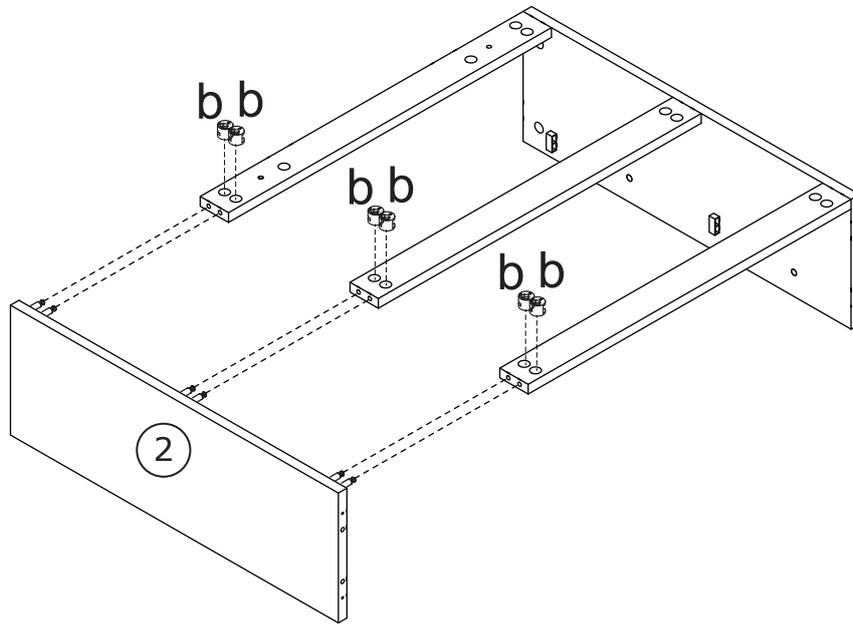

 bx6

## STEP 6

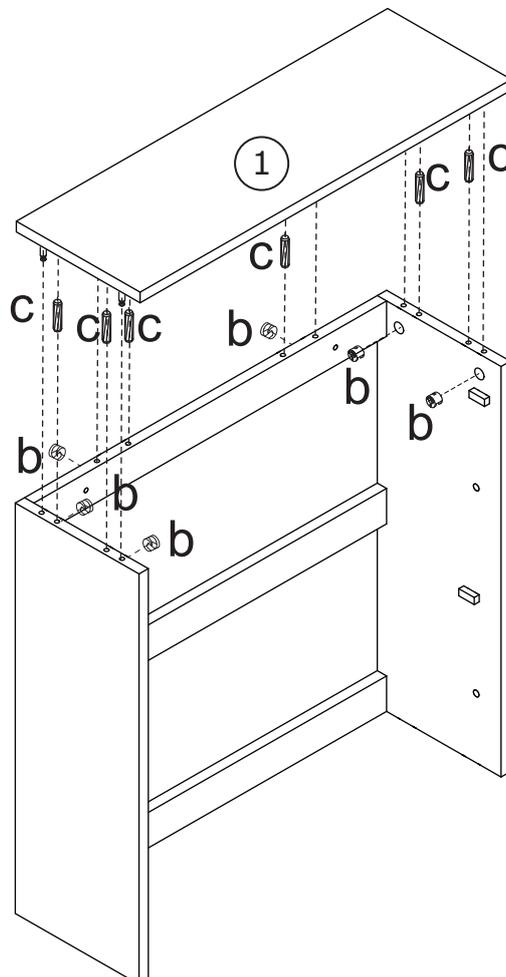


 cx6


 bx6

# STEP 7

	cx4
	jx4

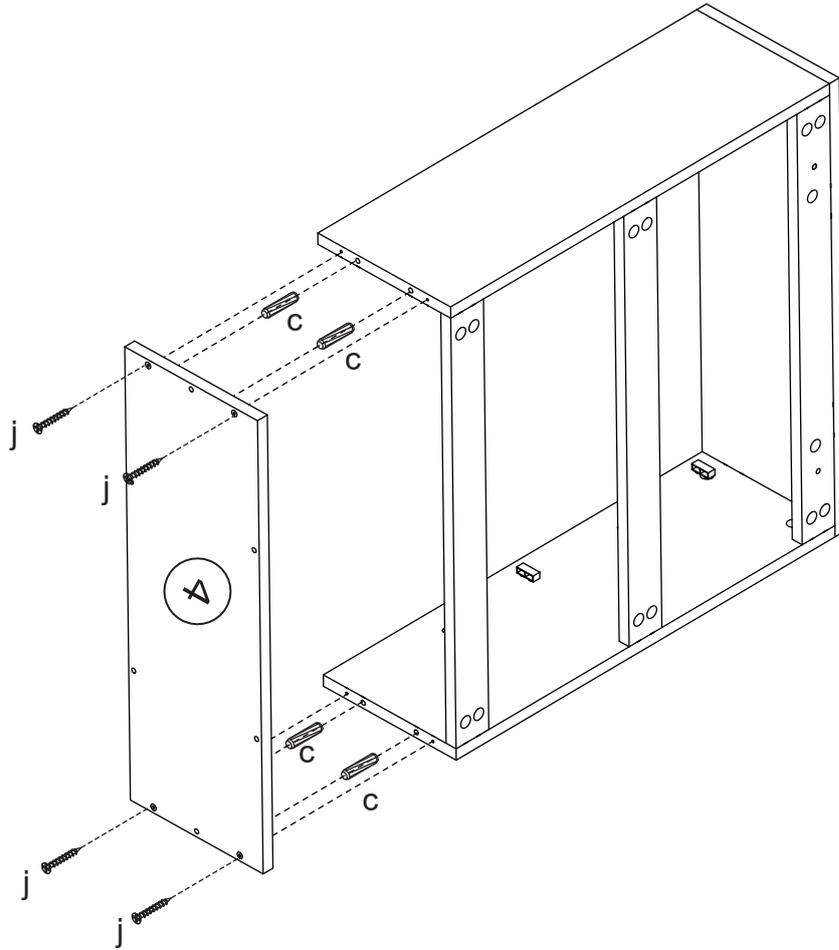


# STEP 8

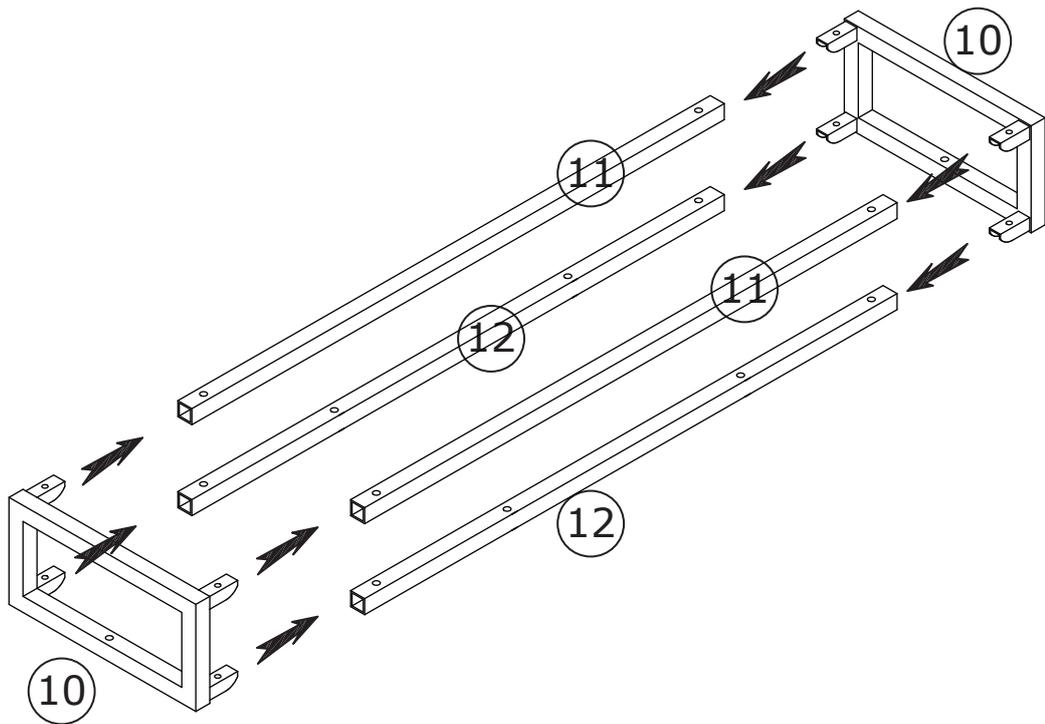


# STEP 9

 kx8

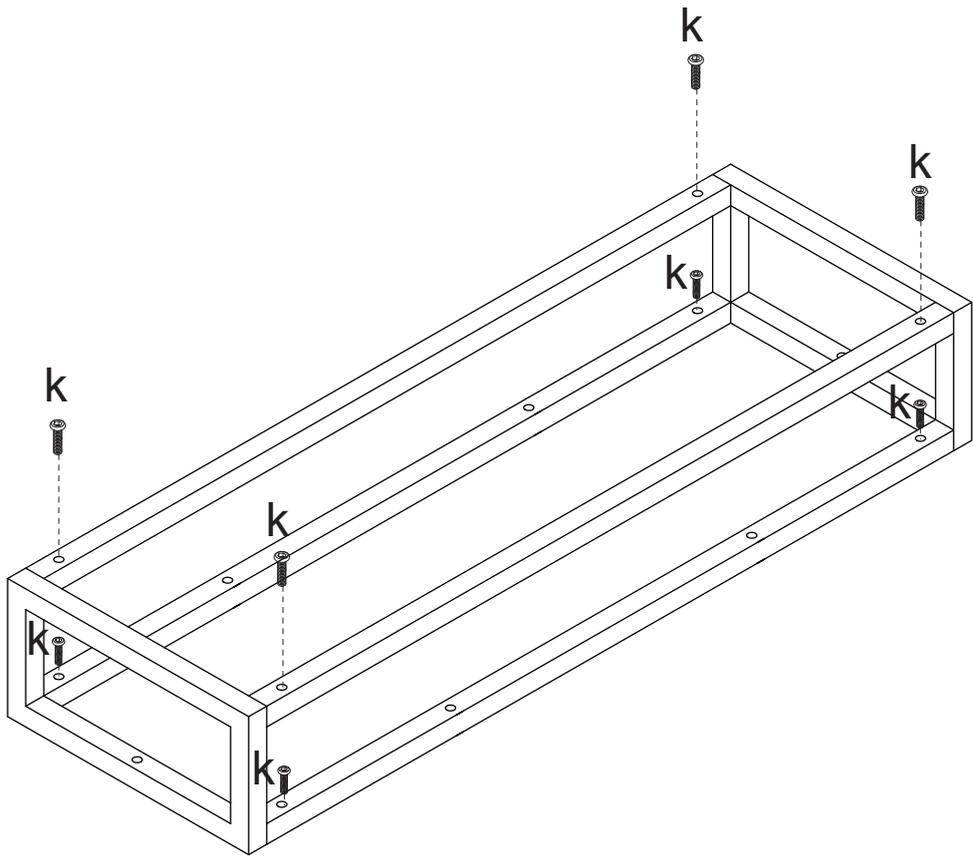


# STEP 10

 mx6

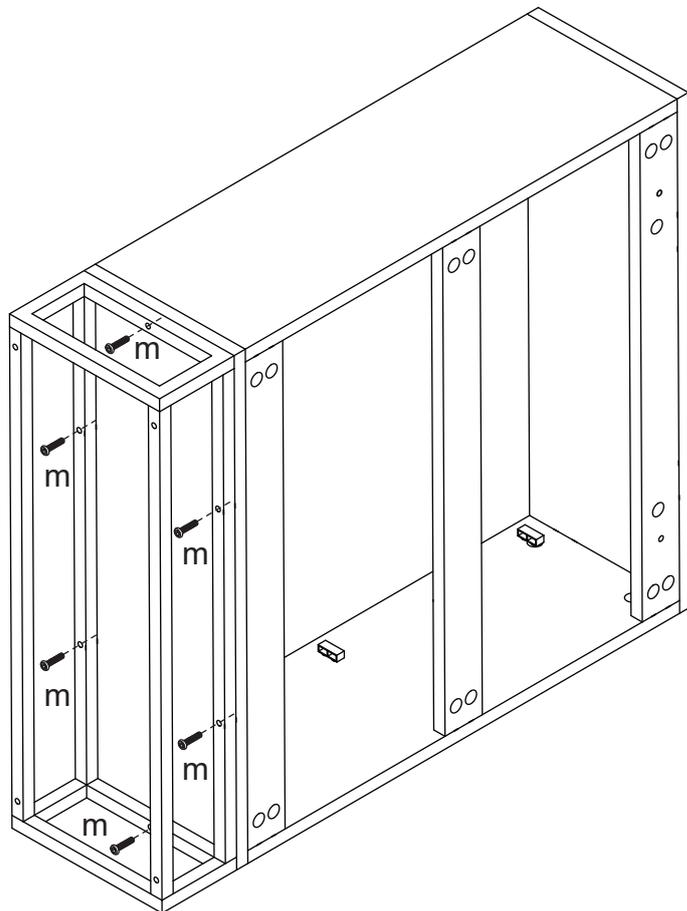


# STEP 11

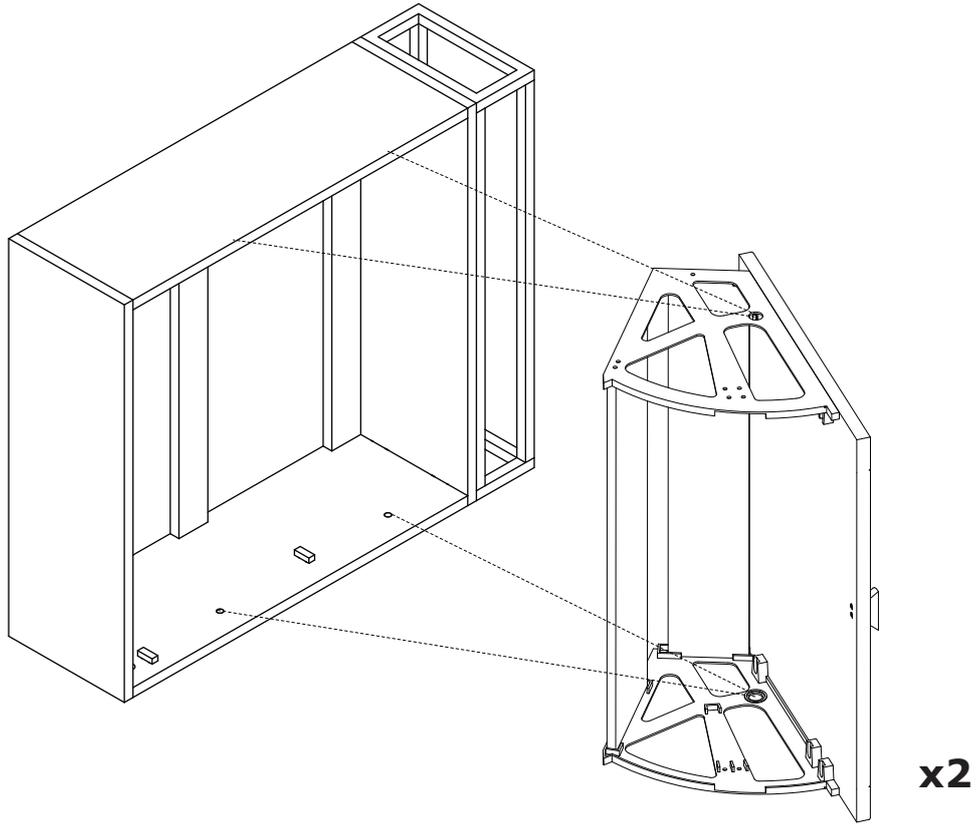


# STEP 12

	ox4
	gx4

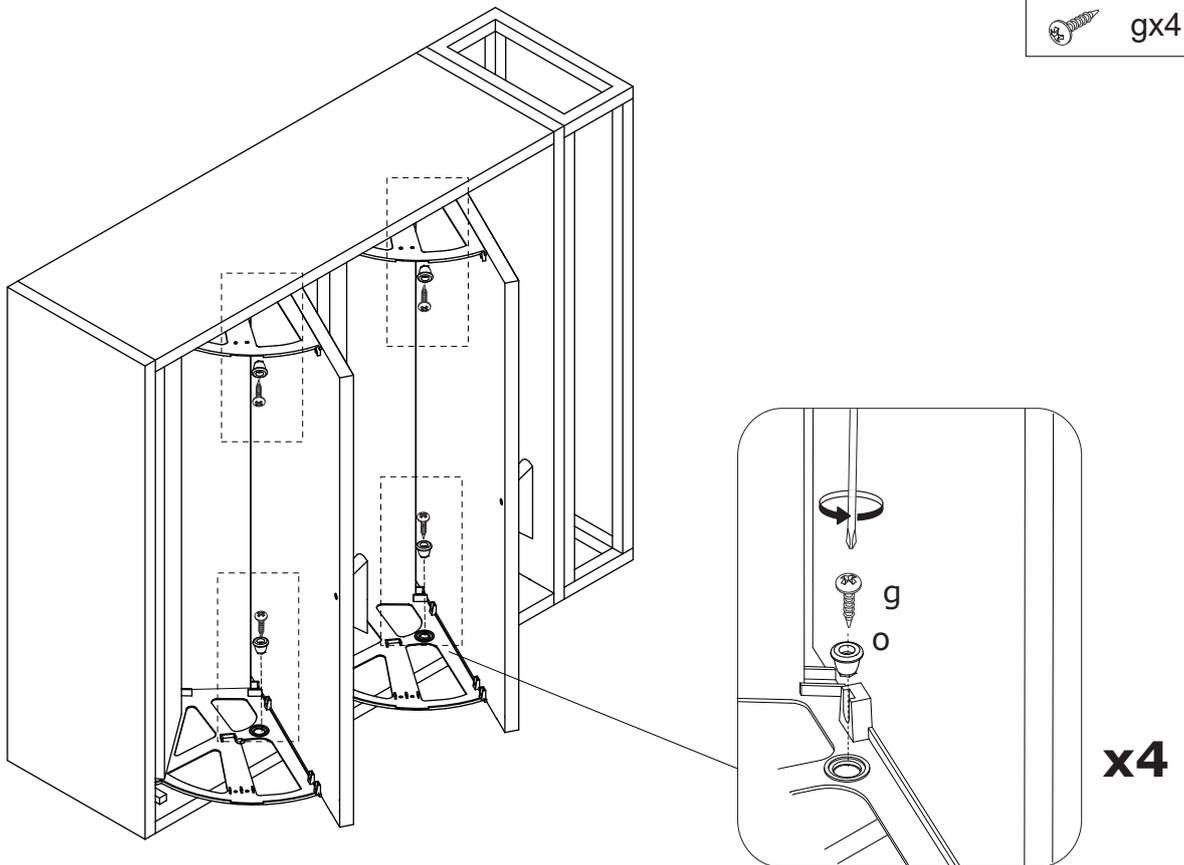


## STEP 13

 x4

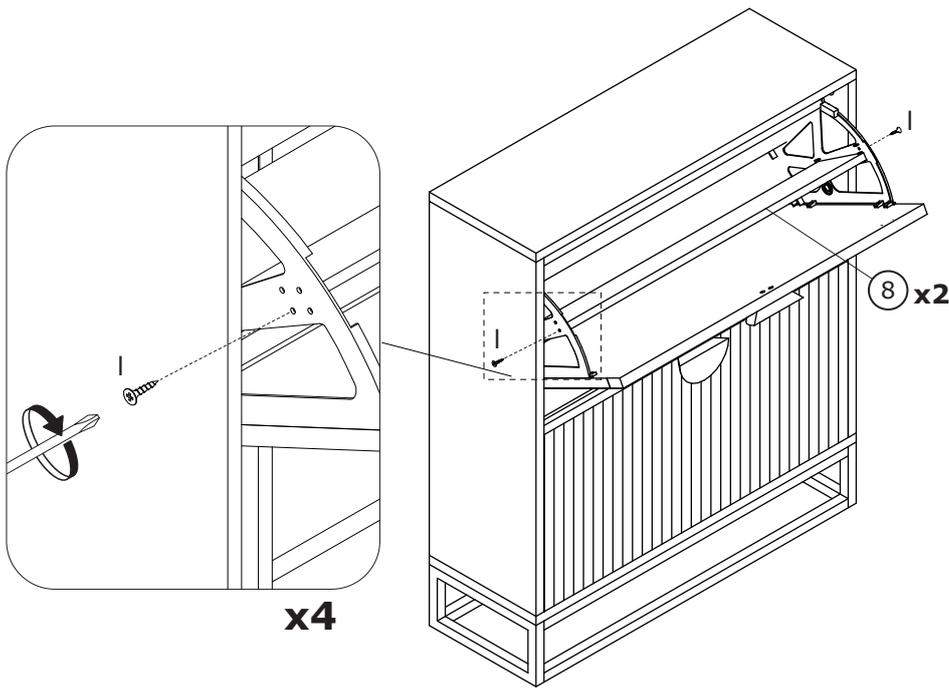

**⚠ WARNING**

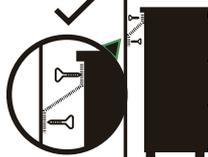**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.


NEVER put a TV on this furniture 

This is a permanent label. Do not remove!

NOTE: Board ⑧ is adjustable or removable to fit different shoes sizes.

## STEP 14

 x2

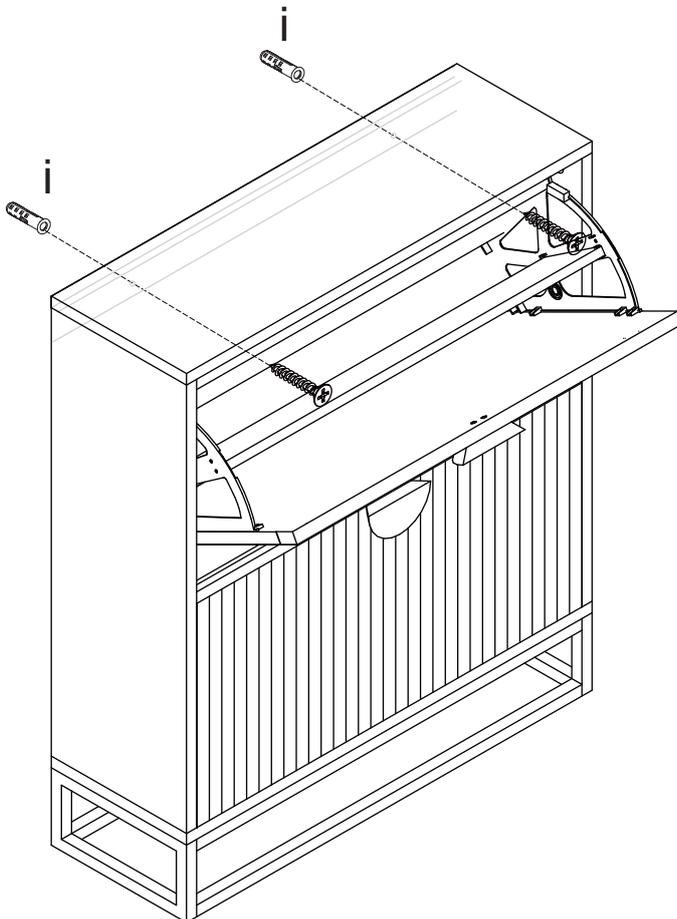

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

