

Assembly Instructions

K: 43639960 Charlie 4 Section Shoe Cabinet

CARE INSTRUCTIONS:

Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.


WARNING:

Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

MAXIMUM SAFE LOAD:

10KG FOR TOP PANEL, 3KG FOR EACH SHOE RACK.

Parts List










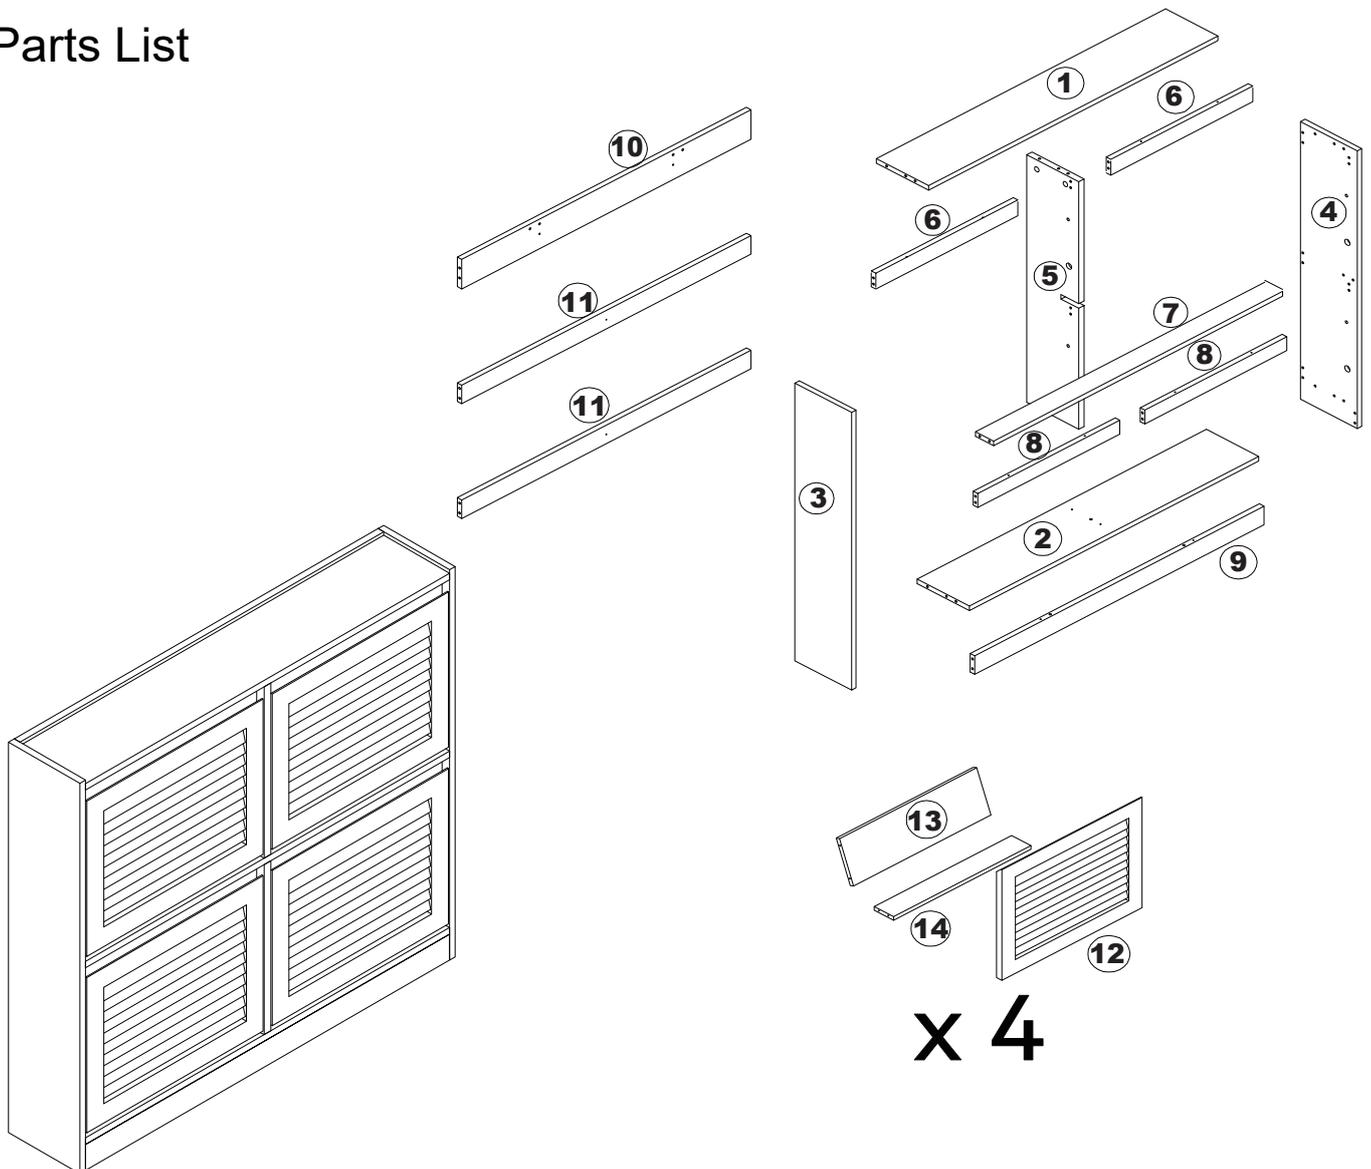


1 Hardware List


	A	6x35mm	26pcs
	B	Ø15x9mm	26pcs
	C	Ø6x30mm	32pcs
	D	4x35mm	14pcs
	E	4x14mm	32pcs
	F		8pcs
	M	4x55mm	2pcs

	G		8pcs
	H		8pcs
	I		2pcs
	J		4pcs
	K		4pcs
	L	4x25mm	32pcs

      2 Parts List

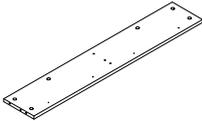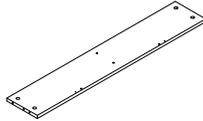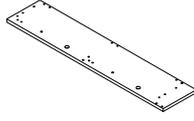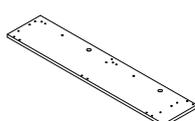
			
①	1PC	②	1PC
			
⑤	1PC	⑥	2PCS
			
⑨	1PC	⑩	1PC
			
⑬	4PCS	⑭	4PCS

STEP 1

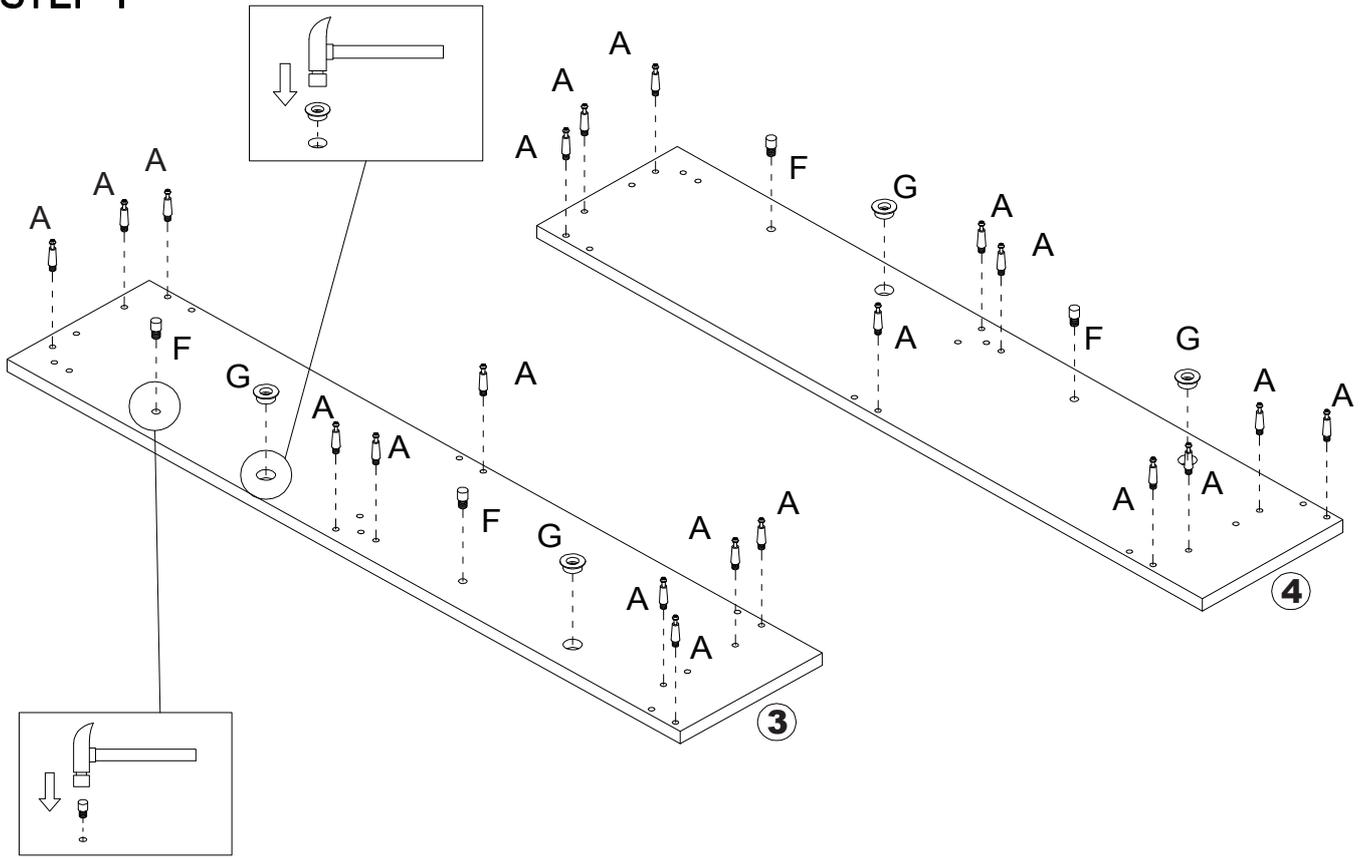


A -  x20 | F -  x4 | G -  x4

STEP 2

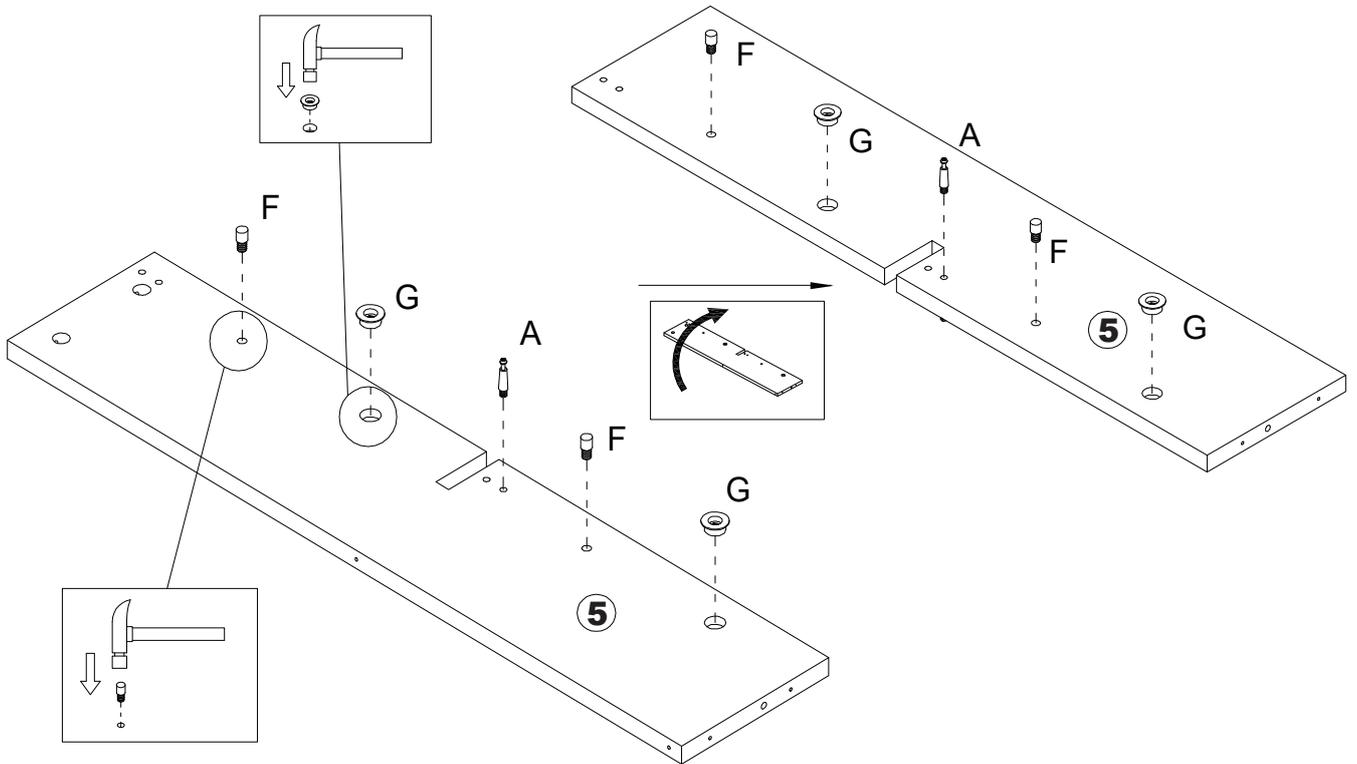



A -  x2 | F -  x4 | G -  x4

STEP 3

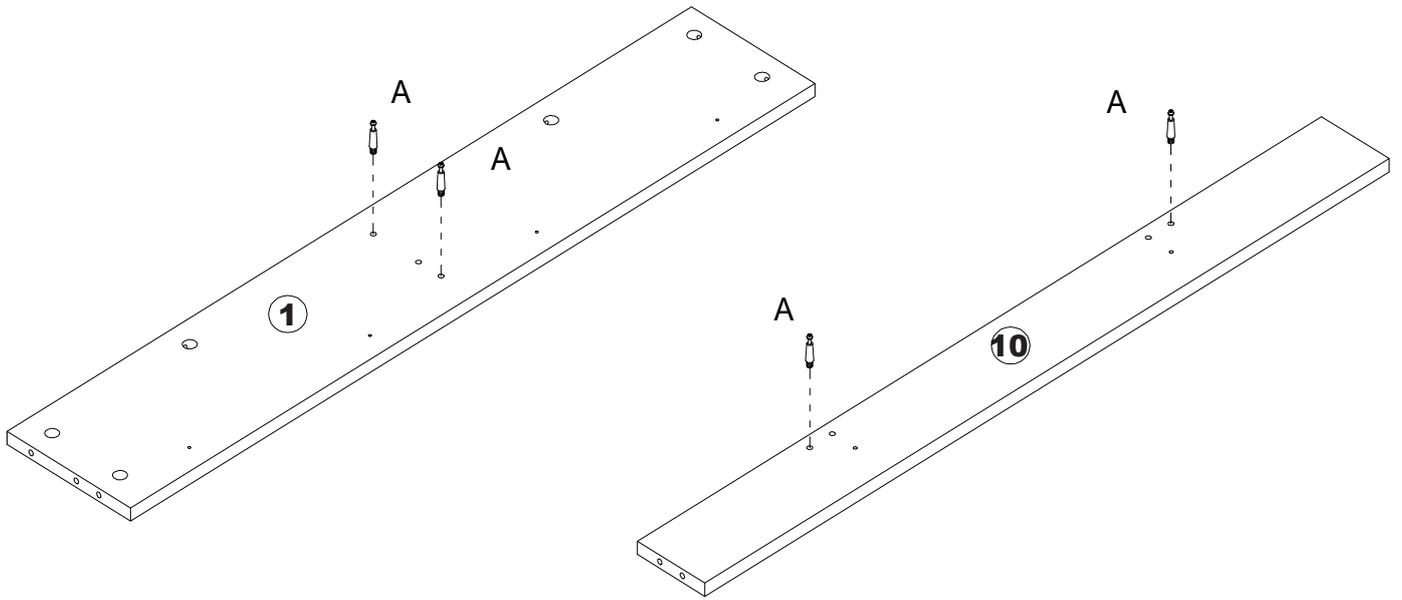


A -  x4

STEP 4

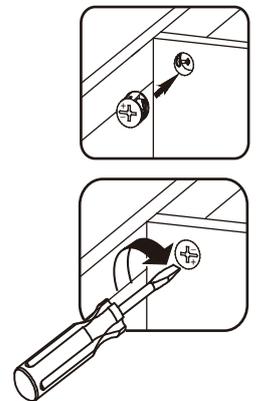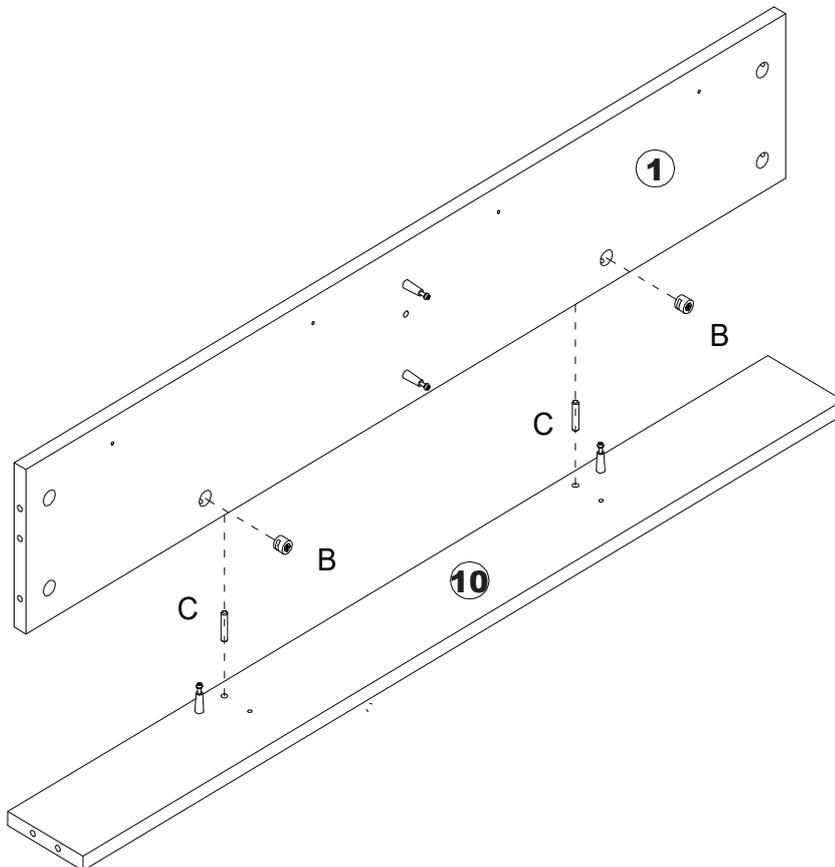


B -  x2 C -  x2

STEP 5


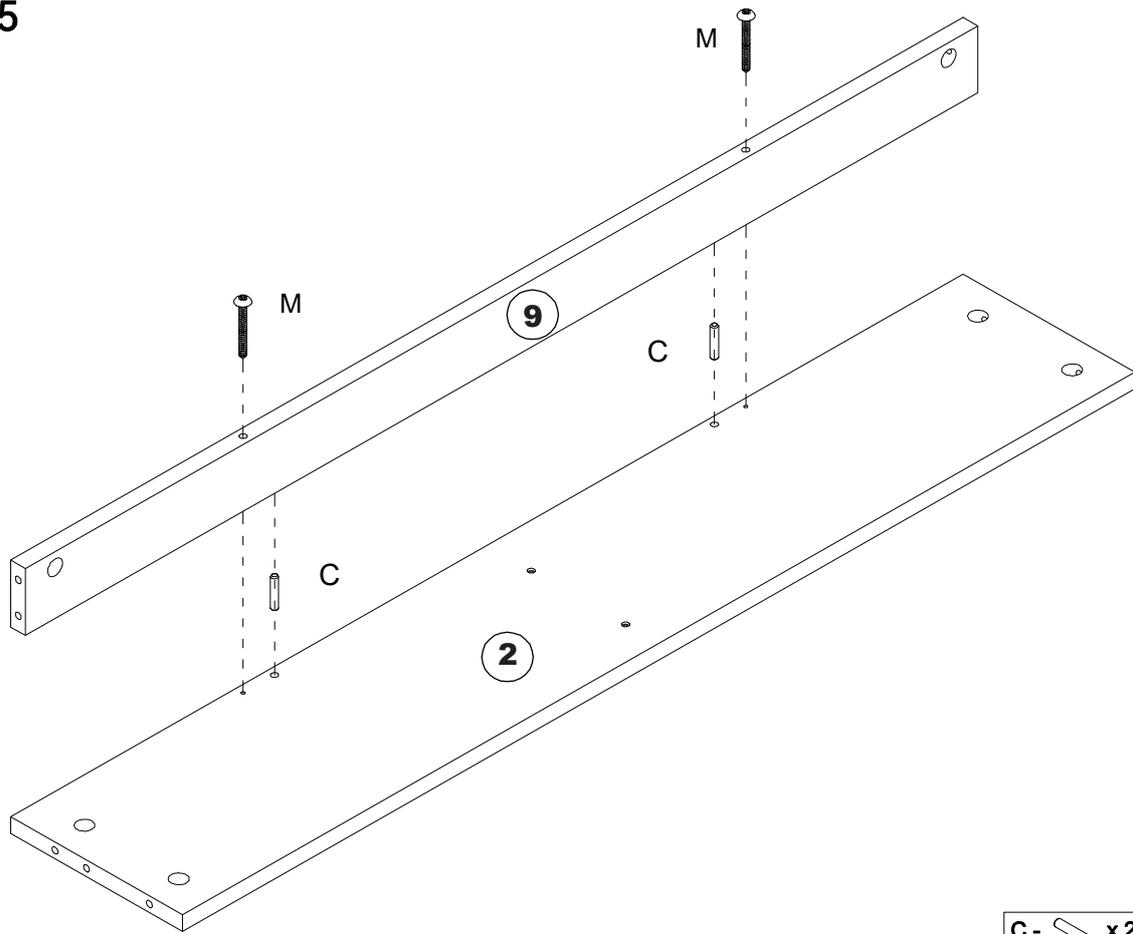


C -  x2 | M -  x2

STEP 6


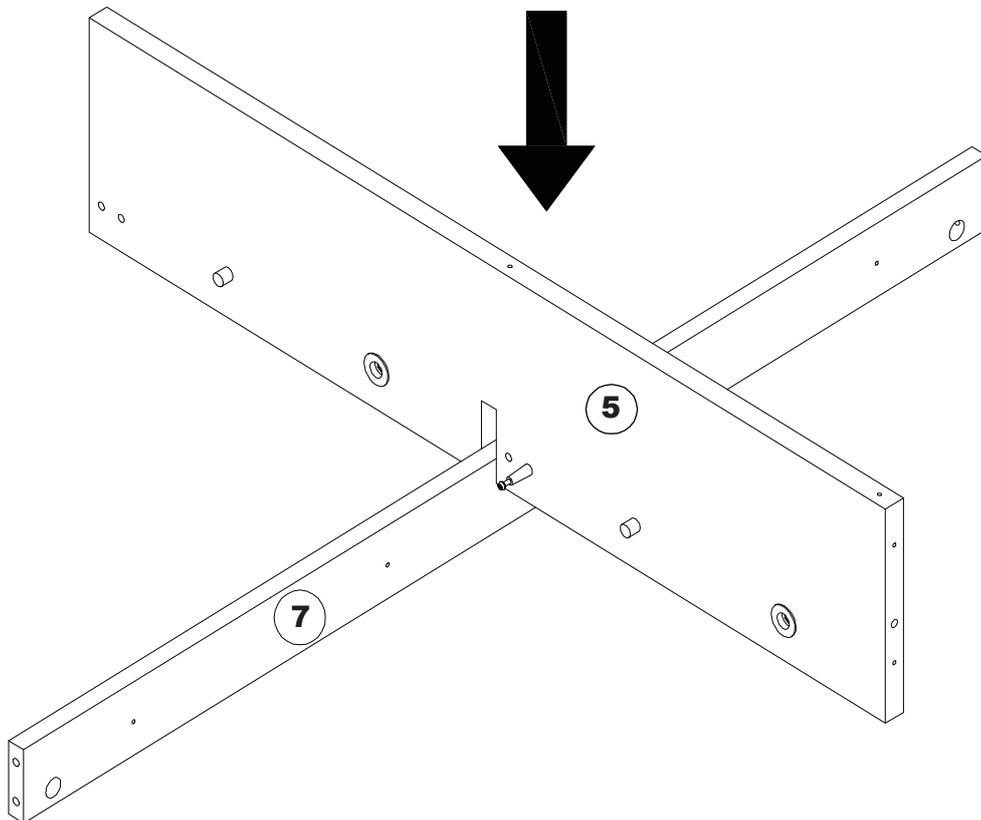


STEP 7

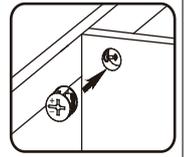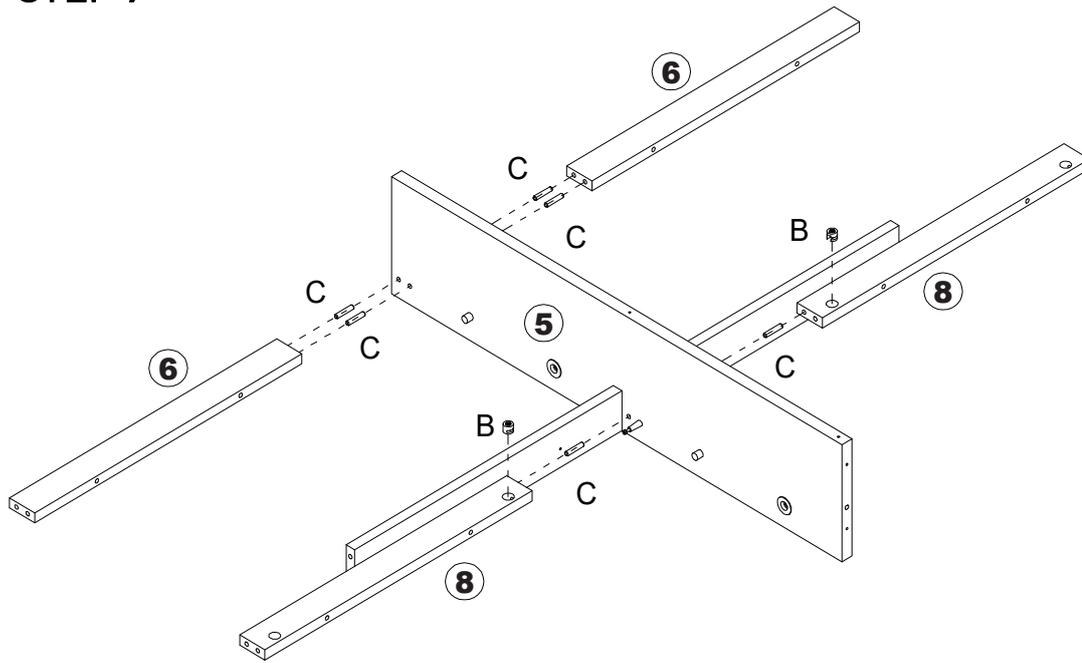


B-  x2 C-  x6

STEP 8

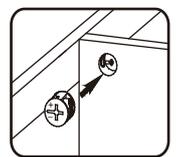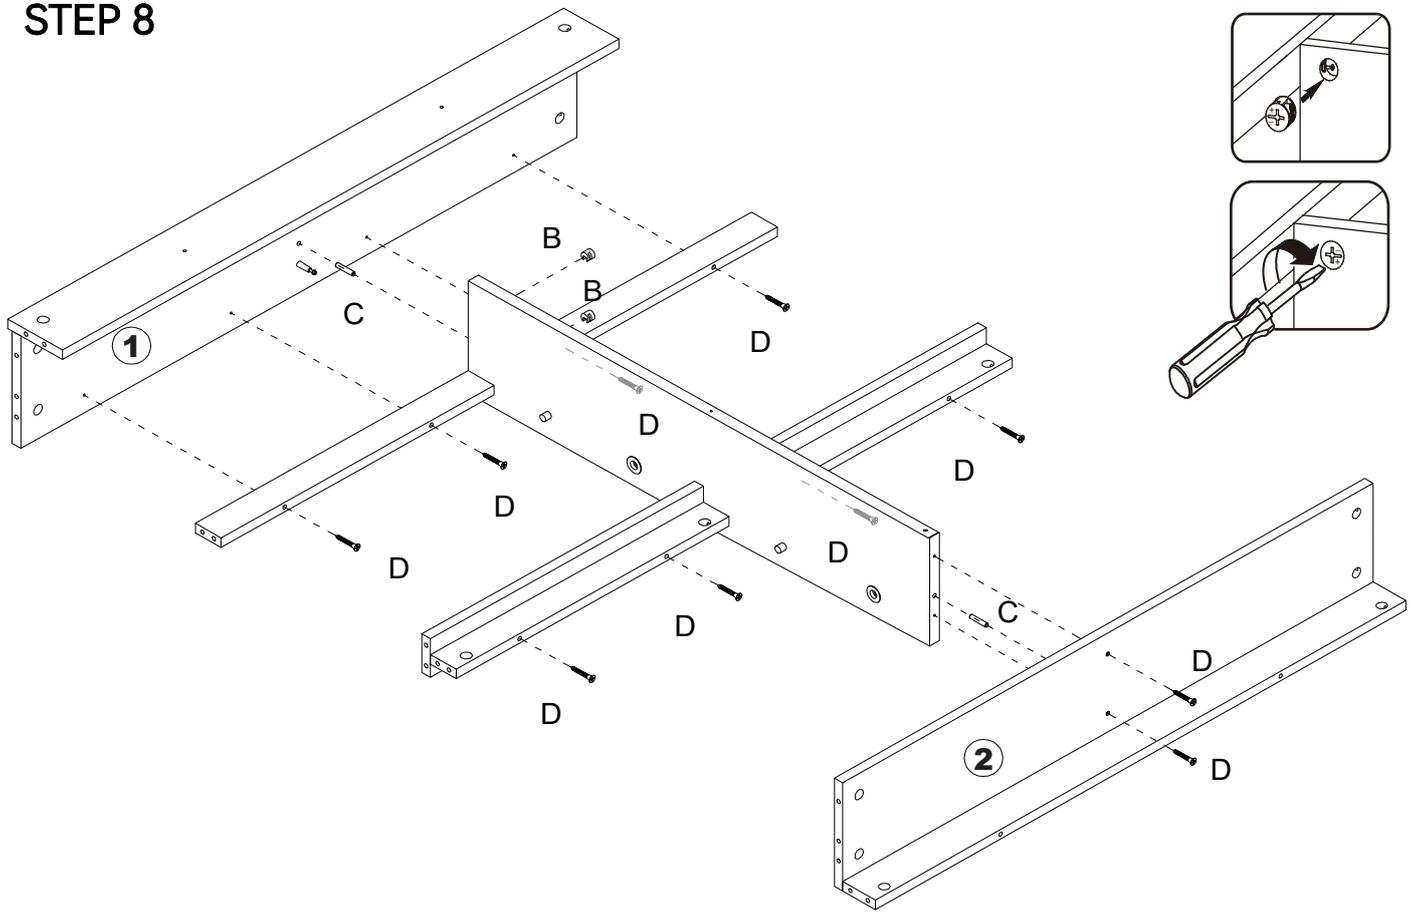


B-  x2 C-  x2 D-  x10


STEP 9

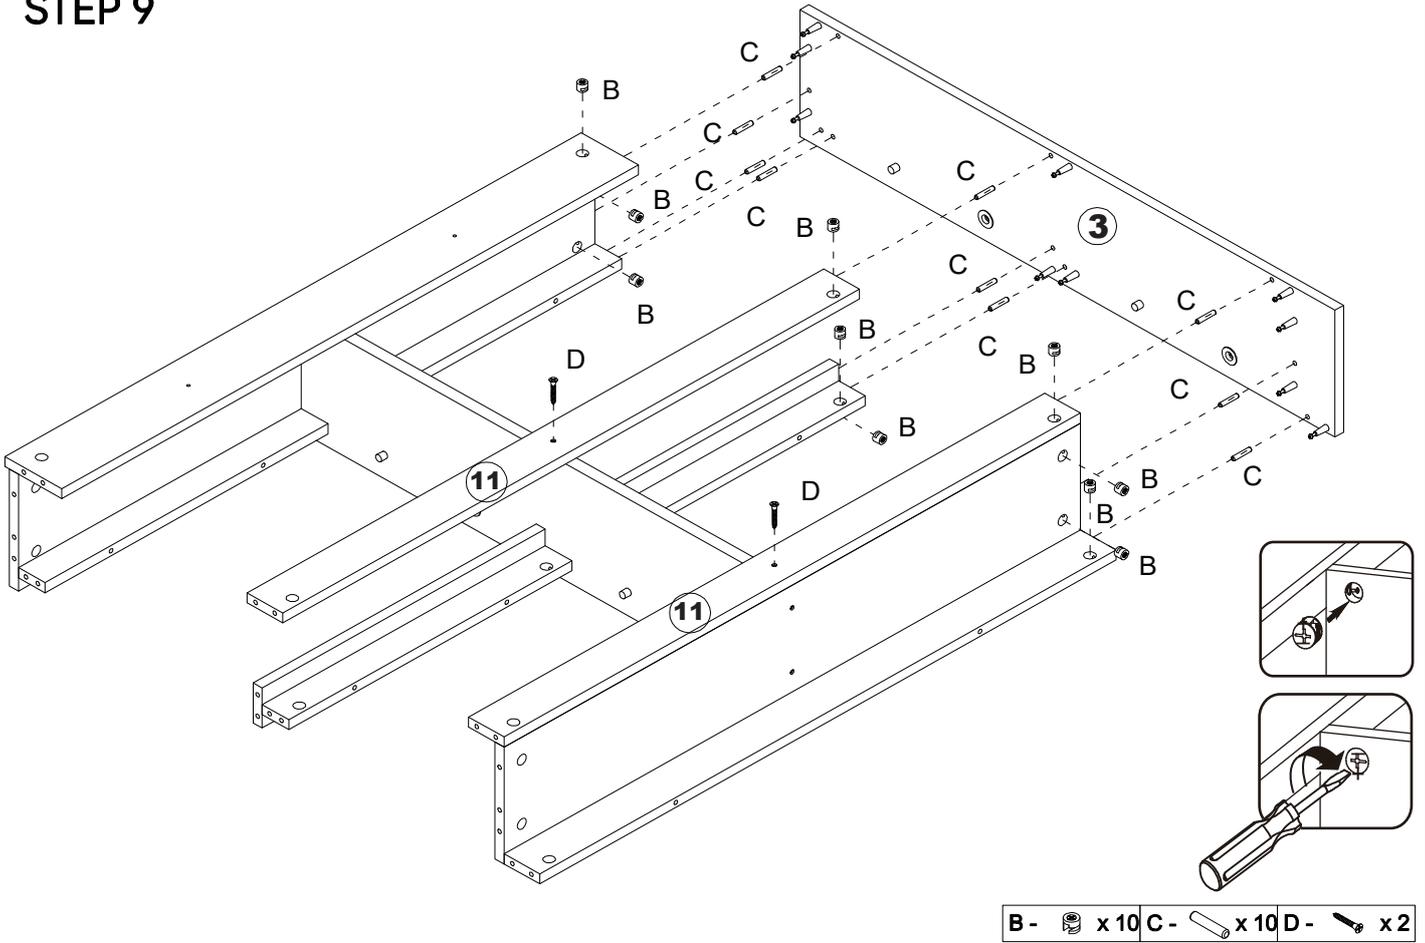

STEP 10

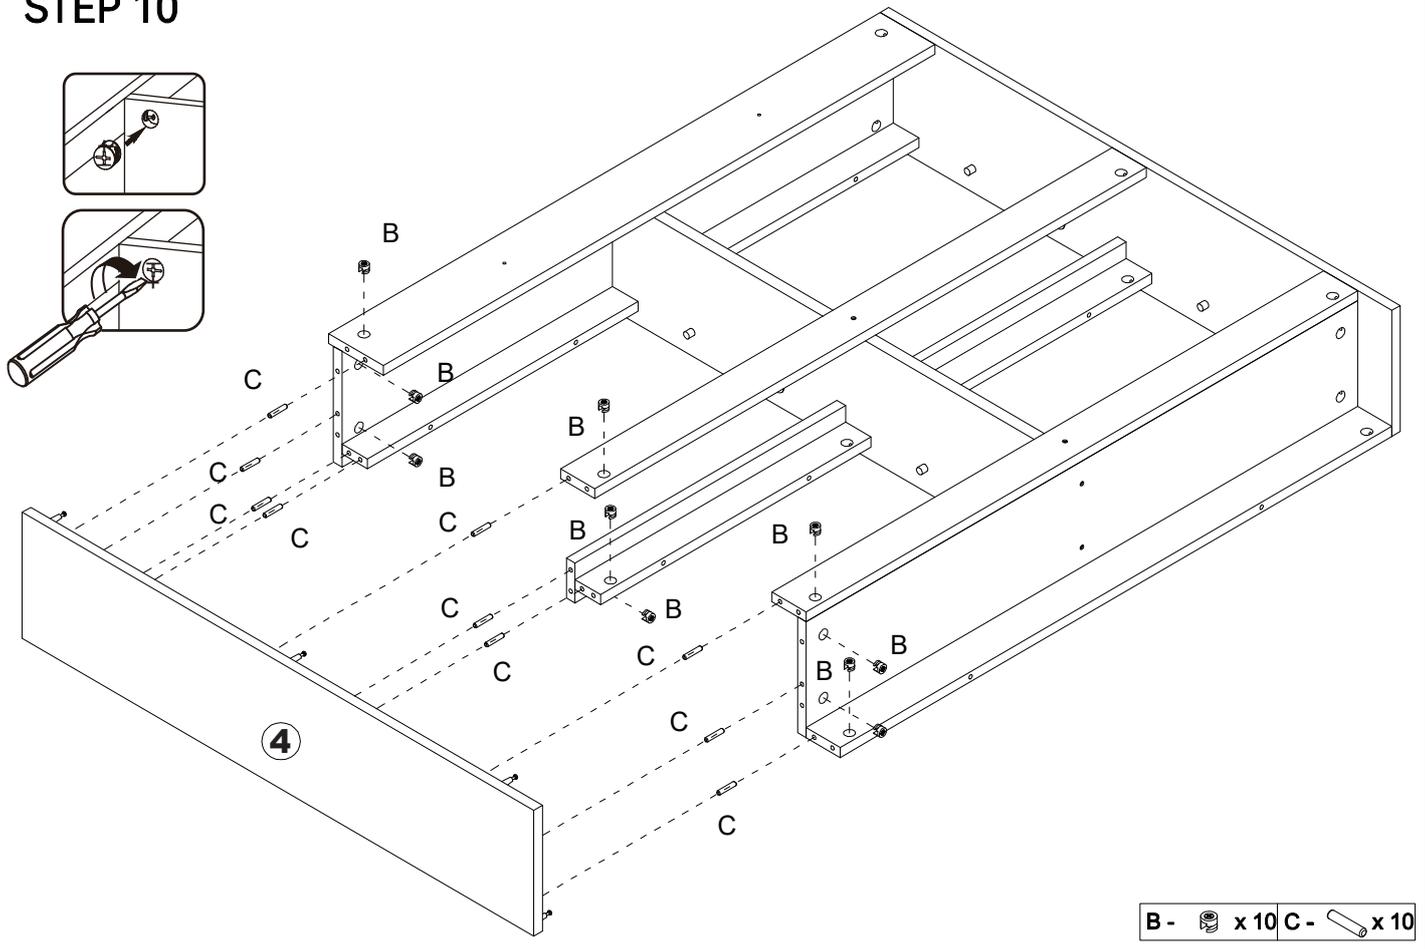



STEP 11

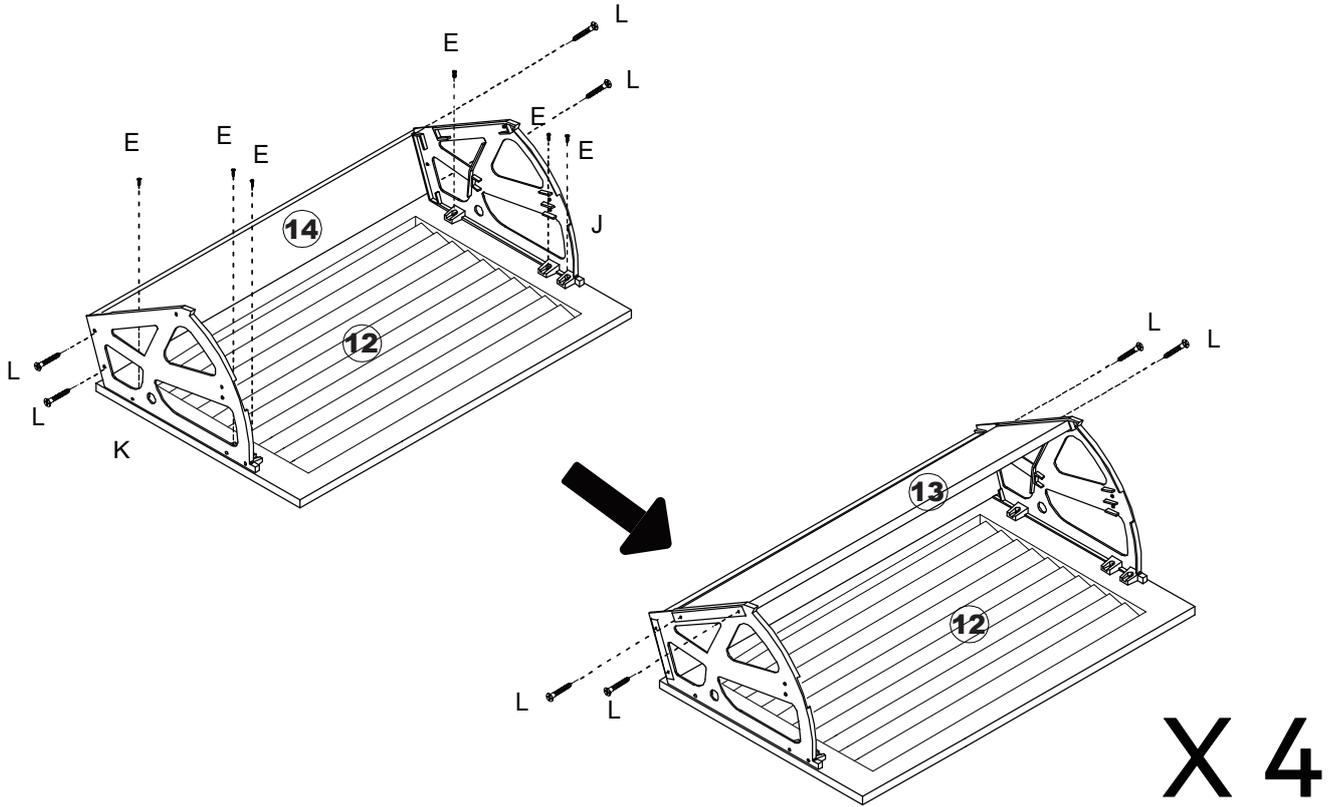

E -  x24 | J -  x4 | K -  x4 | L -  x32


STEP 12

The plastic flip pieces (Hardware J and K) on both sides of each shoe rack are fixed with "E" and "H".

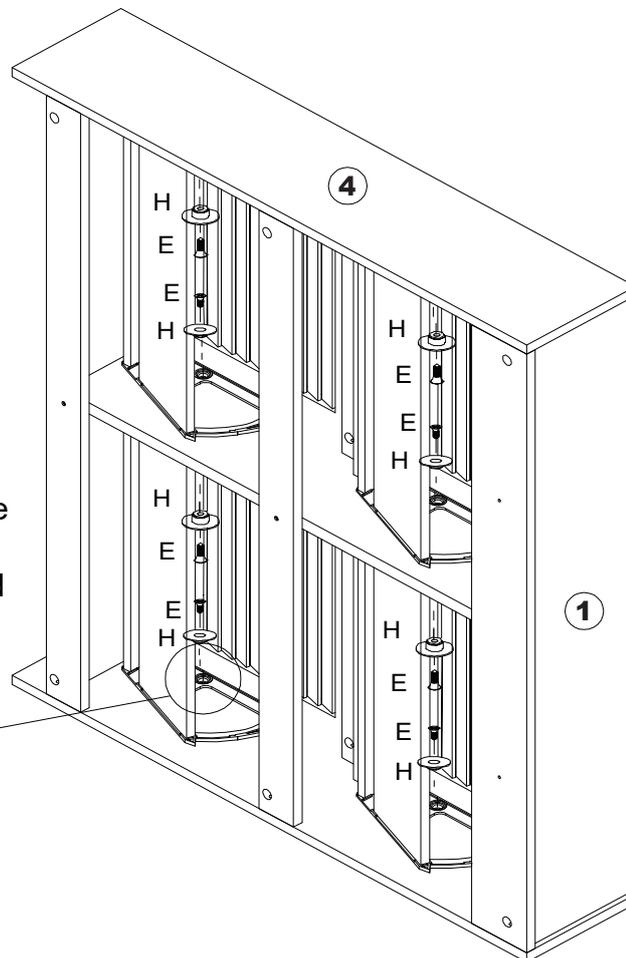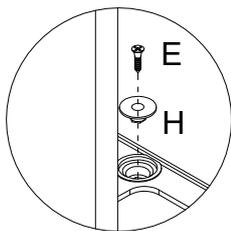



E -  x8 | H -  x8

STEP 13

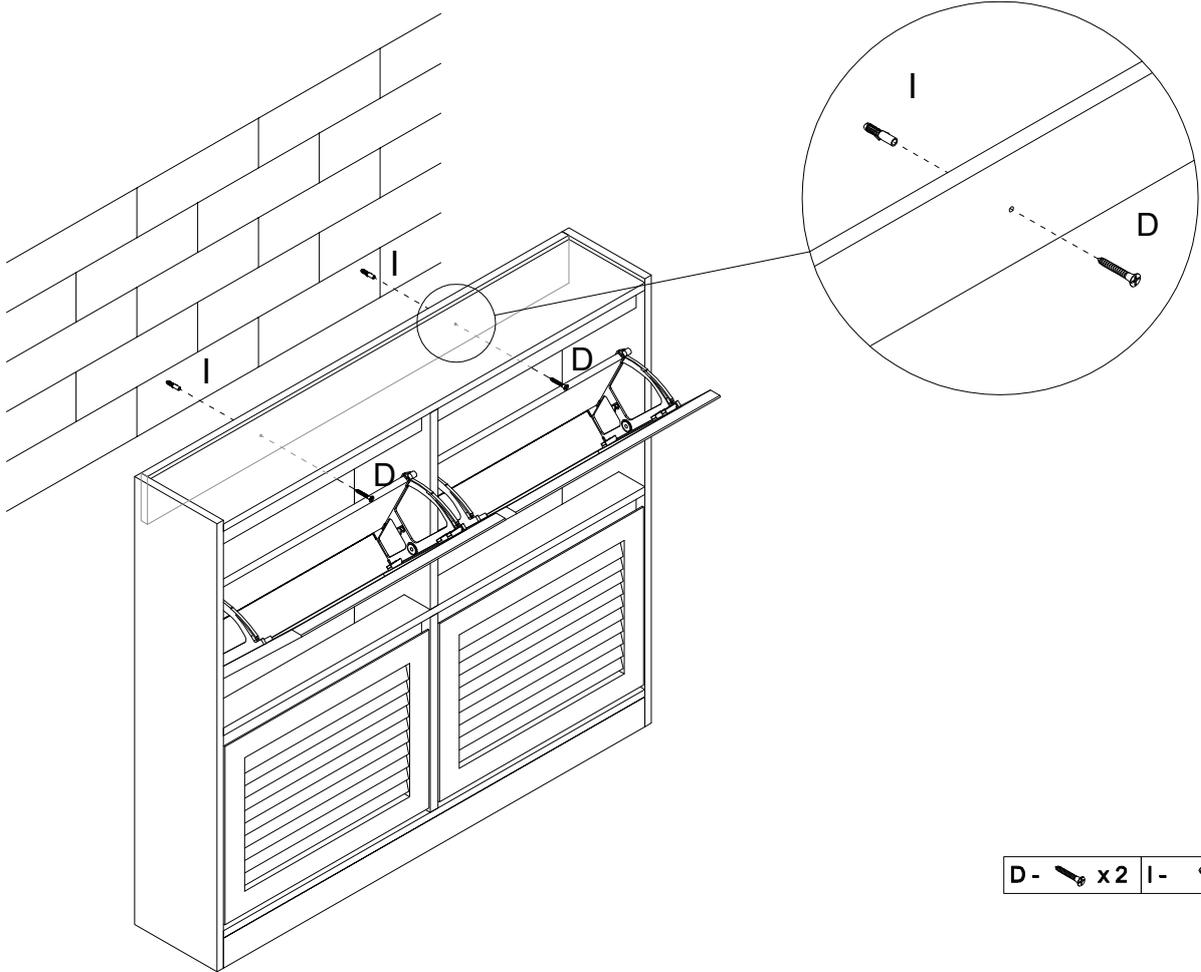

D -  x2 | I -  x2

 ⚠ WARNING

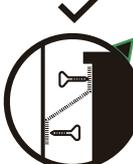Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS secure it with an anchor device.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Use safety drawer locks to prevent children climbing.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

