

# KMT说明书 折页 128g双铜 尺寸: 89\*127mm

anko

K: 43-640-263 | T: 71-806-655

Model No.: TS625N

## ANC TWS EARPHONES User Manual

### Includes:

- › TWS earphones
- › S/M/L Silicone eartips
- › Charging cable
- › User manual
- › Strap



### 12 month warranty

Thank you for your purchase.

This product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### MADE IN CHINA

### CUSTOMER SERVICE:

KMART AU: 1800 124 125


KMART NZ: 0800 945 995

TARGET AU: 1300 753 567

### WARNING:

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- This Bluetooth earbuds shall be charged by the supplied charging unit only
- The marking located on the bottom of charging unit.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Please note the product working temperature is 0-40 C.

### Function overview:

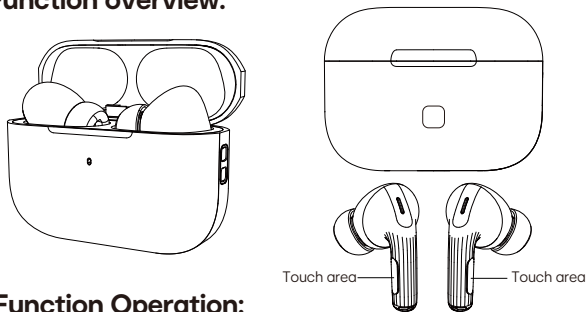

### Function Operation:

**Play / Pause** : Click either Left or Right

**Previous** : Double click Left earbud

**Next** : Double click Right earbud

**Redial last No.:** Three Clicks Right earbud

**Volume up** : Slide up Left or Right earbud

**Volume down** : Slide down Left or Right earbud

**Noise reduction mode** : Long press Right for 2 seconds to switch between ANC, Transparent and Normal modes

**Voice assistant** : Long press Left earbud for 2 seconds

**Answer call / End call**: Click either Left or Right earbud

**Reject call** : Double click Left or Right earbud when call coming

**In-ear detection** : Music plays when earphones are in-ear and pauses when removed. (Android and iOS: disabled by default, activated with 5 clicks.)

### Charging case LED indicator status :

**Low battery** : Press the charging case button, orange light stays on for about 4S accompanied by a "ding-ding-ding" prompt tone from the charging case. / Orange light stays for 8S when open charging case and stays for 4S after close charging case.

**Charging** : When press the charging case button, orange light stays on for about 4S then turns off.

**Charging finished** : Green indicator stays on 4S then turn off when press button on charging case.

### Pairing the Earphones with Bluetooth® devices

◆ Go to "Bluetooth Settings" on your Bluetooth device (phone, tablet, etc.)

◆ Turn the Bluetooth ON at your device, open the charging case and remove the earphones, they will automatically turn on.

On your Bluetooth Device, select the pairing name on the list of available devices, select pairing name: **anko43640263**.

◆ **Trouble shooting tip**: if the earphones do not connect to your device, turn the earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process.

### Pairing between left and right earphones

If the connection between the left and right earphones is lost, put both earphones back inside the charging box, close it and wait a few seconds before reopening. The earphones will automatically re-connect to each other.

If the process just described does not work, disconnect the earphones from your device, wait a few minutes then reconnect them (the earphones must be placed inside the charging box).

For both procedures, it is necessary that the earphones inside the charging box are charging, so make sure that the charging box has a sufficient charge level to ensure the charging of the earphones.

### Battery Charging

◆ There's a buzzer alerts when charging case battery is low.

◆ When using for the first time, charge the battery to maximum capacity. To recharge, plug the Type-C charging cable into the charging port. The orange light stays on for 8 seconds and automatically turns off indicates that charging is in progress.

Press the button on the back of charging box, if orange light is on for about 4 seconds, indicating that it is still charging; if green light on for about 4 seconds then turn off, indicating that it is fully charged.

◆ When the earphones are placed inside the charging box, charging for earphones will begin, green indicator on charging case stays on 4S then turn off.

◆ Charging case supports Qi wireless charging with 5W power. LED indicator and buzzer alert work the same as above.

**Earphone battery capacity** : 30mAh **Earphone charge time** : 1.5 hours

**Charging case battery capacity** : 300mAh

**Charging case charge time** : 2.5 hours

**Frequency response** : 20Hz-20KHz **Unit driver** : 20Hz-20KHz

**Working distance** : 10 meters

**Rated input** : 5V 1A

**Music time** : 4.5 Hours (Approx. 80% vol)

**Charging port** : Type-C

**Talk time** : 3.5 Hours

**Wireless charging input** : 5W max

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license