

Assembly Instructions


43641383 ASKER DINING CHAIR

CARE INSTRUCTIONS: WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE ABRASIVE MATERIAL AND SOLVENTS. SPOT CLEAN IF NEEDED. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. CHECK AND TIGHTEN ALL PARTS REGULARLY. FOR INDOOR AND DOMESTIC USE ONLY.

WARNING: DO NOT STAND ON THIS CHAIR. USE ONLY ON A FLAT SURFACE. SUITABLE FOR ONE PERSON USE ONLY. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. DO NOT SIT ON THE ARMREST. ADULT ASSEMBLY REQUIRED. DO NOT TIGHTEN THE SCREWS FULLY DURING ASSEMBLY. FULLY TIGHTEN SCREWS AFTER THE FINAL ASSEMBLY STEPS. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM SAFE LOAD: 100KG.

 AX1



BX1



CX1



DX1



EX8



M6X40mm

FX2



M6X20mm

GX8



M6X18mm

HX8



M6



IX1



4#


1

D

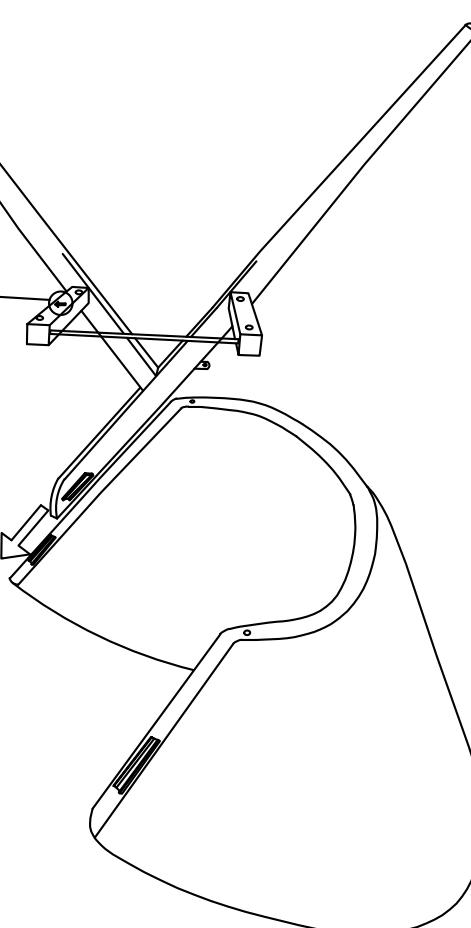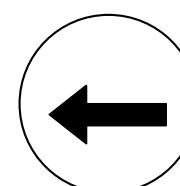


A

2

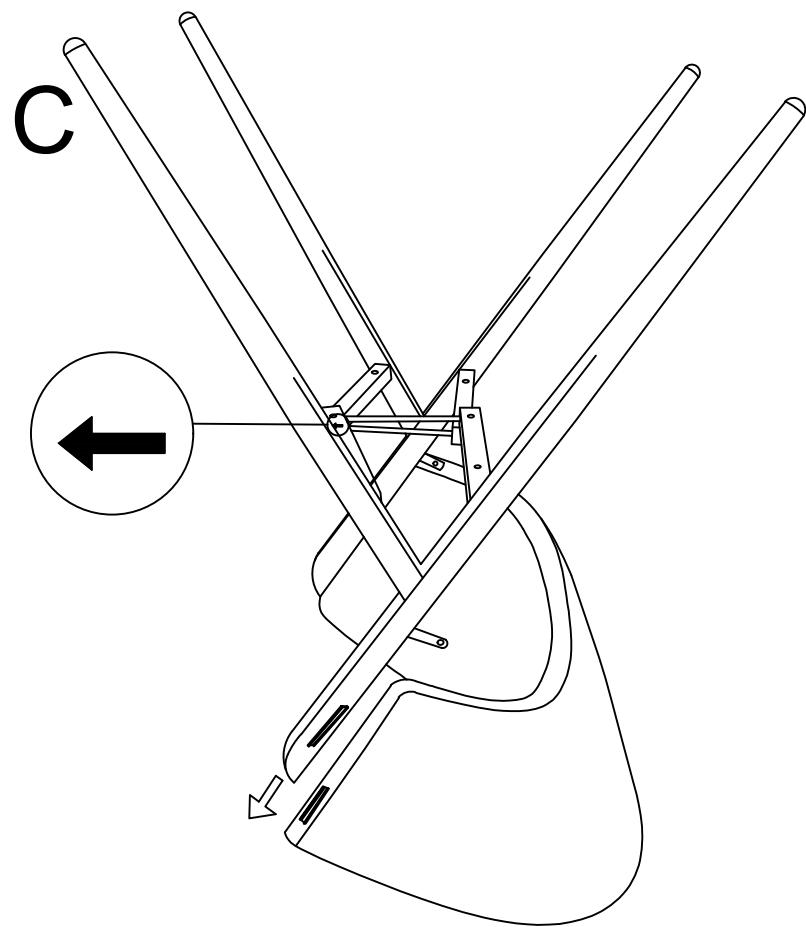


3

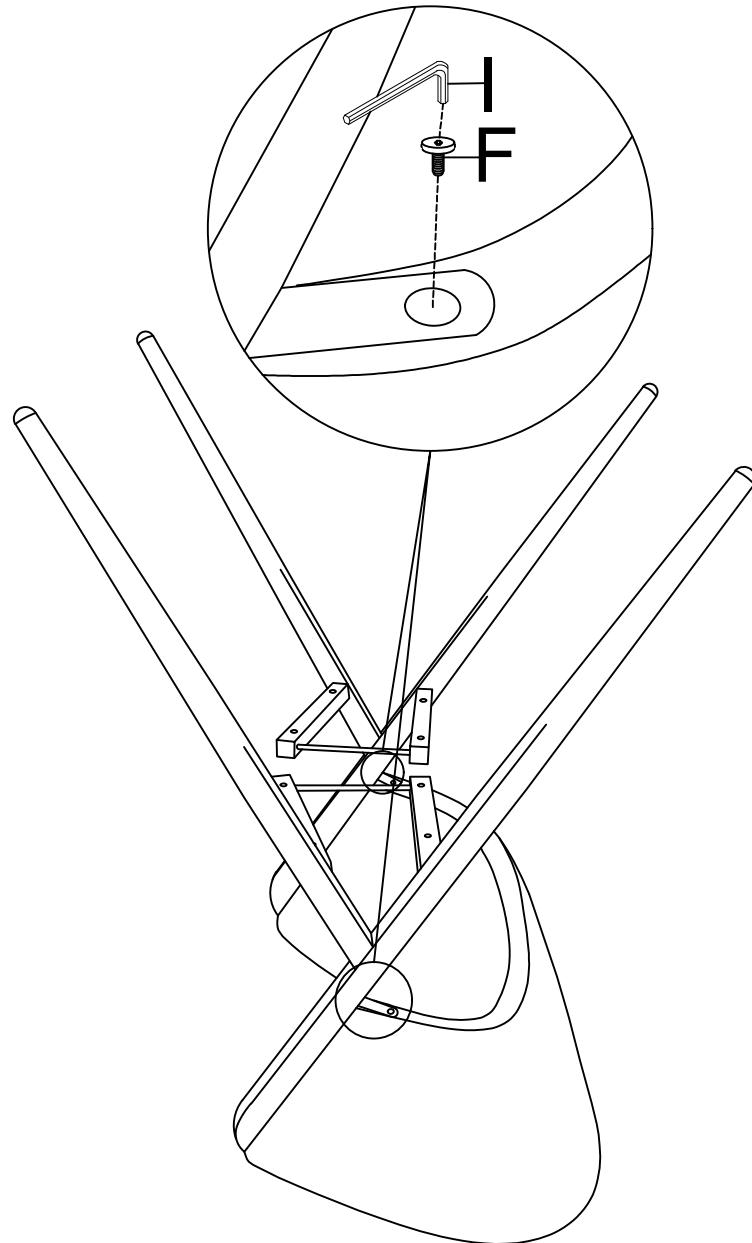


Attention: Please do not tighten the screws until all the screws are well in position.

4

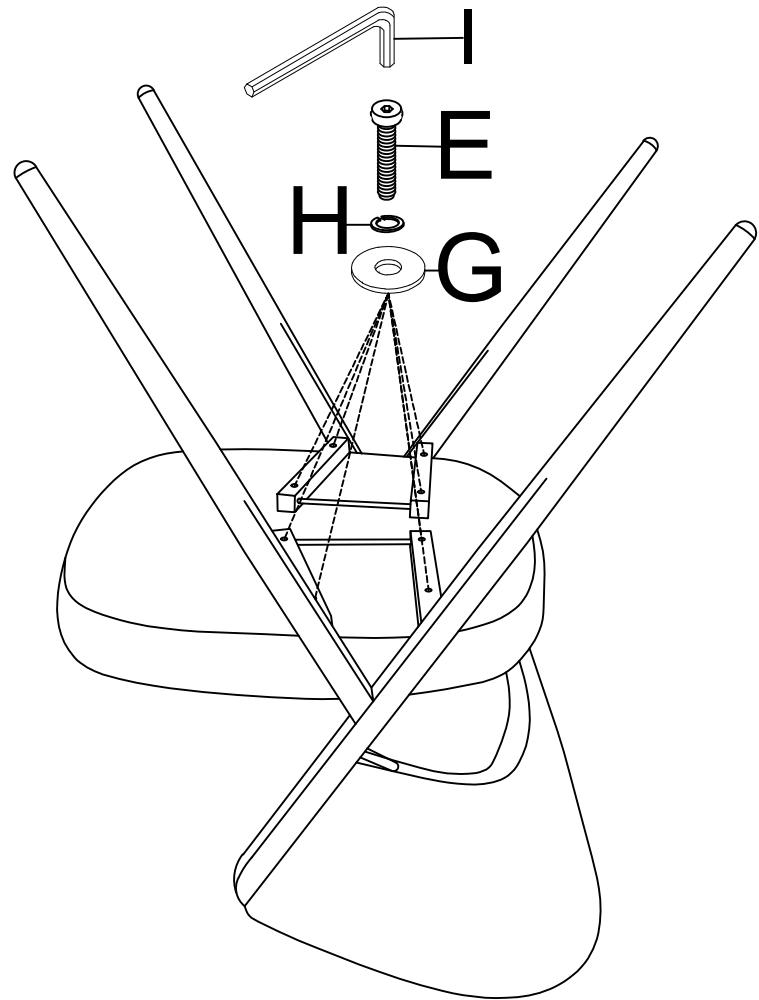


5

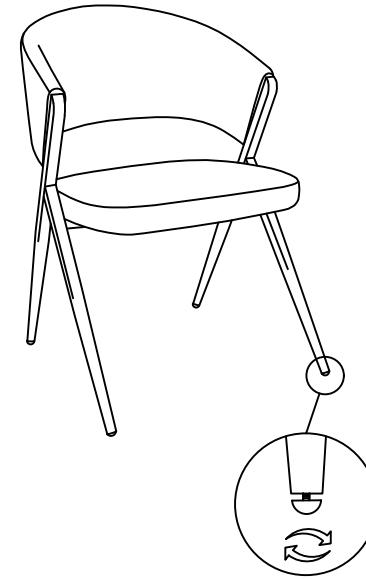

Please use adjustable foot pads to adjust the chair when it is uneven on the ground.

6

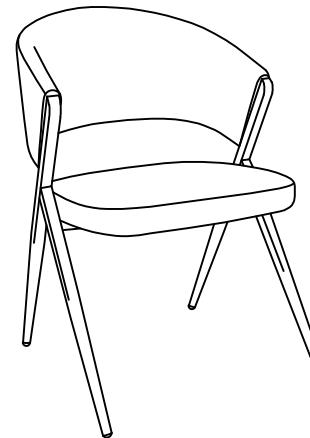

Attention: Assemble screws after the holes of legs and seat bottom aligned.
Do not tighten screws until all the screws are well in position.