

Assembly Instruction

43642526 NATE STORAGE UNIT



CARE INSTRUCTIONS:

WIPE CLEAN WITH A DRY CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.


WARNING :

DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM SAFE LOAD: 5KGS FOR TOP, 5KGS FOR SHELF, 5KGS FOR DRAWER.

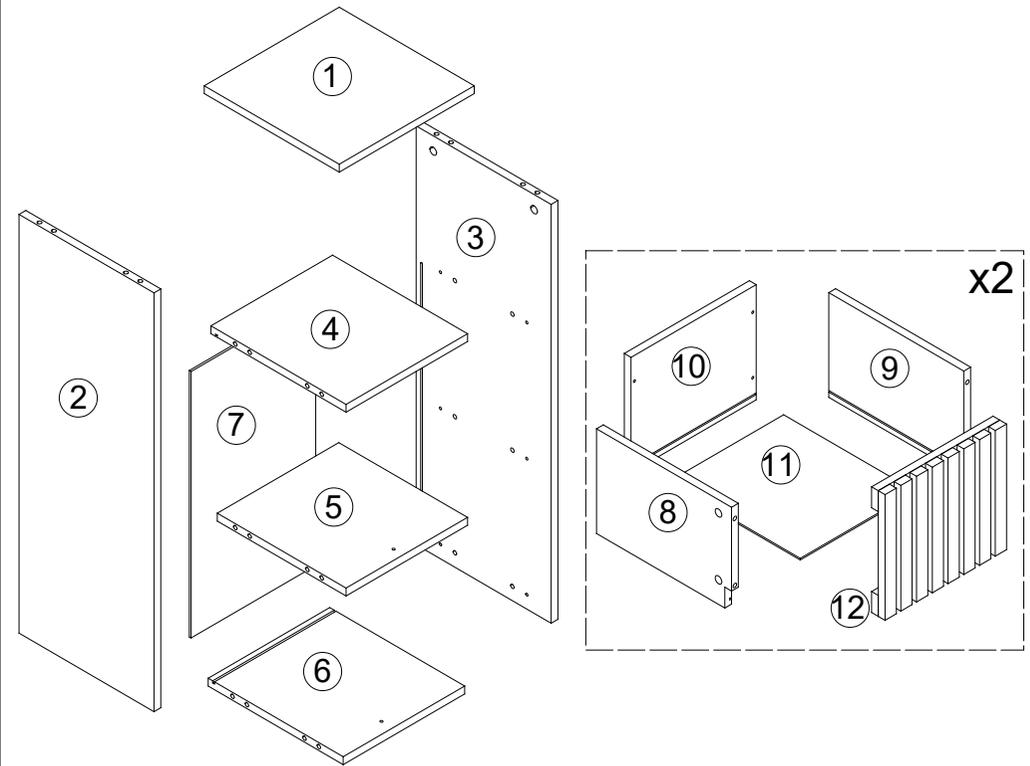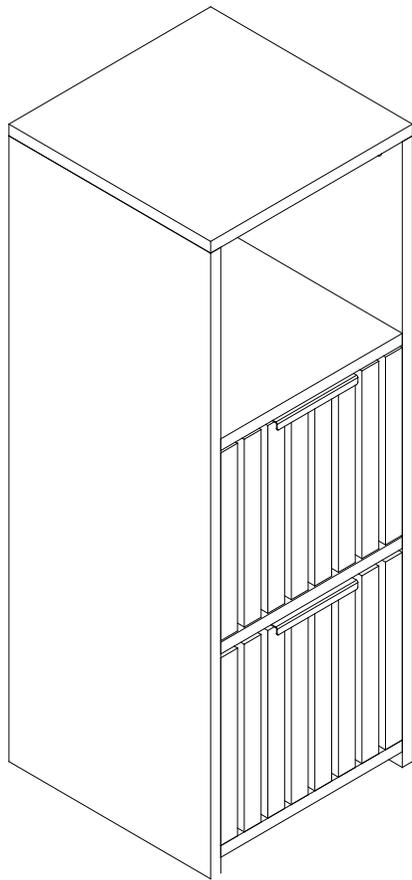

Tools Required(Not Provided)

 













Do not tighten the screws fully during assembly.
Fully tighten screws after the final assembly steps.

Hardware List



	A	6x35mm	24pcs
	B	15x10mm	24pcs
	C	6x30mm	16pcs
	D	3.5x12mm	6pcs
	E	4x12mm	1pc
	F		1pc
	G	4x35mm	8pcs

	H		2pcs
	I		1pc
	J		2pcs
	K	3x14mm	4pcs
	L		4pcs
	M	4x40mm	1pc


Part List

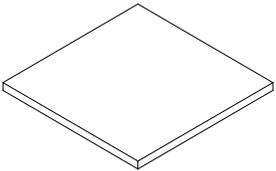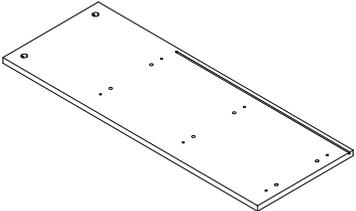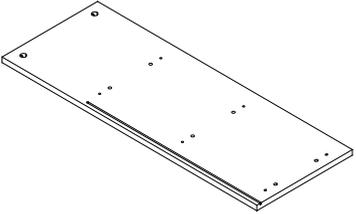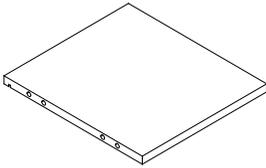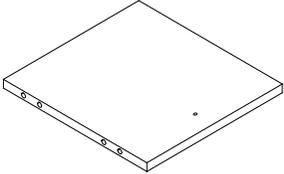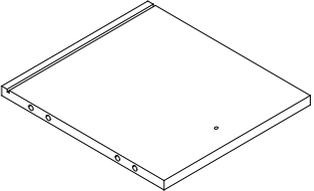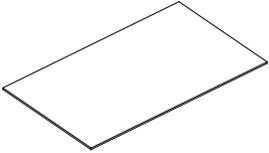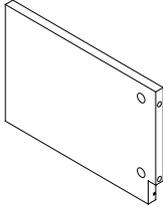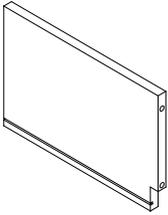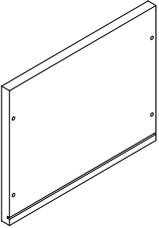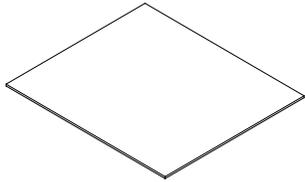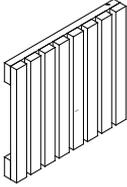	1	1PC		2	1PC		3	1PC		4	1PC		5	1PC
	6	1PC		7	1PC		8	2PCS		9	2PCS		10	2PCS
	11	2PCS		12	2PCS									

 
Step 1: Ax4 Ex1 Fx1

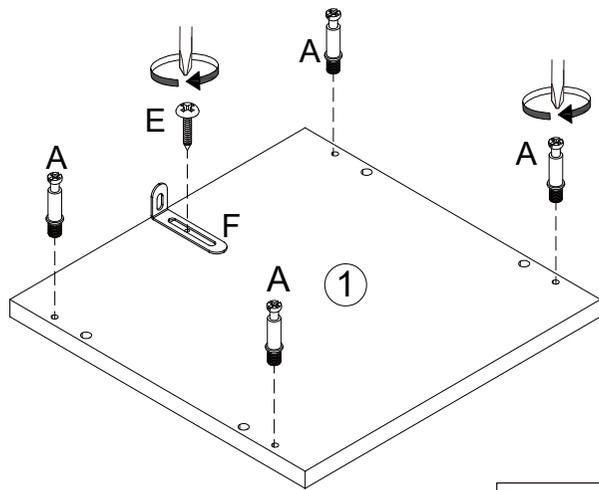



Step 3: Hx2 Dx2

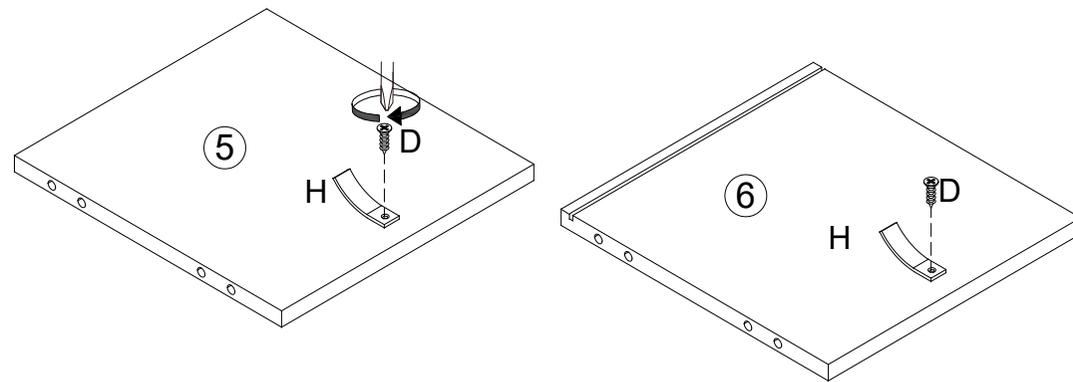


Step 2: Ax 12

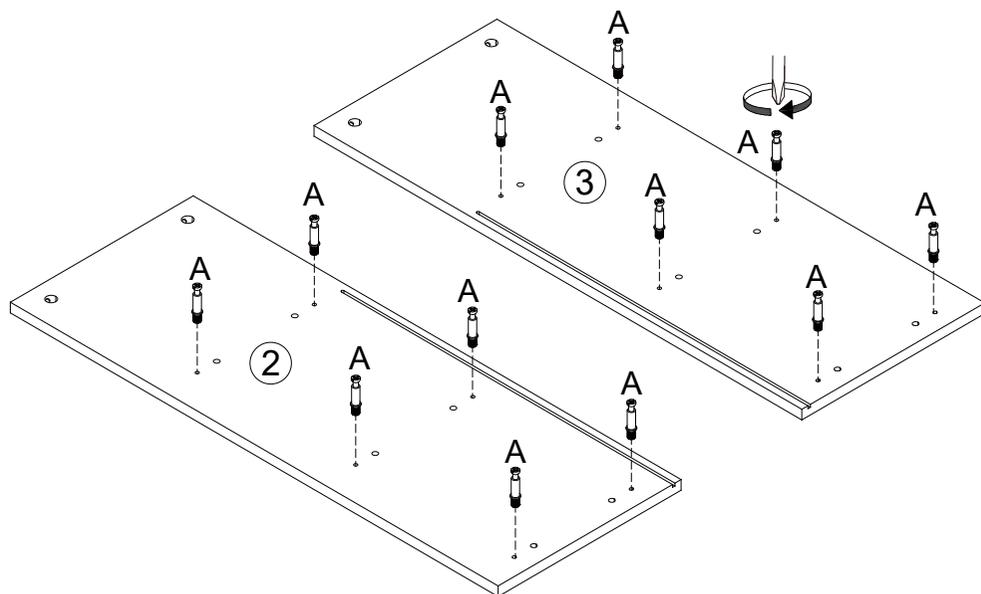


Step 4: Bx6 Cx6

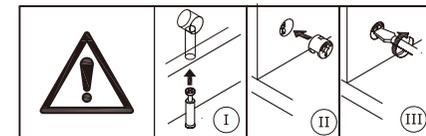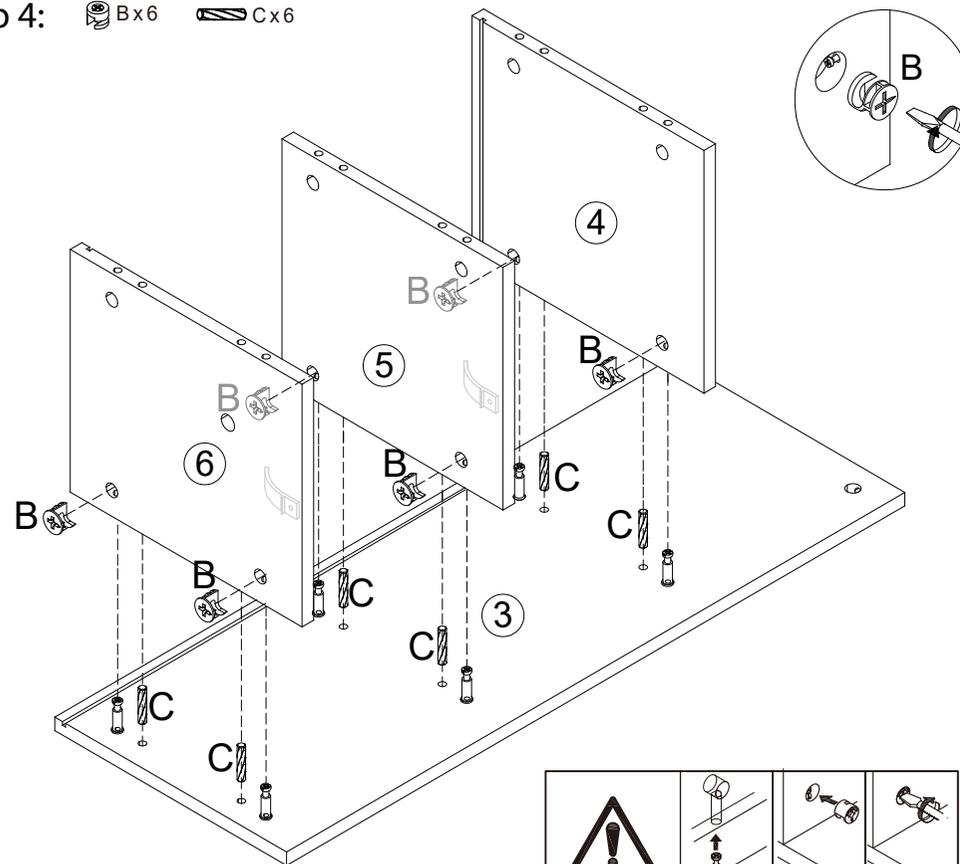


Step 5:

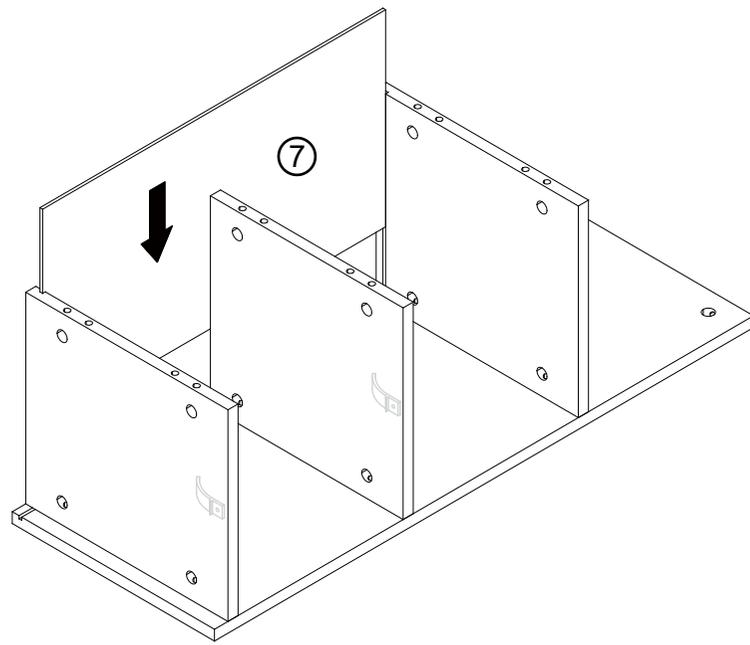


Step 7:  Bx4  Cx4

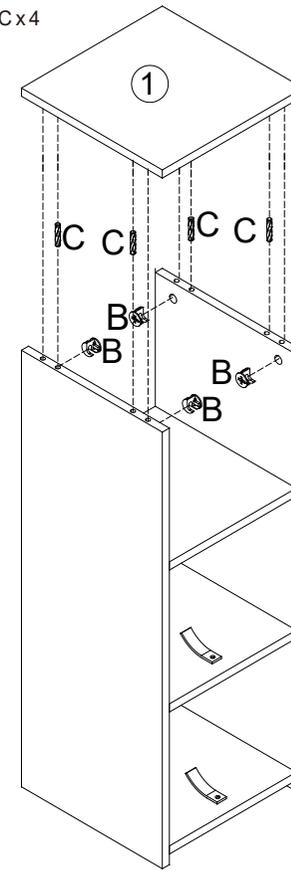

Step 6:  Bx6  Cx6

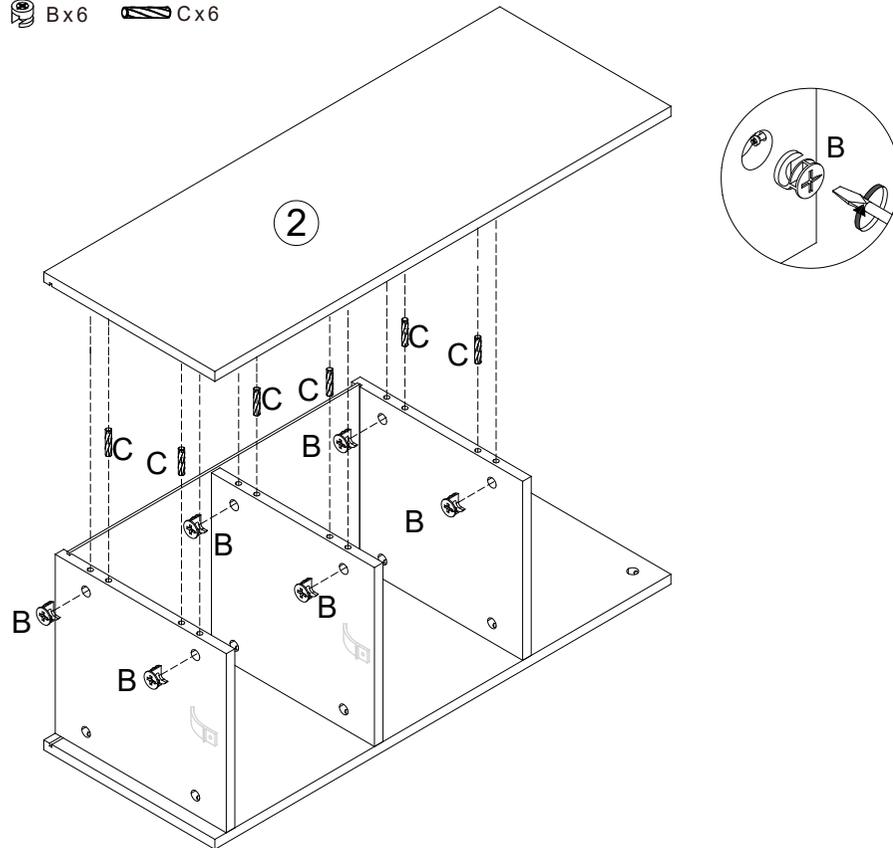



Step 8:  Ax8  Dx4  Jx2

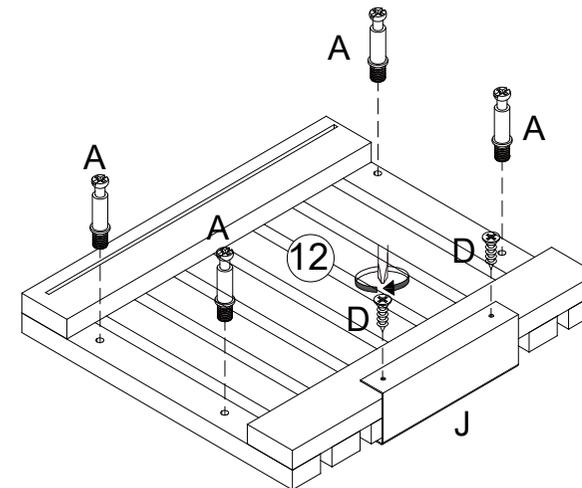

x2


Step 9:  B x 8

x2

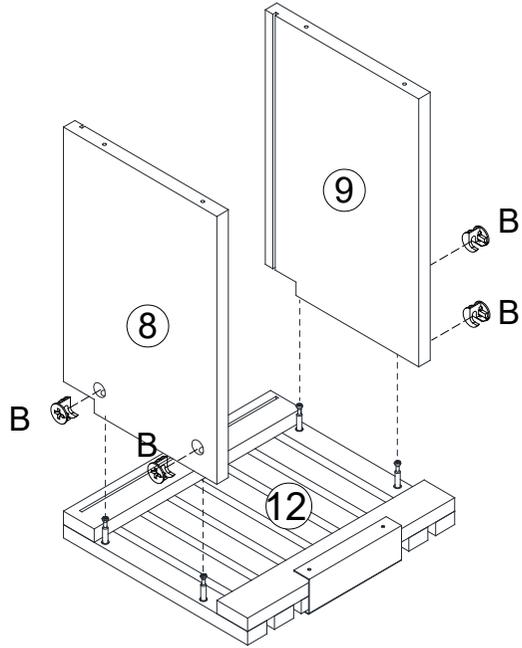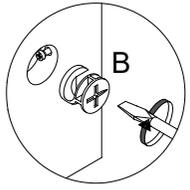


Step 11:  G x 8

x2

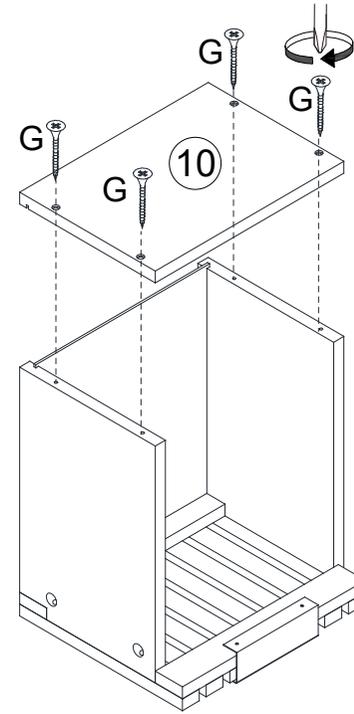


Step 10:

x2

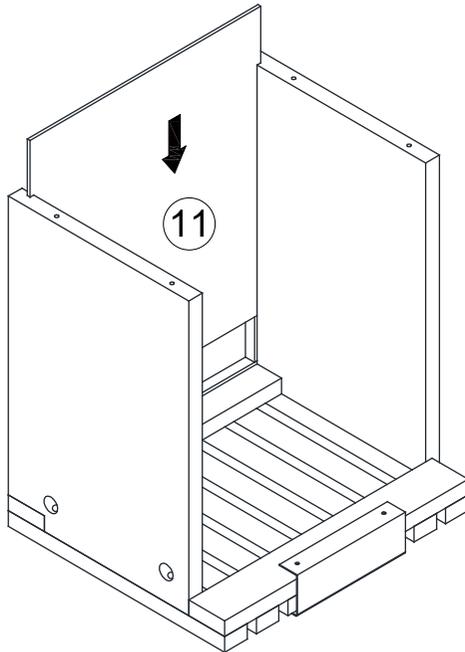


Step 12:

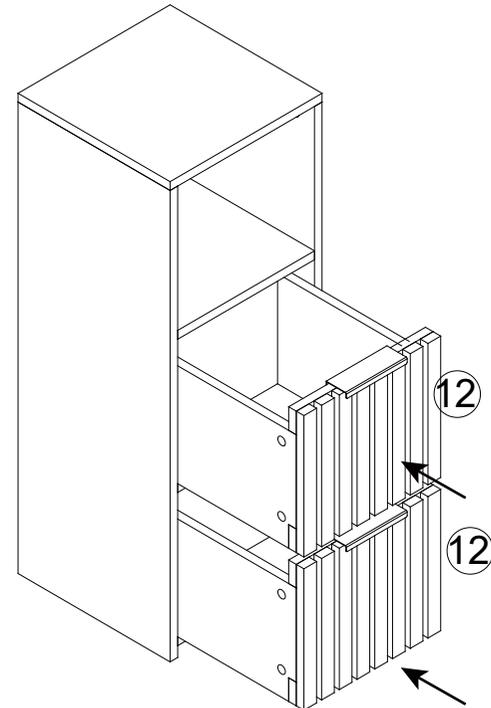


Step 13:

Lx4 Kx4

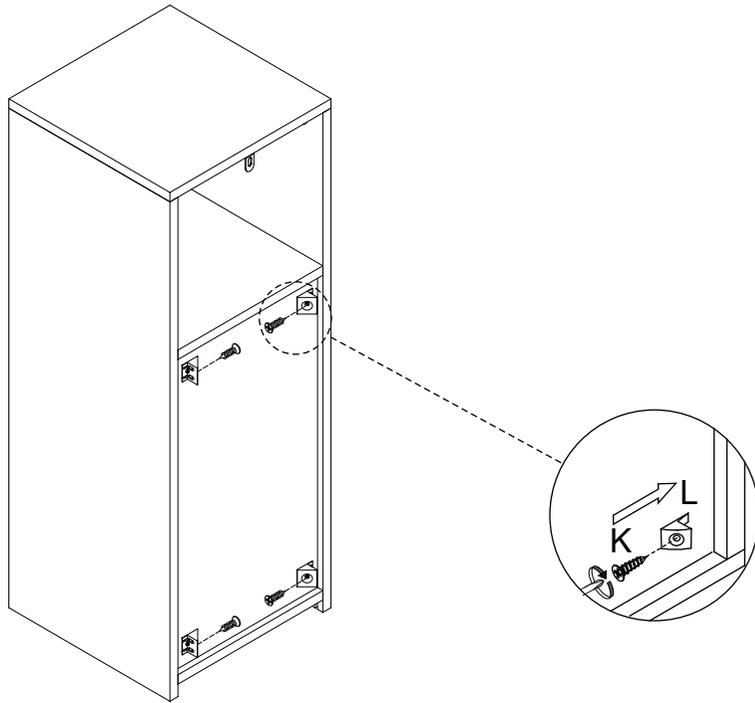

Step 14:

I x 1 M x 1

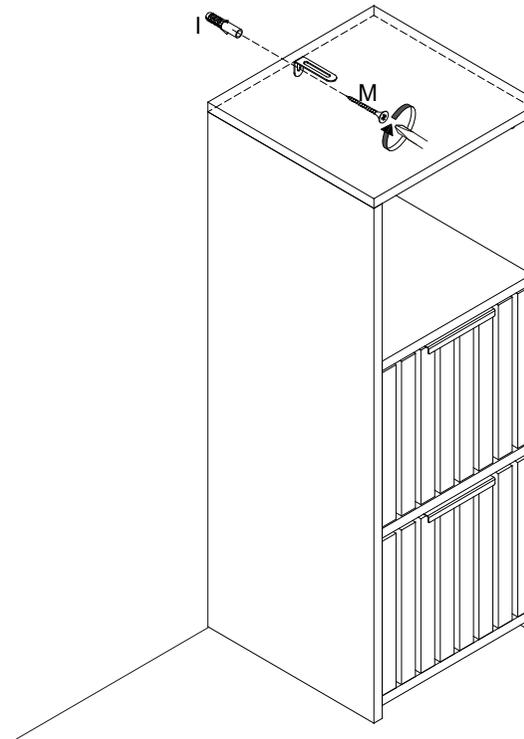

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

