

Assembly Instruction

43642533 NATE TALL 5T UNIT BLK



CARE INSTRUCTIONS:

WIPE CLEAN WITH A DRY CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.


WARNING :

DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

MAXIMUM SAFE LOAD: 5KGS FOR EACH SHELF.

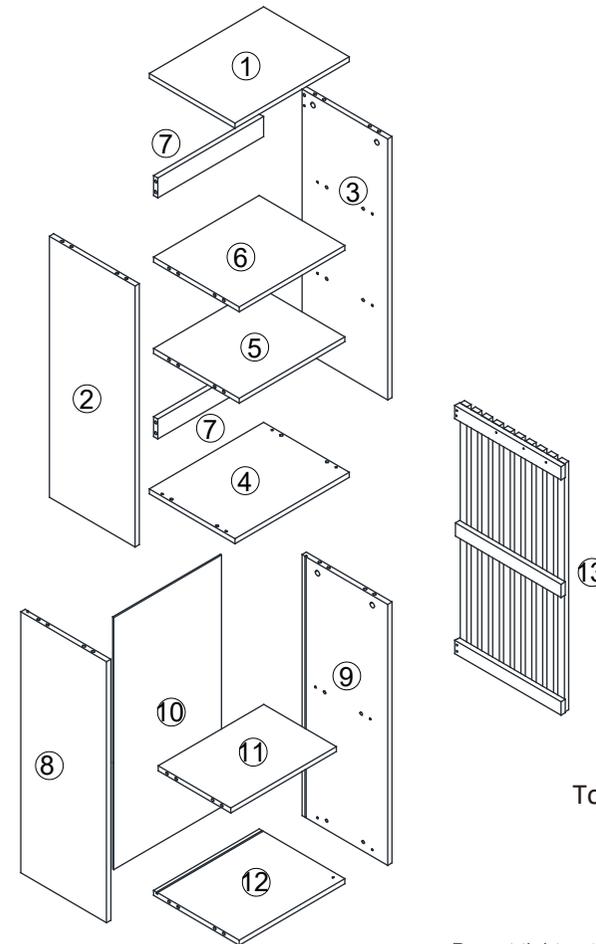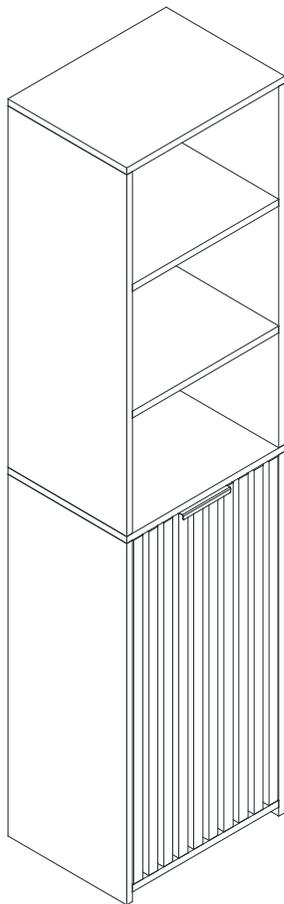

Tools Required(Not Provided)

 














Do not tighten the screws fully during assembly.
Fully tighten screws after the final assembly steps.

Hardware List



	A	6x35mm	28pcs
	B	15x10mm	28pcs
	C	6x30mm	32pcs
	D	3.5x12mm	6pcs
	E	4x12mm	1pc
	F		1pc
	G	4x40mm	5pcs
	H		1pc

	J		1pc
	K		2pcs
	L		1pc
	M		1pc
	O		4pcs
	P	3x14mm	6pcs
	Q	2.5x12mm	1pc


Part List

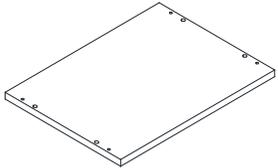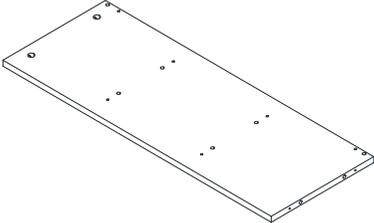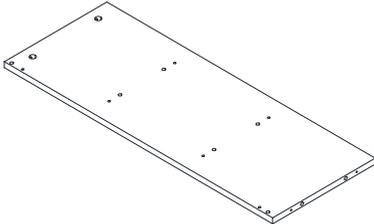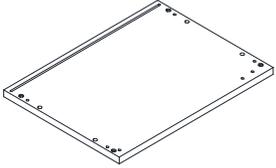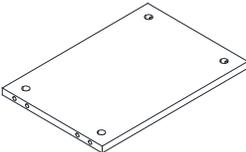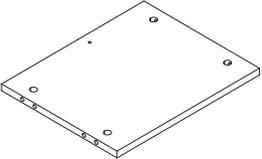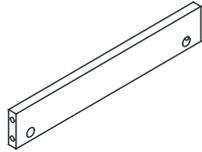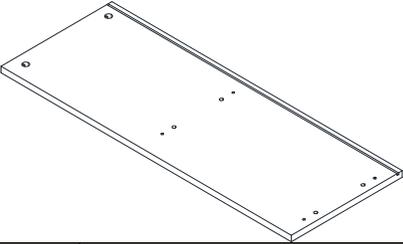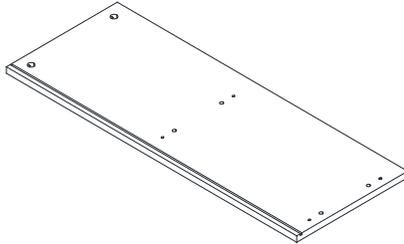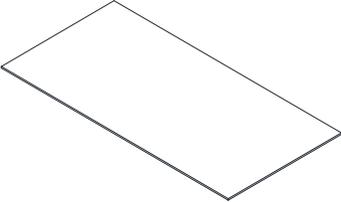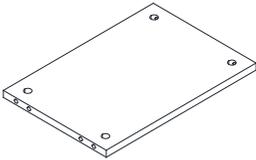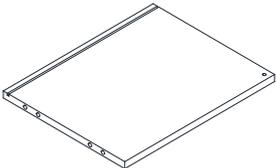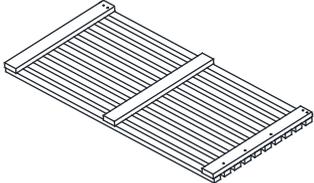	1PC		1PC		1PC		1PC		1PC
①		②		③		④		⑤	
	1PC		2PCS		1PC		1PC		1PC
⑥		⑦		⑧		⑨		⑩	
	1PC		1PC		1PC				
⑪		⑫		⑬					

 
Step 1: Ax4 Px2 Hx1

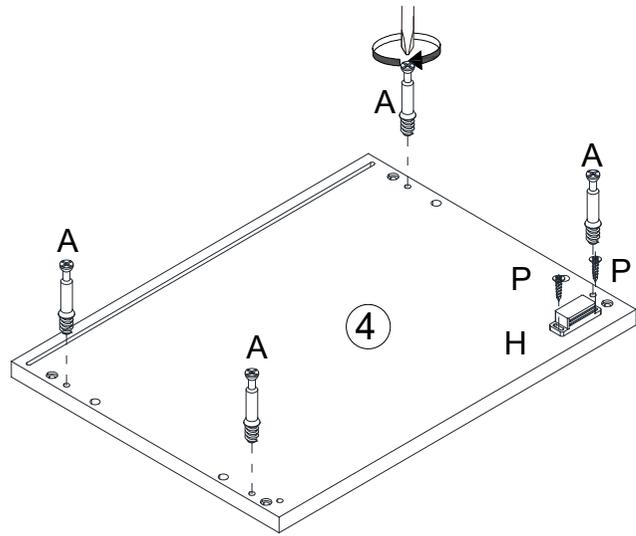



Step 2: Ax4 Ex1 Fx1

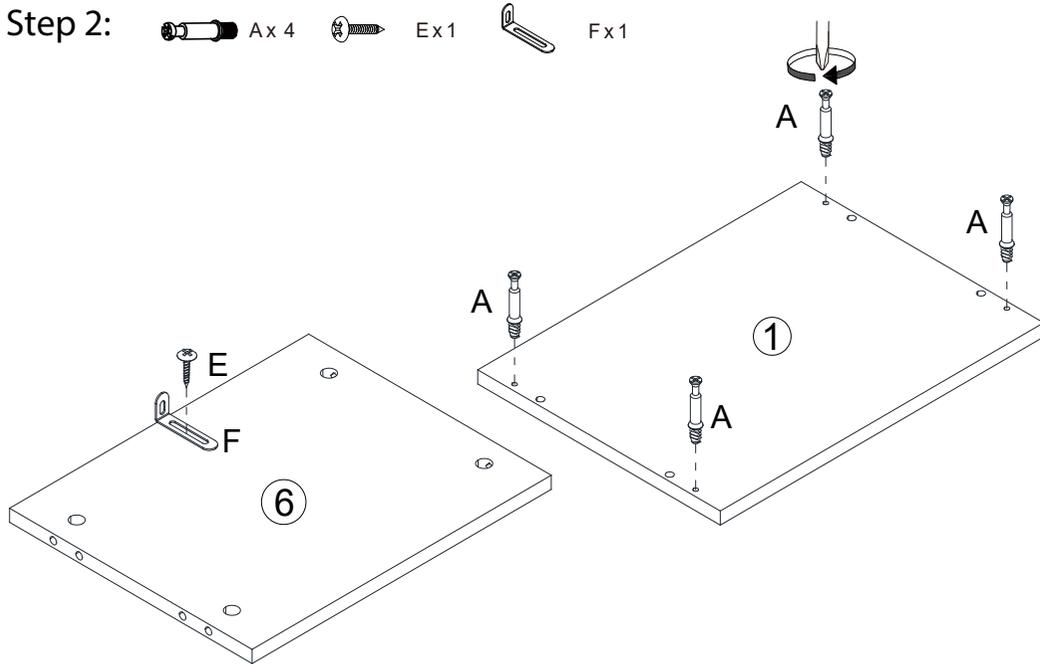


Step 3: Ax12

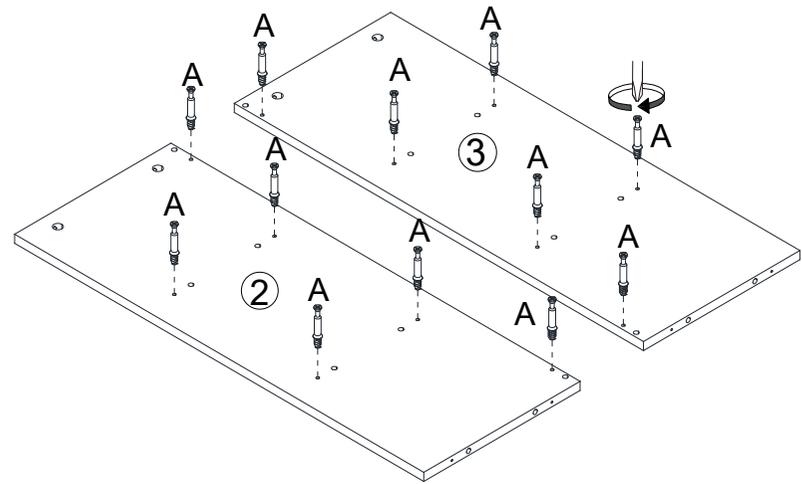


Step 4: Bx4 Cx4

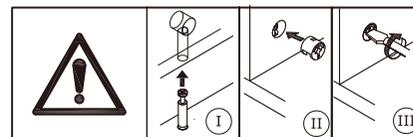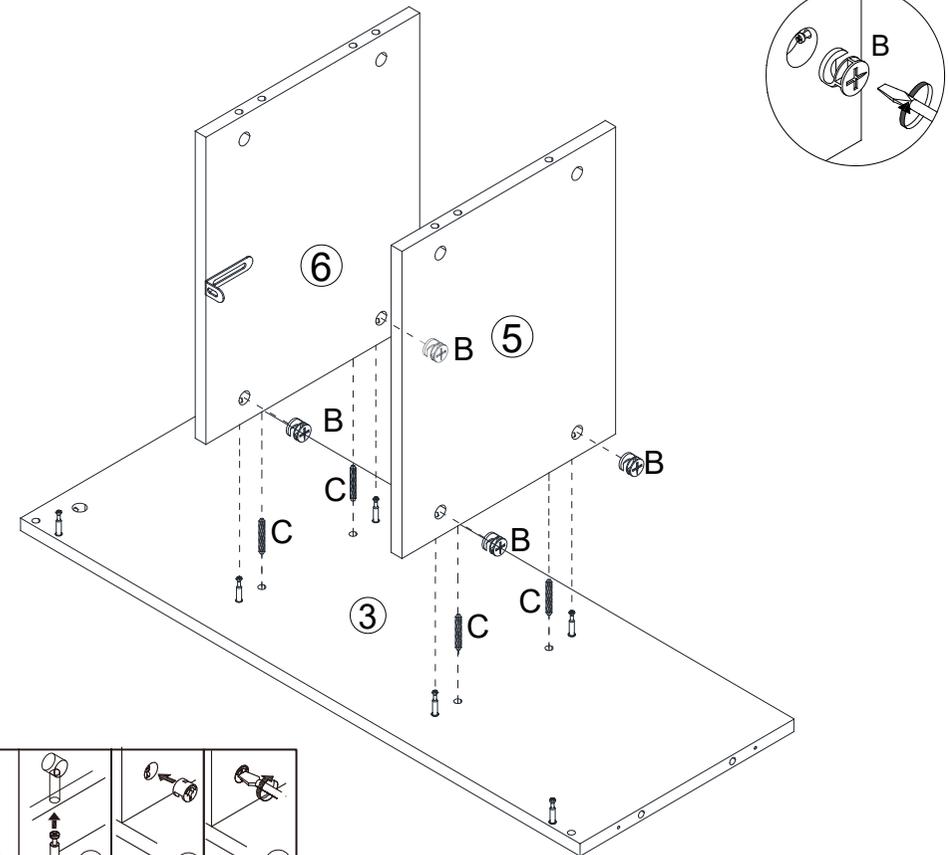


Step 5: Bx2 Cx2

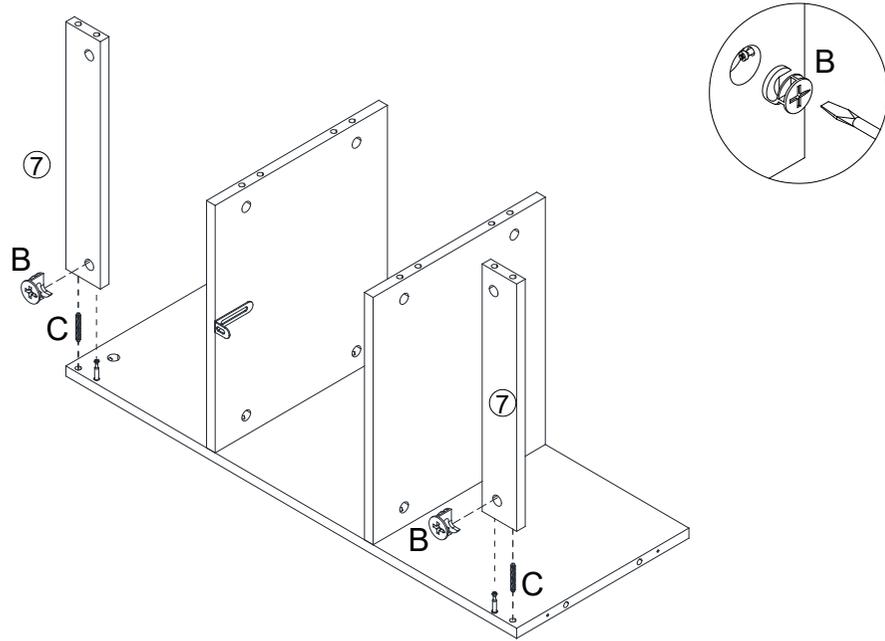


Step 7: Bx4 Cx4

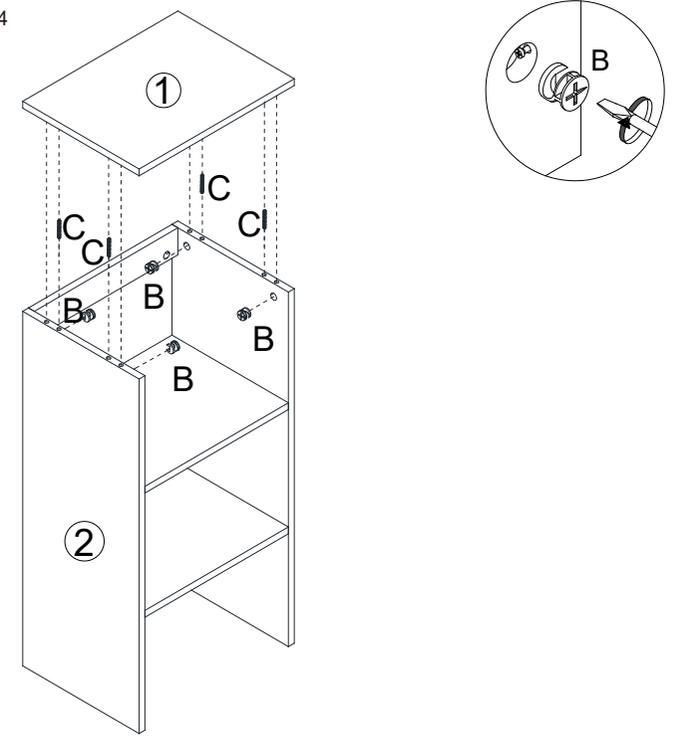


Step 6: Bx6 Cx6

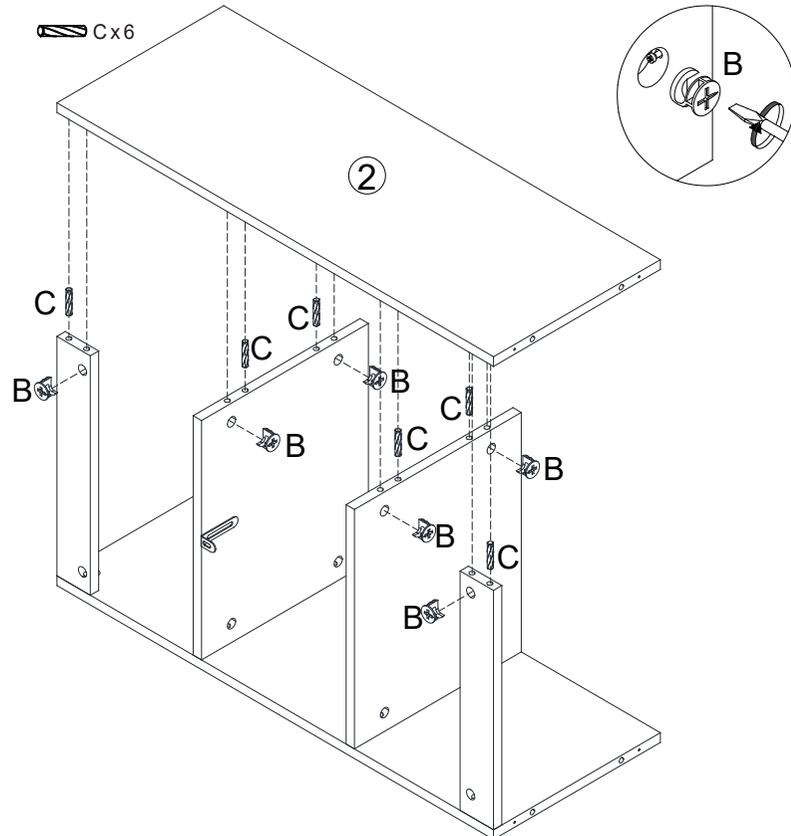


Step 8: Gx4 Cx4

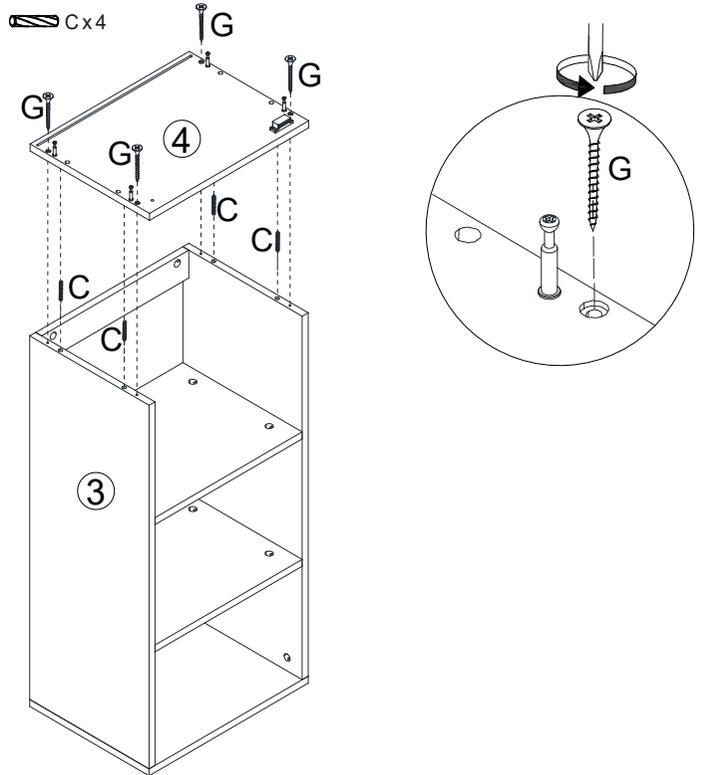


Step 9:  Ax 8

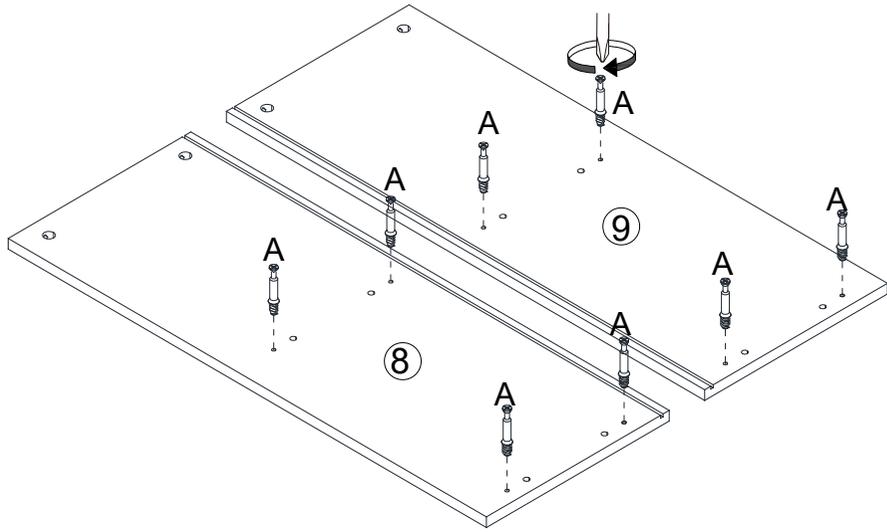


Step 11:

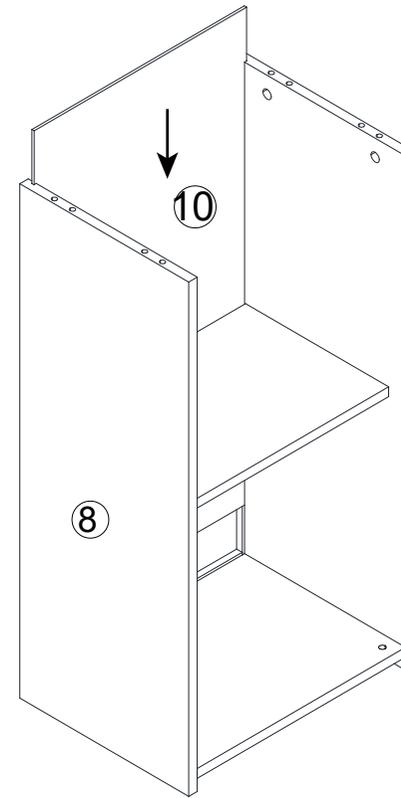



Step 10:  Bx8  Cx8

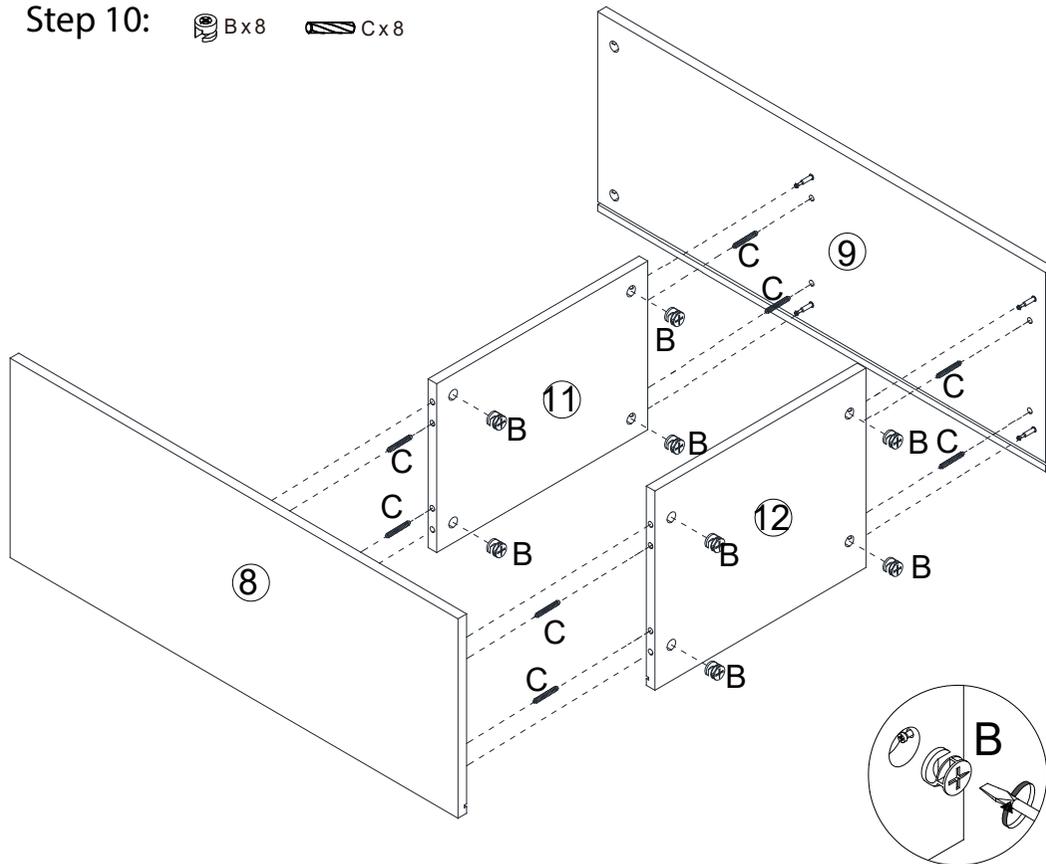



Step 12:  Dx4  Lx 1  Qx1  Jx1  Kx1

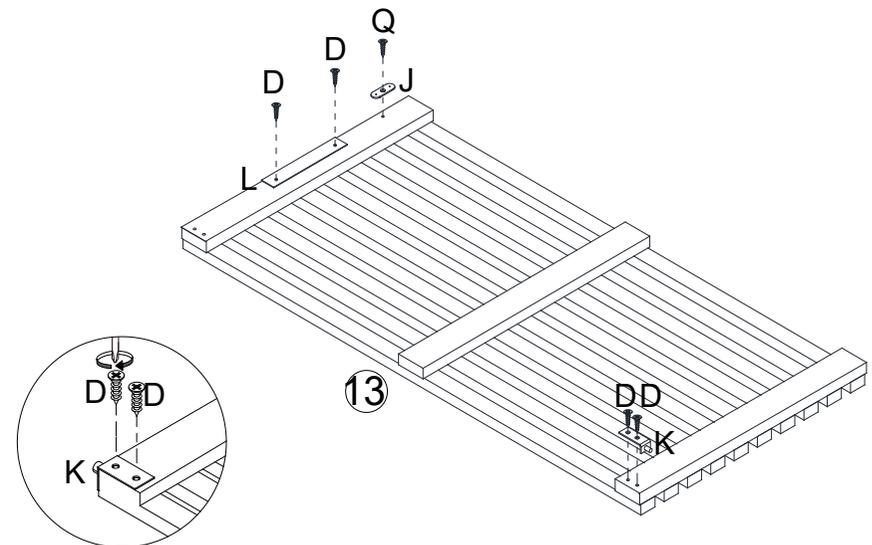


Step 13: Bx4 Cx4

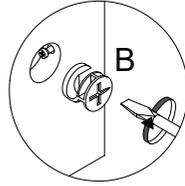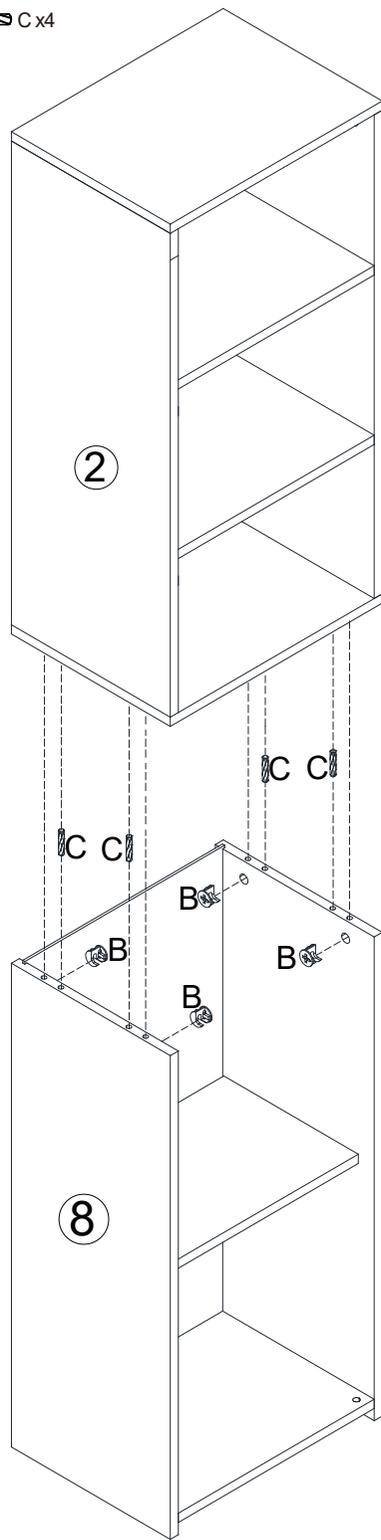


Step 14: Kx1

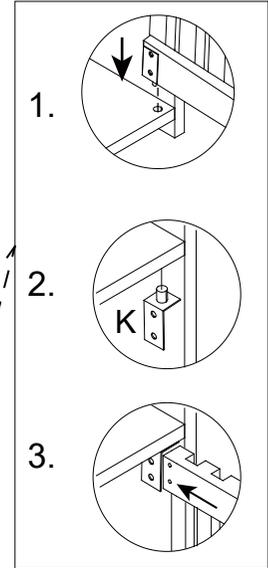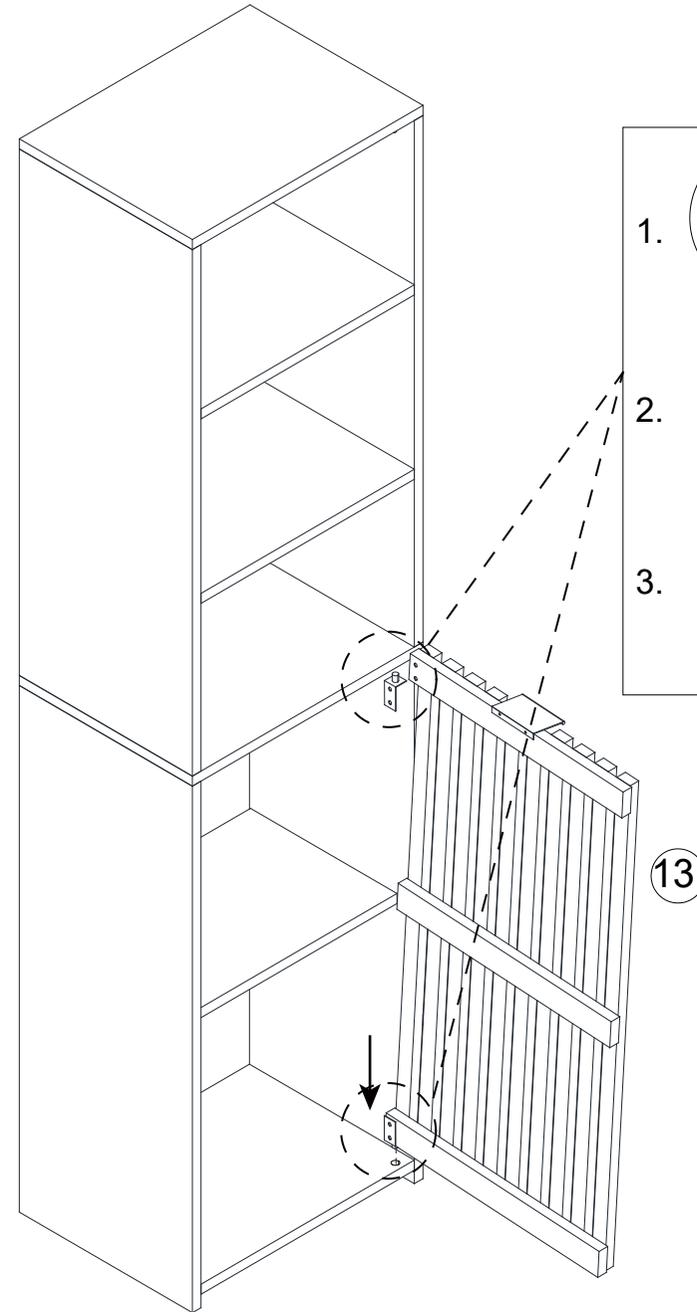

Step 15:  Dx2

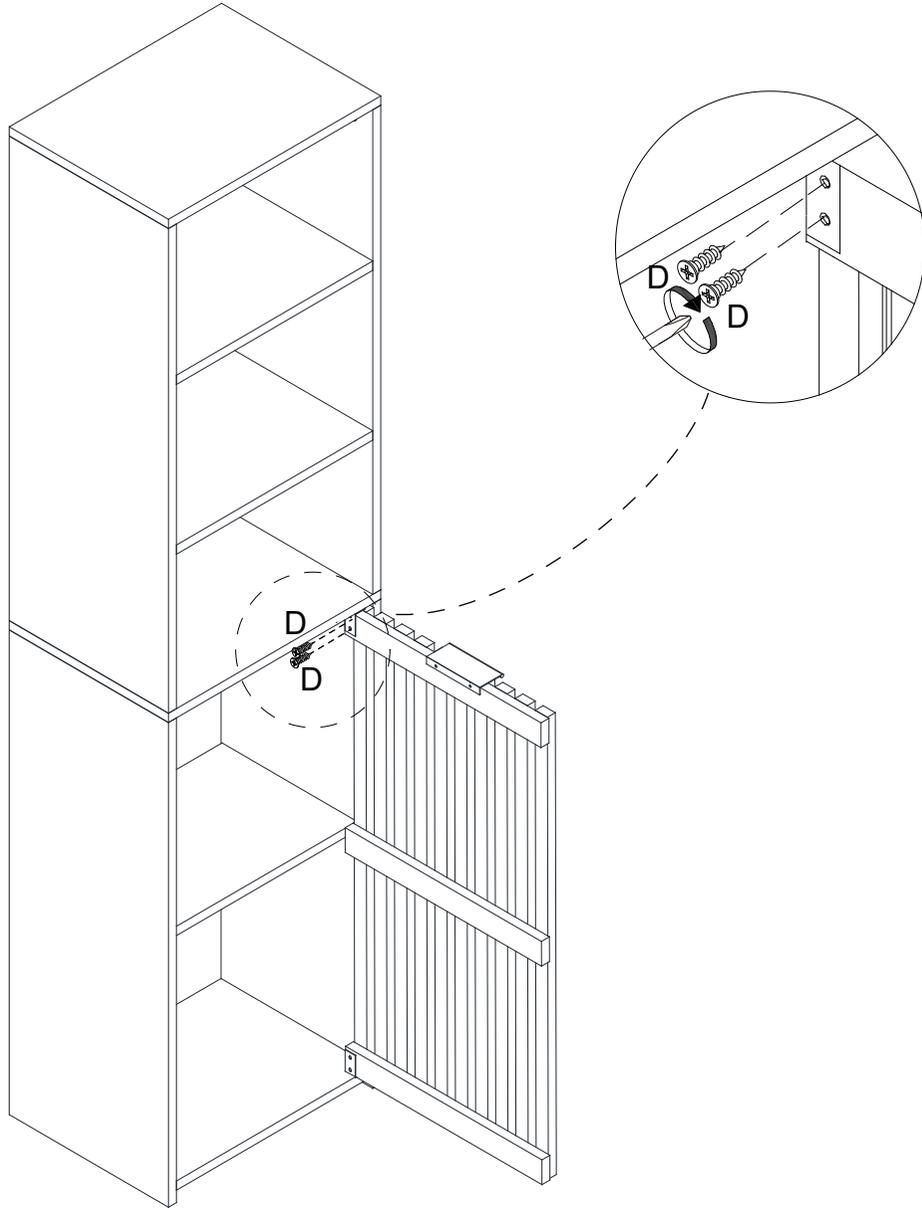


Step 16:  Ox4  Px4

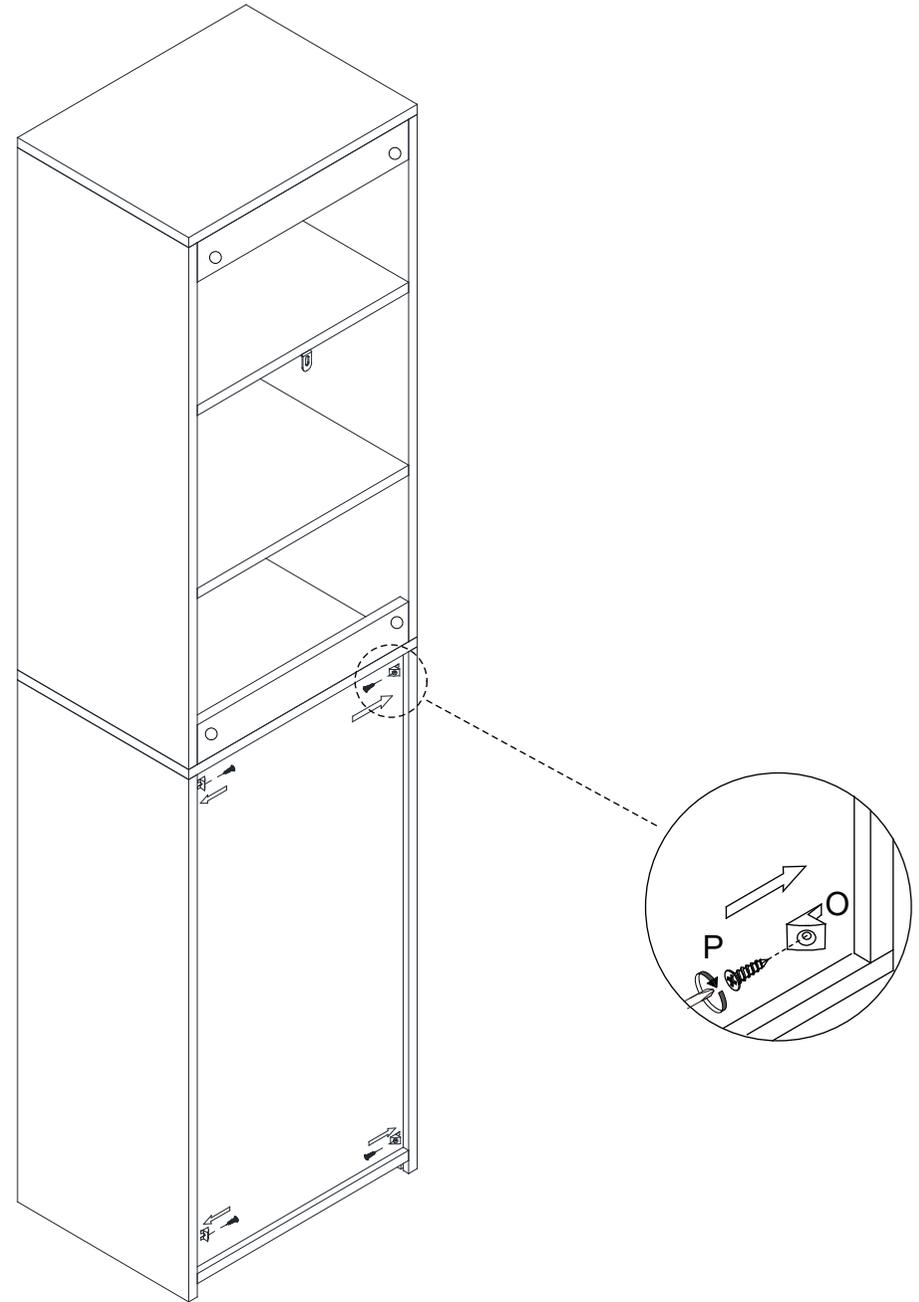


Step 17:

 M x 1  G x 1

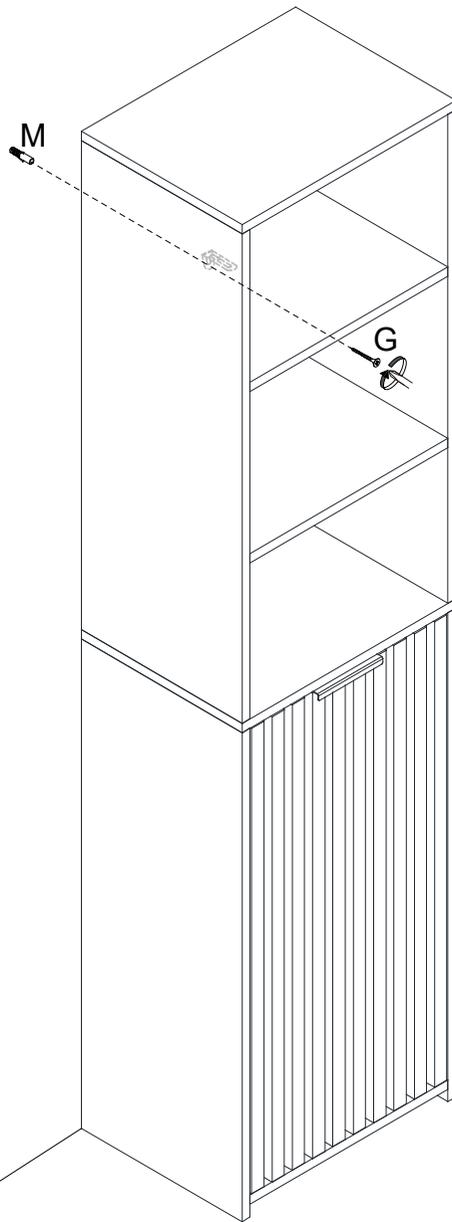

WARNING

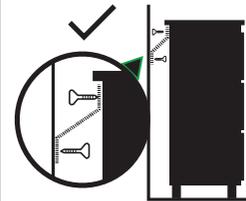

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

