

# Assembly Instruction

## 43642564 NATE DOUBLE HAMPER




### CARE INSTRUCTIONS:

WIPE CLEAN WITH A DRY CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.


### WARNING :

DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

**MAXIMUM SAFE LOAD: 10KGS FOR TOP, 5KGS FOR EACH BAG.**

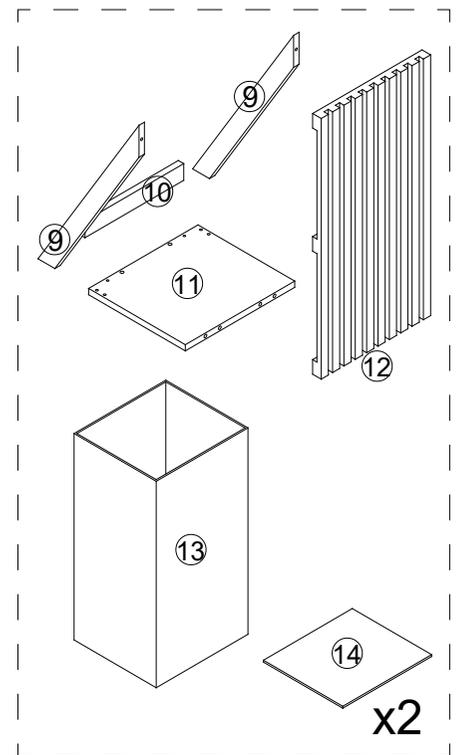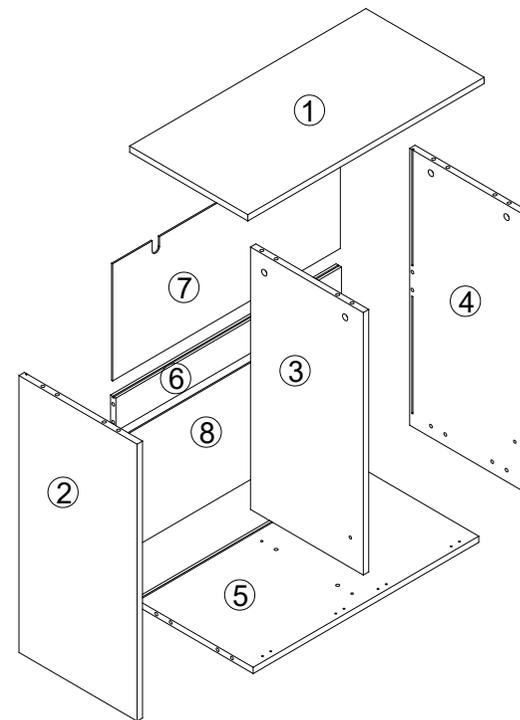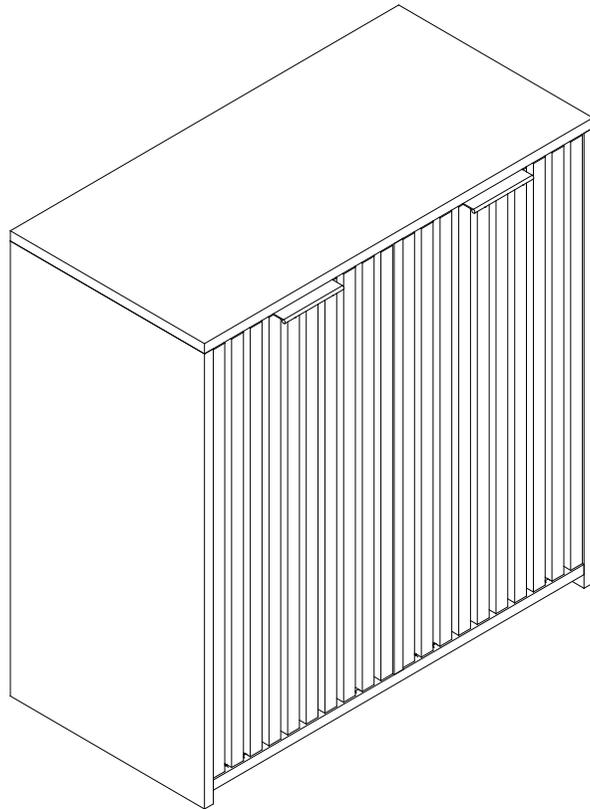

Tools Required(Not Provided)

 

Do not tighten the screws fully during assembly.  
Fully tighten screws after the final assembly steps.















## Hardware List

  	A	6x35mm	18pcs
	B	15x10mm	18pcs
	C	6x30mm	20pcs
	D	3.5x12mm	4pcs
	E	4x12mm	2pcs
	F		2pcs
	G	4x35mm	14pcs

	H		4pcs
	I		2pcs
	J		2pcs
	K	3x14mm	12pcs
	L		8pcs
	M	4x40mm	2pcs
	N		2pcs



	O		1pc
	P		2pcs
	Q	3x12mm	18pcs
	R	4x35mm	4pcs

## Part List

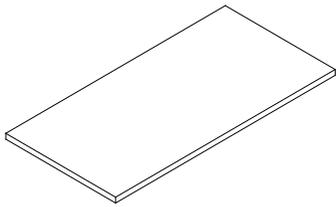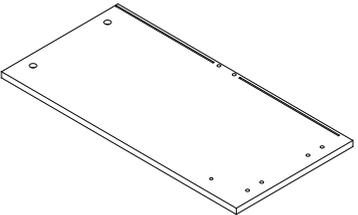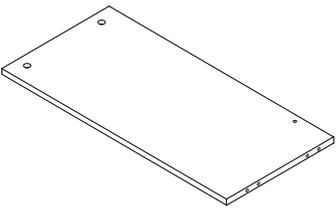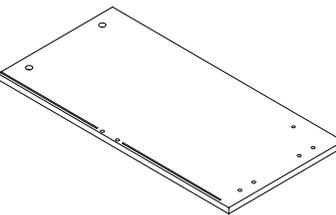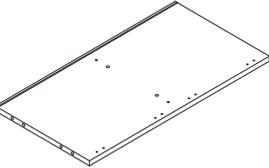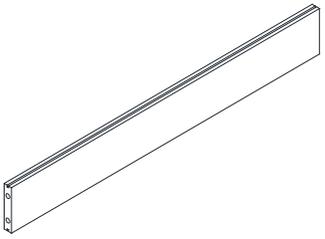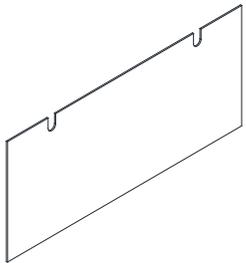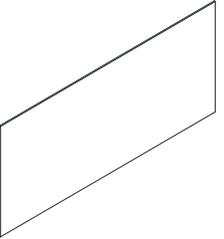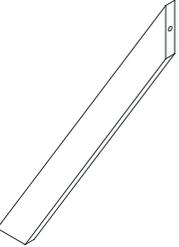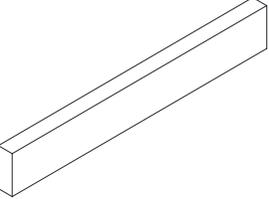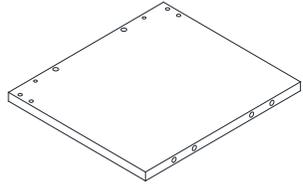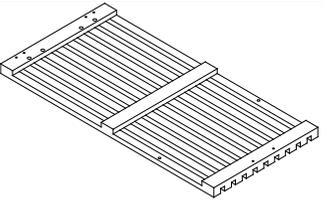	<b>1</b>	<b>1PC</b>		<b>2</b>	<b>1PC</b>		<b>3</b>	<b>1PC</b>		<b>4</b>	<b>1PC</b>		<b>5</b>	<b>1PC</b>
	<b>6</b>	<b>1PC</b>		<b>7</b>	<b>1PC</b>		<b>8</b>	<b>1PC</b>		<b>9</b>	<b>4PCS</b>		<b>10</b>	<b>2PCS</b>
	<b>11</b>	<b>2PCS</b>		<b>12</b>	<b>2PCS</b>		<b>13</b>	<b>2PCS</b>		<b>14</b>	<b>2PCS</b>			



### Step 1:

  Ax6  Ex2  Fx2  Kx4  Px2

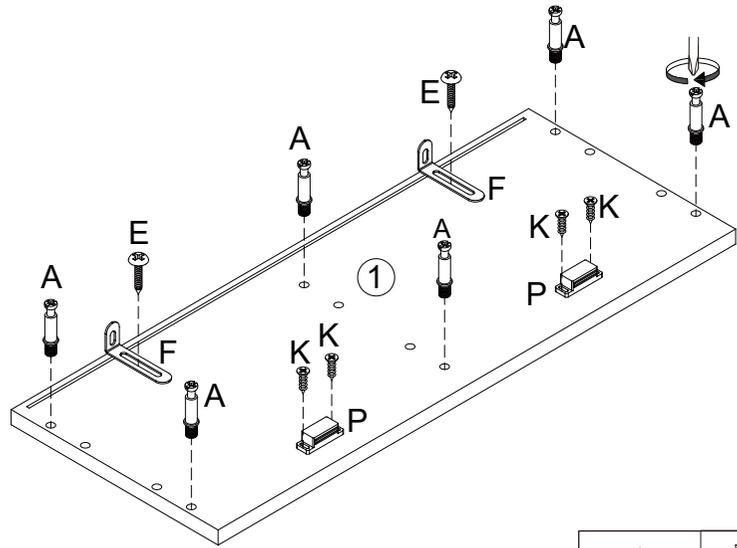


### Step 3:

 Bx4  Cx2

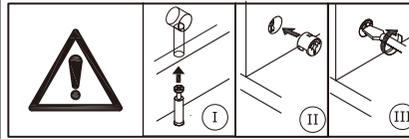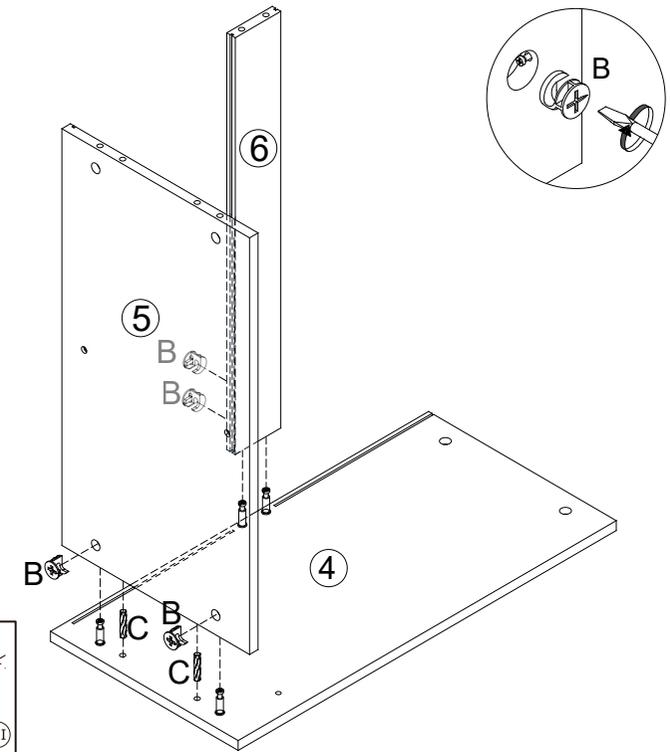


### Step 2:



 Ax8

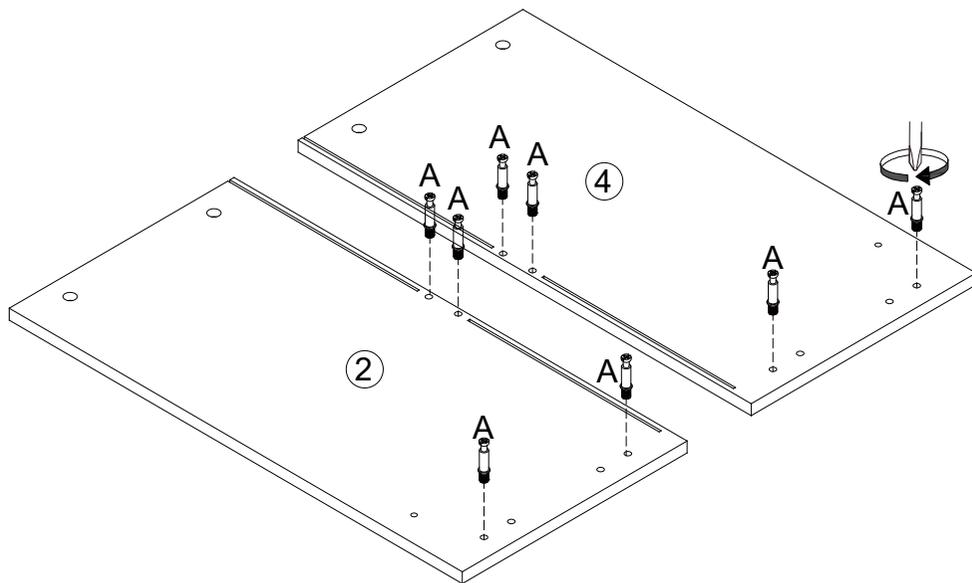


### Step 4:

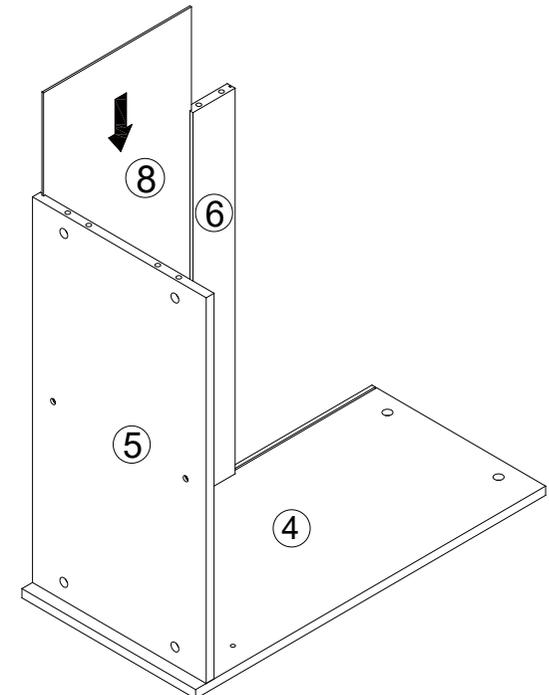



Step 5: Bx4 Cx2

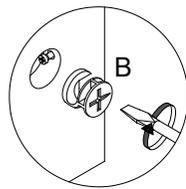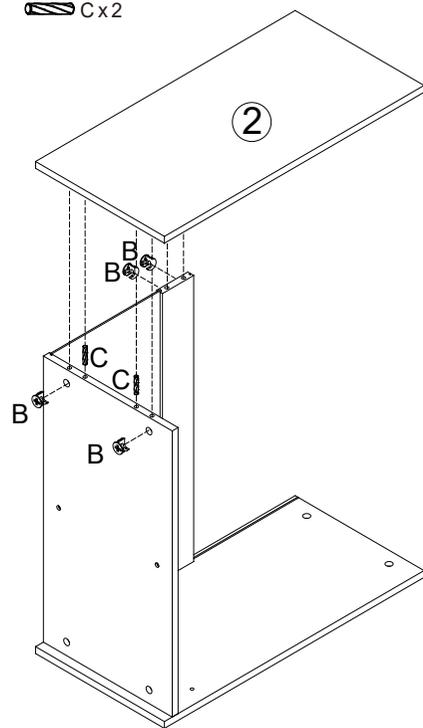



Step 7:

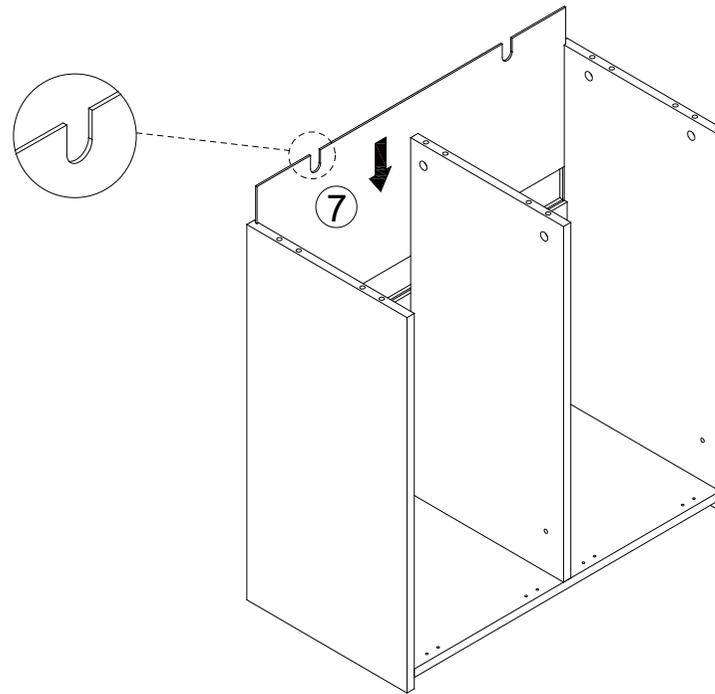


Step 6: Gx2 Cx2

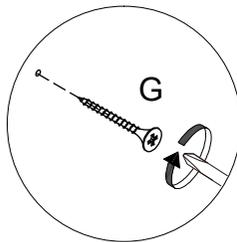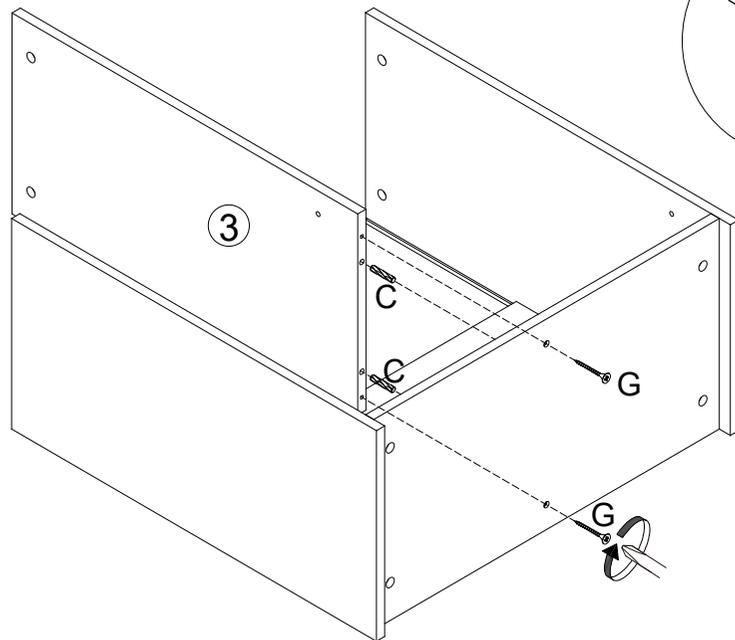

Step 8: Bx6 Cx6

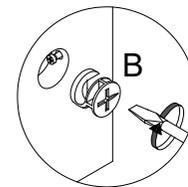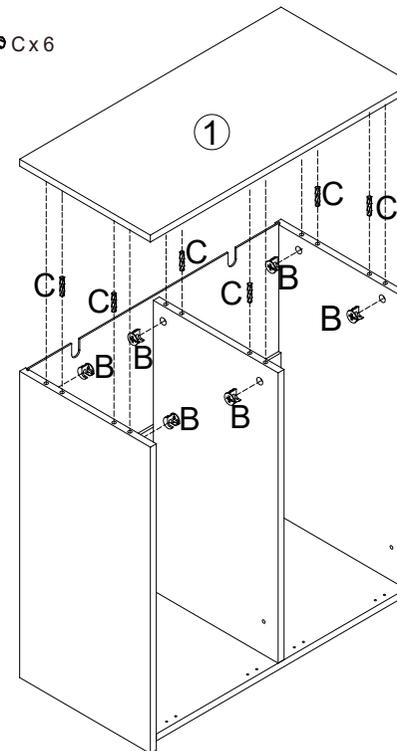


Step 9: Ax 4

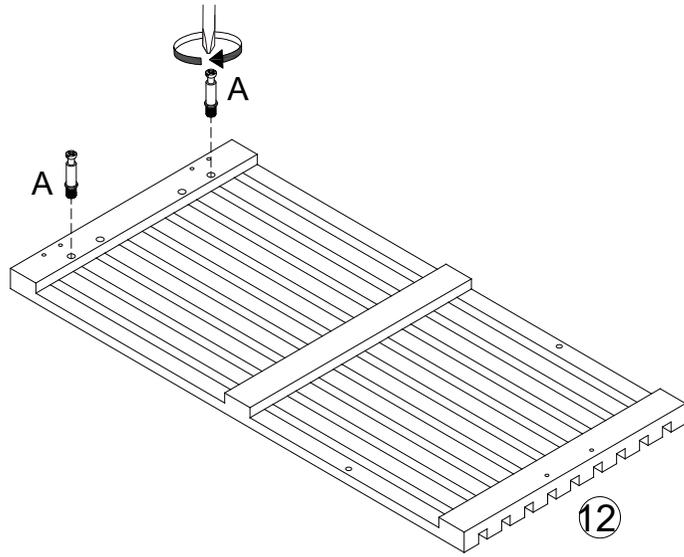


x2

Step 11: Gx4 Cx4

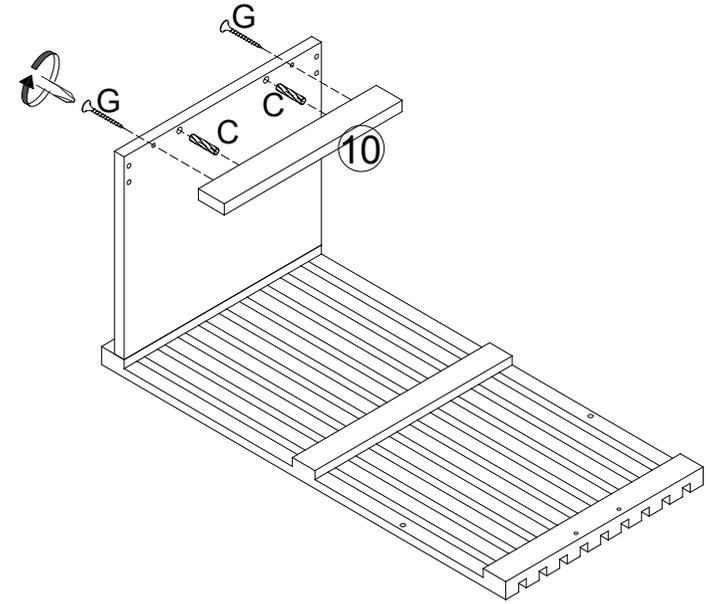


x2

Step 10: Bx4 Cx4

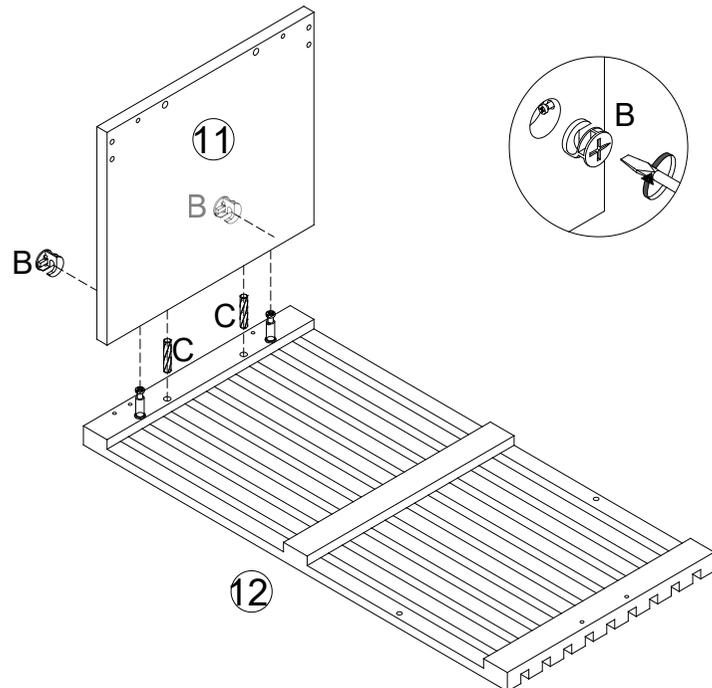

x2


Step 12: Gx8 Rx4

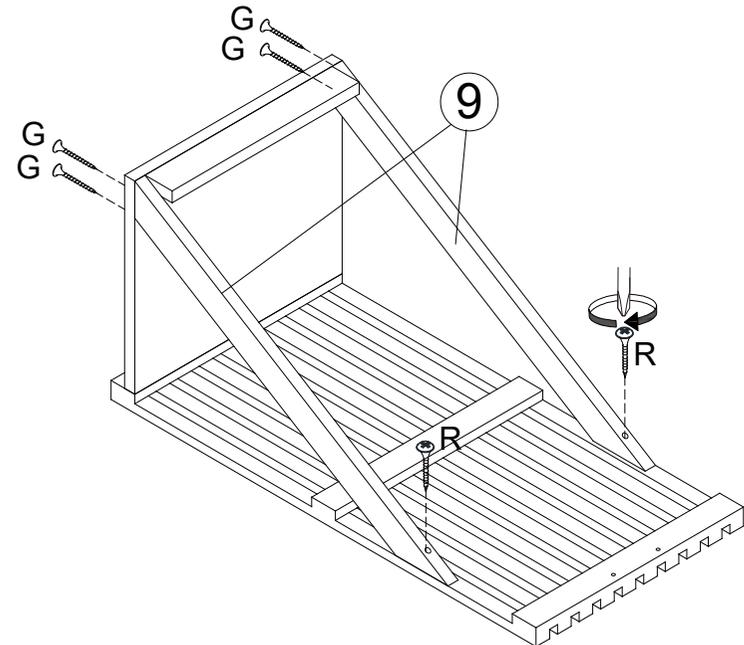


x2

Step 13:  Q x 8  H x 4

x2

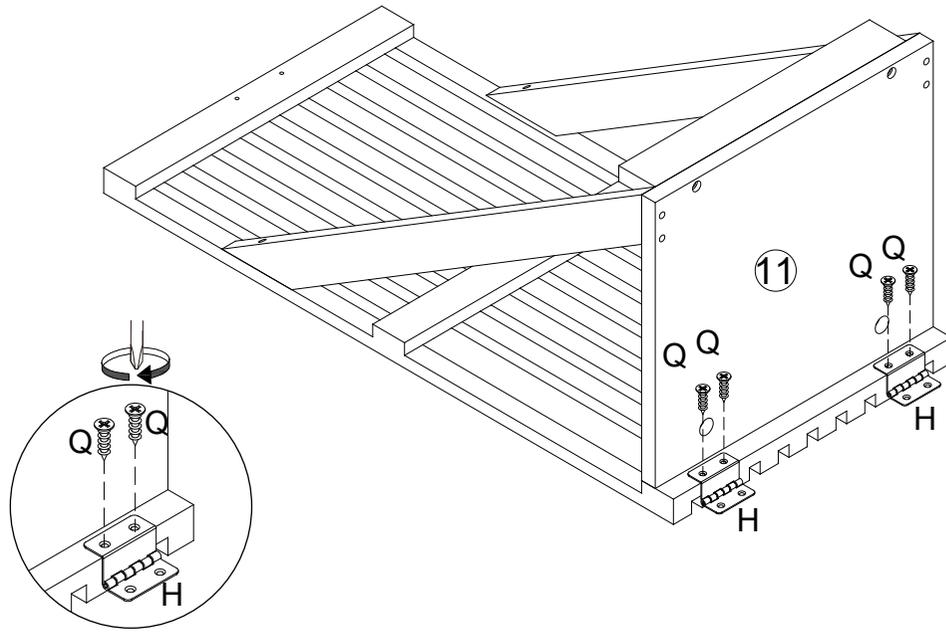


Step 15:  Lx8  Kx8

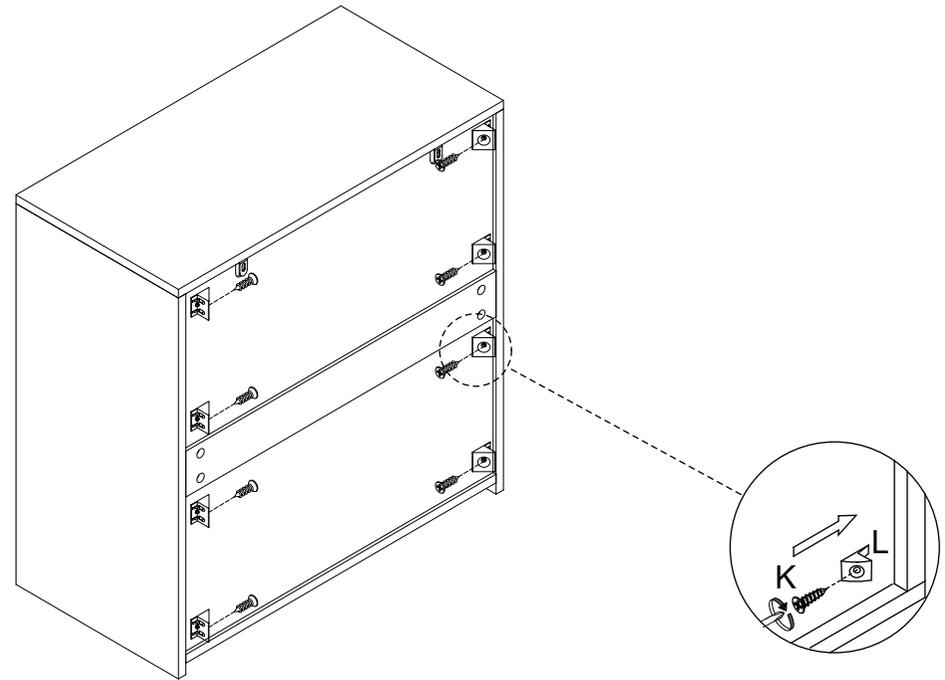


Step 14:  D x 4  J x 2


x2

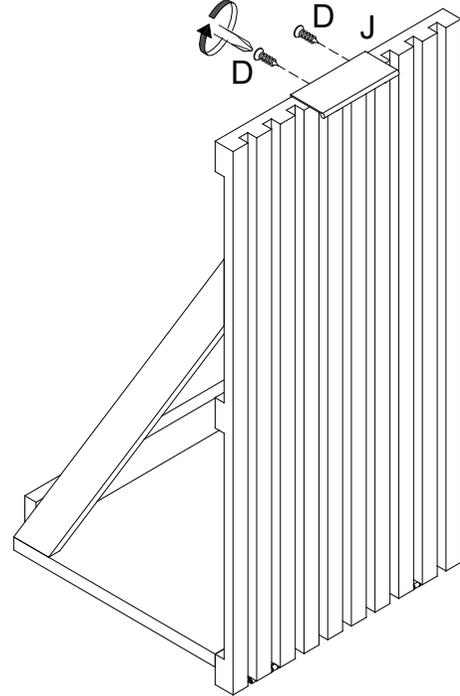


Step 16:  Q x 8

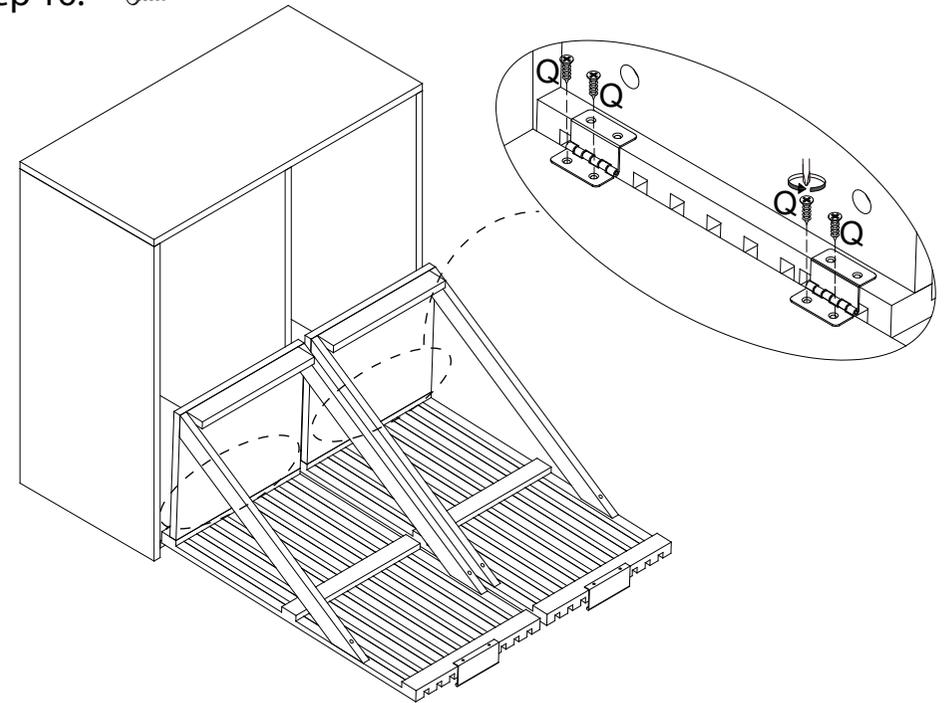


Step 17:  1x2  Mx2

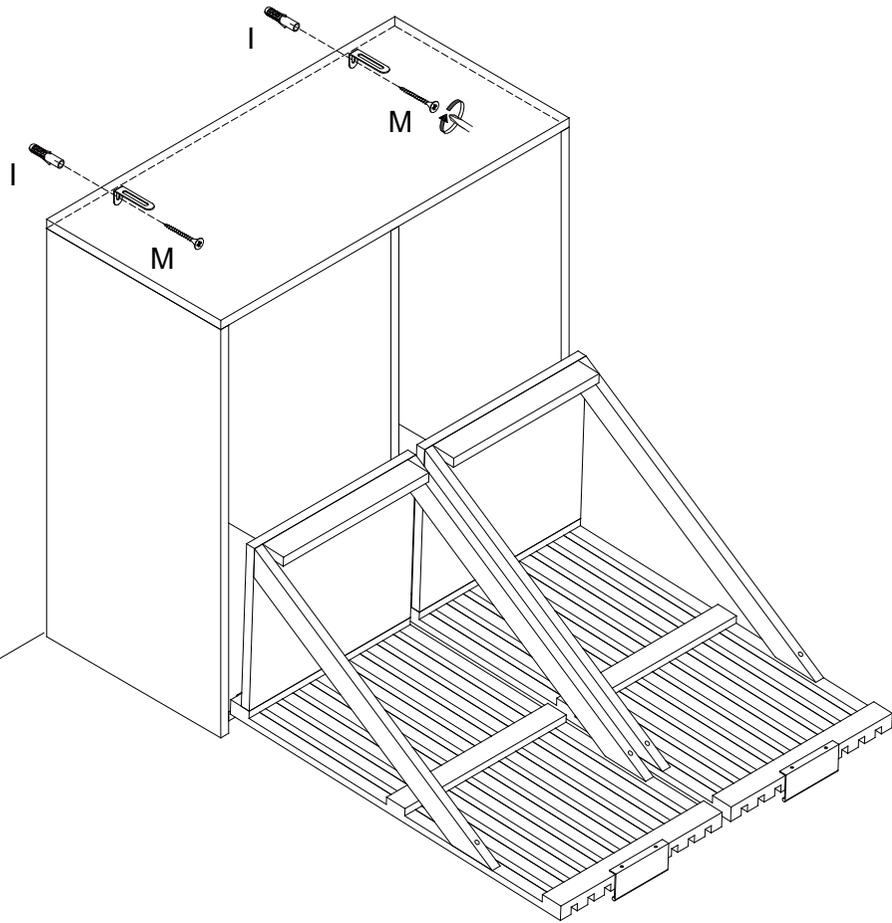


Step 18:  Qx2  Ox1  Nx2

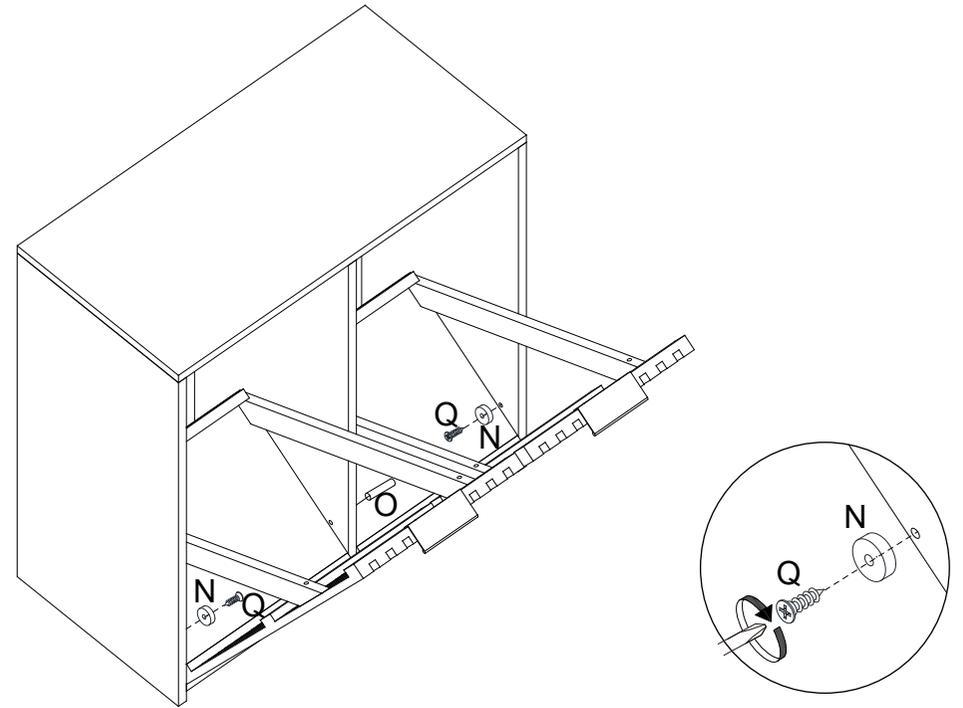

Step 19:

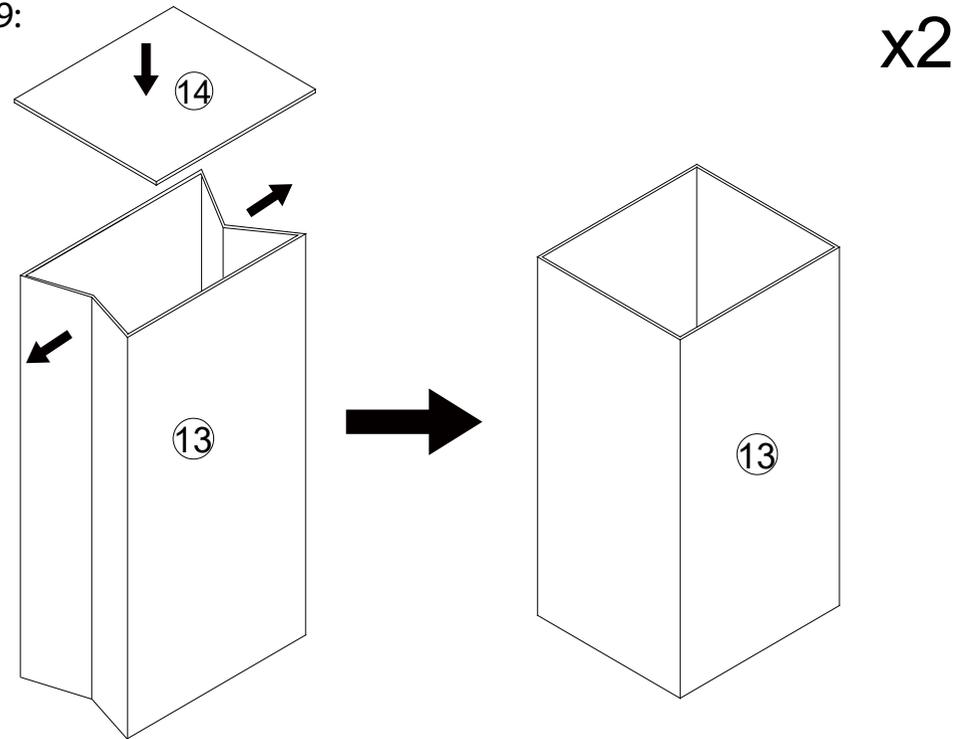

## Step 20:

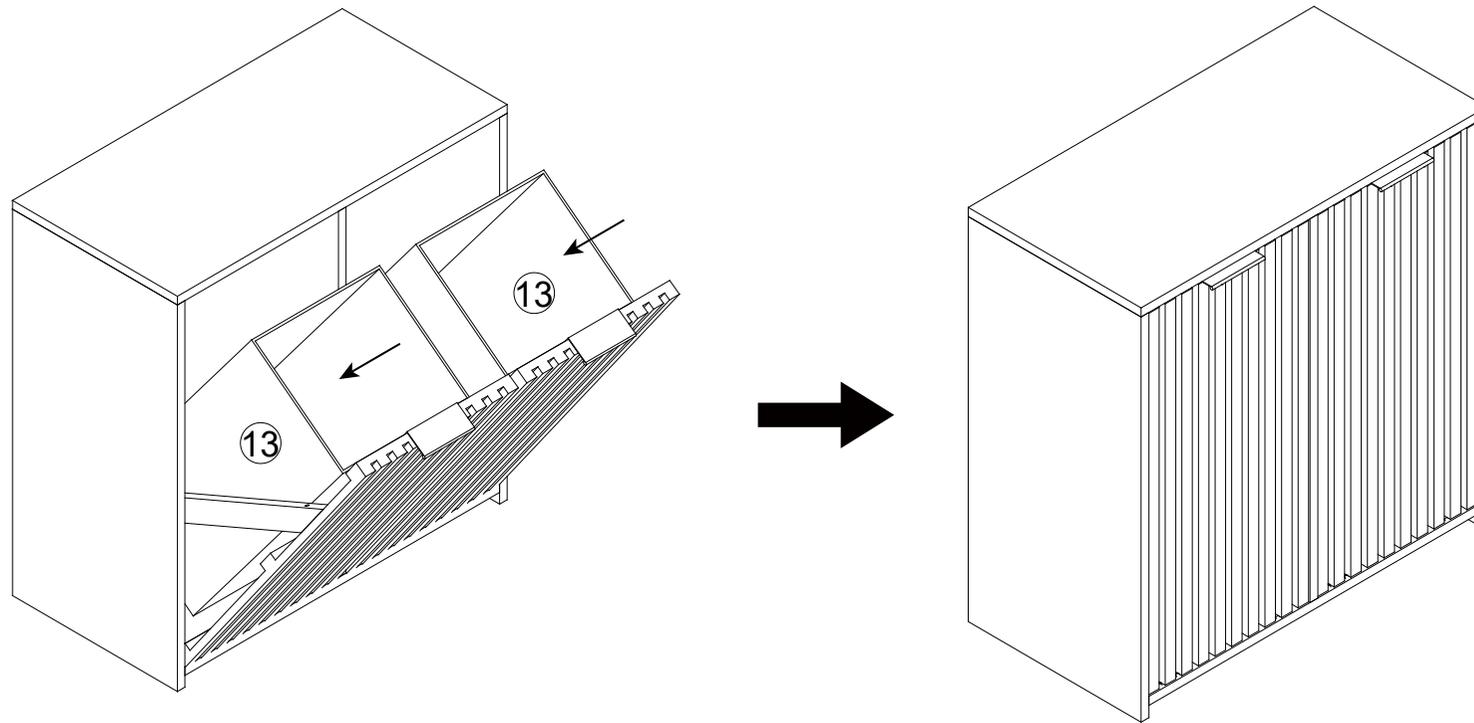

**⚠ WARNING**

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

This is a permanent label. Do not remove!

### TOPPLING FURNITURE WARNING:

- **ALWAYS secure it with an anchor device.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Use safety drawer locks to prevent children climbing.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.