

# Assembly Instruction

## 43642601 NATE ENTRYWAY UNIT



### CARE INSTRUCTIONS:

WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. FOR INDOOR AND DOMESTIC USE. CHECK AND TIGHTEN ALL PARTS REGULARLY.


### WARNING :

DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

**MAXIMUM SAFE LOAD: 10KGS FOR TOP, 5KGS FOR EACH SHELF.**

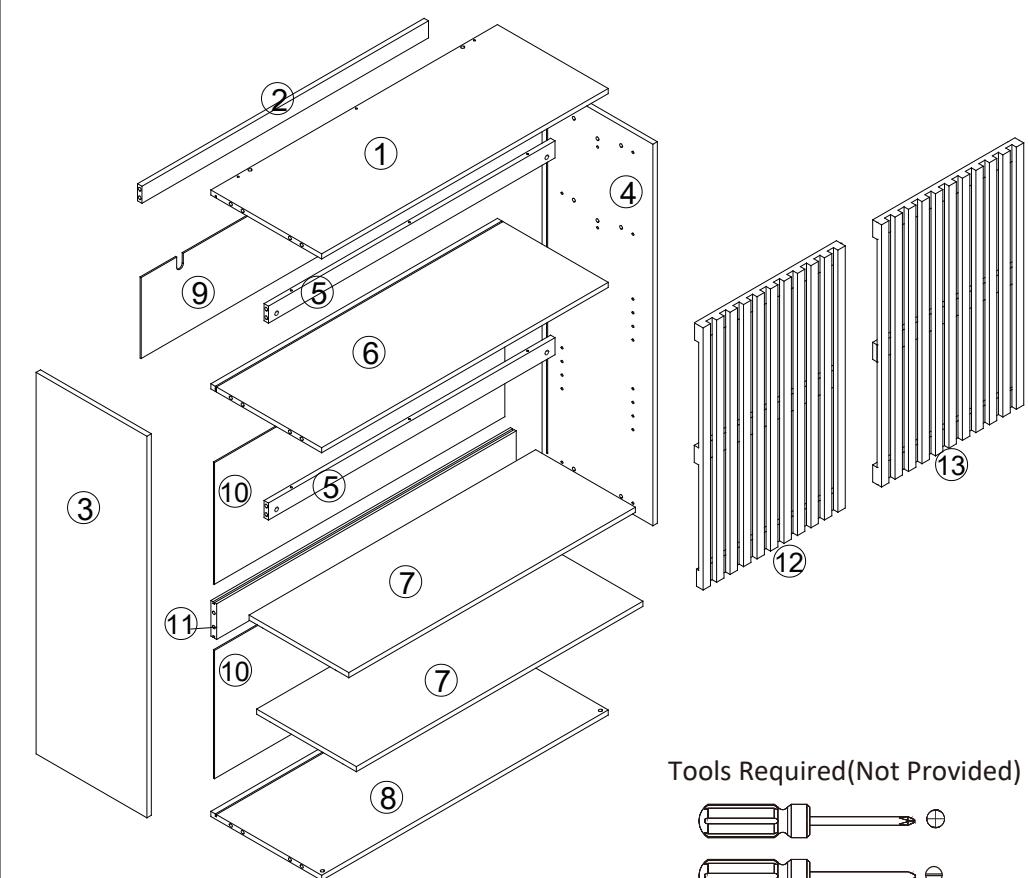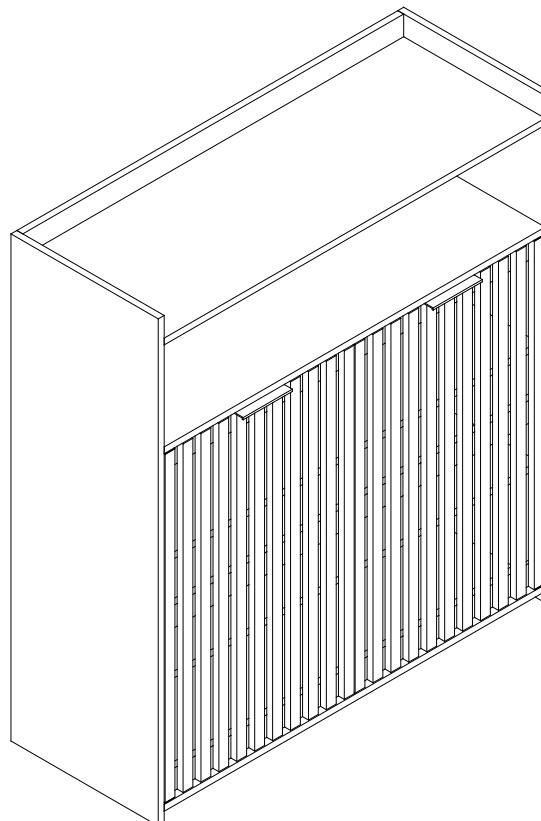

Tools Required(Not Provided)

 

Do not tighten the screws fully during assembly.  
Fully tighten screws after the final assembly steps.

## Hardware List

	A	6x35mm	22pcs
	B	15x10mm	22pcs
	C	6x30mm	20pcs
	D	3.5x12mm	12pcs
	E	4x12mm	2pcs
	F		2pcs
	G	4x40mm	5pcs
	H		8pcs


	I		4pcs
	J		2pcs
	K		2pcs
	L		8pcs
	M	3x14mm	12pcs
	N		2pcs
	O		2pcs
	P	2.5x12mm	2pcs

	Q	4x35mm	6pcs
	R		4pcs


## Part List

	①	1PC		②	1PC		③	1PC		④	1PC		⑤	2PCS
	⑥	1PC		⑦	2PCS		⑧	1PC		⑨	1PC		⑩	2PCS
	⑪	1PC		⑫	1PC		⑬	1PC						



Step 1:  Ax22

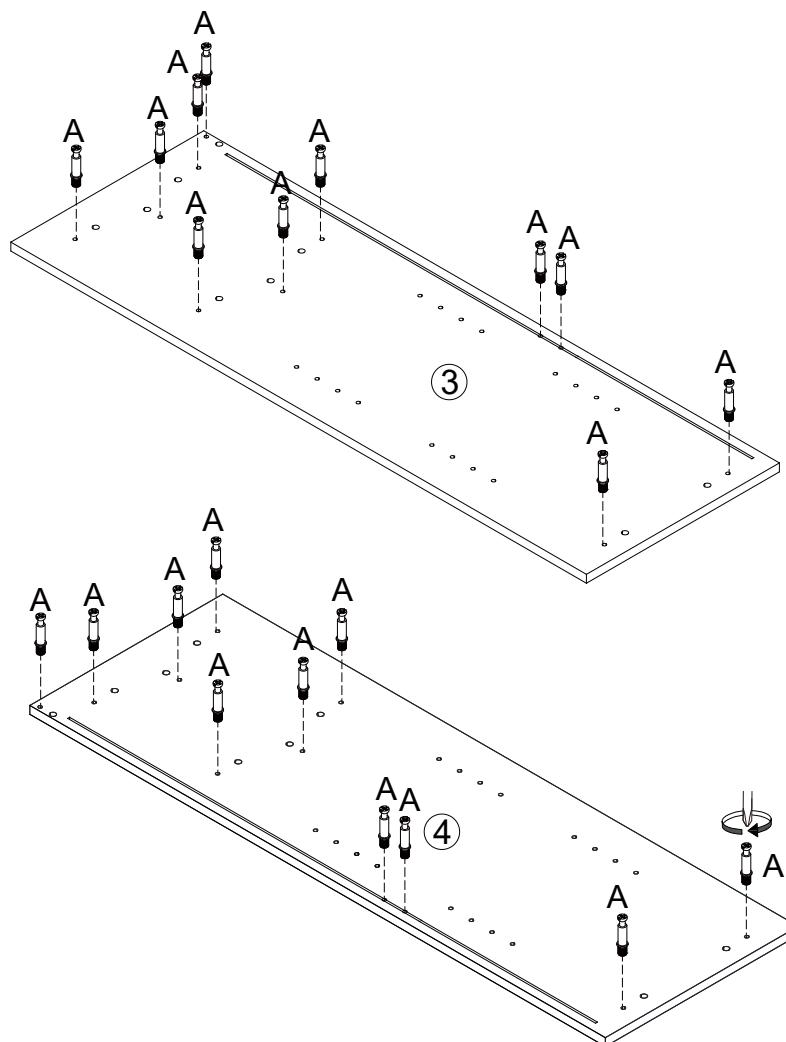


Step 2:  Ex 2  Fx 2  Q x 3

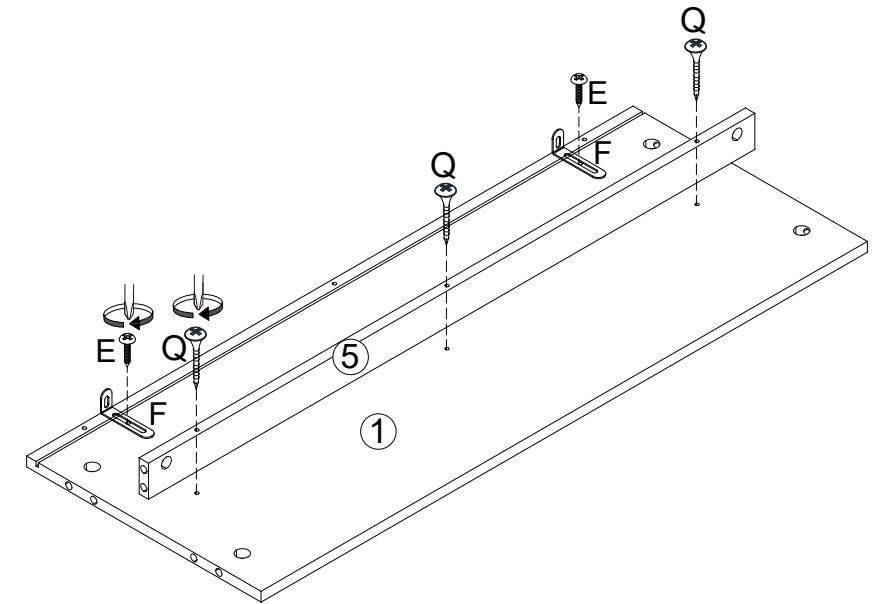

 
Step 3:  Gx3  Cx2

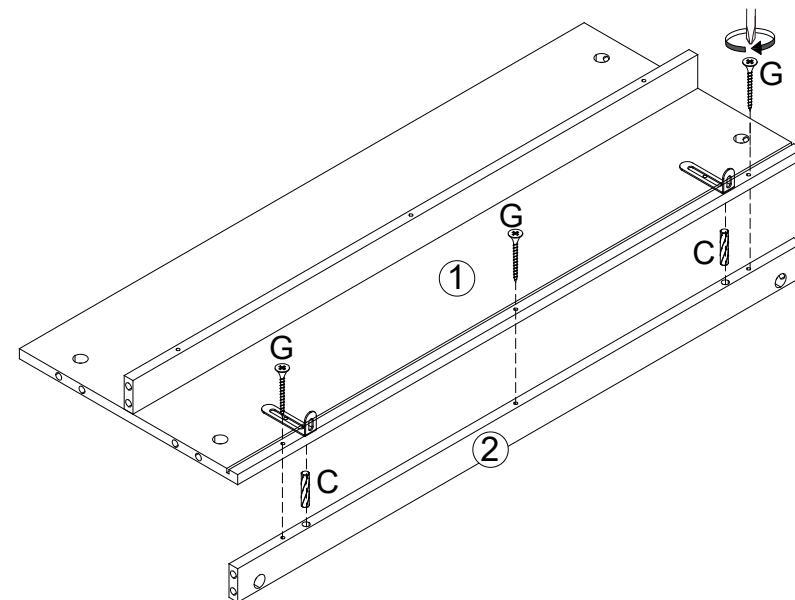


Step 4: Q x 3

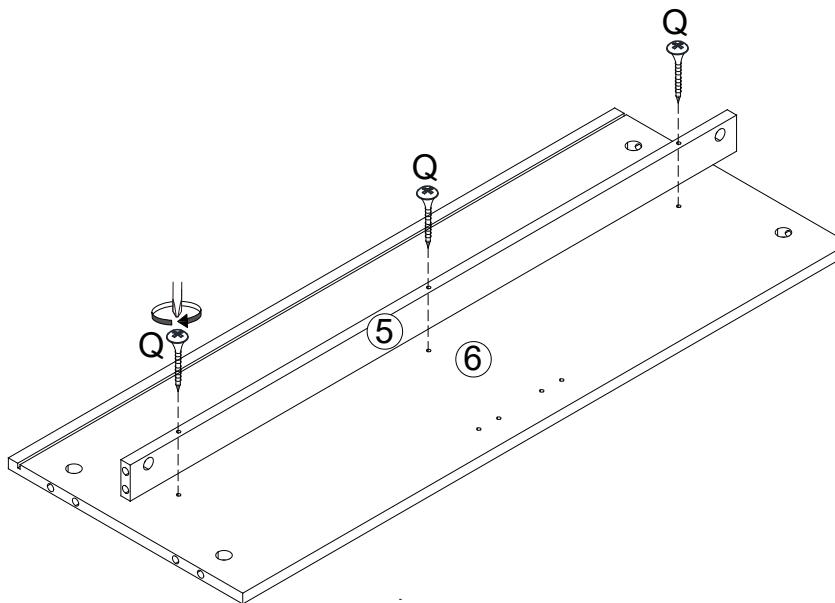


Step 5: M x 4 N x 2

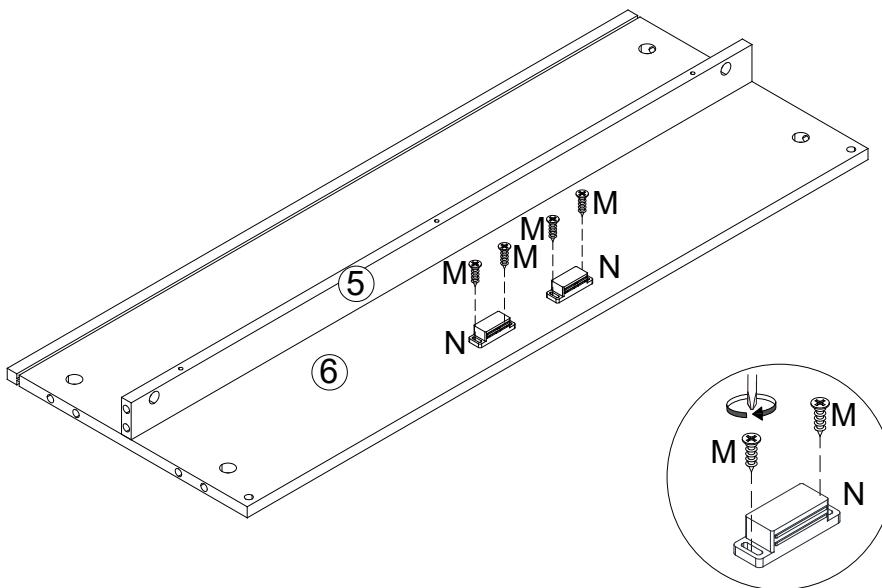


Step 6: B x 4 C x 4

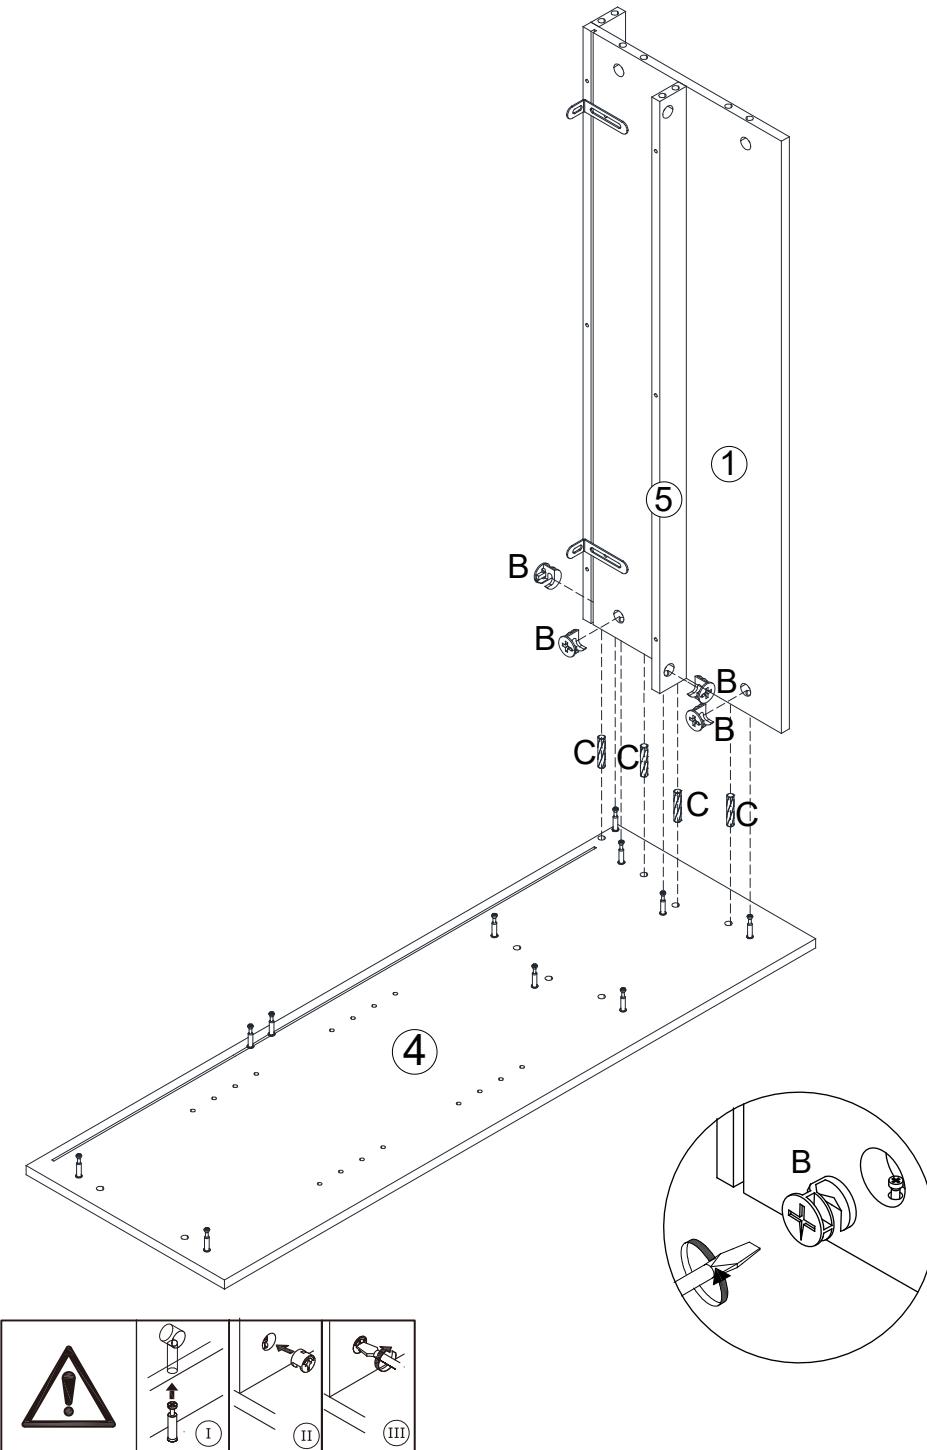


Step 7:

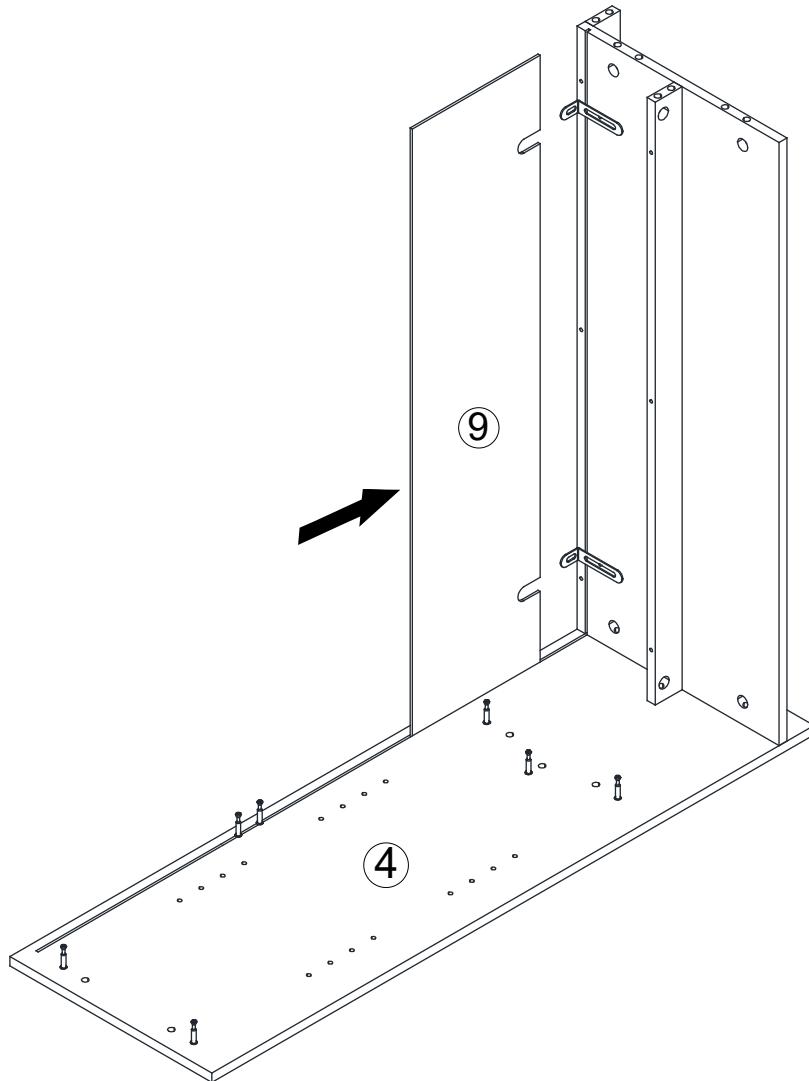


Step 8:

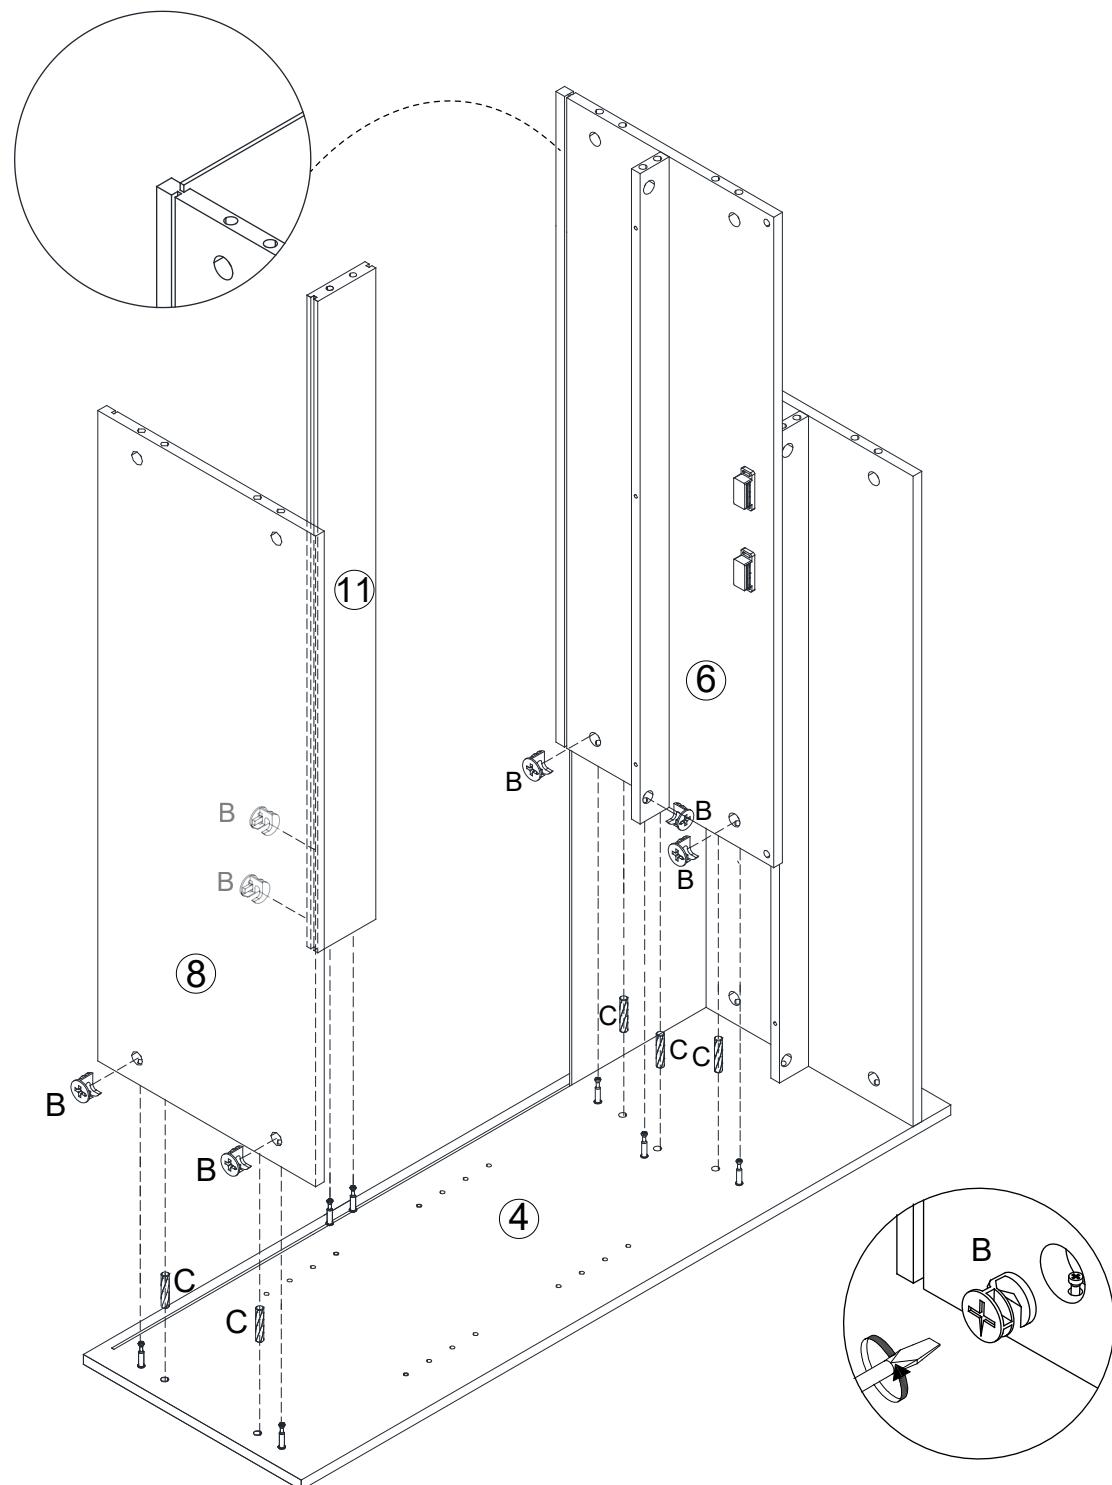



Step 9:

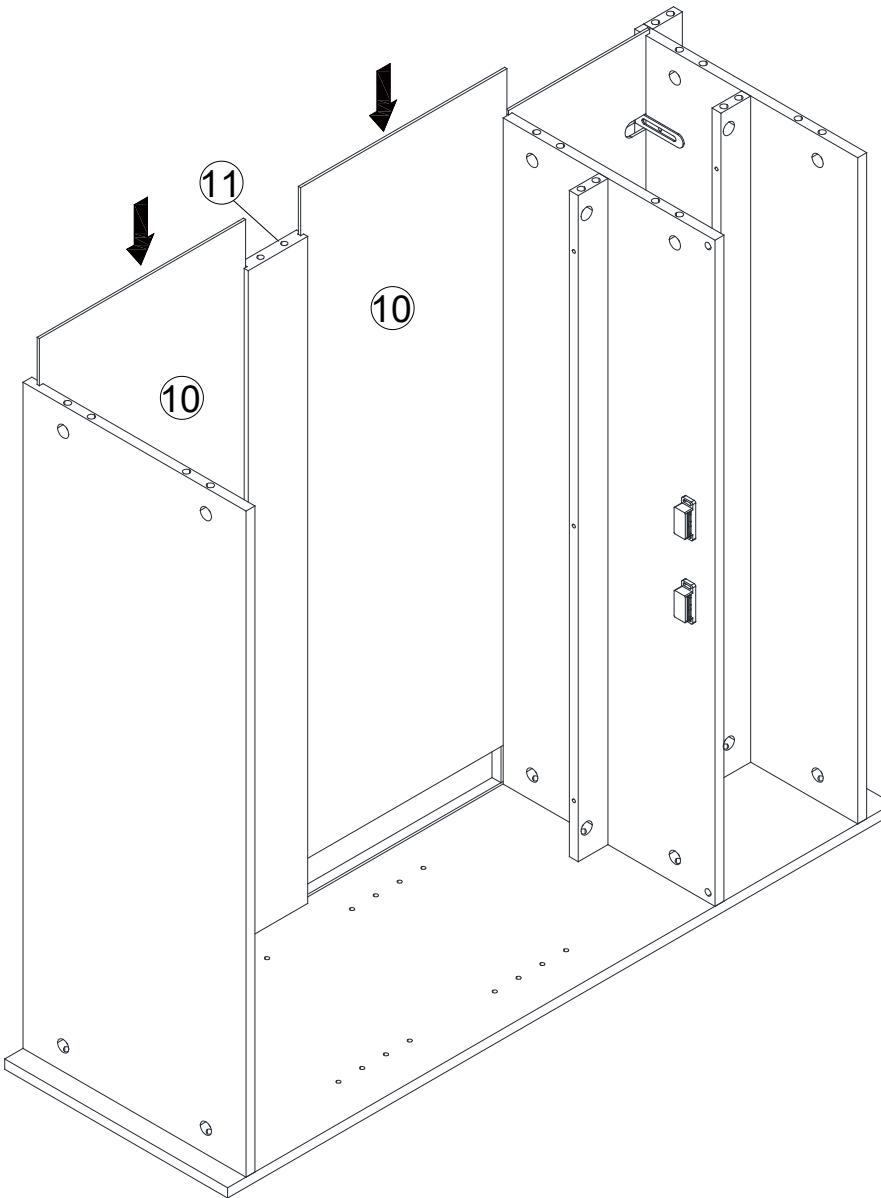


Step 10: Bx11 Cx9

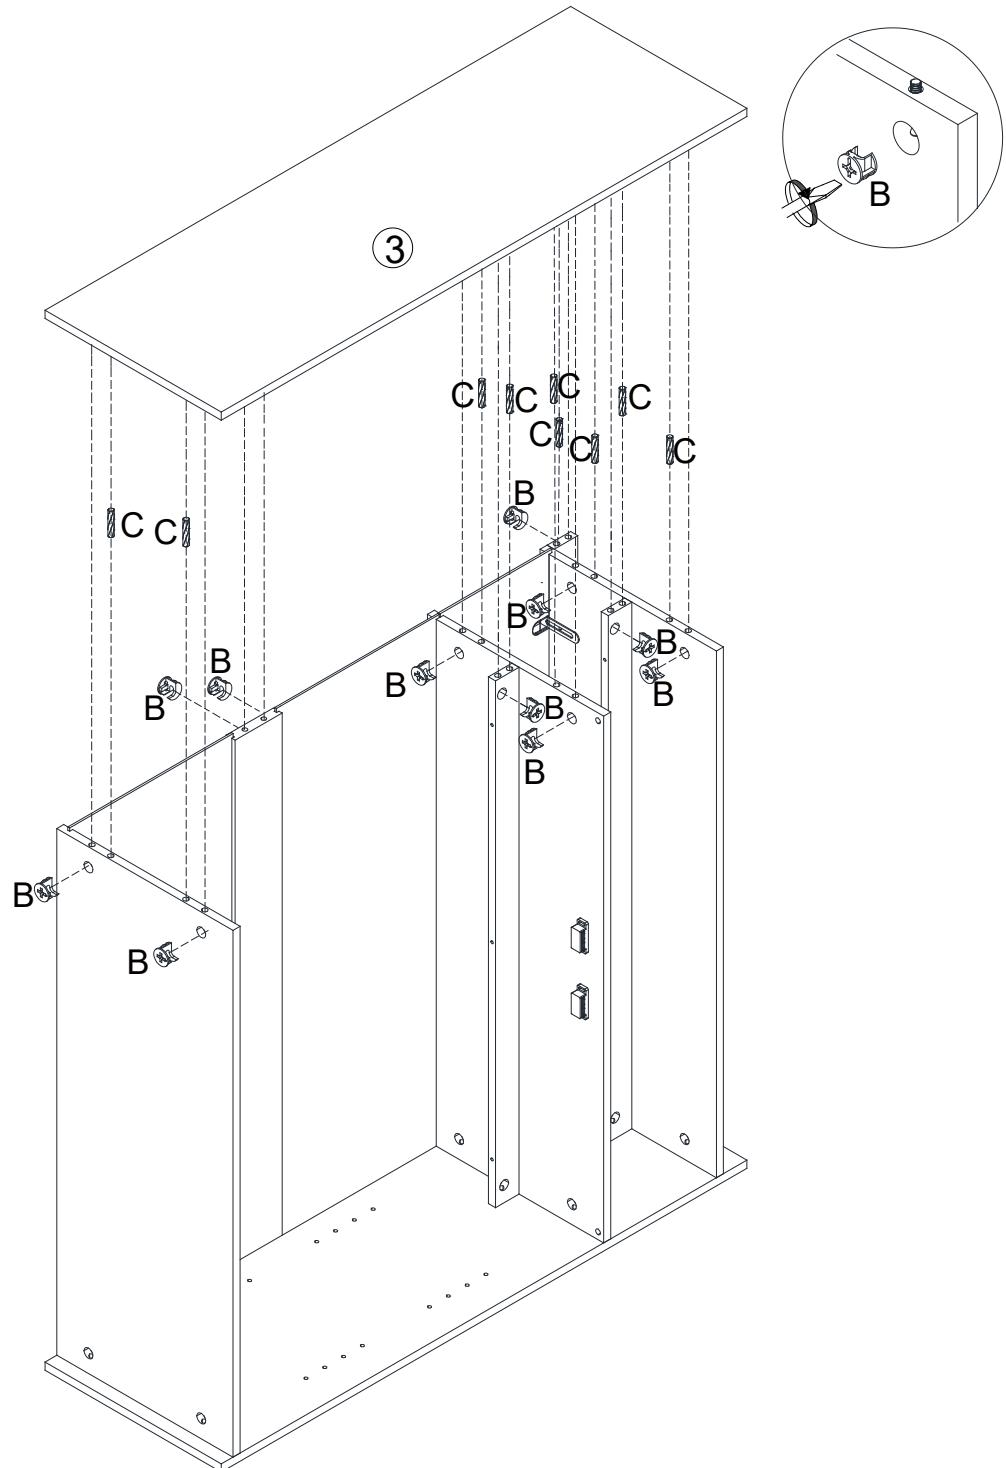


Step 11:  Hx8  Rx4

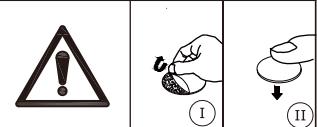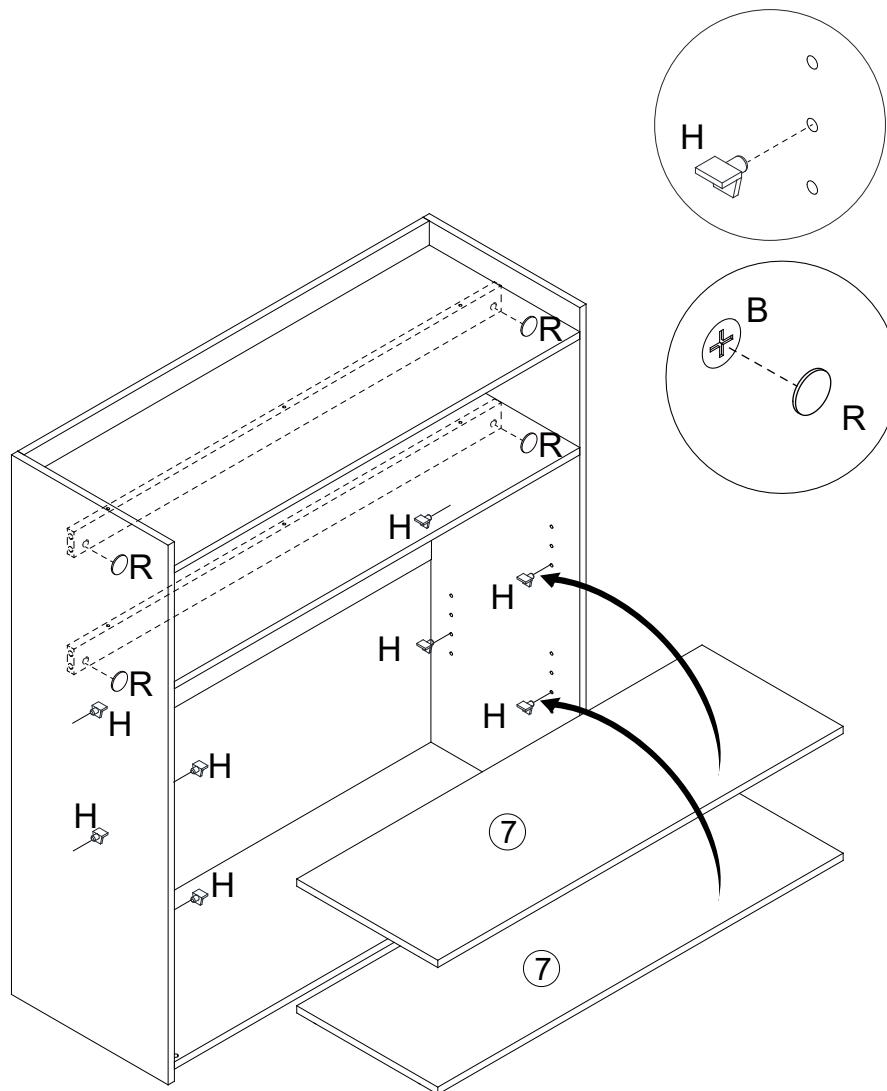


Step 12:  Dx8  Ix2  Ox2  Jx2  Px2

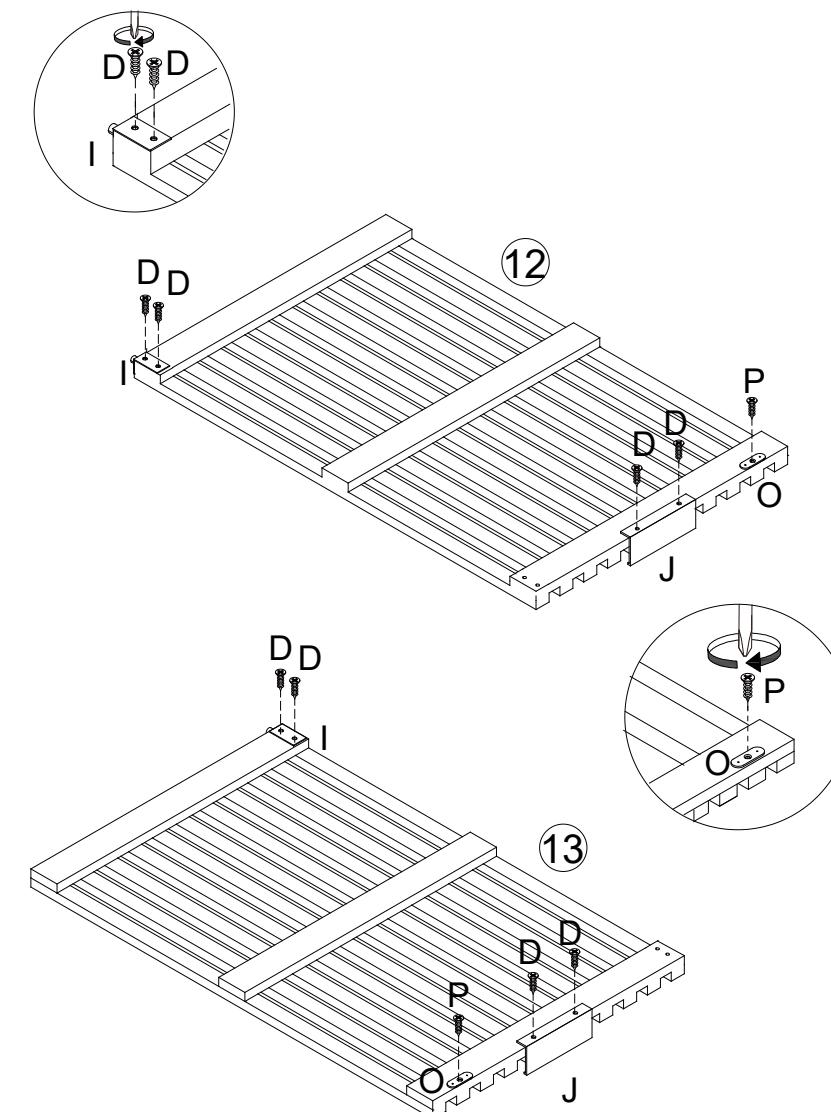


Step 13:  1x 2

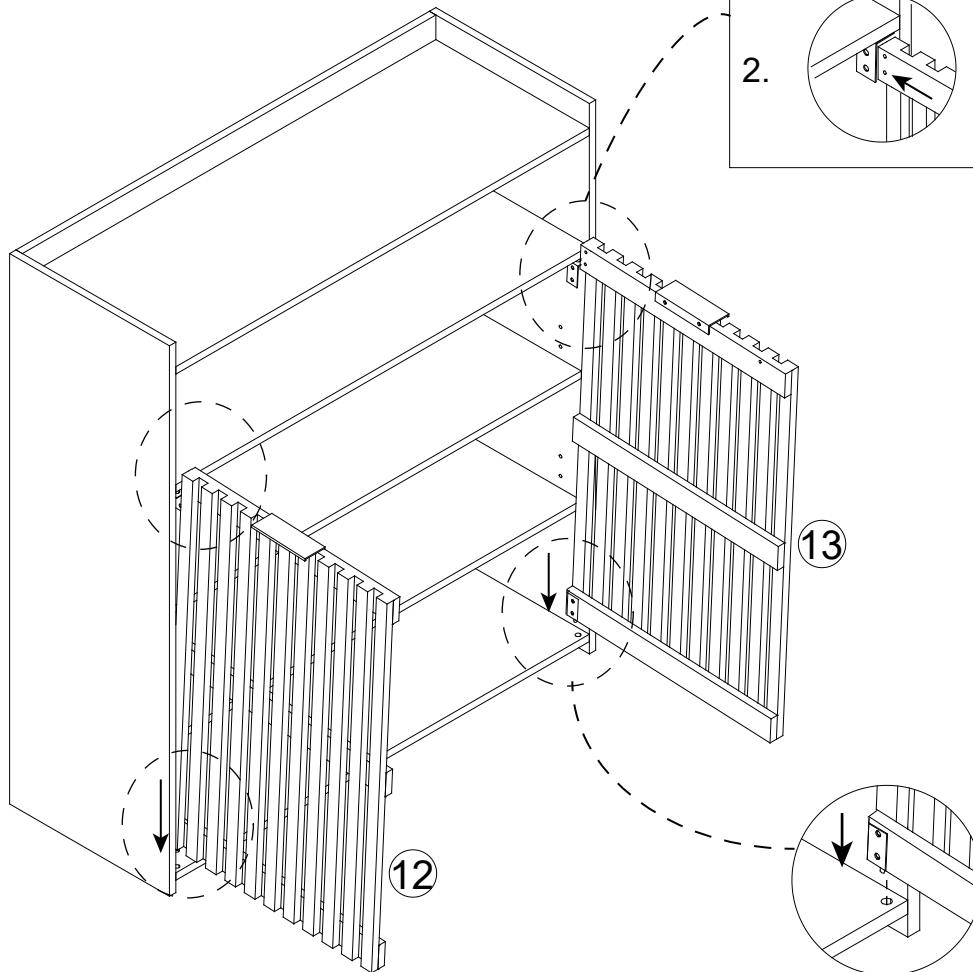


Step 14:  Dx 4

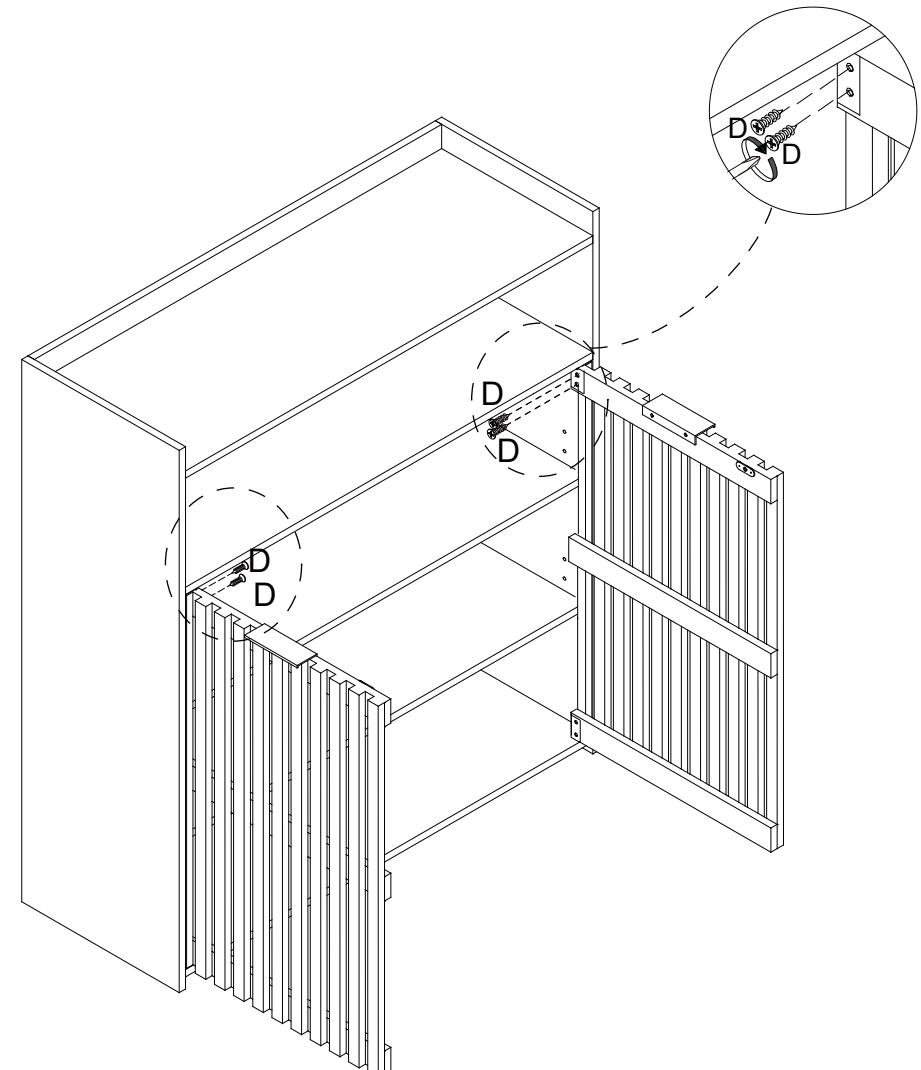

Step 15:  Mx8  Lx8

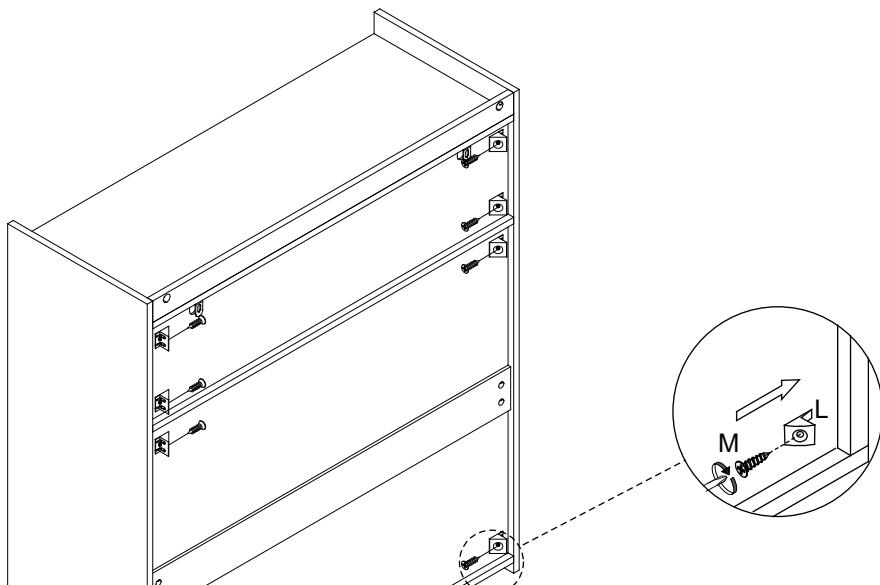

Step 16:  Kx2  Gx2

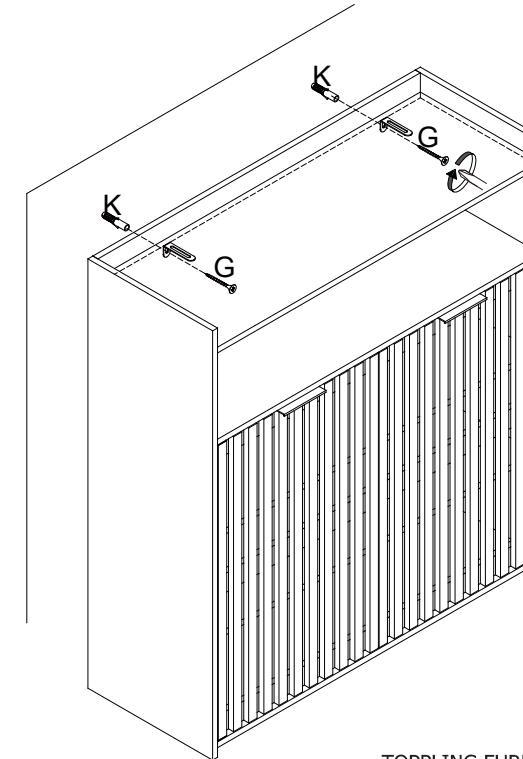

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

