


MINI WORLD INSTALLATION

LONDON STREET

K: 43-643-196

12+

BATTERY ICON:

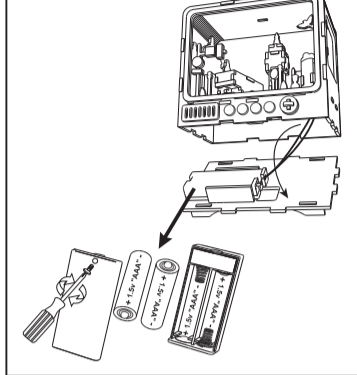

Precautions before assembly

The electronic kit has been assembled in advance, please use it directly and do not disassemble, otherwise it will be damaged and won't work. Make sure no parts are missing and remove the parts from the board in the order of assembly. (If you take out all the parts before assembly, you don't know the order, and it's hard to assemble.) Please be careful not to lose small parts. Try to avoid removing parts by hand, (included) is an auxiliary tool for removing parts, used to push out small parts on the wooden board.

Safety precautions

Burrs on the edge of the wood, please pay special attention to them. Since they are made of wood, too much force may break them. Keep away from fire and keep in a dry place to avoid damage. This product is not waterproof, please do not place in a damp place. Never put small parts in your mouth as there is a risk of choking and suffocation. Keep out of reach of infants and children.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

Special attention **Angle of conversion**

Using glue (The glue is not included and needs to be purchased separately by the consumer.)

Accessories List		
Adhesive tape X1	Sandpaper X1	Battery switch LED light combination X1

ANGLE OF CONVERSION

Battery box switch (Note: Please turn on the battery box switch before assembly)

Note: When the battery exhausted, remove the bottom part to replace the battery.


MINI WORLD INSTALLATION

STREET VIEW OF PARIS

K: 43-643-196

12+
Years

BATTERY ICON:

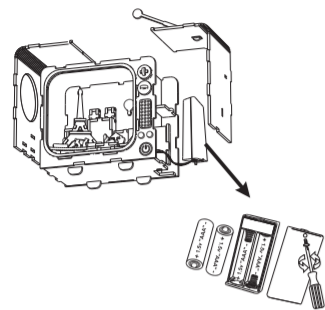

Light up button

Precautions before assembly

The electronic kit has been assembled in advance, please use it directly and do not disassemble, otherwise it will be damaged and won't work.
Make sure no parts are missing and remove the parts from the board in the order of assembly. (If you take out all the parts before assembly, you don't know the order, and it's hard to assemble.)
Please be careful not to lose small parts.
Try to avoid removing parts by hand. (included) is an auxiliary tool for removing parts, used to push out small parts from the wooden board.

Safety precautions

Burrs on the edge of the wood, please pay special attention to them.
Since they are made of wood, too much force may break them.
Keep away from fire and keep in a dry place to avoid damage.
This product is not waterproof, please do not place in a damp place.
Never put small parts in your mouth as there is a risk of choking and suffocation.
Keep out of reach of infants and children.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

Accessories List

Adhesive tape X1	Sandpaper X1	Battery switch LED light combination X1

Special attention Angle of conversion

Using glue (The glue is not included and needs to be purchased separately by the consumer.)

1

2

3

Before assembling the acrylic please tear off the protective film

After assembly is complete apply glue to all holes

4

5

6

7

8

Use glue to stick the objection to the corresponding positions

9

Use adhesive tape to stick the light switch to the corresponding position

Adhesive tape

Battery switch LED light combination

ANGLE OF CONVERSION

10

Note: When the battery exhausted, remove the bottom part to replace the battery.

11

Tear off the adhesive backing of the LED light strip and stick it to the corresponding position

Light switch button

Battery box switch (Note: Please turn on the battery box switch before assembly)

12

Assembly completed


MINI WORLD INSTALLATION

SHUTTLE TO NEW YORK

K: 43-643-196

12+ years

BATTERY ICON:

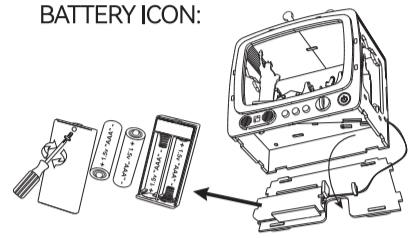

Light up button

Precautions before assembly

The electronic kit has been assembled in advance, please use it directly and do not disassemble, otherwise it will be damaged and won't work. Make sure no parts are missing and remove the parts from the board in the order of assembly. (If you take out all the parts before assembly, you don't know the order, and it's hard to assemble.) Please be careful not to lose small parts. Try to avoid removing parts by hand, (included) is an auxiliary tool for removing parts, used to push out small parts on the wooden board.

Safety precautions

Burns on the edge of the wood, please pay special attention to them. Since they are made of wood, too much force may break them. Keep away from fire and keep in a dry place to avoid damage. This product is not waterproof, please do not place in a damp place. Never put small parts in your mouth as there is a risk of choking and suffocation. Keep out of reach of infants and children.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.




WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.







Accessories List

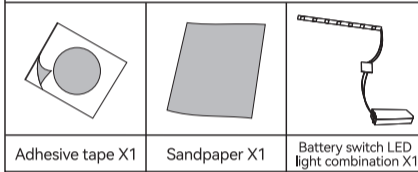

Special attention Angle of conversion

Using glue (The glue is not included and needs to be purchased separately by the consumer.)

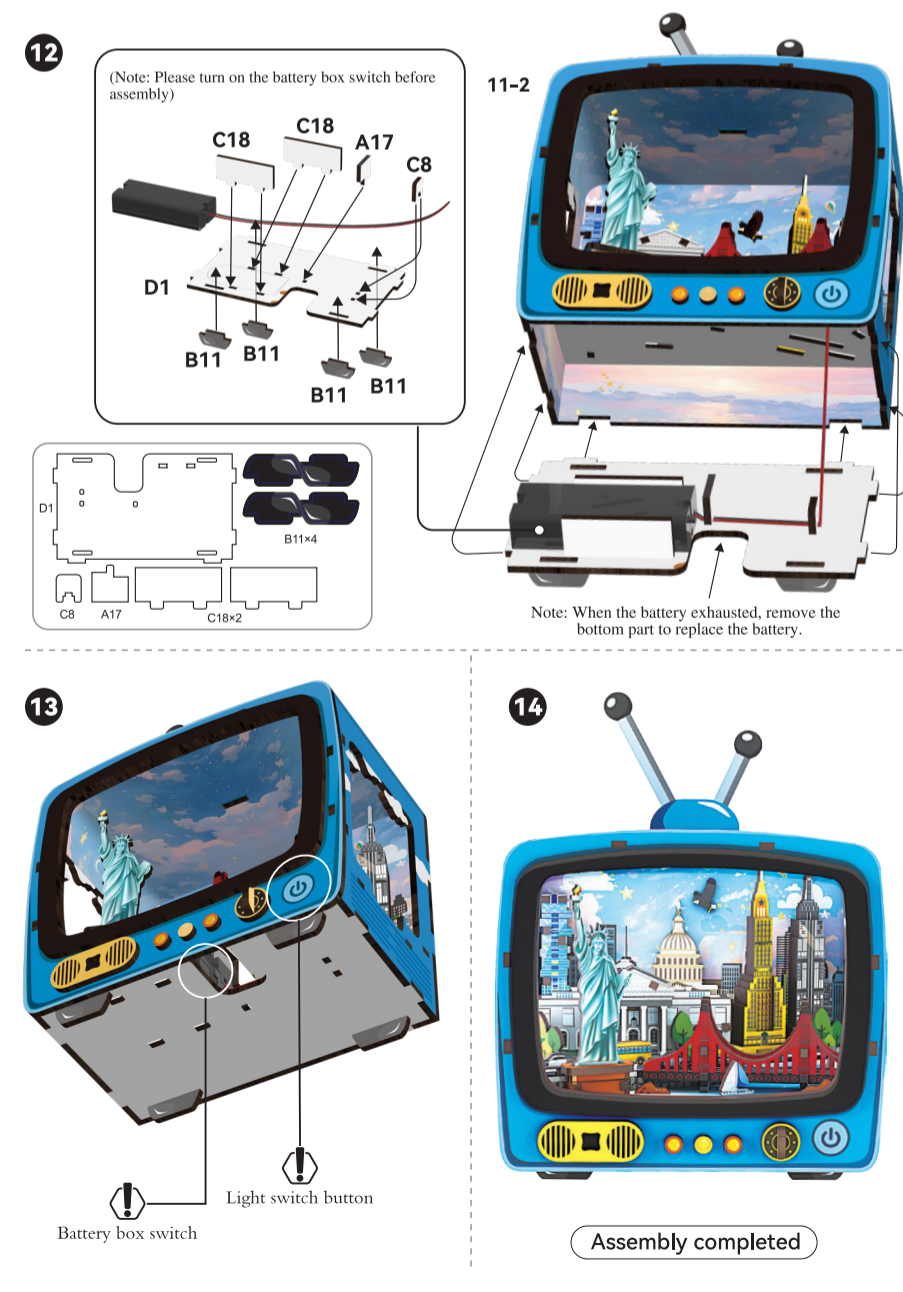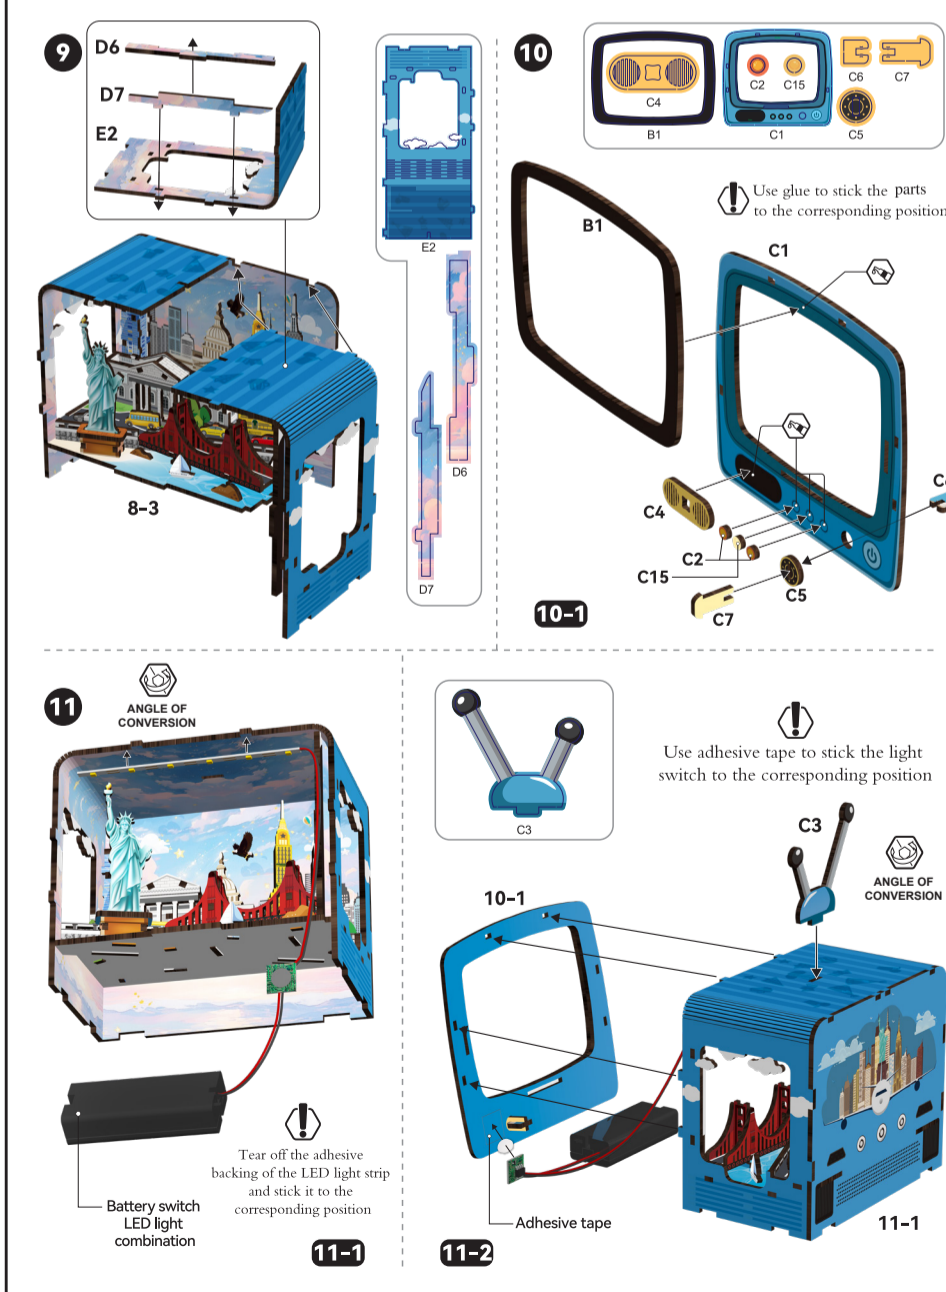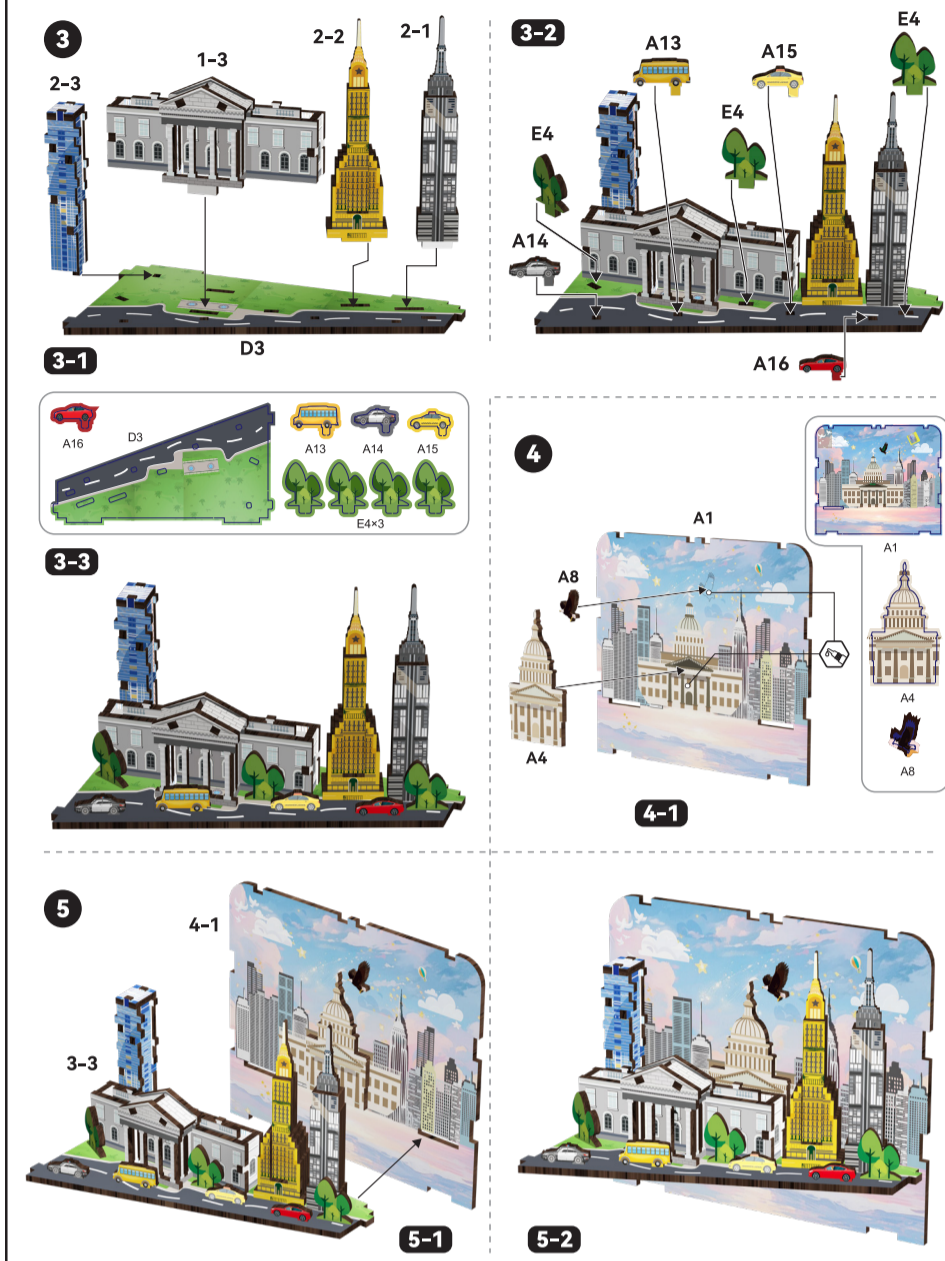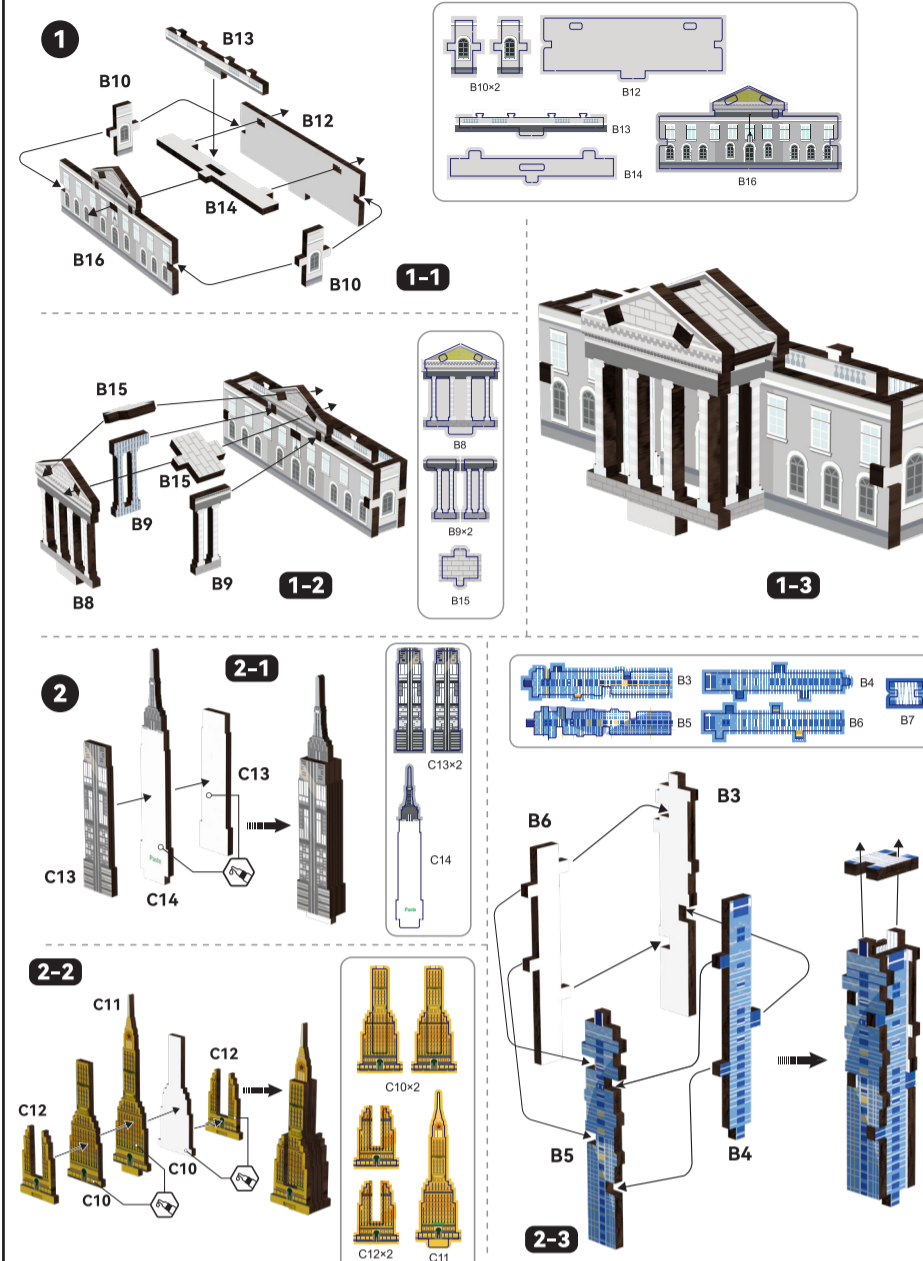

(Note: Please turn on the battery box switch before assembly)

Note: When the battery exhausted, remove the bottom part to replace the battery.

Assembly completed