


STAR WARS™

8+ YEARS


RC STAR WARS MINI TIE FIGHTER MANUAL

Please read the instructions before operating the product.

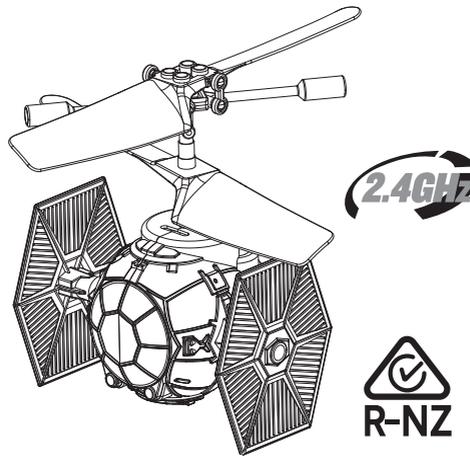

Attention: When turning on the remote control, it will emit a beeping sound. To stop the beeping sound, push the throttle lever up and then push it down. The tie fighter includes a built-in rechargeable battery that is non-replaceable. The included rechargeable battery is not fully charged prior to shipment and must be charged before the first use.

TIE FIGHTER

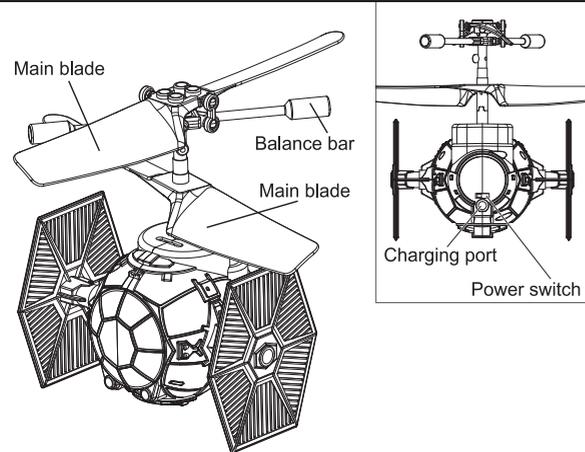

REMOTE CONTROL




1

BATTERY INSTALLATION

- Unscrew to open battery cover, insert 4 x 1.5V AA batteries, (see Diagram 1)
- Replace battery cover.

Attention: Remove batteries after you have finished using your product.

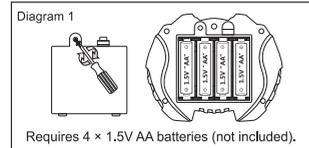

Requires 4 x 1.5V AA batteries (not included).

CHARGING THE TIE FIGHTER

Attention: Do not charge battery immediately after each play, let the battery cool down.

- Turn off tie fighter.
- Slide and open charging cable cover on the remote control and take out charging cable. (see Diagram 2)
- Plug charging cable socket to tie fighter charging port. (see Diagram 3)
- Turn on remote control. (see Diagram 4)

To stop the beep sounds, push the throttle lever up and then push it down.

- The LED light on the remote control will be turn red to show tie fighter is charging.
- Once the LED light has turned green, the tie fighter is fully charged. Unplug charging cable from tie fighter and place charging cable back into compartment and close the cover.



Diagram 2



Diagram 4

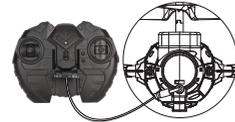


Diagram 3


2

CONTROL METHOD

Attention: Select a large, wide-open area for flying, and make sure that there are no obstructions, animals, people or overhead powerlines nearby. Do not operate the tie fighter in strong wind, rain or snow etc.

- Set the tie fighter power switch to "ON" state and place on the flat ground, the LED lights on the tie fighter will be flashing. Ensure you are least 2 metres away from the back of the tie fighter.
- Set the power on the remote control to "ON", you will hear a beep sound about one second and then stop.
- Push the throttle lever up, then push it down. If the power indicator on the tie fighter stops flashing, the pairing is successful. If pairing is not successful, please repeat steps 1-3.

HOW TO CONTROL THE TIE FIGHTER

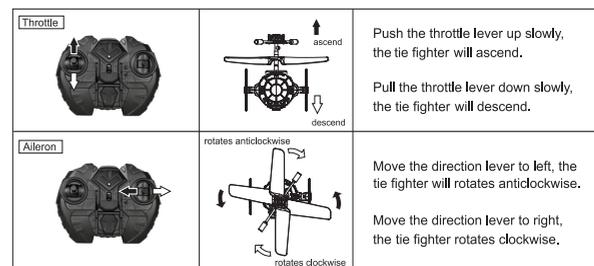

Tip: The LED light will flash red slowly when the tie fighter is low in battery. Please recharge the battery when the light is flashing.

HOW TO TRIM THE TIE FIGHTER

Slowly raise the throttle stick and let the tie fighter lift-off the ground, you can use the trim to correct the action if the tie fighter leans to the wrong direction.

If the tie fighter drifts to the left, press the right trim button as shown in Diagram 5 to trim it to right until it stops drifting. If the tie fighter drifts to the right, press the left trim button as shown in Diagram 5 to trim it to left until it stops drifting.

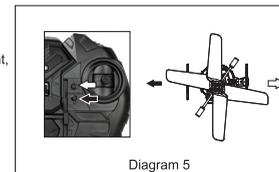


Diagram 5

3



WARNING

- Please follow the instructions for correct installation and use. Some parts require assembly by an adult.
- This product contains small parts and is a choking hazard.
- Do not touch the hot motor and batteries.
- Do not touch working propellers.
- Do not fly towards yourself or other people.
- Adult supervision is required.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries or batteries of different types.
- Do not short circuit the battery or put the battery in fire.
- Do not leave the toy unattended while charging it.
- When the battery is low, please return the tie fighter and recharge it.
- Charge the toy on non-flammable surfaces and keep it away from flammable items.
- Turn the charger off when the toy's battery is charged, and always unplug it from the toy.
- If the toy has been damaged, immediately stop use, unplug, and safely move the toy away from flammable materials.
- Follow the manufacturer's instructions for charging the toy. Do not charge longer than recommended.
- Do not use the product for a long time. Remove the battery after use.
- To avoid injury, do not touch the rotating parts.
- Do not impact or drop the tie fighter or remote control.
- Please use a clean soft cloth to clean the product.
- The user is responsible for ensuring that the product will not cause harm to themselves or others.
- The manufacturers and dealers accept no responsibility for injuries or damage to property caused by improper use.
- The packaging and instructions contain important information of products, please keep for future reference.
- Only fly during the day and keep your tie fighter within visual line-of-sight. This means being able to see the tie fighter with your own eyes (rather than through a device) at all times.
- Do not fly your tie fighter higher than 120 metres (400ft) above the ground.
- Keep your tie fighter at least 30 metres away from other people.
- Do not fly your tie fighter over or near an area affecting public safety or where emergency operations are underway (without prior approval). This could include situations such as a car crash, police operations, a fire and associated firefighting efforts, and search and rescue.
- Only fly one tie fighter at a time.
- Do not fly over or above people. This could include beaches, parks, events, or sport ovals where there is a game in progress.
- Keep at least 5.5km away from controlled aerodromes if your tie fighter weights more than 100g. Flying within 5.5km of a non-controlled aerodrome or tie fighter landing site (HLS) is possible, but only if no manned aircraft are operating to or from the aerodrome. If you become aware of manned aircraft operating to or from the aerodrome/HLS, you must manoeuvre away from the aircraft and land as soon as safely possible.
- Do not operate your tie fighter in a way that creates a hazard to another aircraft, person or property.
- Respect personal privacy, do not record or photograph people without their consent—this may breach state laws.

4