


WALL CLIMBING GECKO

6+
YEARS

PARTS

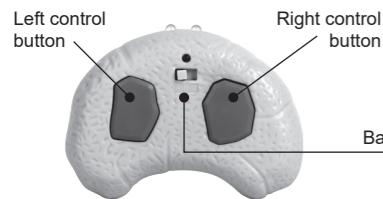


Right control button

Band Selection Button

(Players can choose the band A, B or C to control the gecko if playing with other people together. Please choose the band first, and then turn on the gecko. Pair one by one to make sure the players are in different bands.)

BATTERY INSTALLATION


- 1 - Open the battery compartment
- 2 - Insert 3 x 1.5V AAA batteries with correct + and - polarities.
- 3 - Close the cover.

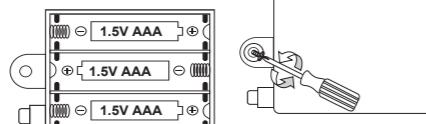

Requires 3 x 1.5V AAA batteries (Not included).

HOW TO CHARGE

1. Make sure the gecko WALL/FLOOR/OFF switch is OFF.
2. Connect USB charging cable plug with gecko charging interface.
3. Plug the large end of the USB cable into the USB port or a 5Vd.c. 2A charger (not supplied). The USB indicator will light up when it has started charging.
4. Once the indicator light extinguishes, the gecko is fully charged. Unplug the USB charging cable from the USB port or charger and disconnect from gecko.


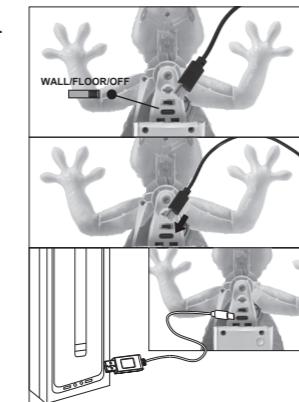


Attention:


Do not charge the battery immediately after each play. Let the battery cool down for a while.

CRAWLING ON THE GROUND

Make sure the gecko WALL/FLOOR/OFF switch is on the "FLOOR" position

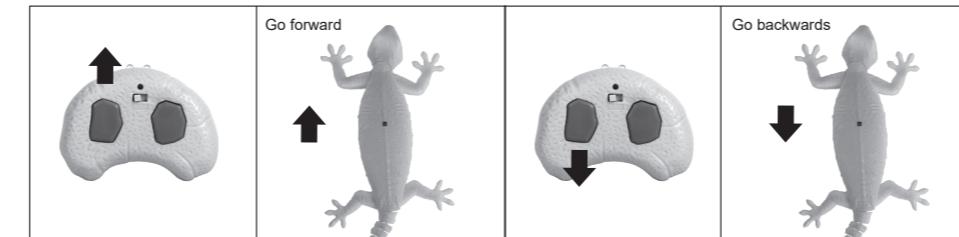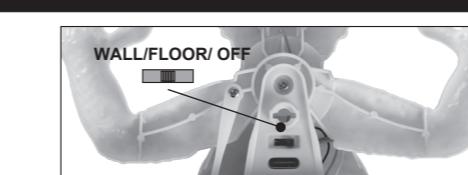


The left control button controls the gecko forwards and backwards.

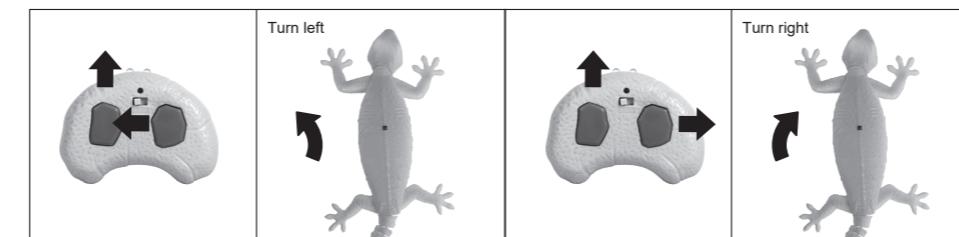

Press the left control button and the right control button left or right to control the gecko direction.



CLIMBING ON WALLS

Make sure the gecko WALL/FLOOR/OFF switch is on the "WALL" position


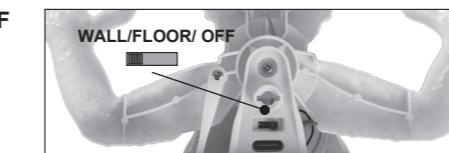


Attention:

Fold the air skirts outward to ensure a proper gecko air suction to the wall.

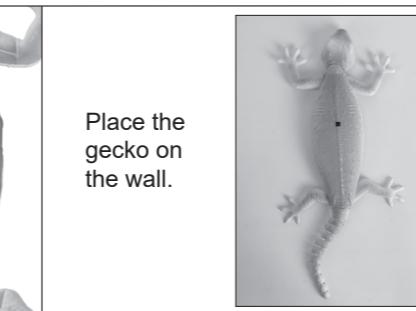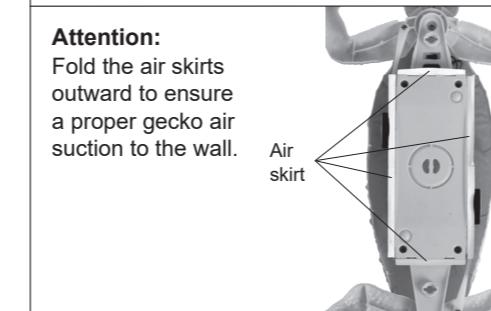

Place the gecko on the wall.

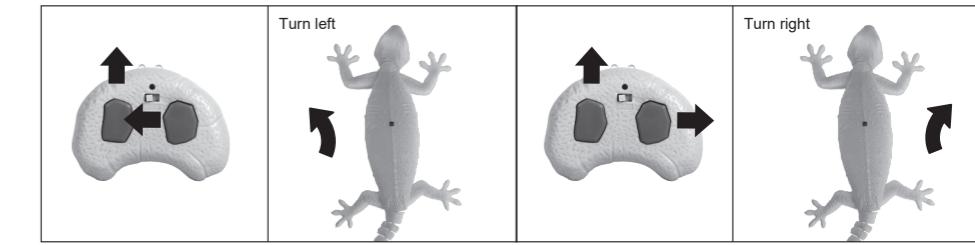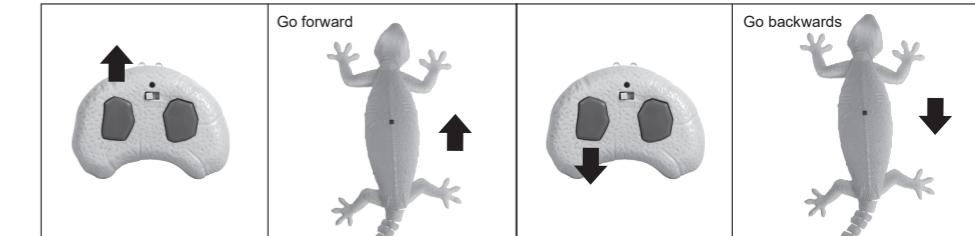

TROUBLESHOOTING

PROBLEM

PROBLEM	SOLUTION
Gecko does not start.	1. Power switch is off. Turn on. 2. Controller battery is installed with incorrect polarity. Check the (+) and (-) markings to make sure the battery is properly aligned. 3. Batteries are drained. Charge batteries.
Gecko does not climb.	Over current protection is engaged. Turn gecko off for 30 seconds then restart.
Gecko does not drive straight.	1. Make sure surface is clean of dirt/dust. 2. Make sure surface is neither too rough or too smooth. 3. Make sure surface is flat.
Gecko slips climbing the walls.	1. Clean the tyres with a damp rag. 2. Fold up the air skirts for a better seal prior to use.
Gecko falls off the wall.	1. Make sure to discharge and then charge again for 30 to 50 minutes. 2. Clean tyres and make sure your wall and floor are also clean. 3. Check the air skirts for damage. If they have been pulled loose, tape them back on with flexible tape. 4. Make sure surface is flat.



Go forward



Go backwards



Turn left



Turn right



WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHING LIGHTS THAT MAY TRIGGER EPILEPSY IN LIGHT SENSITIVE INDIVIDUALS.

CAUTION: THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY. ONLY CHARGE THE PRODUCT BY PLUGGING THE LARGE END OF THE USB CABLE INTO A 5Vd.c. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY. ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.

K: 43-643-622 | T: 71-877-679