

8+
YEARS

FLIP CAR



Battery installation:

- 1 - Unscrew to open the battery compartment.
- 2 - Insert batteries into the correct + and - polarities.
- 3 - Close the cover.

①

REQUIRES 4 X 1.5V AA BATTERIES,
(NOT INCLUDED)

②

REQUIRES 3 X 1.5V AAA BATTERIES (NOT INCLUDED).

③

Indicator light
Left control stick
Right control stick
SWITCH (ON/OFF)

How to use simultaneously:

1. Turn on the vehicle, then turn on the transmitter.
2. When the vehicle is functioning, this means they have matched.
3. If you have more than two vehicles, please matching one by one.
When the second vehicle is matching, please always keep the first vehicle and transmitter on.
4. Please turn off both the vehicle and transmitter and re-start all matching processes if you are changing to play with another 2.4GHz transmitter.

How to play:

orange side facing upward

green side facing upward

green side facing upward

orange side facing upward

green side facing upward

orange side facing upward

green side facing upward

orange side facing upward

green / orange side facing upward

green / orange side facing upward

4. How to flip over:
Push left control stick up or pull left control stick down, when the car hits an obstacle at high speed, the car will flip over.
- Note: It is not recommended to drive the car on carpet when you perform the flip function or spin function.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

PRODUCT MAY VARY SLIGHTLY FROM THE IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER.
DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT.



K: 43-643-691
T: 71-878-232