


TERRAIN SCOUT WITH CAMERA



INSTALLING BATTERIES IN THE TRANSMITTER:

- 1 - Open the battery compartment.
- 2 - Insert 2 x 1.5V AA batteries with correct + and - polarities.
- 3 - Close the cover.


Figure 1

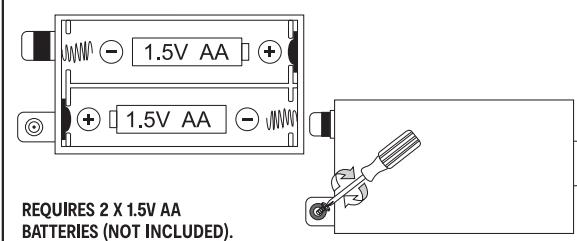

INSTALLING THE VEHICLE BATTERY:

- 1 - Loosen the screw to open the battery cover.
- 2 - As shown in Figure 2, remove the battery cover, connect the rechargeable battery pack with connector and close the battery cover.


Figure 2

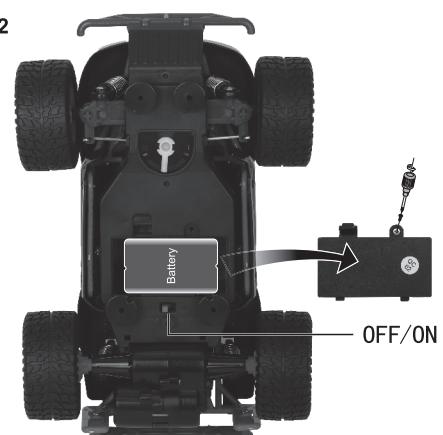

HOW TO CHARGE:



Rechargeable lithium battery
+USB charging cable (Included).

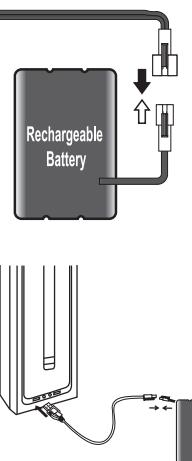

- A. Loosen the screw to open battery cover.
- B. Separate the rechargeable battery pack from connector.
- C. Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way, do not force the connectors together), then plug the large end of USB cable into a 5Vd.c. 2A charger (not supplied) or USB port only. The LED light on the USB charging cable will light up when charging.
- D. The LED light extinguishes after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.

Attention: Do not charge battery immediately after each play. Let the battery cool down for a while.

SWITCH
(OFF/ON)




STEERING
WHEEL



THROTTLE
TRIGGER

HOW TO USE:

1. Turn on the vehicle first and then turn on the transmitter.
2. Pull the trigger of the transmitter to match the vehicle.
3. When the vehicle is functioning, that means they are matched.
4. If you have more than two vehicles, please pair one by one. When the second vehicle is pairing, please always keep the first vehicle and transmitter on.
5. Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2.4GHz transmitter.
6. How to move forwards or backwards:
Pull the throttle trigger, the vehicle will move forwards.
Push the throttle trigger, the vehicle will move backwards.
7. Turn left or right:
Turn steering wheel clockwise, the vehicle will turn right.
Turn steering wheel anticlockwise, the vehicle will turn left.

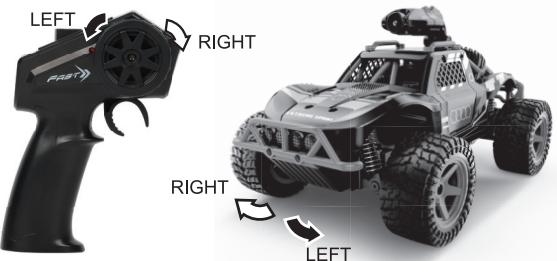

WIFI/APP USAGE

Mobile phone holder installation (the mobile phone is not included):



1. Insert mobile phone holder into controller, see Diagram 1.
2. Push up the mobile phone holder to affix the mobile phone, see Diagram 2-3.

WIFI Connection description

Please download and install the software LH RCcar QR code for Google Play & IOS App Store.




QR code for Google Play App Store



QR code for IOS App Store



Connect description:

1. Ensure the vehicle has been turned on.
2. Turn on WIFI on mobile phone, choose the network "HD720-XXXXXXXX" and connect.
3. Once the WIFI connection is successful, launch the App LH RCcar. Please note that connection to the vehicle's WIFI will disrupt the existing WIFI connection you may be using.
4. Press the Start button to enter the live interface of camera view.

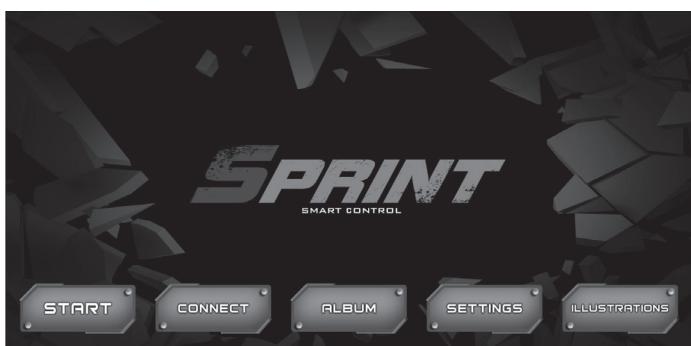

Press the ON button to enter the driving mode.


Control interface description:

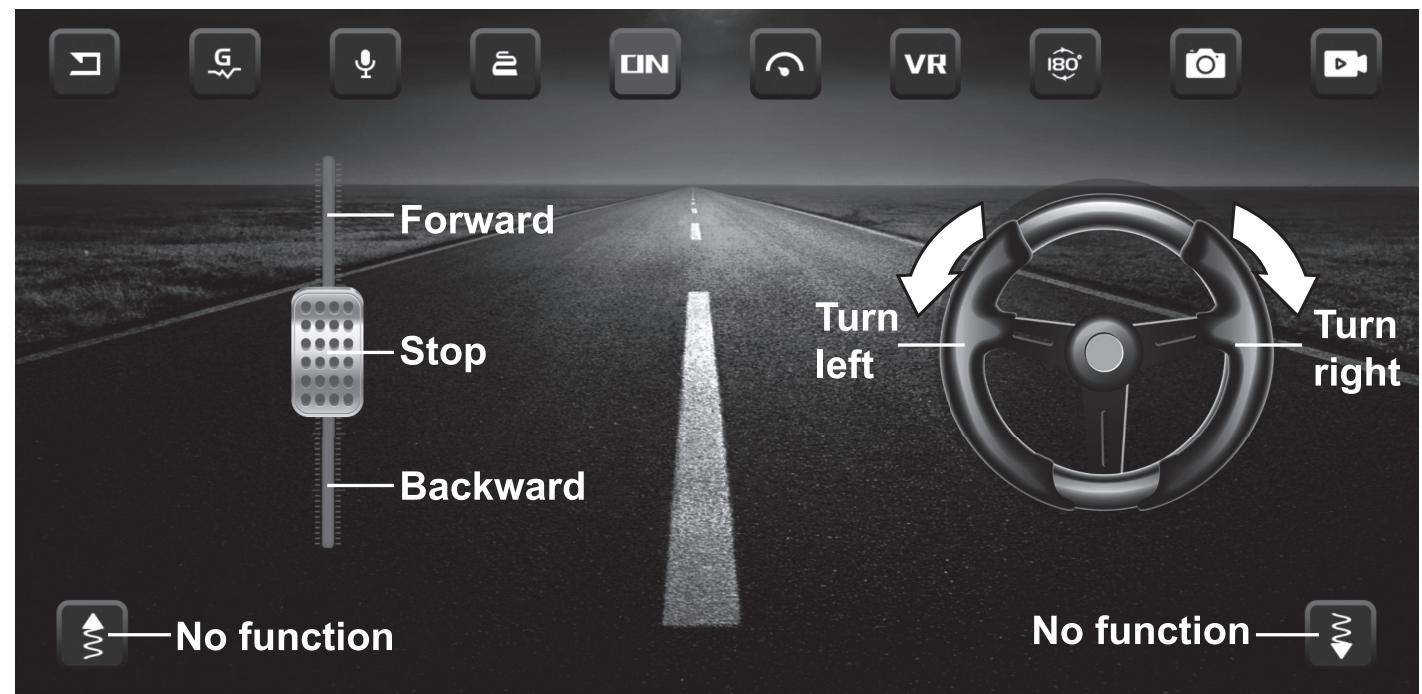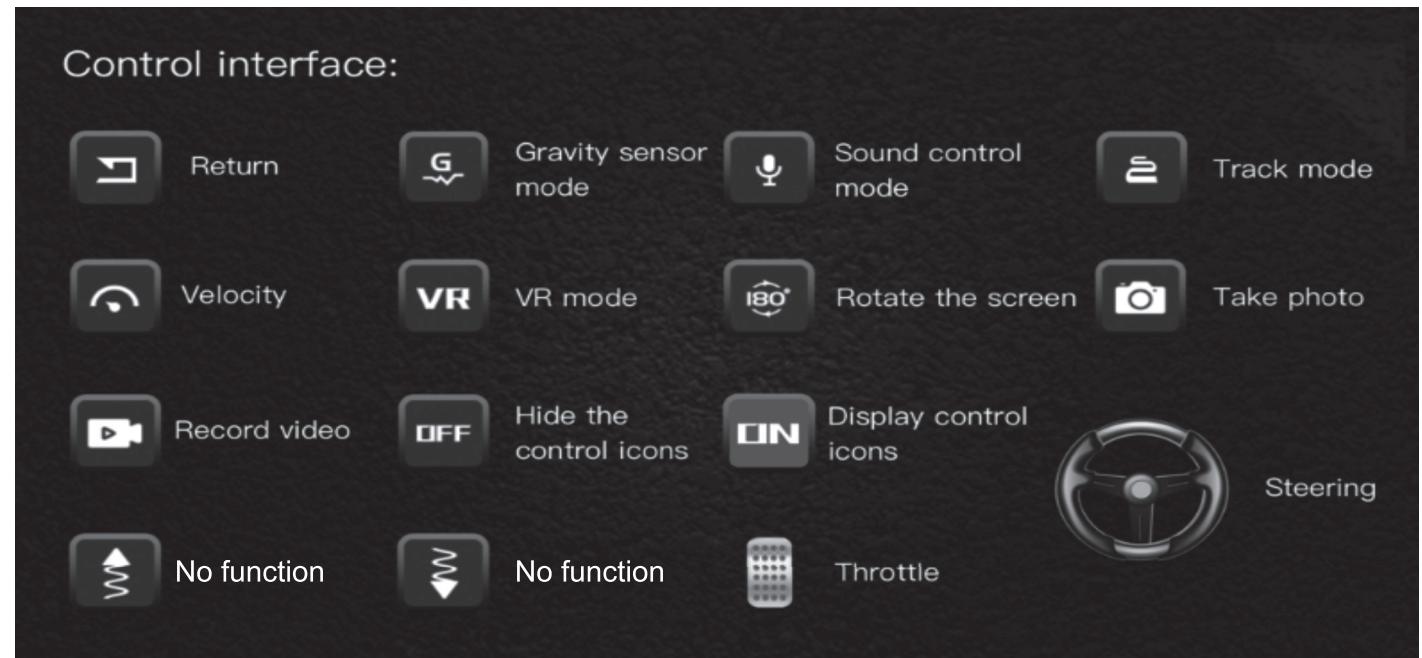

Gravity sensor mode:

Please keep your phone horizontal and vertical to the ground, when in gravity sensor mode, you can control the vehicle's movement by tilting your phone forward, backward, left, and right.

1. FORWARDS

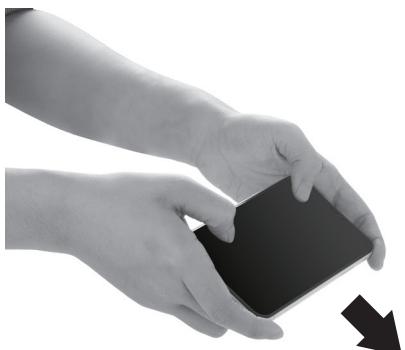

2. BACKWARDS



3. LEFT



4. RIGHT




Sound control mode:

When in sound control mode, you can control the vehicle with voice commands "Forward, Backward / Back(iOS), Left, Right"

Track mode:

When in track mode, you can draw a path on the left/right side of your phone, and the vehicle will follow it exactly.

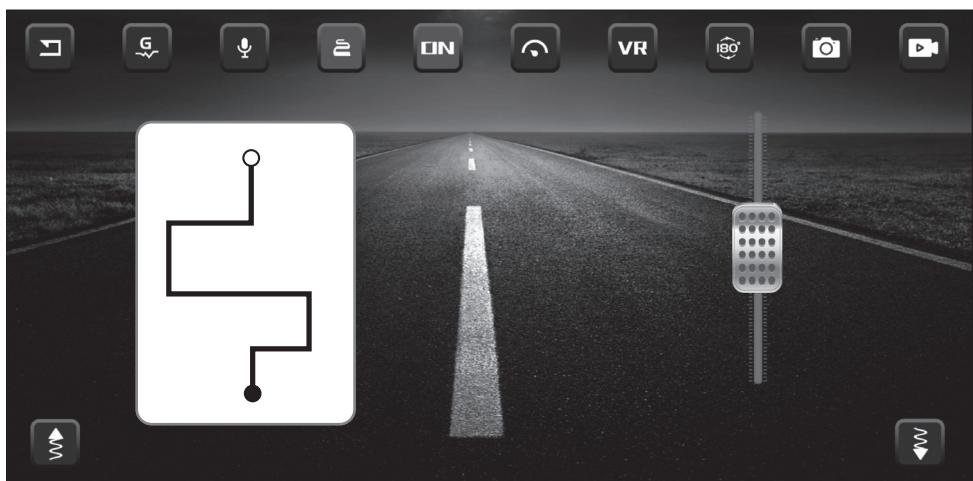

PRODUCT MAY VARY SLIGHTLY FROM THE IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PERFORMANCE TIPS: DO NOT DRIVE THE VEHICLE THROUGH WATER.
DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT.

⚠️ WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL. 

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT- CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: THE BATTERY CHARGER USED WITH THE ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE SUPPLY CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

CAUTION: THE PRODUCT HAS A RECHARGEABLE LITHIUM-ION BATTERY, ONLY CHARGE THE PRODUCT BY PLUGGING THE USB CHARGER INTO A 5VDC. 2A CHARGER (NOT SUPPLIED) OR USB PORT ONLY.
ONLY CHARGE THE PRODUCT USING SUPPLIED CHARGING CABLE.

