


## PARENTAL WARNINGS

DO NOT USE THIS TOY RIDE ON UNTIL YOU HAVE READ THE FOLLOWING PRECAUTIONS.

1. DO NOT LET CHILDREN PLAY IN THE STREET.
2. DO NOT USE THIS TOY RIDE ON, ON OR NEAR A SLOPE.
3. DO NOT LET CHILDREN PLAY ON STAIRS, PORCHES OR ANYWHERE ELSE WHERE A CHILD MIGHT FALL.
4. WHEN USING THIS PRODUCT, CHILDREN SHOULD BE UNDER ADULT SUPERVISION AT ALL TIMES.
5. DO NOT USE TOY RIDE ON NEAR STOVES, HEATERS, IRONING BOARDS, POOLS OR NEAR ANY OTHER HOT OR DANGEROUS OBJECTS.
6. DO NOT LEAVE TOY RIDE ON OUTSIDE. PLEASE PROTECT IT FROM THE WEATHER.
7. USE OUTDOORS ONLY DURING DAYLIGHT HOURS.
8. DO NOT BUMP INTO WALLS, POLES, ETC. IT COULD CAUSE POSSIBLE INJURY AND/OR DAMAGE TO THE RIDE ON.
9. CAUTION AND CARE MUST BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THIS PRODUCT. BECAUSE OF SMALL AND DANGEROUS PARTS AND PACKAGING MATERIAL, ADULT ASSEMBLY IS REQUIRED.
10. FOR AGE 1 TO 3 YEARS.
11. MAXIMUM USER WEIGHT: 20KG.
12. WARNING! NOT TO BE USED BY CHILDREN OVER 36 MONTHS BECAUSE OF ITS INSUFFICIENT STRENGTH.
13. AN ADULT SHOULD CARRY OUT CHECKS AND MAINTENANCE OF THE MAIN PARTS AT REGULAR INTERVALS. IF THESE CHECKS ARE NOT CARRIED OUT, THE RIDE ON COULD OVERTURN OR CAUSE A FALL.

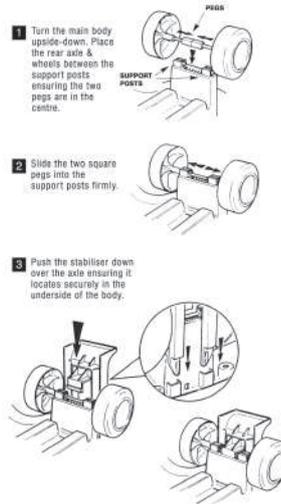

PLEASE READ BEFORE ASSEMBLING- TO BE ASSEMBLED BY AN ADULT

