

OPERATING INSTRUCTIONS

1. Unwind the cord to its full length and place the heater on a firm, level, heat-resistant surface in a stable, upright position.
2. Visually inspect the ventilation holes to ensure that there are no blockages.
3. Turn the power switch to OFF. Then insert the plug into a suitable wall outlet (10Amp).
4. To turn ON the heater, rotate the power switch knob to "ON".

Note: There may be some non-harmful odour emitted from the heater initially. This is normal during the break-in period or after long-term storage. Place the heater in a well-ventilated area and continue running it until the odour disappears.

Note: To avoid overloading the circuit, do not plug the heater into a circuit that already has other appliances working.

Note: Never leave this heater unattended when in use.

Caution: Make sure there is nothing flammable or heat sensitive within 1 metre (40 inches). Operating the heater in any other position could cause a hazard.

Warning: This product generates heat during operation, to avoid overheating "DO NOT COVER" the product. Proper precautions must be taken to prevent the risk of burns, scalds, fire or other damage to individuals or property.

TIP OVER SWITCH

This heater incorporates a tip over switch. If the unit is tilted or knocked over the power will be cut automatically.

When the heater is returned to the upright position, it will function normally.

CARE AND CLEANING

1. Before cleaning, turn off the heater, unplug it from the power outlet and allow the heater to cool (approximately 30 minutes).
2. Carefully wipe the exterior of the heater with a soft damp cloth and dry thoroughly with a dry cloth.

Note: Do not immerse the power cord, plug or heater into water or any liquid or pour water or any other liquid over the heater.

1. Over time, dust may accumulate. This can be removed by wiping with a damp cloth, or by using the brush attachment on your vacuum cleaner.
2. Make sure that the heater is dry before plugging it back into the power outlet.

Any other servicing should be performed by an authorized service representative. Do not use the heater if it has malfunctioned or become damaged in any way. When the heater is not in use, store in a cool dry location and take care not to damage the product. Do not store until the heater is cool.

DISPOSAL OF THE UNIT

At the end of its working life, do not dispose of the heater with your household waste. Observe any local requirements regarding appropriate disposal or recycling of electrical goods. Contact your local authorities for advice regarding recycling facilities in your area.

TECHNICAL SPECIFICATIONS

Model	AOH620
Voltage	220-240V~
Frequency	50 Hz
Rated Power	1800-2000W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases


Kmart Australia Ltd.
C/- Customer Service Centre
690 Springvale Road, Mulgrave Vic 3170
Customer Service: 1800 124 125
(Australia) or 0800 945 995
(New Zealand) or via
Customer Help at kmart.com.au

Contact for Target purchases

Target Australia Pty Ltd
C/- Customer Service Centre
2 Kendall Street, Williams Landing, Vic, 3027
Customer Service: 1300 753 567 or via Customer
Help at target.com.au/help/contact-us

anko

2000W OUTDOOR HEATER

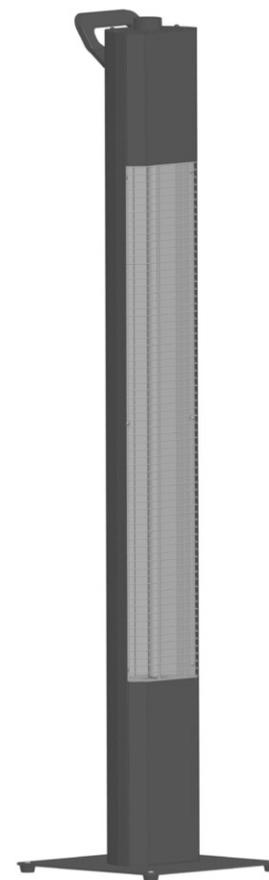

INSTRUCTION MANUAL

AOH620

WARNING!

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, READ, UNDERSTAND AND FOLLOW INSTRUCTIONS BEFORE USING THIS HEATER


WARNING

Read all the instructions before using this heater and keep the instructions handy for future use.

- Do not place the heater immediately below a power outlet.
- Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
- The heater must be connected to an earthed socket-outlet of a.c. 220V-240V, 50Hz.
- This product is for household use only.
- WARNING:** To avoid overheating, do not cover the heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never leave this heater unattended.
- All the objects must be at least 1 metre from the front, sides and rear of the appliance.
- WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
- WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Do not use this heater with a programmer, timer, separate remote control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- The fireguard of this heater is intended to prevent direct access to heating elements and must be in place when the heater is in use.
- The fireguard does not give full protection for young children and for infirm persons.
- Fire risk exists if the heater is placed closer to curtains and other combustible materials. Follow the minimum distance requirements when using the heater.
- The heating tubes in this product are not replaceable. The product must be discarded if the heating tubes malfunction or stop working.
- The heater must be placed on a firm, level, surface in a stable, upright position.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or is damaged in any way. For electrical or mechanical adjustment, examination or repair, return the heater to a suitably qualified facility.
- Do not use this heater if it has been dropped, if there are visible signs of damage to the heater.

IMPORTANT SAFEGUARDS

- This heater is hot when in use. To avoid burns, use the handle when moving this heater and avoid touching the hot surface with bare skin.
- Do not relocate the heater when it is operating. Before relocating, make sure the heater is turned off and cooled down.
- Unplug heater when not in use.
- This product is for outdoor sheltered household use only.
- Keep heater away from bathtubs and other water containers.
- Ensure combustible material, such as drapery and other furnishings, is at least 1 metre from the heater at all times.
- This heater is not suitable for use in bathrooms, laundry areas and similar locations where it may contact with water.
- To disconnect heater, turn the heater switch off and the outlet switch off, then remove the plug from the outlet.
- Connect to an earthed socket-outlet of the a.c. 220V-240V, 50Hz.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
- To prevent a possible fire, do not block the grilles in any manner.
- Do not use in areas where petrol, paint, or flammable liquids are used or stored.
- Use the heater only as described in this manual. Any other use is not recommended by the manufacturer as it may cause fire, electric shock, or injury.
- Do not connect via double adapters or power boards. The use of extension leads is not recommended. If this cannot be avoided, follow the manufacturer's instructions provided with extension lead. Caution must be taken to not exceed the ratings marked on the extension lead.
- Do not remove plug from power socket until the appliance has been switched off.
- To avoid a circuit overload when using this heater, do not operate another high-wattage product on the same electrical circuit.
- When in use keep the mains cord from touching the heater body or keep the cord away from the heat generated by the appliance. Do not drape the cord over the heater while hot. Fully unwind the cord before first time use. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split.
- Do not plug/ unplug the unit into / from the electrical outlet with a wet hand.
- To disconnect the product from an electrical outlet, pull directly on the plug. Do not pull on the power cord.
- Close supervision is necessary when the appliance is used near children or pets.
- Do not use the heater to dry clothes.
- To reduce the risk of fire, do not leave this heater unattended during use, especially when children or pets are present. Always unplug the product from the electrical outlet when it is not in use.
- The heater is designed for use in outdoor sheltered environments only. (e.g. alfresco, patios, pergolas, balconies).
- Remove any packaging material before use and keep them away from babies and children to avoid the suffocation hazards.

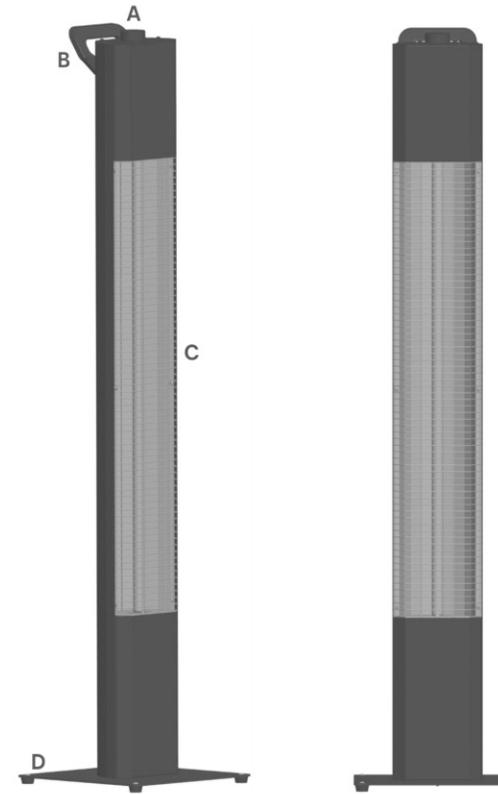

COMPONENTS	
A	Switch knob
B	Handle
C	Heating element
D	Base

ASSEMBLY INSTRUCTIONS

Do not operate the heater without the base and handle assembly in place. The heater must always be used in an upright position. Remove any promotional material or any packaging from the heater. Please refer Fig. a and Fig. b as a reference for installation.

- Ensure the heater is switched OFF and unplugged.
- Turn the heater upside down.

- Place the base over the bottom of the heater, with rubber feet facing up.
- Align the screw holes on the base and the bottom of the heater and use the four supplied M5 x 10mm screws to fix the base to the heater. (Fig. a)
- Place the heater in an upright position.
- Align the screw holes on the handle and top portion of the heater body, use two supplied M4 x 12mm screws to fix the handle to the heater. (Fig. b).

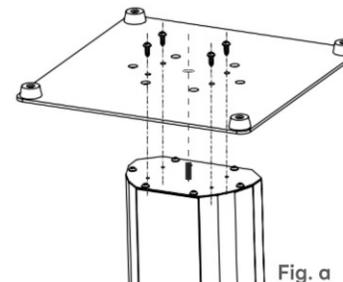


Fig. a

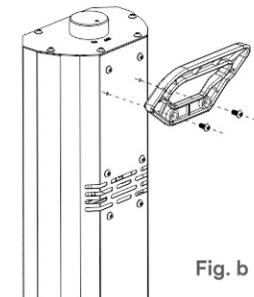


Fig. b